

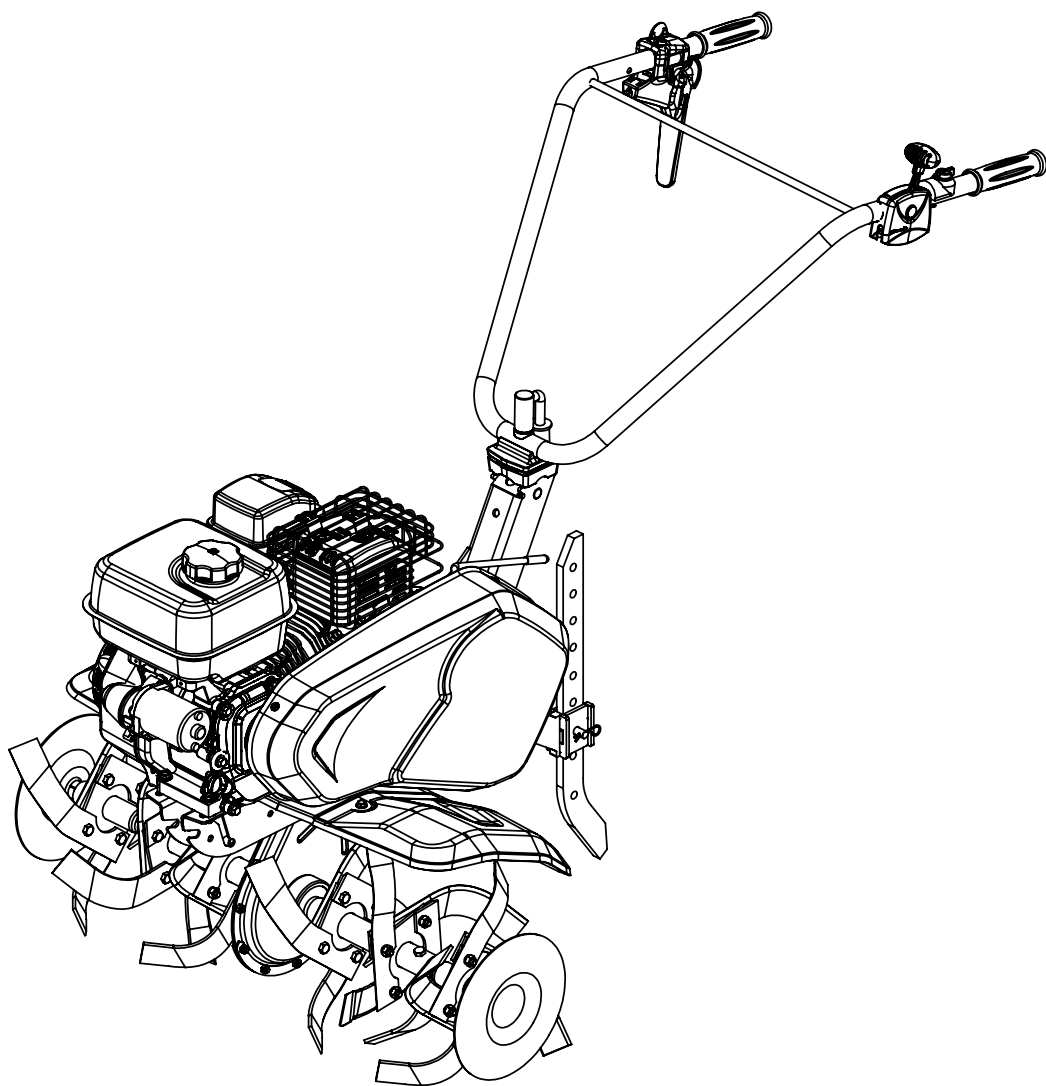




Pièces de rechange Spare parts list


3000**41**

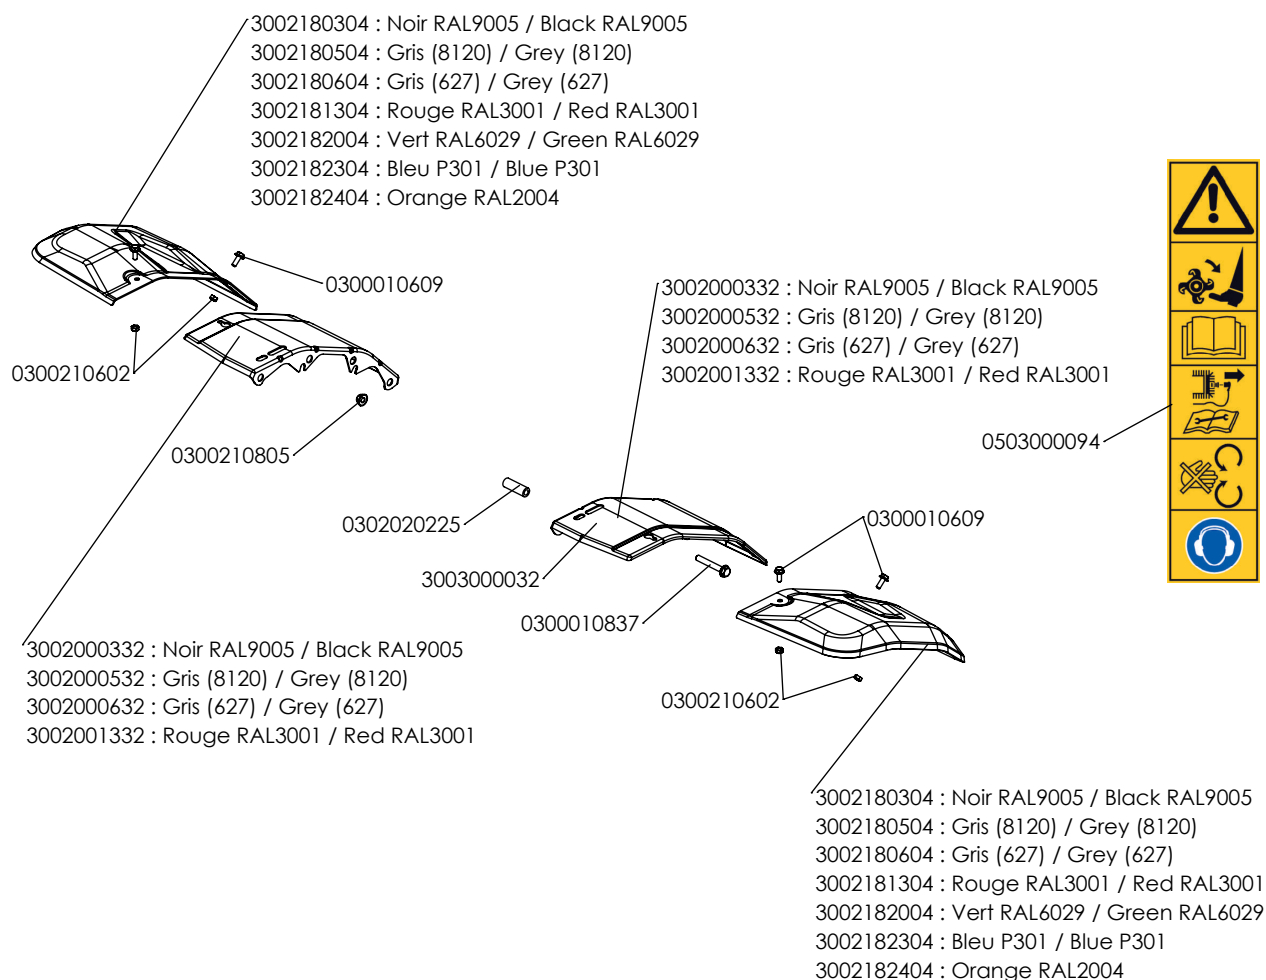

*MOTOBINEUSE
TILLER*

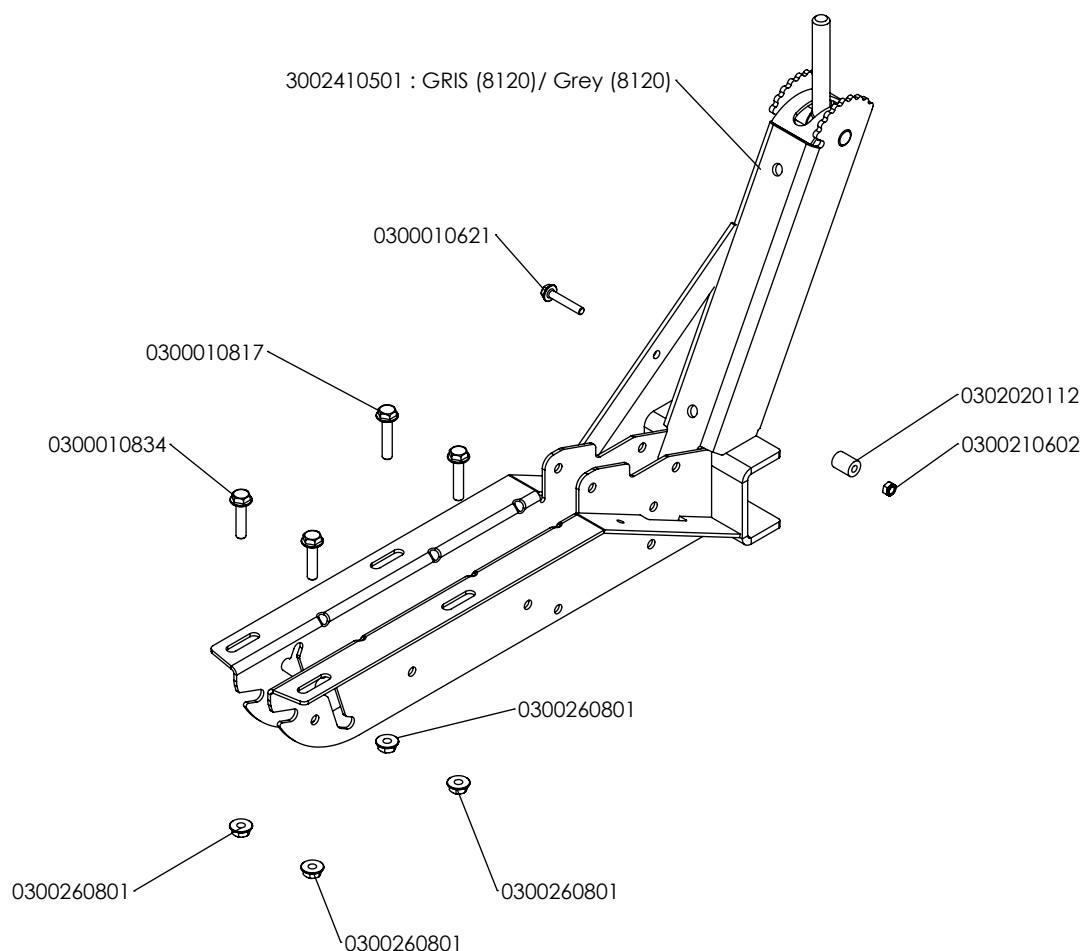

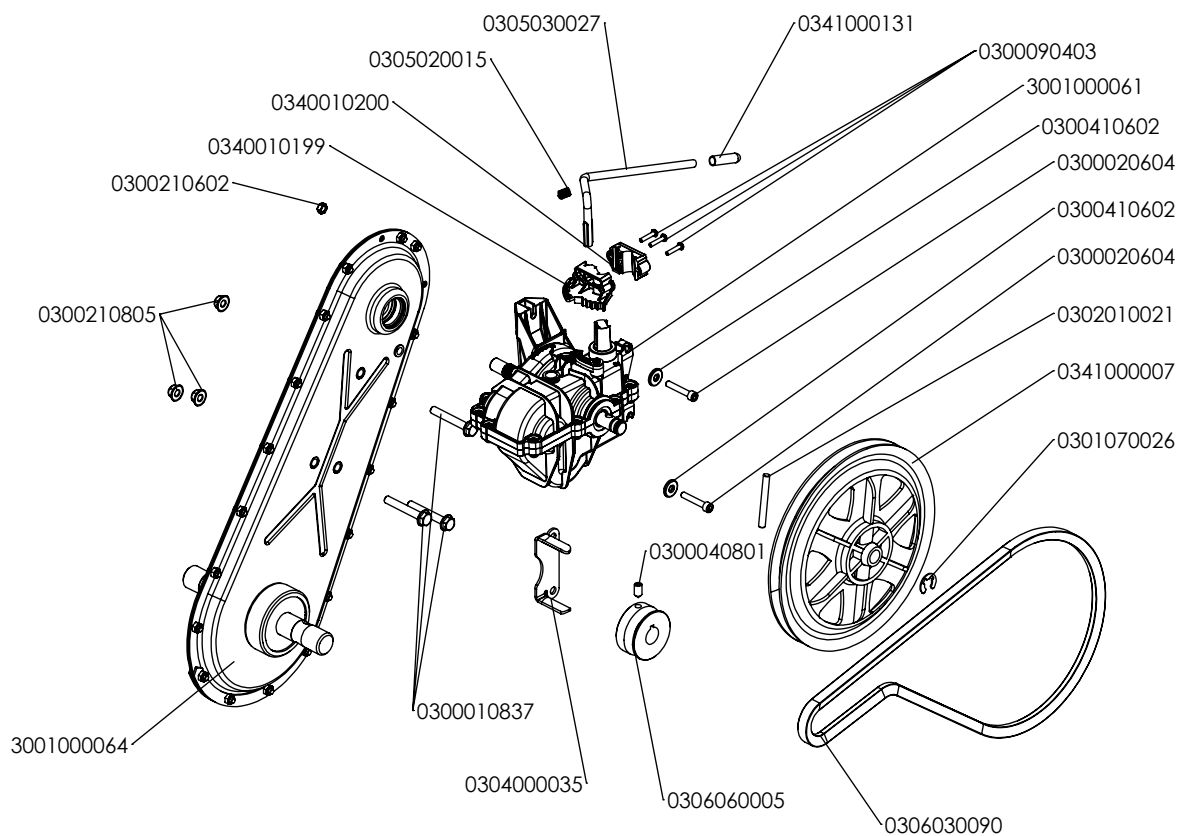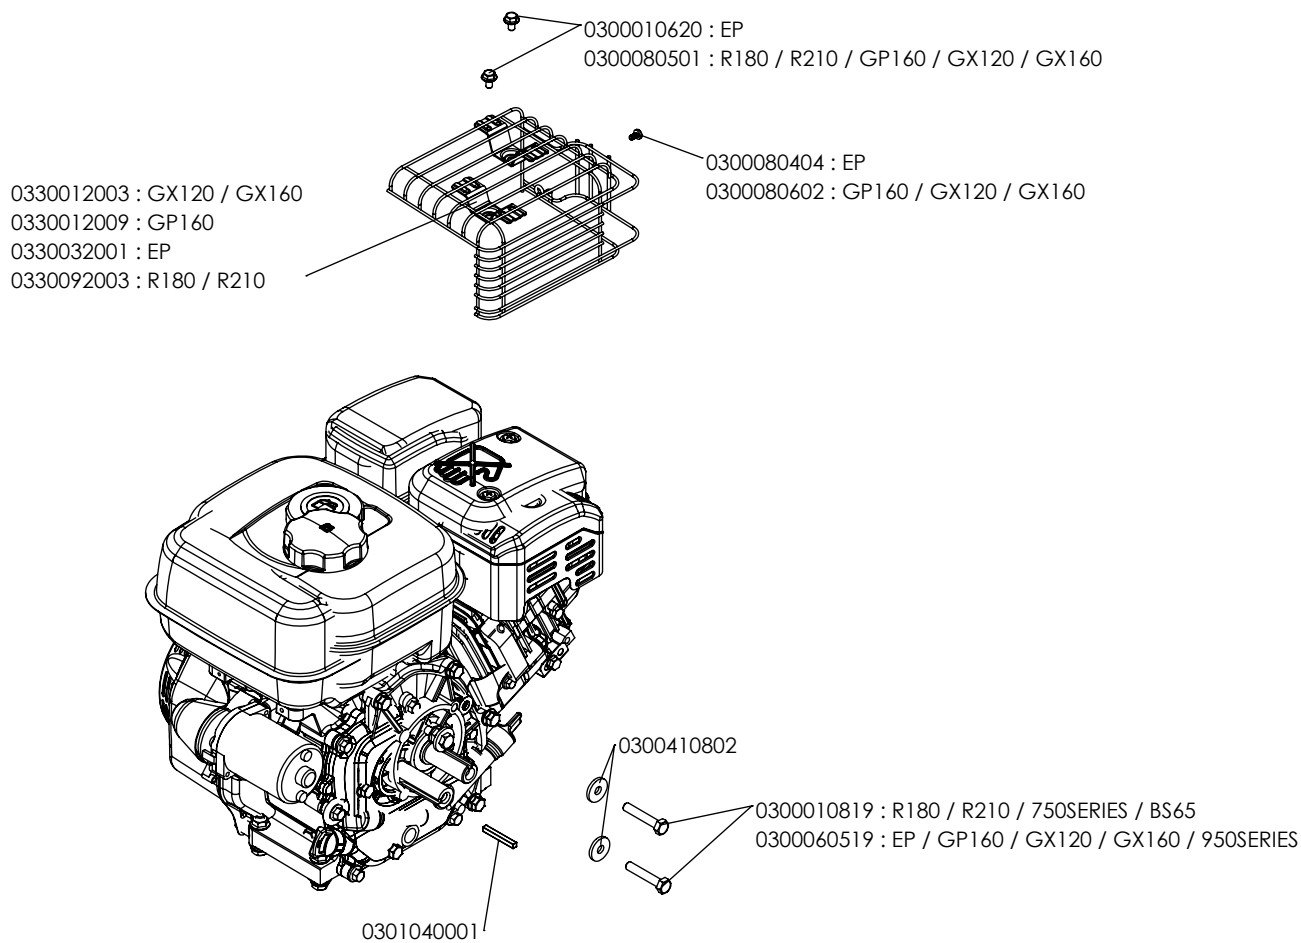

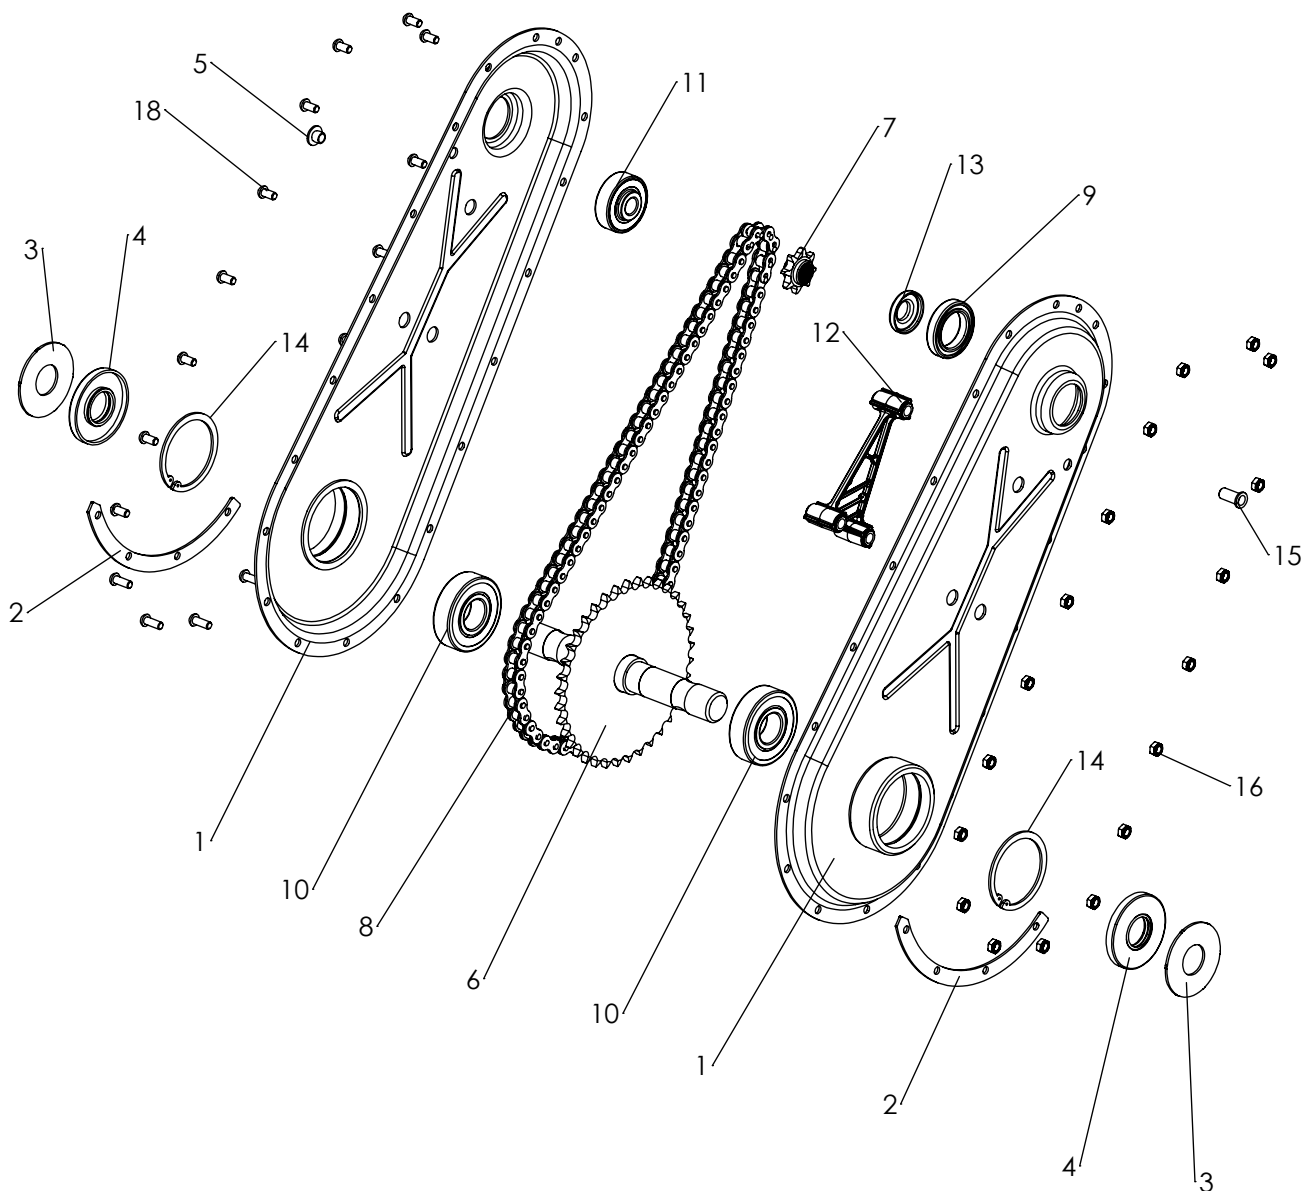

Rep N°	Ref.	Désignation	Description	Qté
1	3002000342	JOUE DE CARTER 8/37 PRO NOIR RAL9005	PRO 8/37 LEFT TRANSM. HOUSING BLACK RAL9005	2
2	3002000203	DEMI TALON CARTER 8/37	ANTIWEAR PAD	2
3	3002000202	RONDELLE TOLE 25X62X2 Z	SHEET WASHER 25X62X2 Z	2
4	0343020006	BAGUE D ETANCHEITE 25x62x7	SEALING WASHER 25x62x7	2
5	0341000124	BOUCHON 9,3X16X6,8 NATUREL	GREASE CAP	1
6	0306050045	ARBRE DE TRAVAIL 37DTS 12.7	Blade shaft 37 teeth 12.7	1
7	0306050017	PIGNON 8 DTS 12.7 SIMPLE XC cannelé	Sprocket wheel 8th pitch 12.7	1
8	0306020026	CHAINE ISO 08B-1 pas 12.7 78 maillons RSF	CHAIN (78 LINKS RSF) 08B 12.7	1
9	0306010037	ROULEMENT 6906 2RS	Ball bearing 6906 2RS	1
10	0306010020	ROULEMENT 6305 2 RS ci: 0	BALL BEARING 6305 2RS	2
11	0306010016	ROULEMENT 6204 2RS EPAULE	SPECIAL BALL BEARING 6204 2RS	1
12	0303000029	ENTRETOISE 3 pts CARTER 8/37	TRANSMISSION SPACER 8/37	1
13	0303000026	ENTRETOISE 34.5x16x9 CARTER 8/37	Transmission spacer	1
14	0301070010	CIRCLIPS INT 62	INTERNAL RETAINING RING Ø62	2
15	0300600604	INSERT M6 ROND BORGNE TOLE 1.5/3	Insert M6	1
16	0300210602	ECROU FREIN M 6 Z DIN 985-8	BLOCKING NUT M 6 Z	18
17	0300110605	VIS-DIN7985-4.8-TX30-M6X16	Screw Torx M6x16	4
18	0300110604	VIS TORX M6X12 TETE CYLIND BOMB 6 LOBES INTER	Screw Torx M6x12	14

