 


STIGA

PRO 1800 (2001)

15-3218-12

 
Spare parts list
Reservdelar
Repuestos
Ersatzteile
Pièces détachées
Reserve onderdelen
Catalogo ricambi

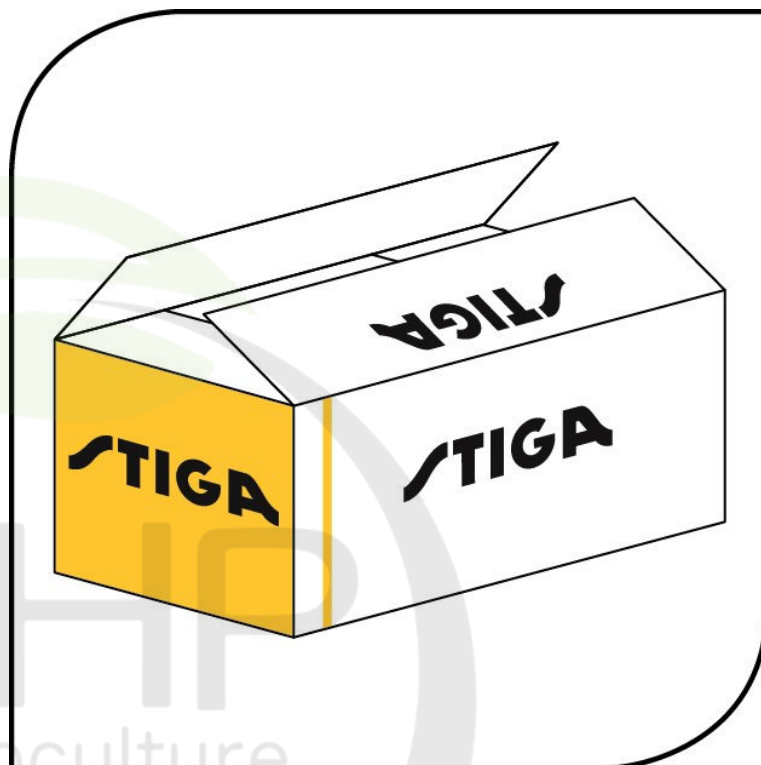

Cultivez votre univers


- Use ST. S.p.A. Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative And might Not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair And/Or replacement, make sure that the illustrated parts list Is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

All rights reserved. No part Of this material may be reproduced Or transmitted, in any form Or by any means, electronic Or mechanical, including photocopying, recording Or by any information storage And retrieval system, without permission in writing from ST. S.p.A.

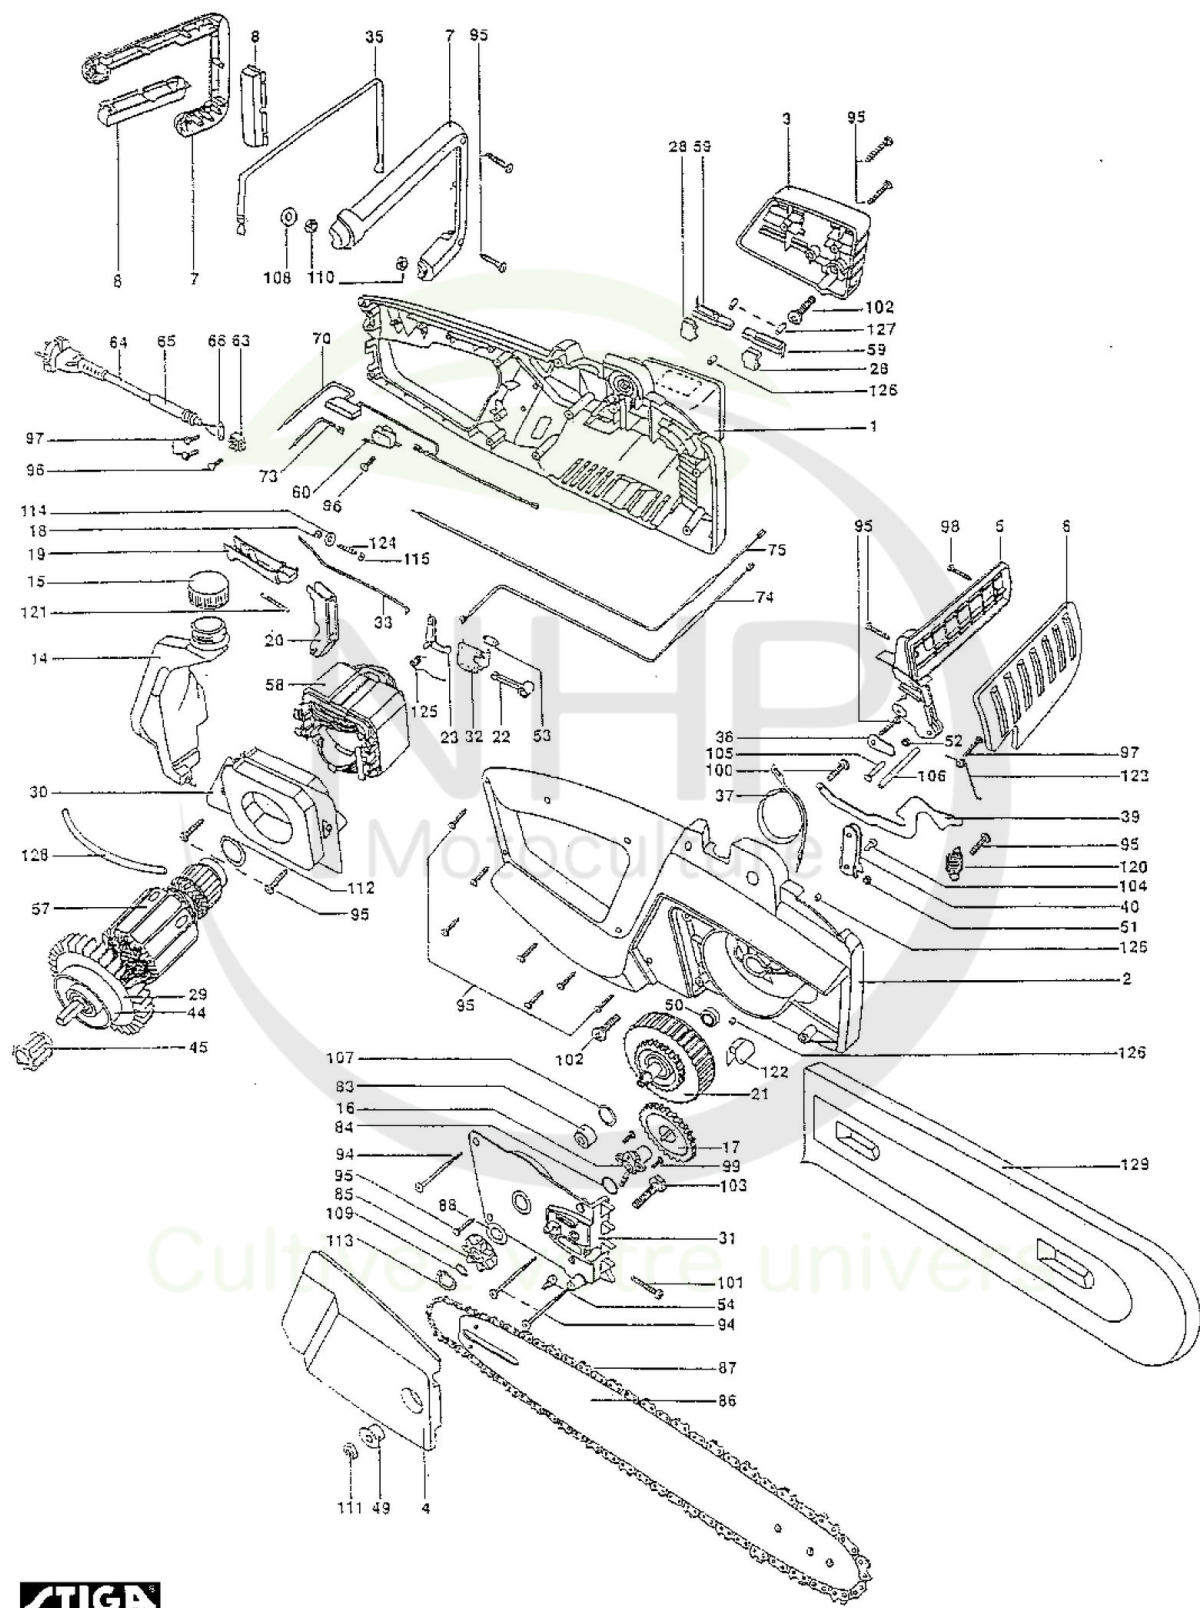

Tronçonneuse électrique

Réf. N°	Q.té :	Code article	Description	Articles	De	Jusqu'à
1	1	1911-1211-01 cliquez ici	Motor Housing			
2	1	1911-1212-01 cliquez ici	Transmission Housing			
3	1	1911-1217-01 cliquez ici	Cover			
4	1	1911-1256-01 cliquez ici	Cover	Inkl. 49		
5	1	1911-1213-01 cliquez ici	Throwing Guard Arm			
6	1	1911-1214-01 cliquez ici	Handvern 20			
7	1	1911-1219-01 cliquez ici	Handle			
8	2	1911-1220-01 cliquez ici	Clutch Grip			
14	1	1911-1215-01 cliquez ici	Oil Tank			
15	1	1911-1216-01 cliquez ici	Tank Cap			
16	1	1911-1189-01 cliquez ici	Pump Housing W.Bearing			
17	1	1911-1257-01 cliquez ici	Pump Wheel			
19	1	1911-1224-01 cliquez ici	Switch Lever			
20	1	1911-1225-01 cliquez ici	Catch			
21	1	1911-1258-01 cliquez ici	Engrenage			
21	1	1911-1483-01 cliquez ici	Engrenage			
22	1	1911-1221-01 cliquez ici	Switch Arm			
23	1	1911-1222-01 cliquez ici	Levier			
28	2	1911-1184-01 cliquez ici	Brush Holder			
30	1	1911-1218-01 cliquez ici	Conduit D'Air			
31	1	1911-1226-01 cliquez ici	Bar Attachment			
32	1	1911-1232-01 cliquez ici	Etrier			
33	1	1911-1260-01 cliquez ici	Switch rod assy	Inkl. 18,114,115,124		
35	1	1911-1261-01 cliquez ici	Switch Band			
37	1	1911-1228-01 cliquez ici	Bande Frein			
38	1	1911-1229-01 cliquez ici	Clef			
39	1	1911-1230-01 cliquez ici	Levier De Frein			
40	1	1911-1231-01 cliquez ici	Catch			
45	1	1911-1157-01 cliquez ici	Sprocket			
50	1	1911-1156-01 cliquez ici	Roulement À Billes			
51	1	1911-1245-01 cliquez ici	Roller			
52	1	1911-1269-01 cliquez ici	Entretoise			
53	1	1911-1223-01 cliquez ici	Link Roller			
54	1	1911-1174-01 cliquez ici	Tension Pin			
57	1	1911-1253-01 cliquez ici	Rotor	Inkl. 29, 44		
58	1	1911-1254-01 cliquez ici	Winding			
59	2	1911-1252-01 cliquez ici	Brush Holder W.Brushes			
60	1	1911-1251-01 cliquez ici	Interrupteur			
63	1	1911-1104-01 cliquez ici	Cable			
64	1	1911-1179-01 cliquez ici	Connection Cord			
65	1	1911-1180-01 cliquez ici	Grommet			
66	1	1911-1267-01 cliquez ici	Restrainer			
70	1	1911-1259-01 cliquez ici	Connection Cable W.Condensor	L = 150		
73	1	1911-1181-01 cliquez ici	Switch Cable			
73	1	1911-1255-01 cliquez ici	Overload Guard			
74	1	1911-1190-01 cliquez ici	Cable W.Drossel (235)	L = 235		
75	1	1911-1191-01 cliquez ici	Cable W.Drossel (480)	L = 480		
83	1	1911-1227-01 cliquez ici	Needle Collar			

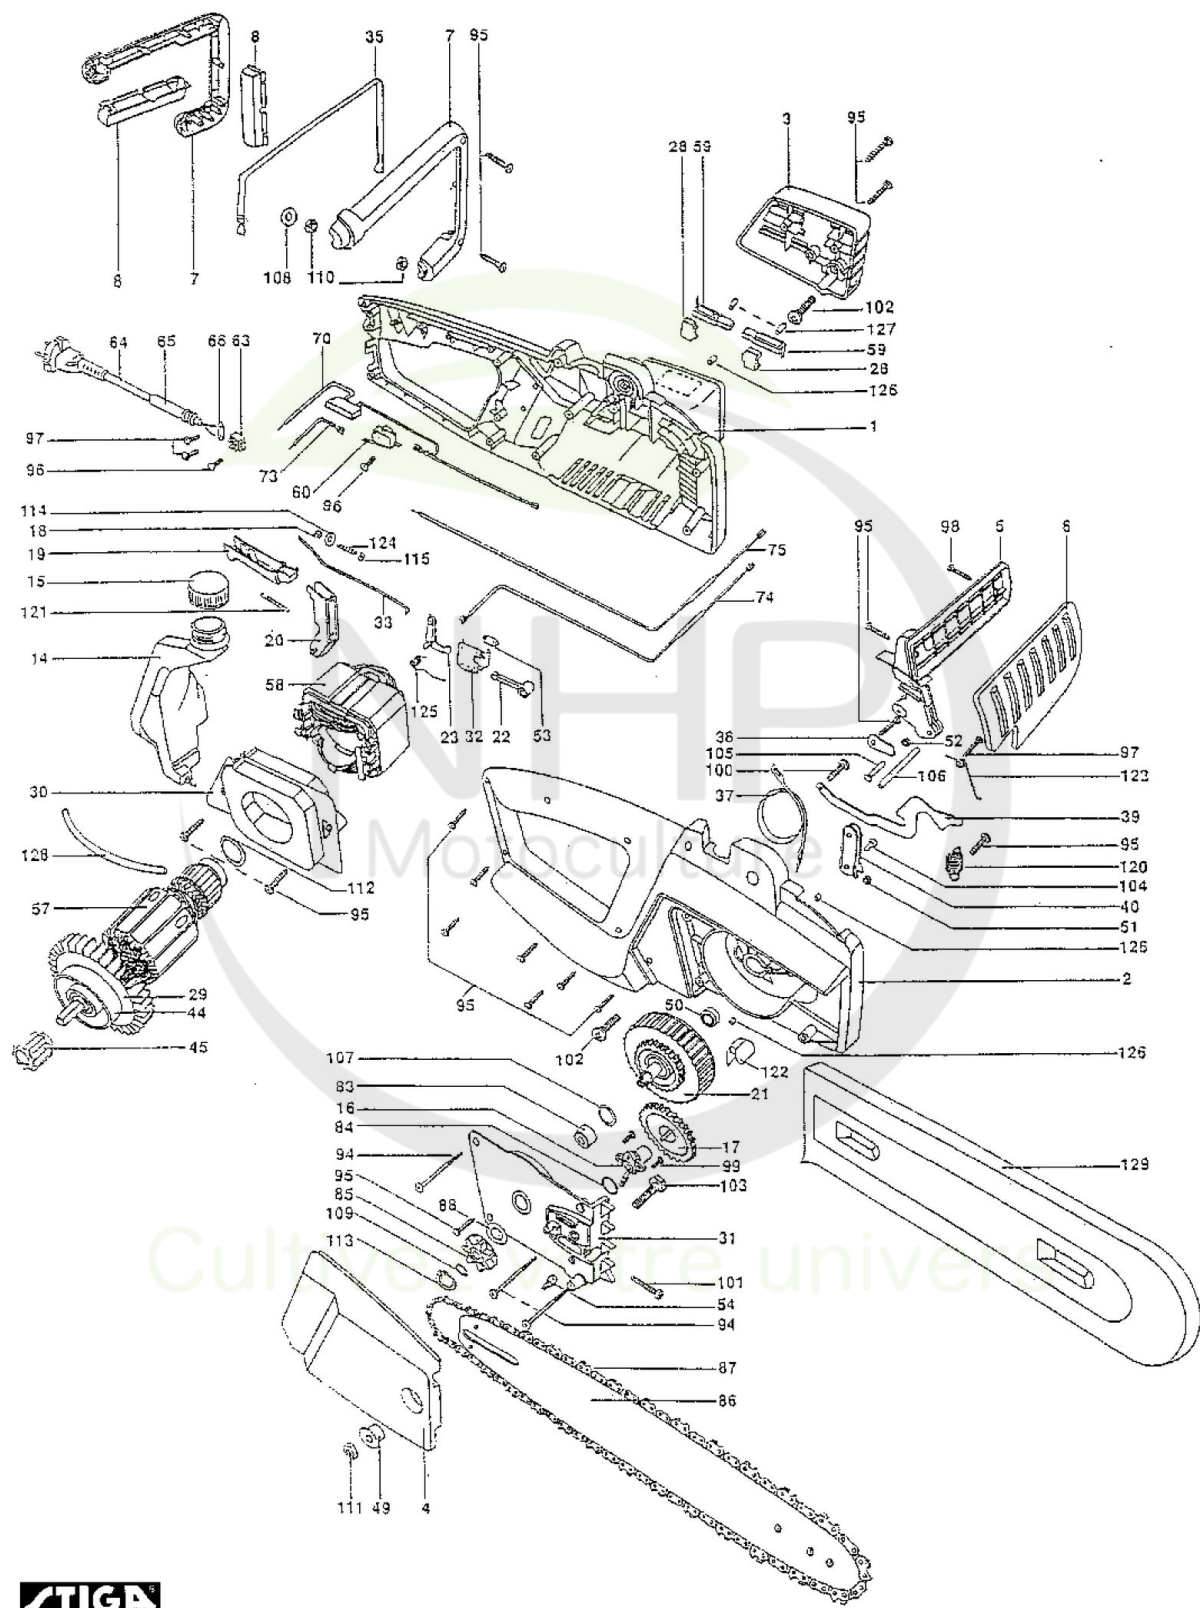 

Tronçonneuse électrique

Réf. N°	Q.té :	Code article	Description	Articles	De	Jusqu'à
84	1	1911-1171-01 cliquez ici	O-Ring			
85	1	1911-1155-01 cliquez ici	Chain Sprocket			
86	1	1911-1266-01 cliquez ici	Guide-Chaîne 16inch	""16"" (3/8""-0.050)""		
86	1	1911-1486-01 cliquez ici	Chaîne	""16"" (3/8""-0.050)""		
87	1	1911-1265-01 cliquez ici	Chaîne	""91VG (3/8"")""		
87	1	1911-1485-01 cliquez ici	Chaîne	""91VG (3/8"")""		
88	1	1911-1165-01 cliquez ici	Anneau De Tenue			
94	3	1911-1263-01 cliquez ici	Vis			
95	17	1911-1069-01 cliquez ici	Vis			
96	2	1911-1268-01 cliquez ici	Vis			
97	3	1911-1105-01 cliquez ici	Vis			
98	1	1911-1237-01 cliquez ici	Vis			
99	2	1911-1051-01 cliquez ici	Vis			
100	1	1911-1233-01 cliquez ici	Vis			
101	1	1911-1172-01 cliquez ici	Vis			
102	2	1911-1235-01 cliquez ici	Vis			
103	1	1911-1234-01 cliquez ici	Vis			
104	1	1911-1244-01 cliquez ici	Rivet			
105	1	1911-1243-01 cliquez ici	Rivet			
106	1	1911-1242-01 cliquez ici	Pivot			
107	1	1911-1239-01 cliquez ici	Rondelle			
108	1	1911-1241-01 cliquez ici	Rondelle			
109	1	1911-1240-01 cliquez ici	Rondelle			
110	2	1911-1236-01 cliquez ici	Ecrou			
111	1	1911-1173-01 cliquez ici	Ecrou			
112	1	1911-1238-01 cliquez ici	Shaft Spring			
113	1	1911-1250-01 cliquez ici	Lock Ring			
120	1	1911-1246-01 cliquez ici	Ressort Frein			
121	1	1911-1249-01 cliquez ici	Lock Spring			
122	1	1911-1175-01 cliquez ici	Pump Spring			
123	1	1911-1247-01 cliquez ici	Catch Spring			
125	1	1911-1248-01 cliquez ici	Ressort			
126	3	1911-1192-01 cliquez ici	Plastic Pin			
127	2	1911-1193-01 cliquez ici	Plastic Pin			
128	1	1911-1262-01 cliquez ici	Oil Hose			
129	1	1911-1149-01 cliquez ici	Bar Guard			
130	1	1911-1153-01 cliquez ici	Combi tool	Ej ill/not ill.		
130	1	1911-1484-01 cliquez ici	Tool Set	Ej ill/not ill.		