




Pièces de rechange Spare parts list

500003****

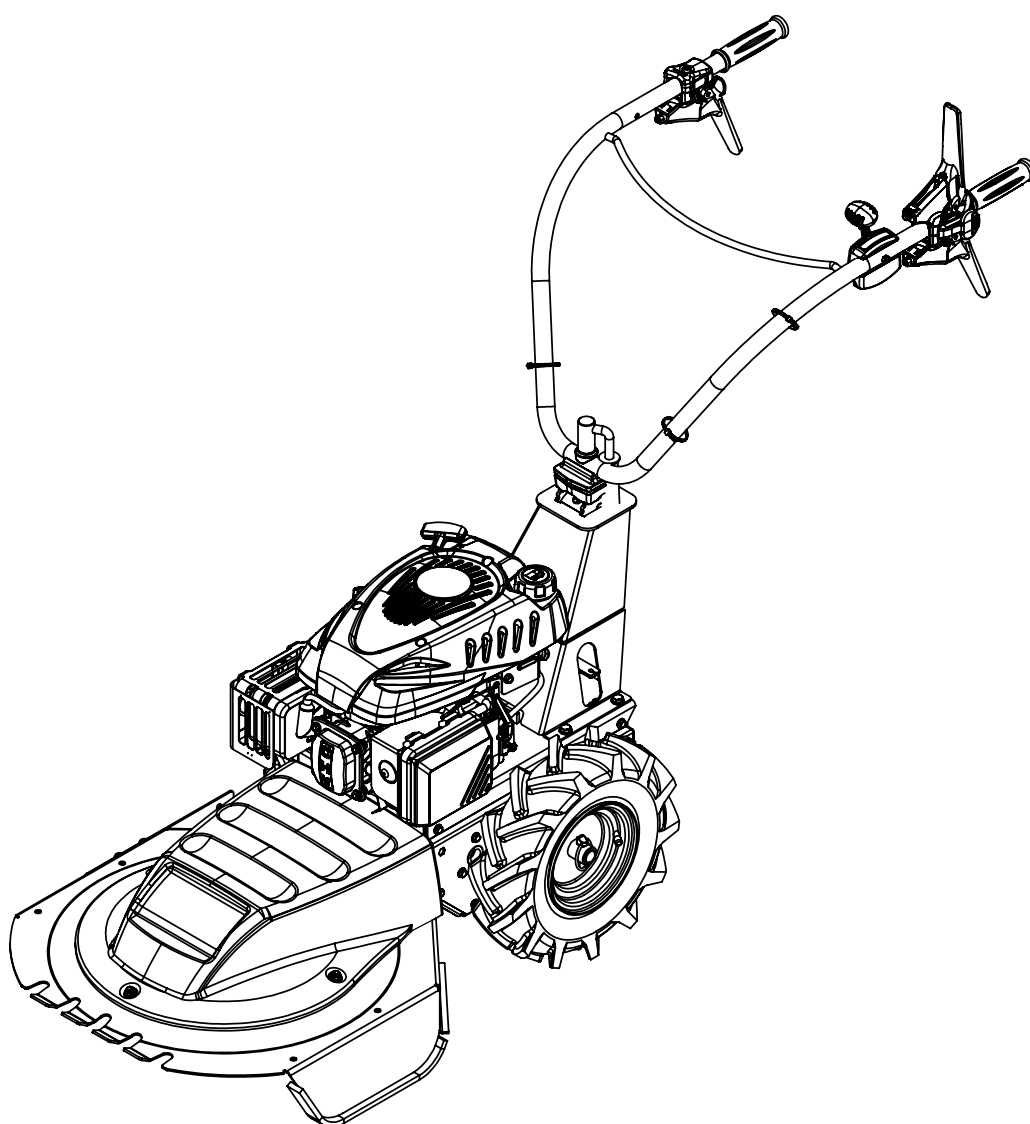

*DEBROUSSAILLEUSE
GRASS CUTTER*

5002010304: Noir RAL9005 / Black RAL9005
 5002010504: Gris (8120) / Grey (8120)
 5002013004: Gris RAL7015 / Grey RAL 7015

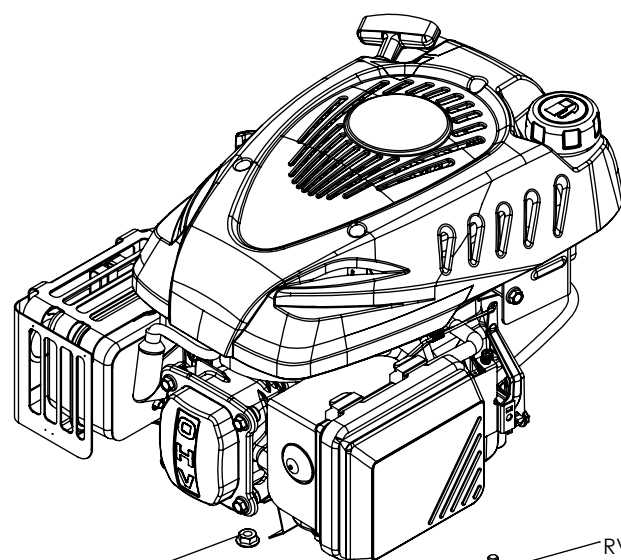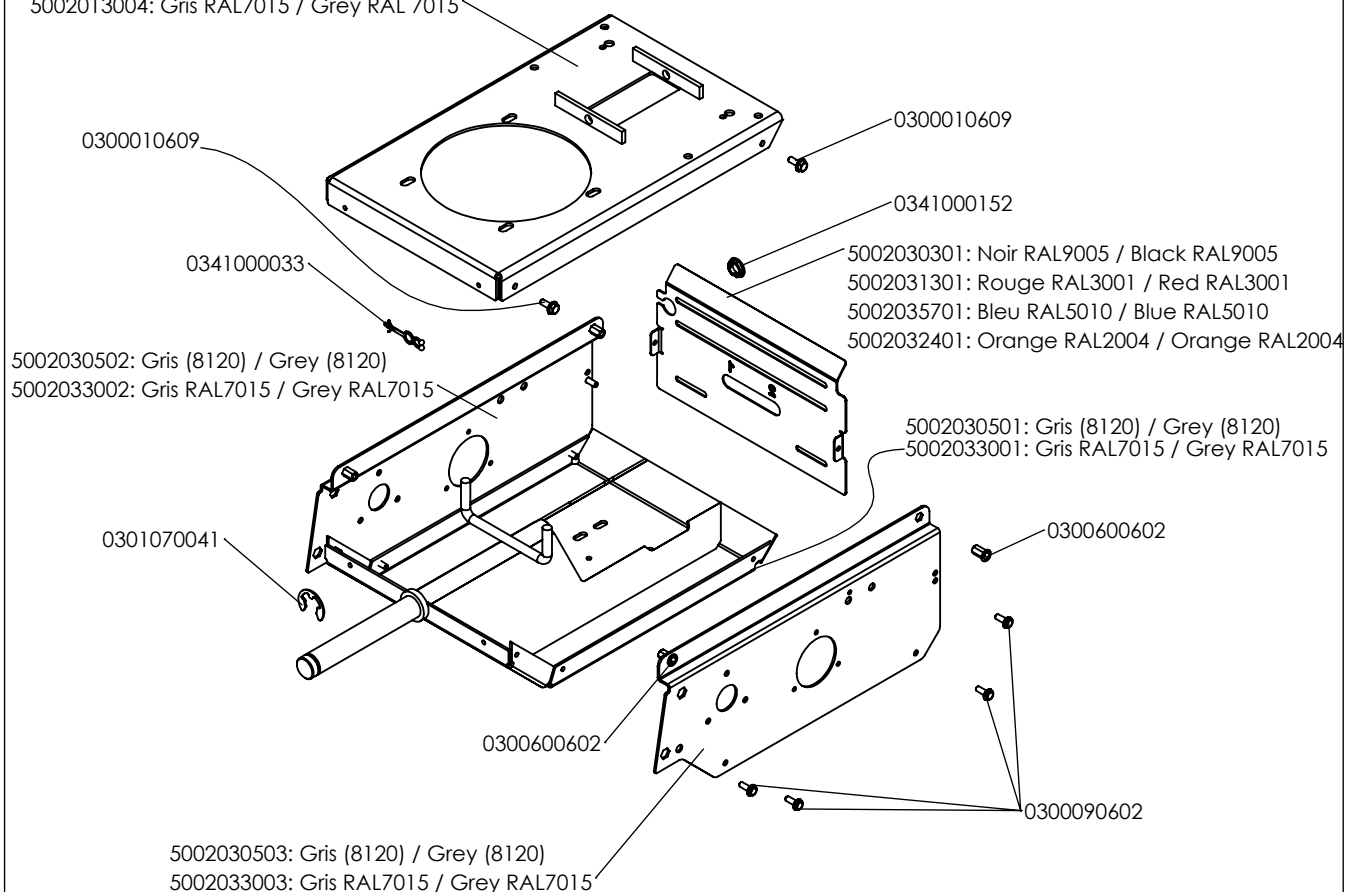

0300260801

EA 190V et GCVx : 0300010817 x4
 RV 225 : 0300010817 x1
 BS 850 : 0300010813 et 0300430801

0306060002

RV 225 : 0300010816 x3
 BS 850 : 0300010834 x2

RV 225 et MA 190V : 0302020024
 GCVx 200 : 0302020267

0301040001

0300401001

0300431001

0300060302



0340040002: Bleu RAL5010 / Blue RAL5010

0340040018: Noir RAL9005 / Black RAL9005

0340040016: Jaune RAL1028 / Yellow RAL1028

0340040008: Orange RAL2009 / Orange RAL2009

0340040010: Rouge RAL 3001 / Red RAL3001

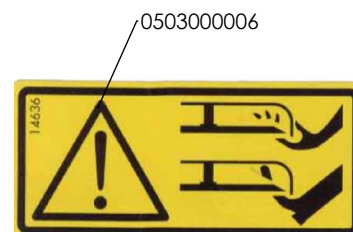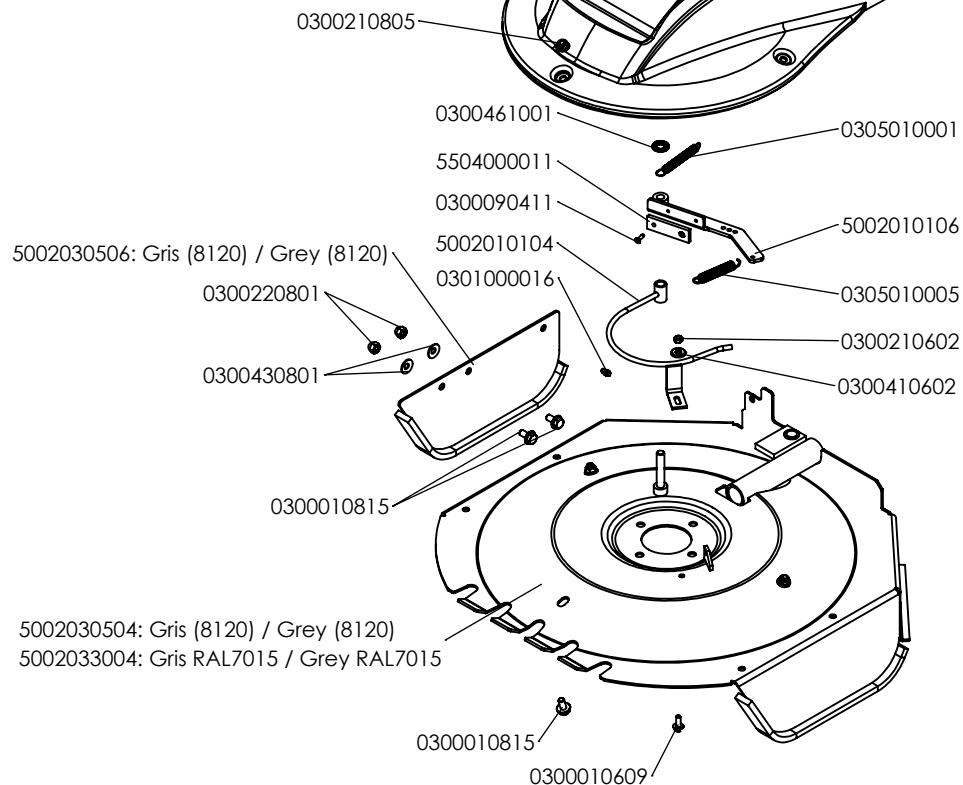

5002030308 NOIR / BLACK RAL 9005

5002031308 ROUGE / RED RAL3001

5002032408 ORANGE / ORANGE RAL 2004

5002035708 BLEU / BLUE RAL 5010

5002031908 VERT / GREEN RAL 6018

