




# Pièces de rechange Spare parts list

## **5000\*\*03\*\***

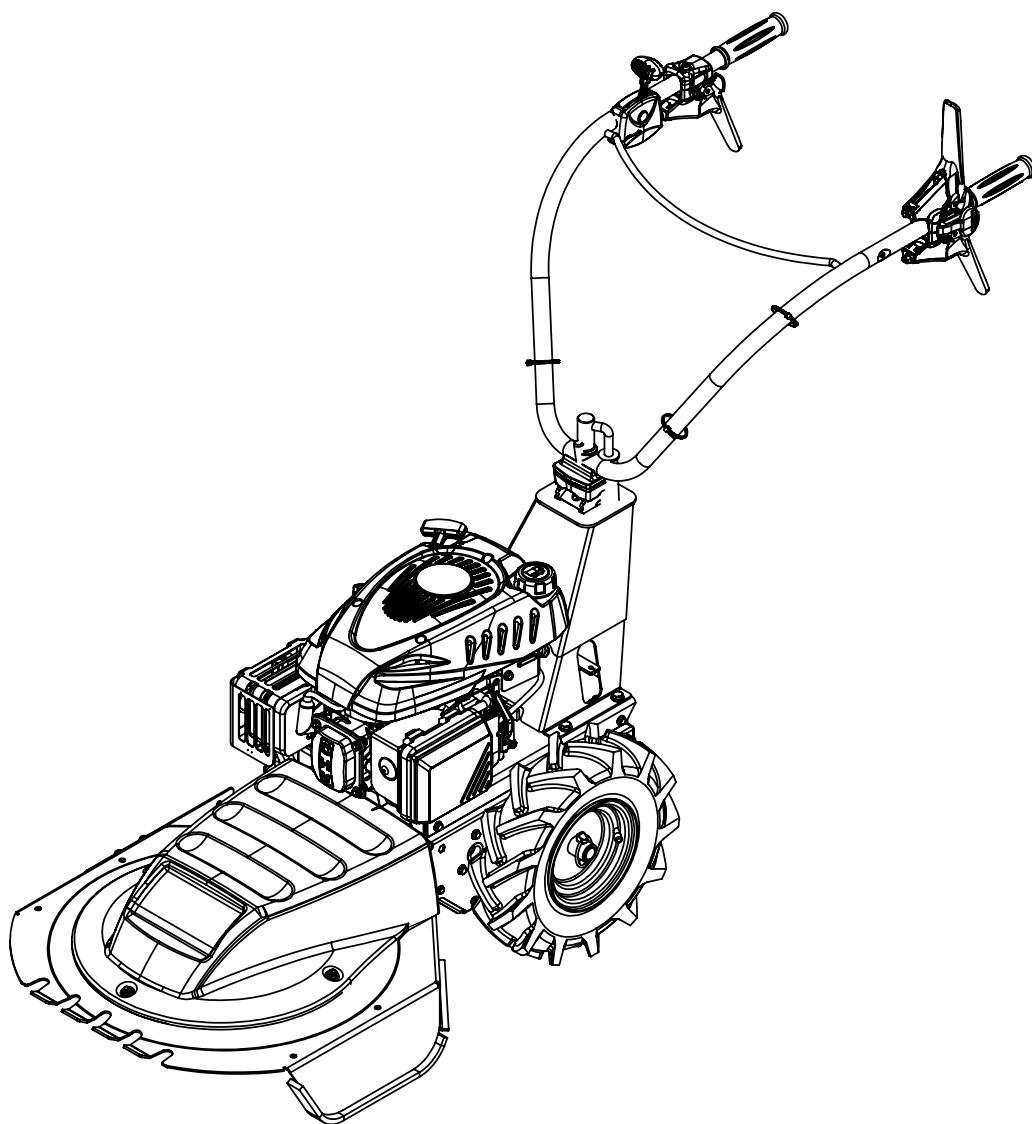

*DEBROUSSAILLEUSE  
GRASS CUTTER*

5002010304: Noir RAL9005 / Black RAL9005  
 5002010504: Gris (8120) / Grey (8120)  
 5002013004: Gris RAL7015 / Grey RAL 7015

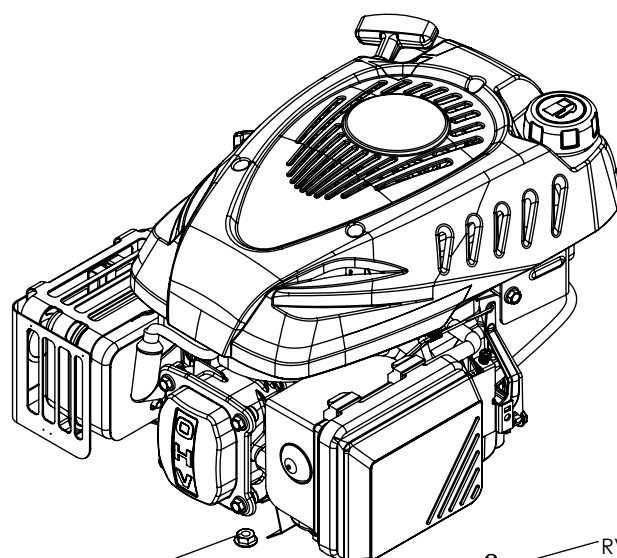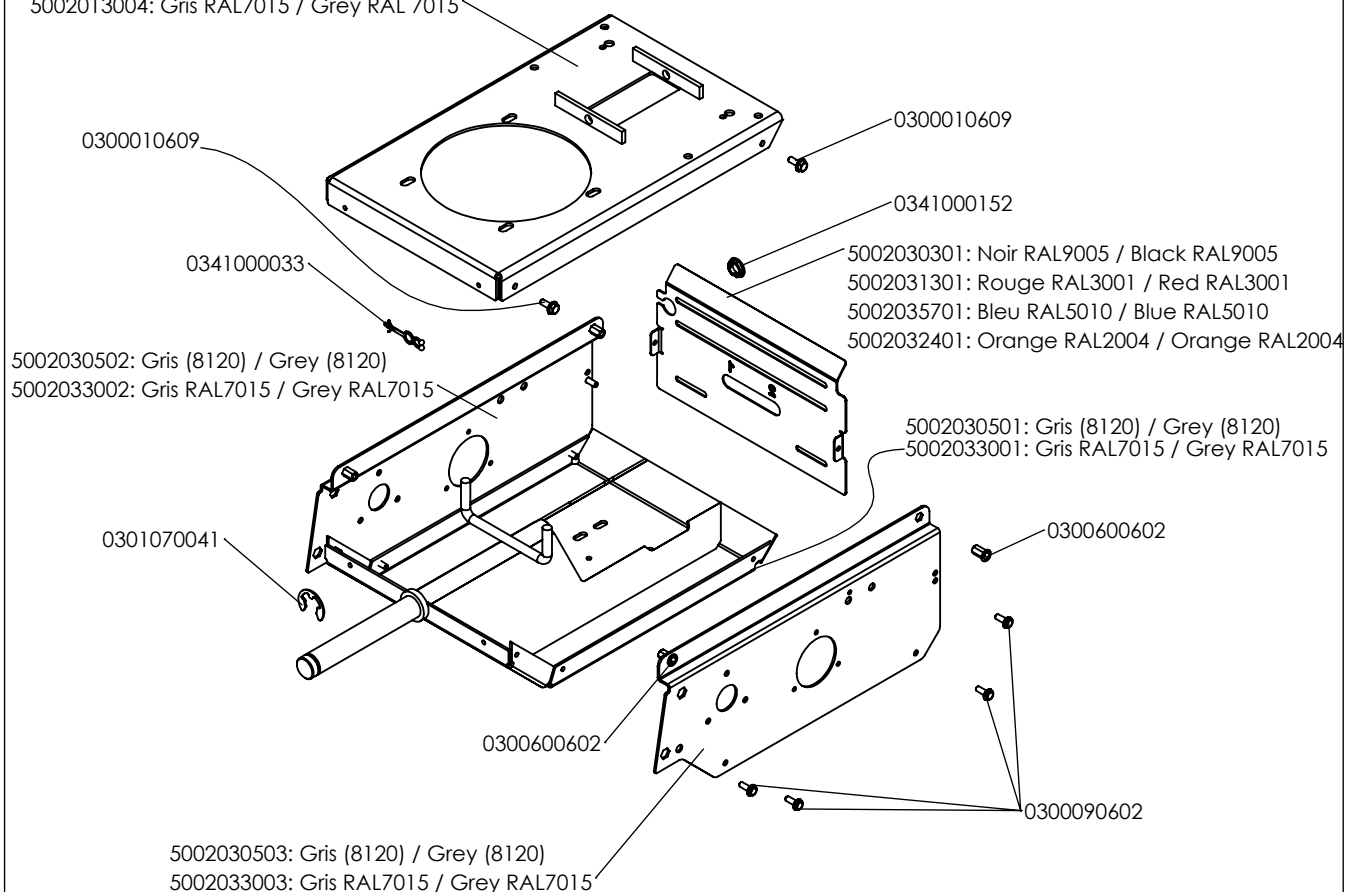

0300260801

EA 190V et GCVx : 0300010817 x4  
 RV 225 : 0300010817 x2  
 BS 850 : 0300010813 et 0300430801

0306060002

RV 225 : 0300010816 x2  
 BS 850 : 0300010834 x2

RV 225 et MA 190V : 0302020024  
 GCVx 200 : 0302020267



0301040001

0300411101

0300431001

0300060302

0340040002: Bleu RAL5010 / Blue RAL5010  
 0340040018: Noir RAL9005 / Black RAL9005  
 0340040016: Jaune RAL1028 / Yellow RAL1028  
 0340040008: Orange RAL2009 / Orange RAL2009  
 0340040010: Rouge RAL 3001 / Red RAL3001

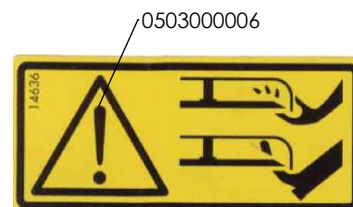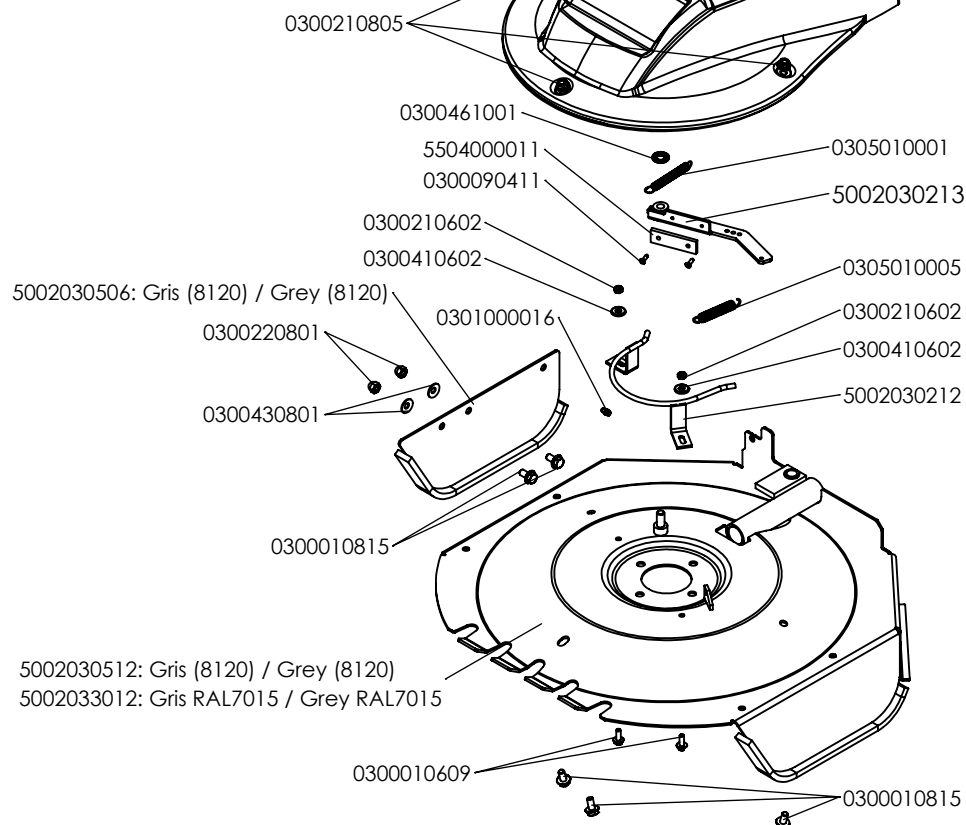

5002030310 NOIR / BLACK RAL 9005  
 5002031310 ROUGE / RED RAL3001  
 5002032410 ORANGE / ORANGE RAL2004  
 5002035710 BLEU / BLUE RAL5010  
 5002030510 GRIS / GREY RAL 8120  
 5002031910 VERT / GREEN RAL6018

