

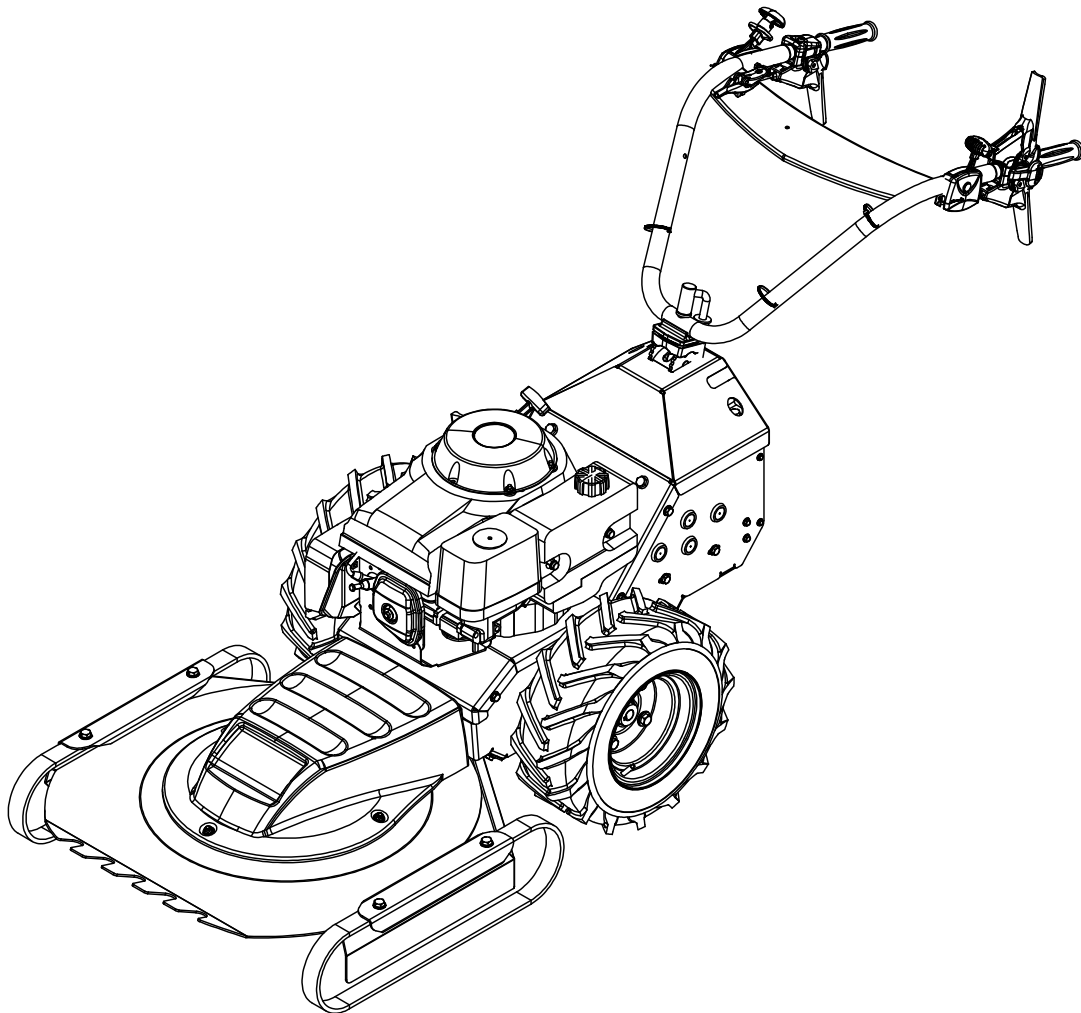


# Pièces de rechange Spare parts list


**5000\*\*04\*\***

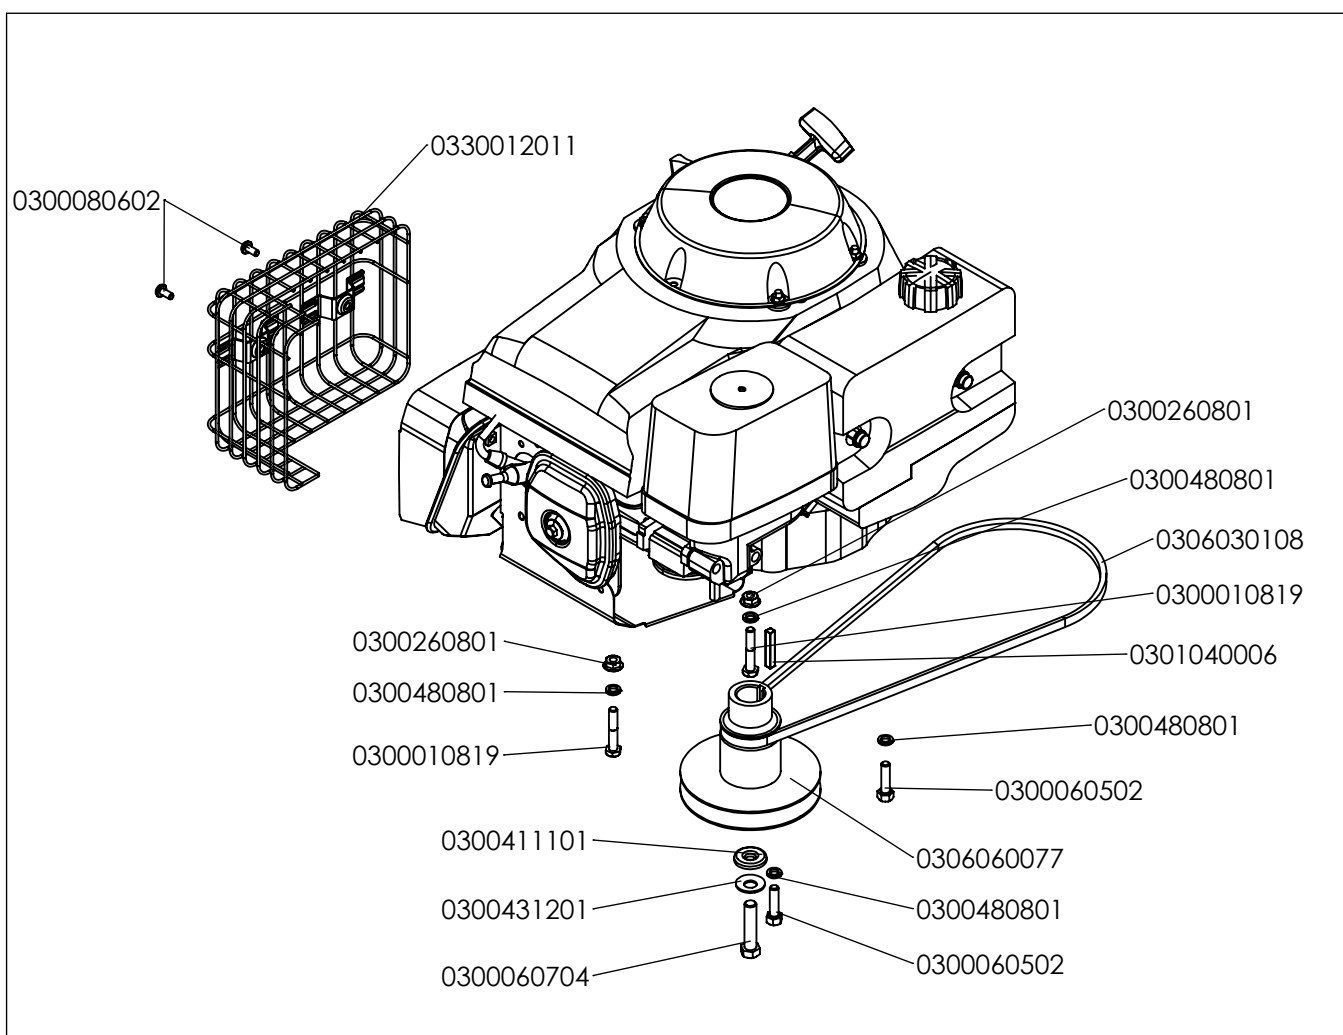



**DEBROUSSAILLEUSE  
GRASS CUTTER**

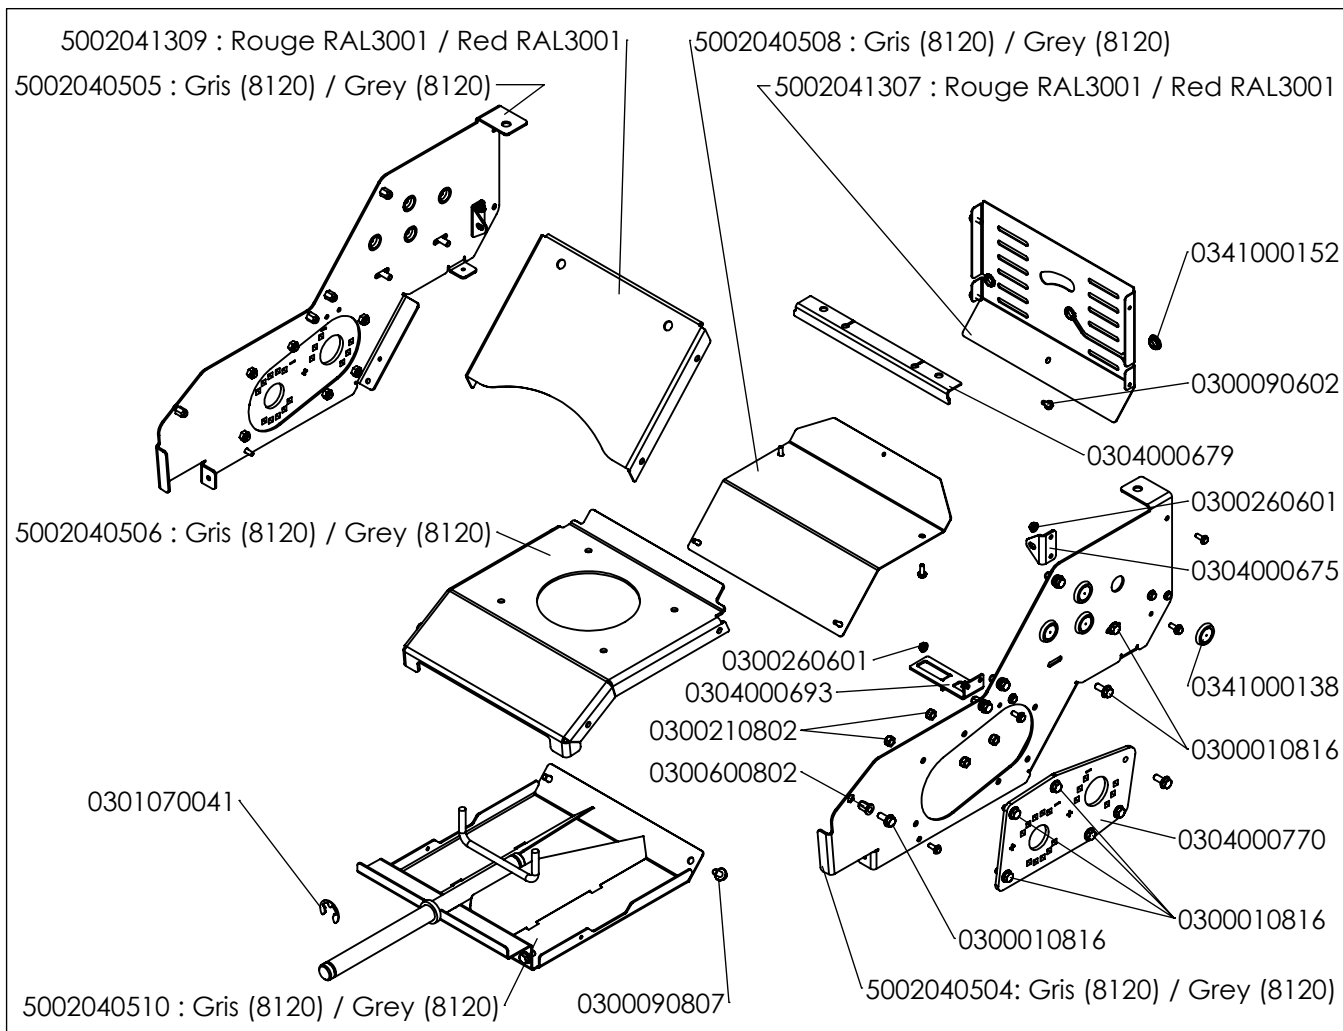




0340040002 : Bleu P301 / Blue P301  
 0340040008 : Orange RAL2009  
 0340040010 : Rouge RAL3001 / Red RAL3001

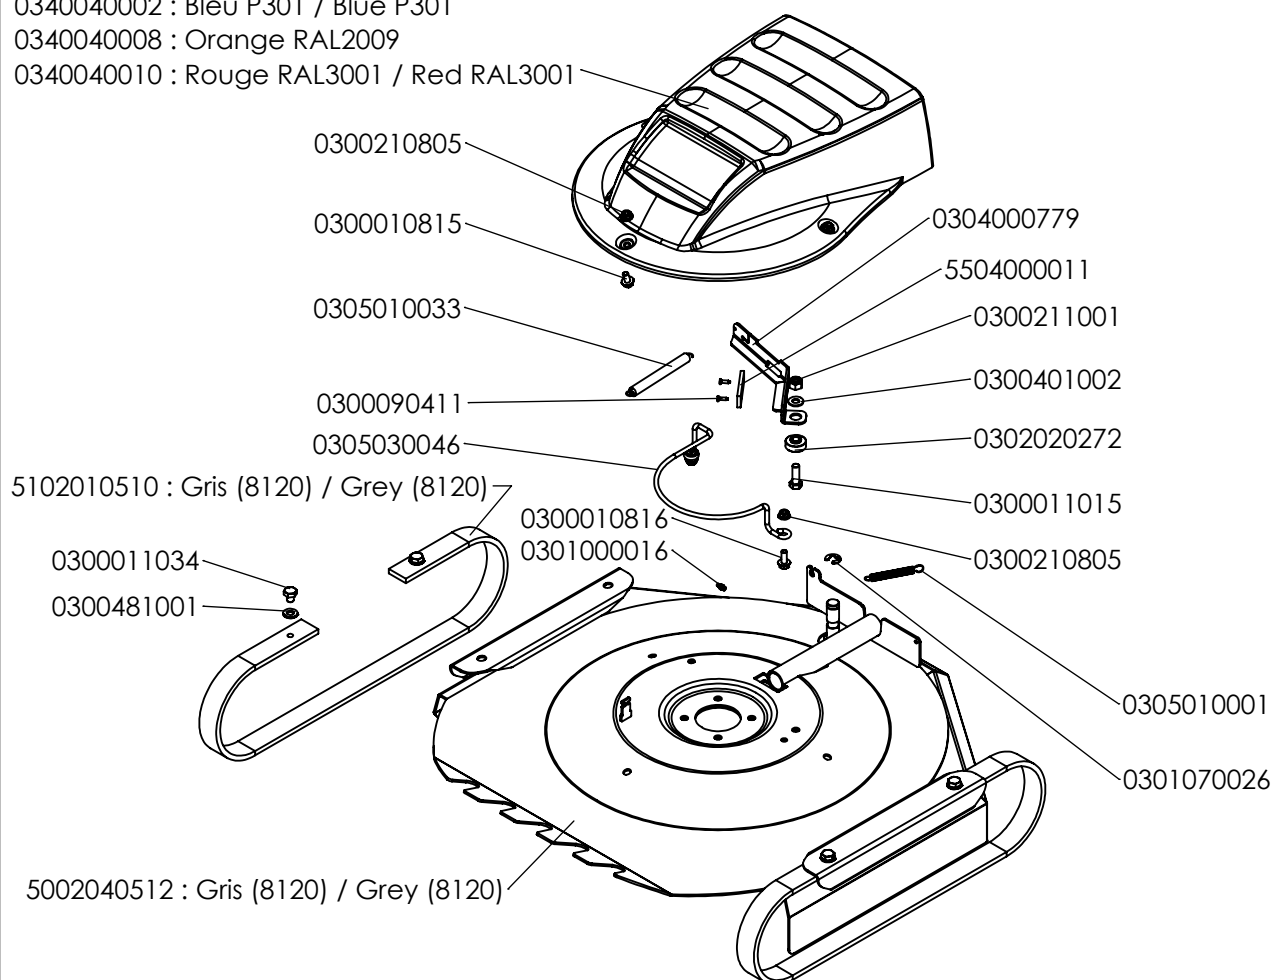

5002021312: Rouge RAL3001 / Red RAL3001  
 5002025712: Bleu RAL5010 / Blue RAL5010

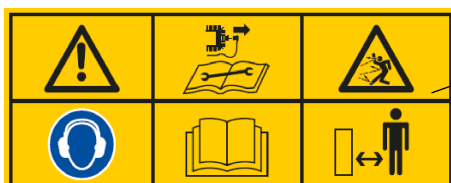
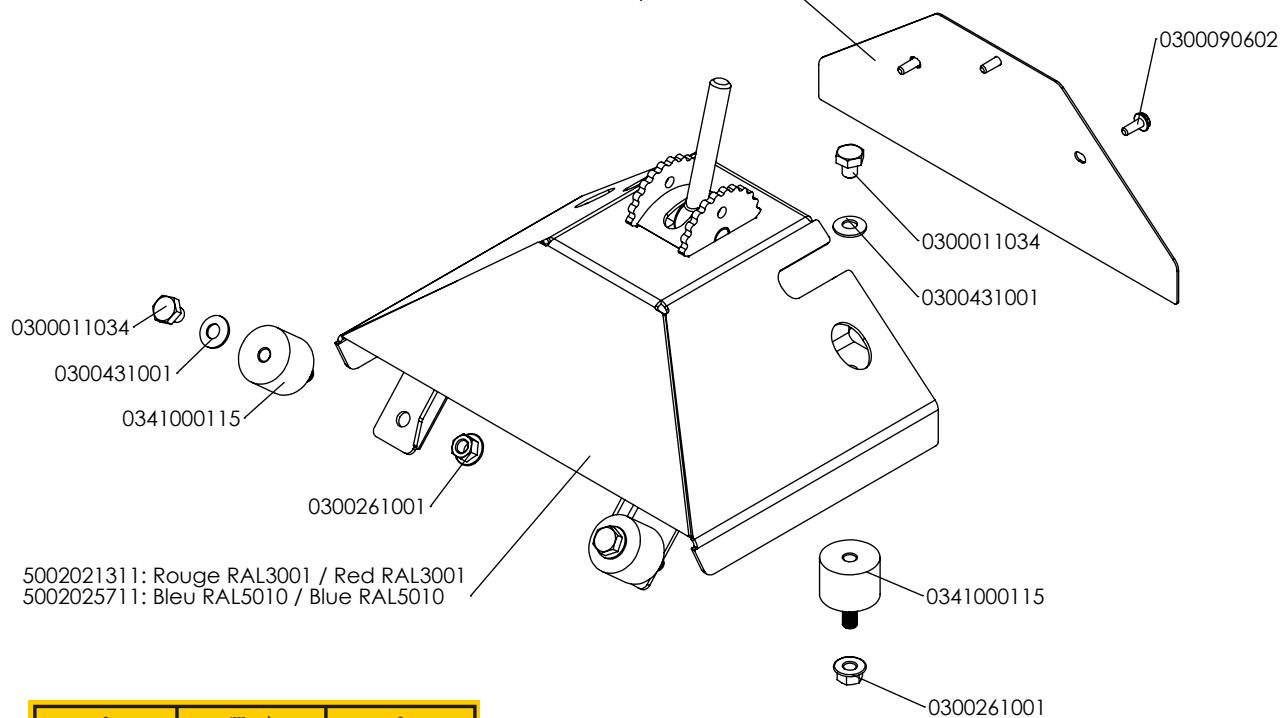


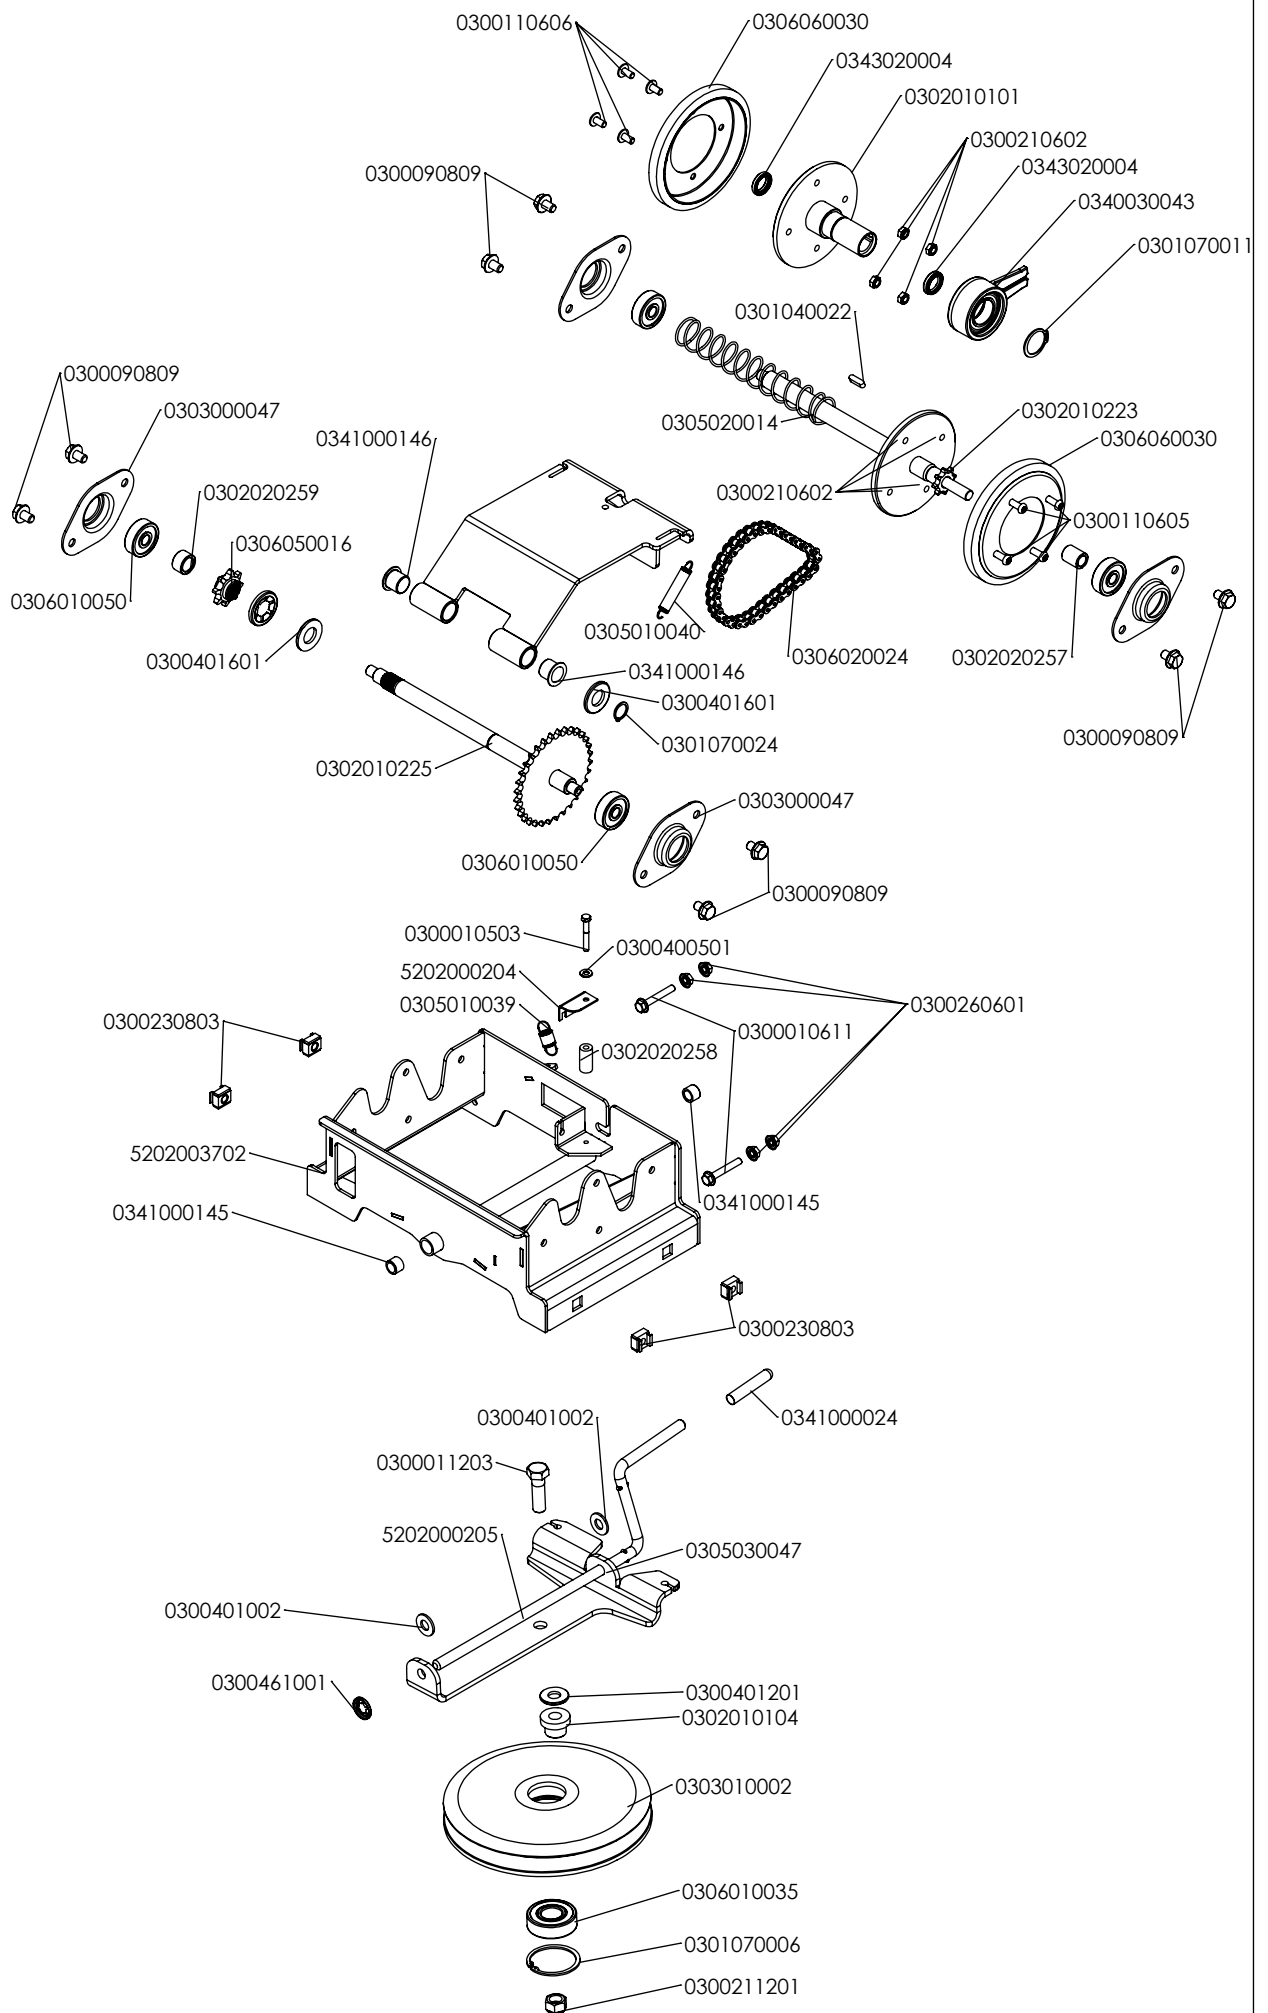


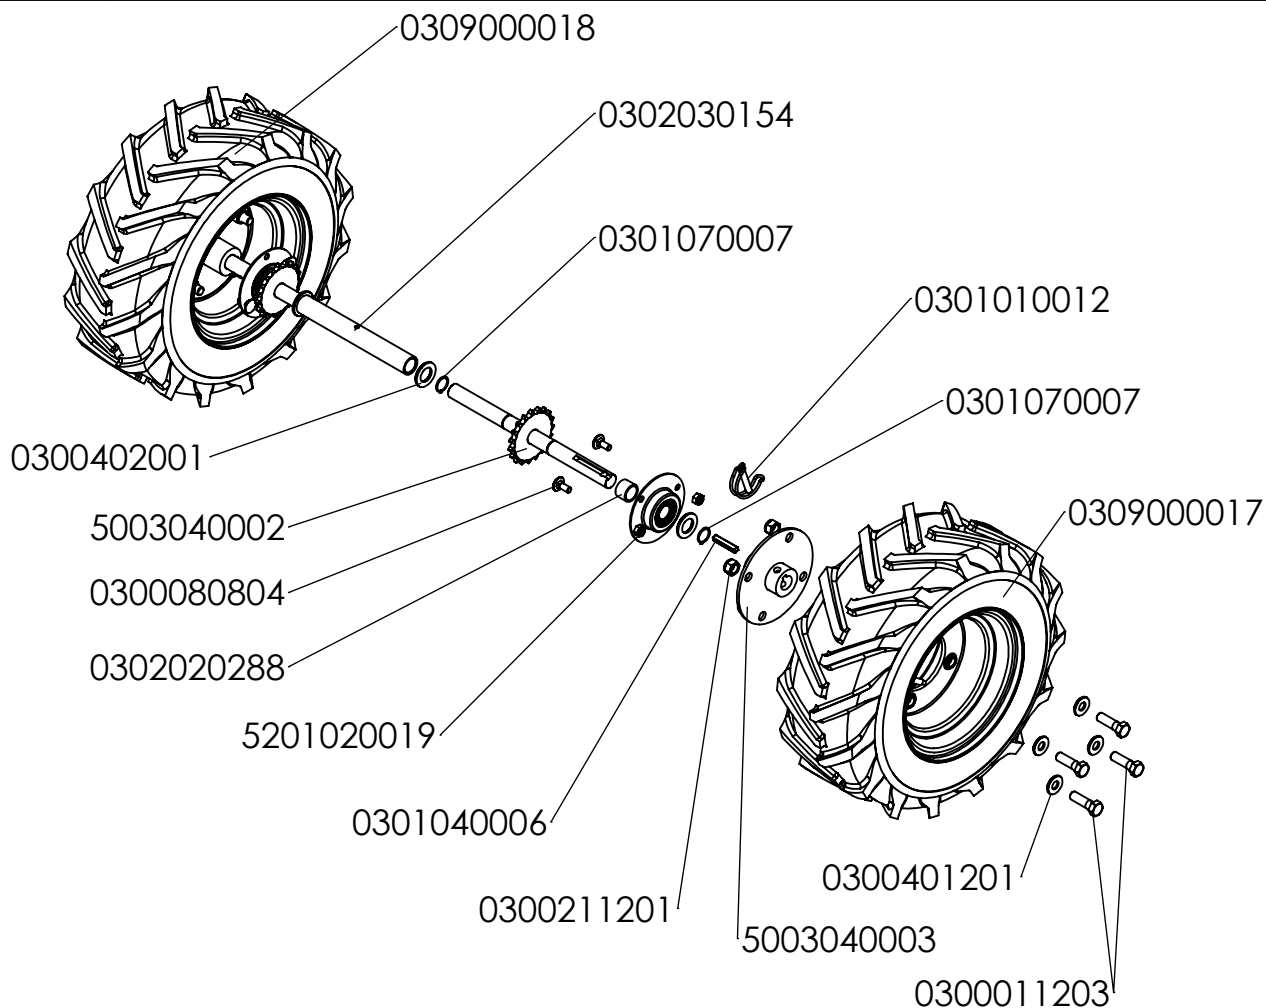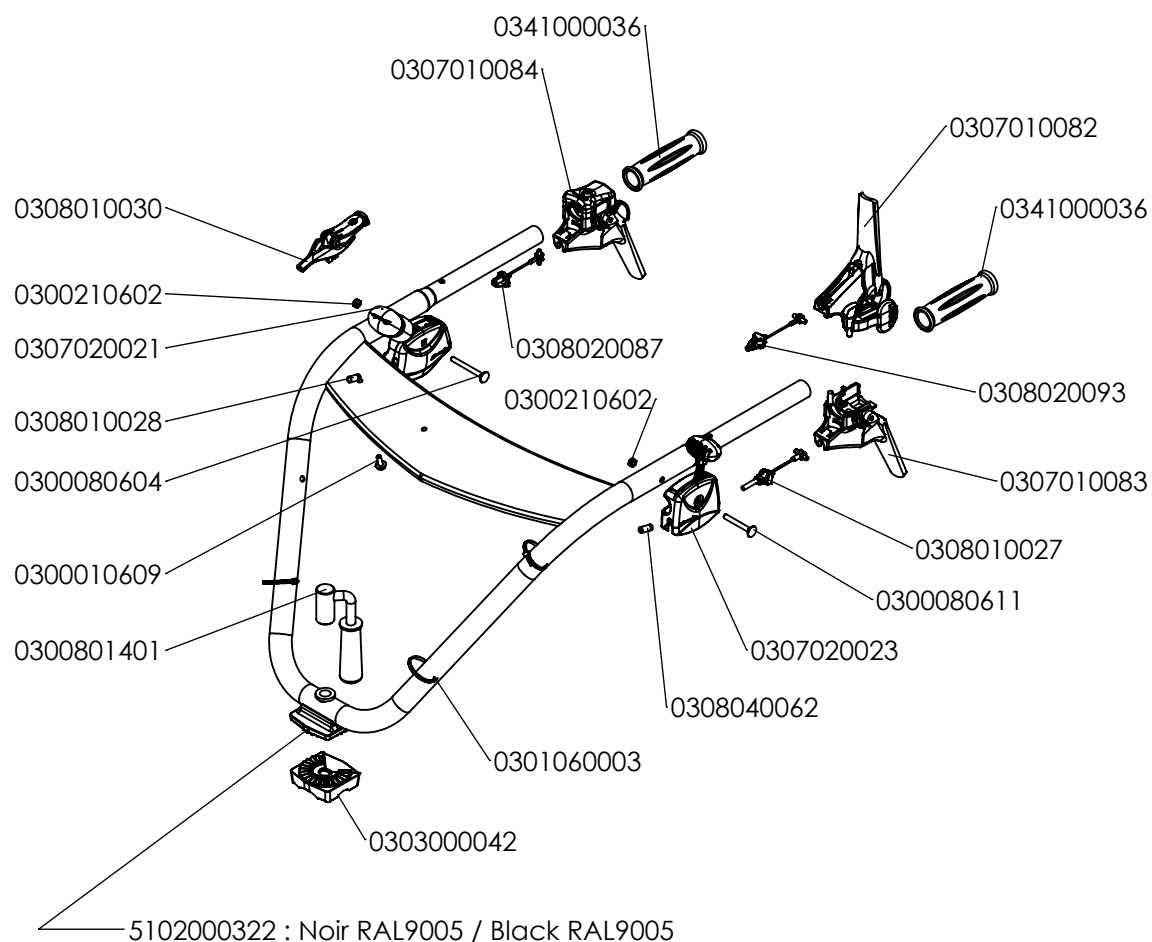


50\_Guidon L sénior V3 Défaut

50\_Roue L sénior V3 Défaut

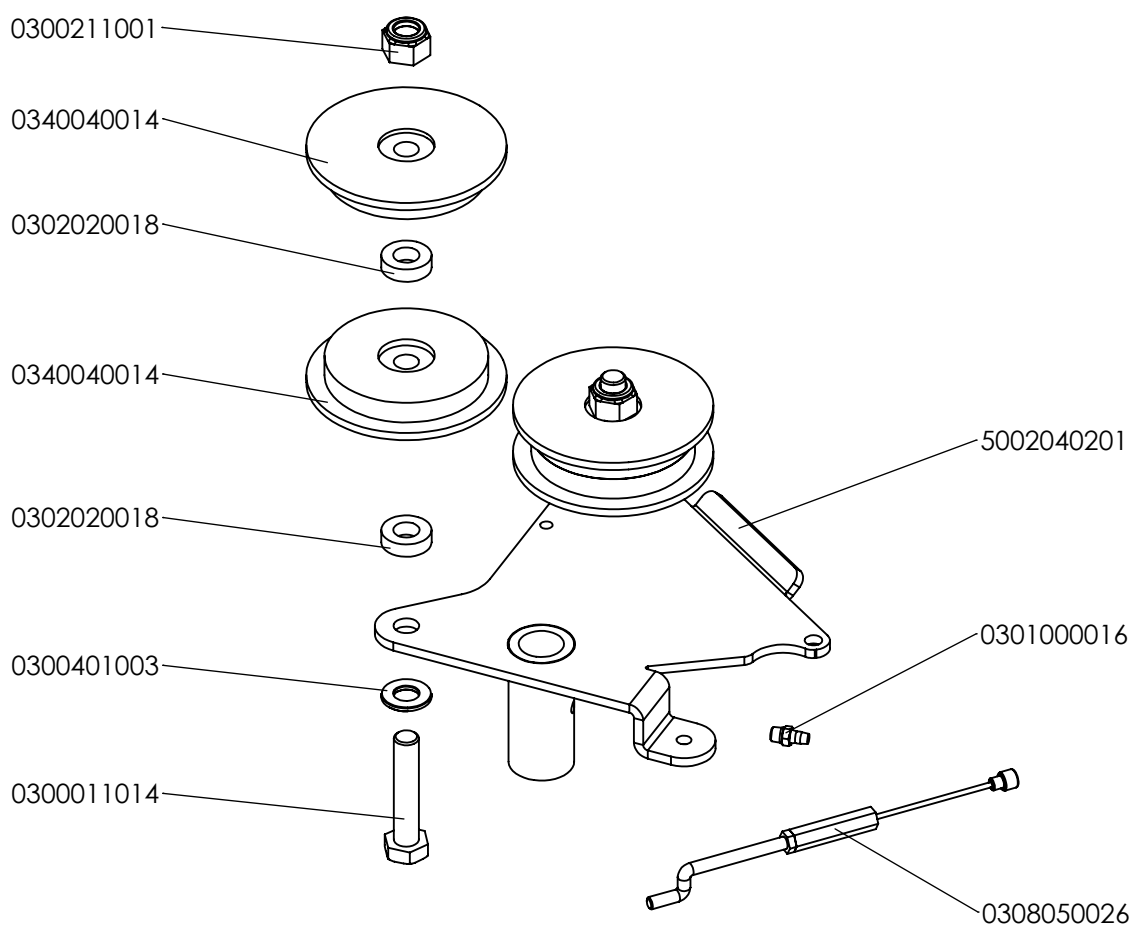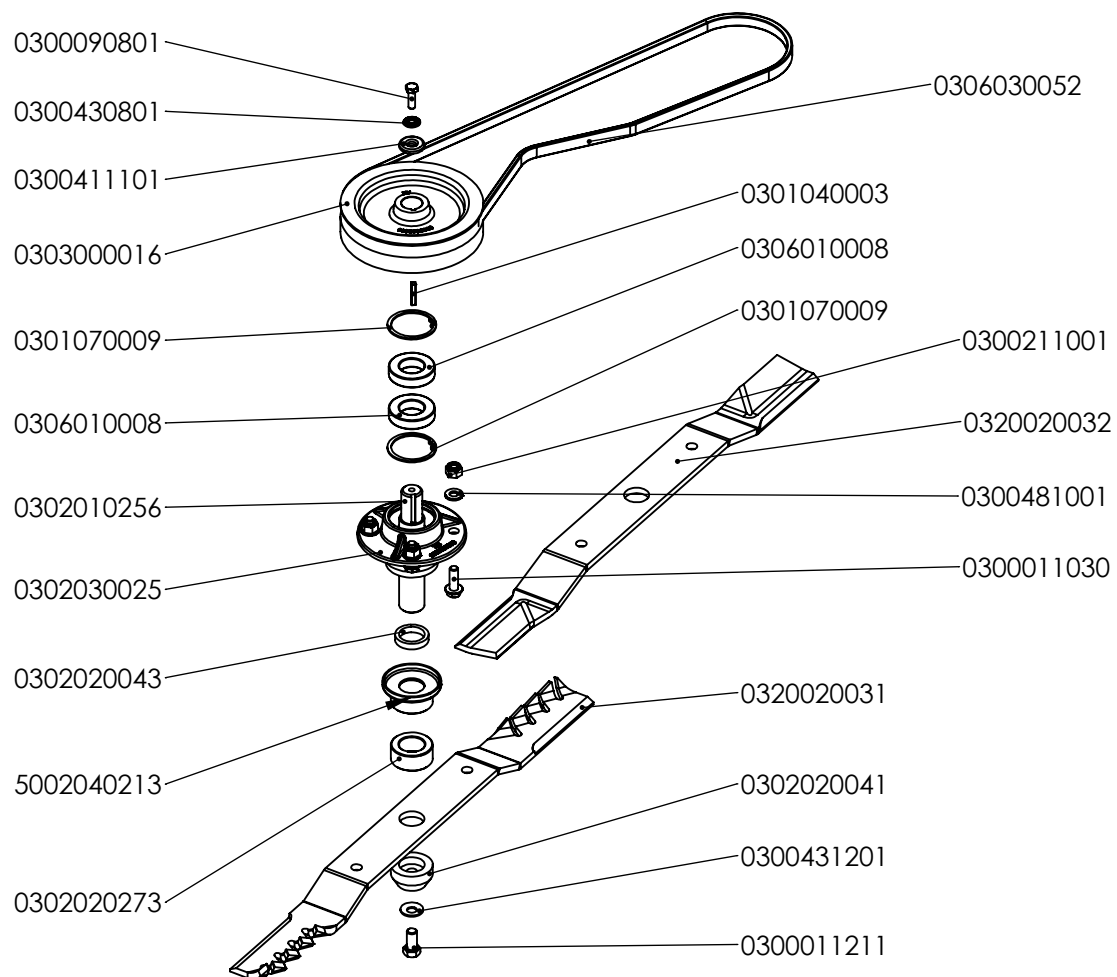


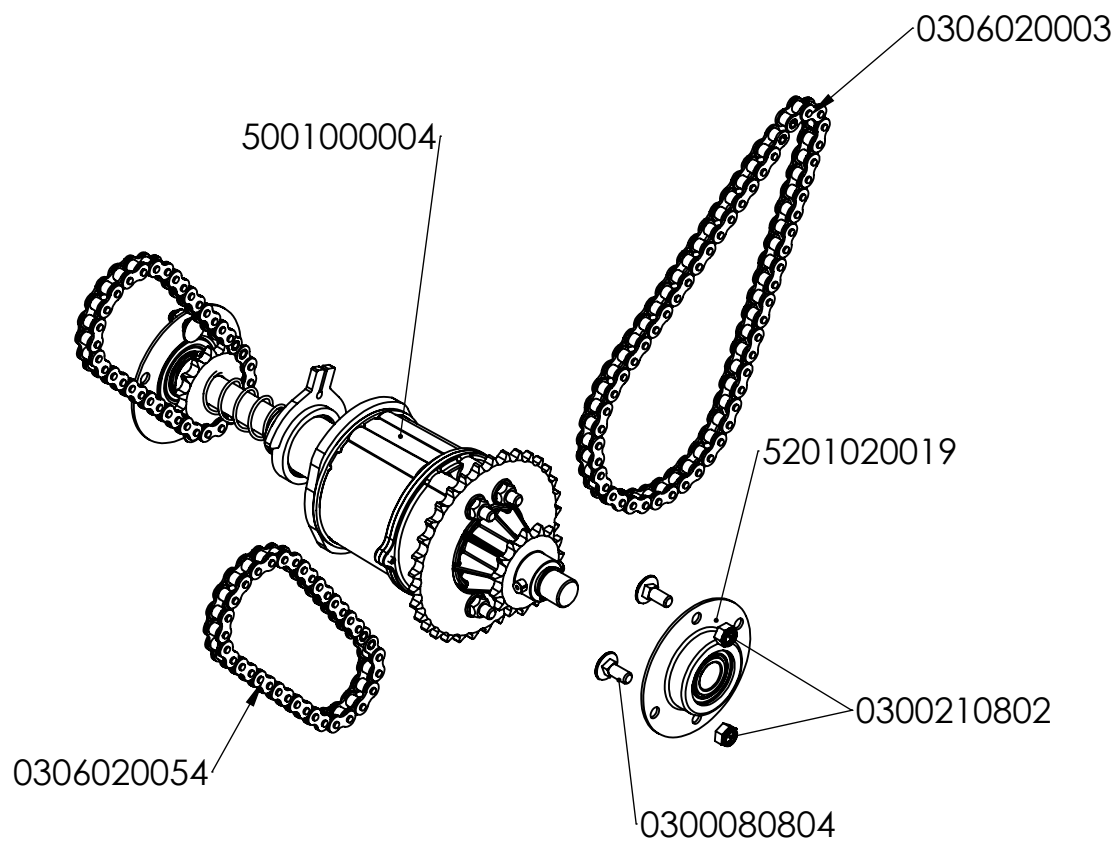

50\_Différentiel Lsénior V3 Détout

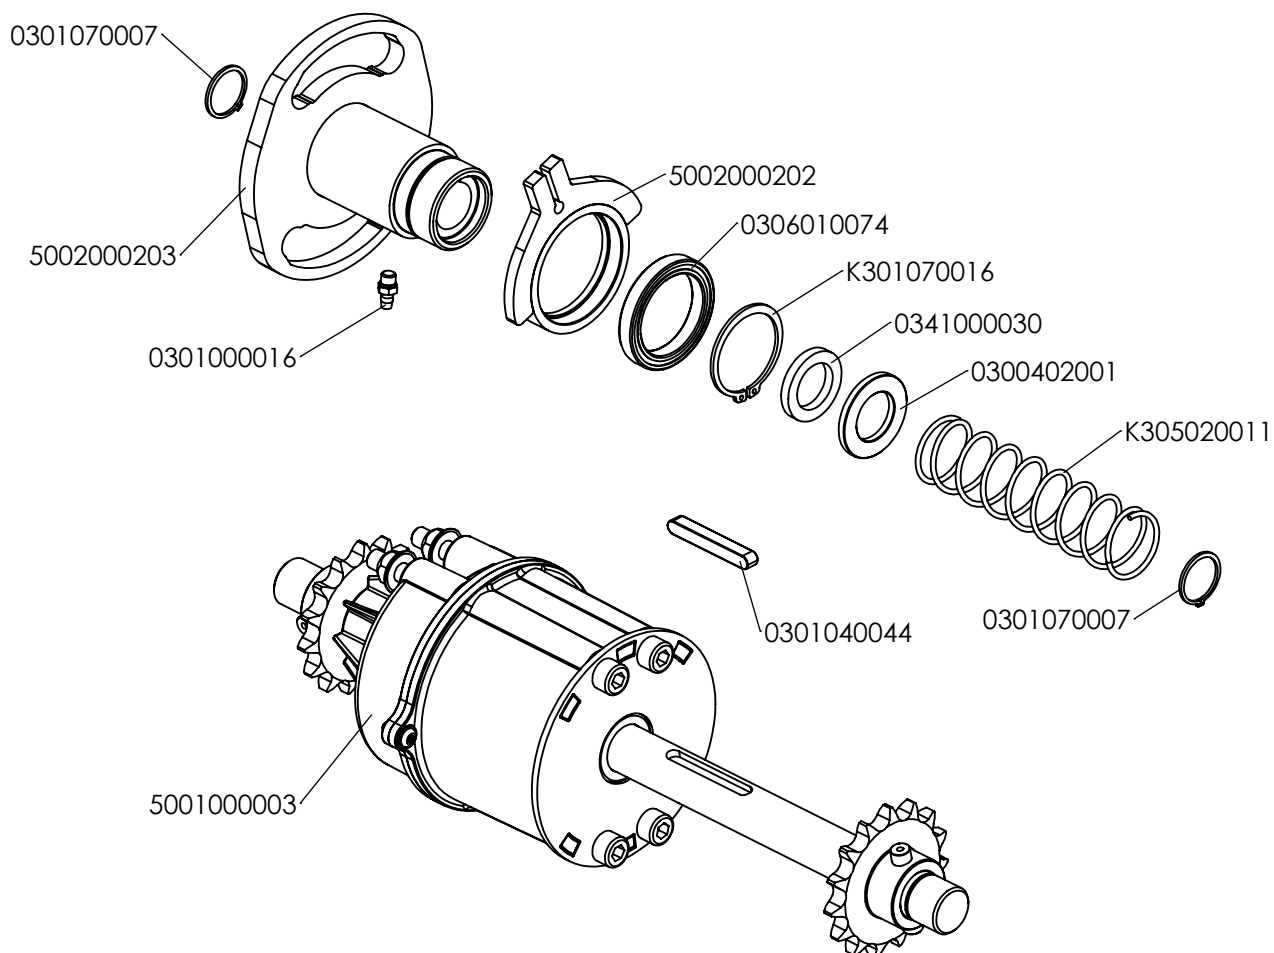

5001000004\_Part list

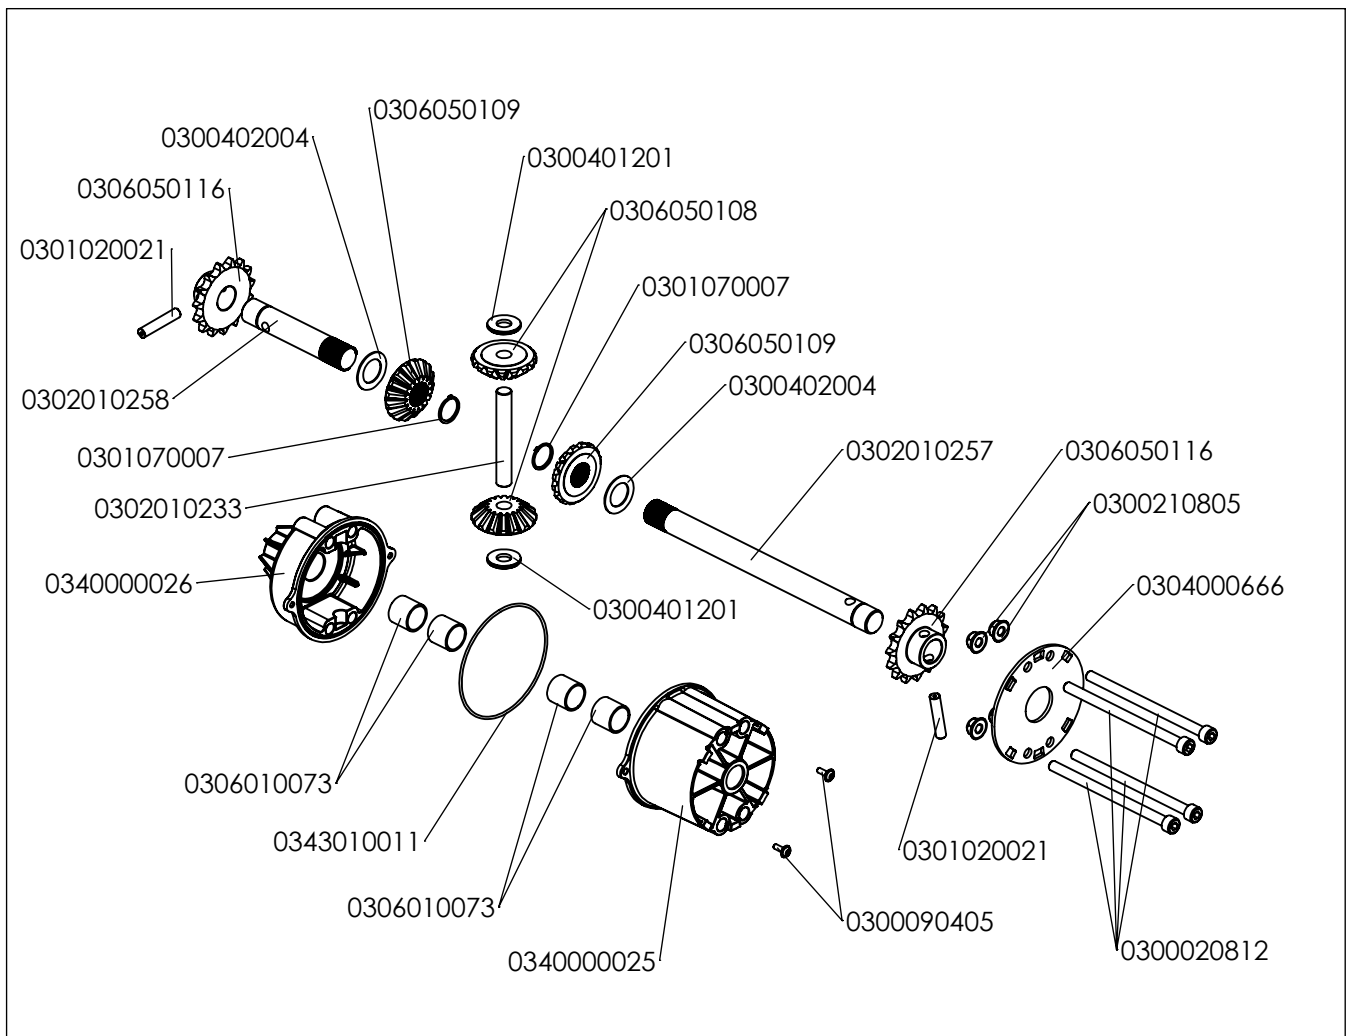

5001000003\_Part list