


Pièces de rechange Spare parts list

500004****


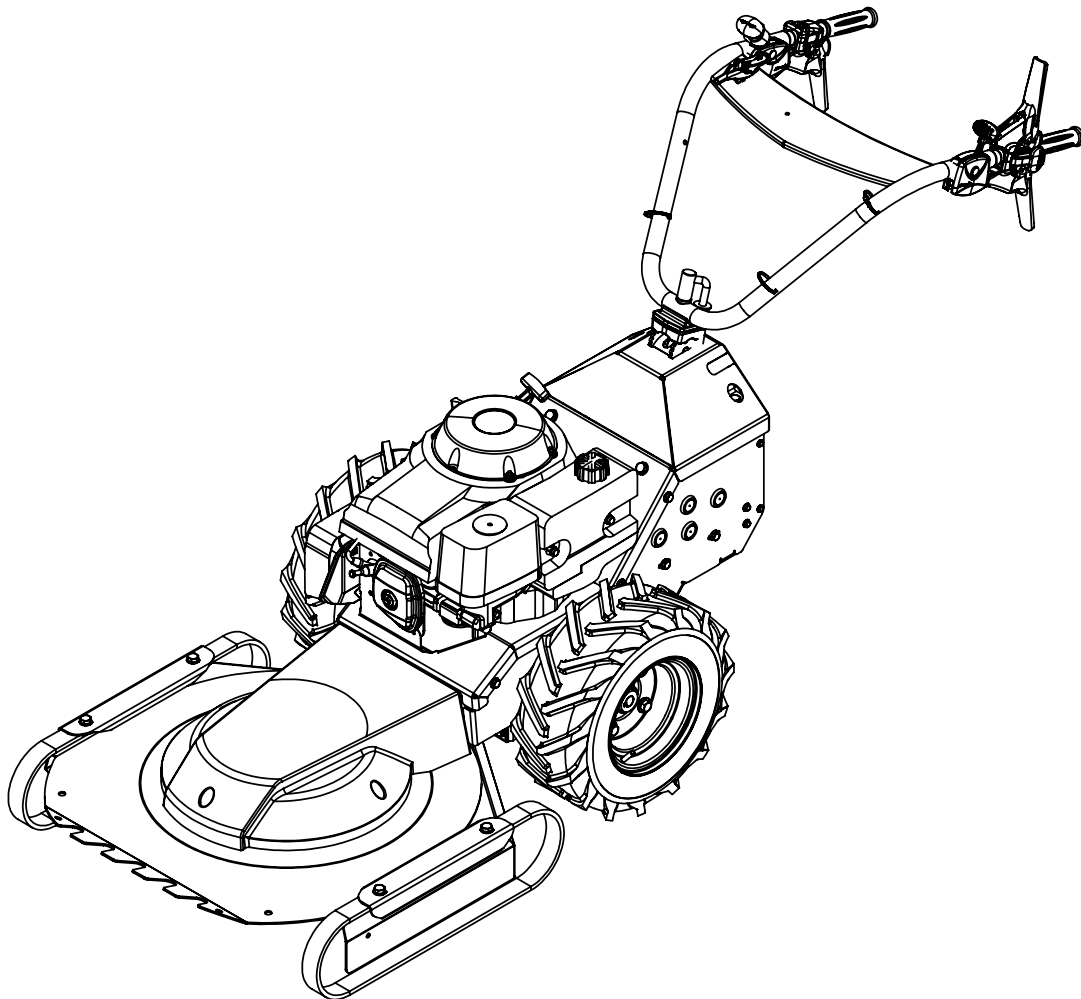




**DEBROUSSAILLEUSE
GRASS CUTTER**


5002041309 : Rouge RAL3001 / Red RAL3001
 5002045709: Bleu RAL5010 / Blue RAL5010



5002040508 : Gris (8120) / Grey (8120)



5002041307 : Rouge RAL3001 / Red RAL3001
 5002045707 : Bleu RAL5010 / Blue RAL5010

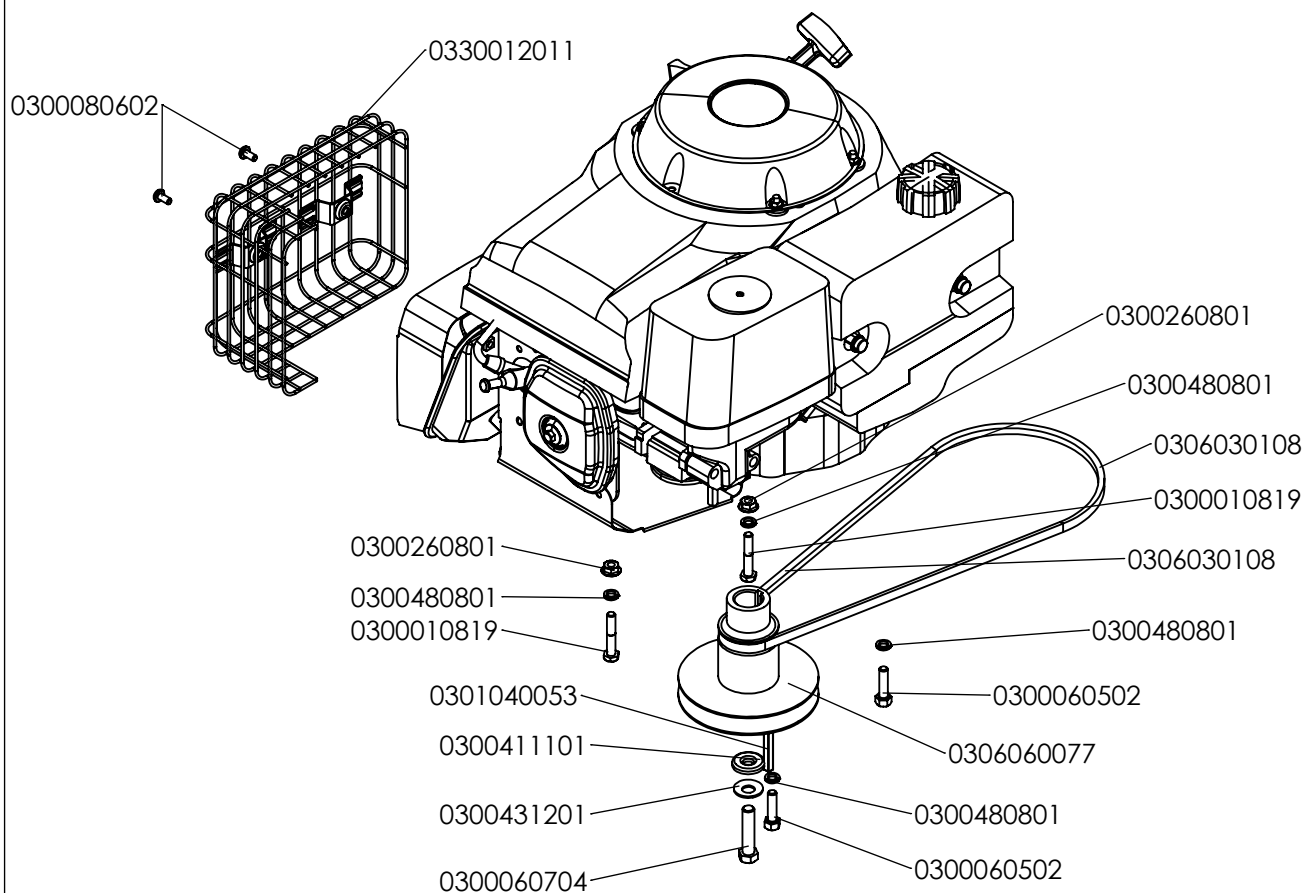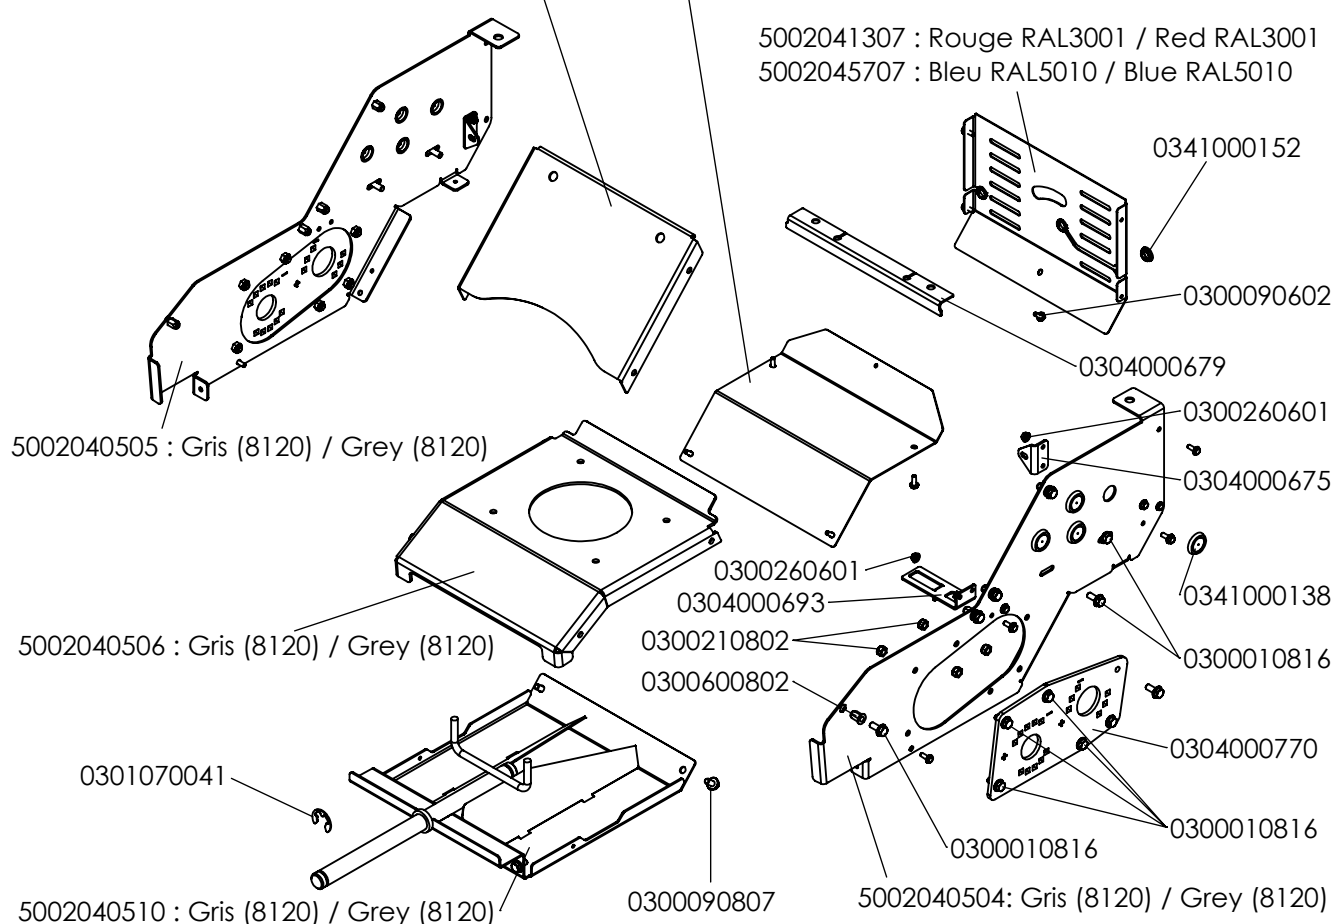


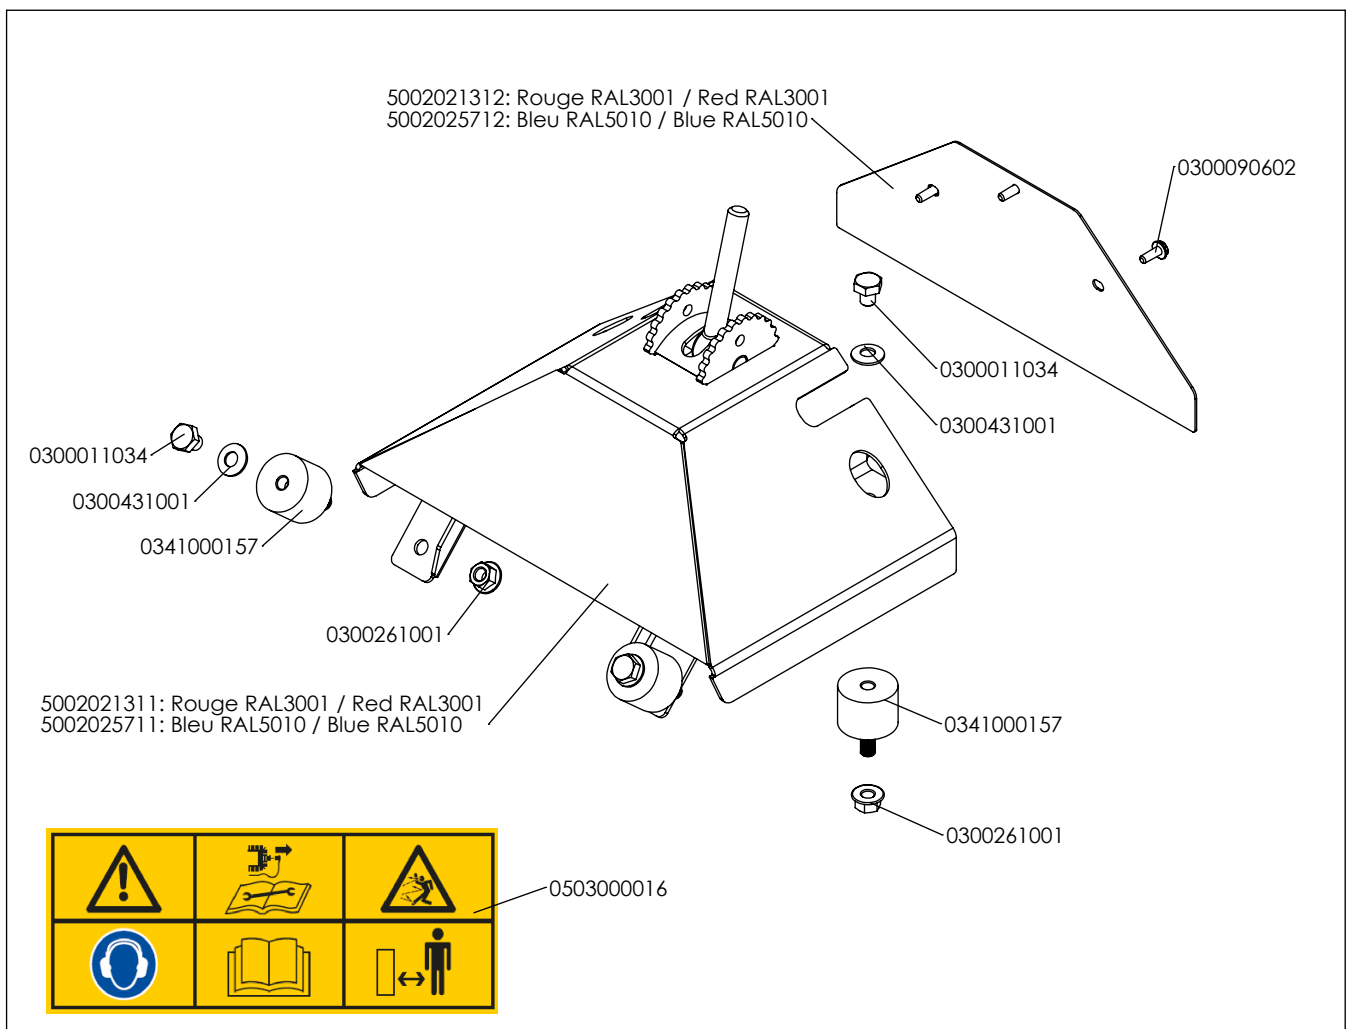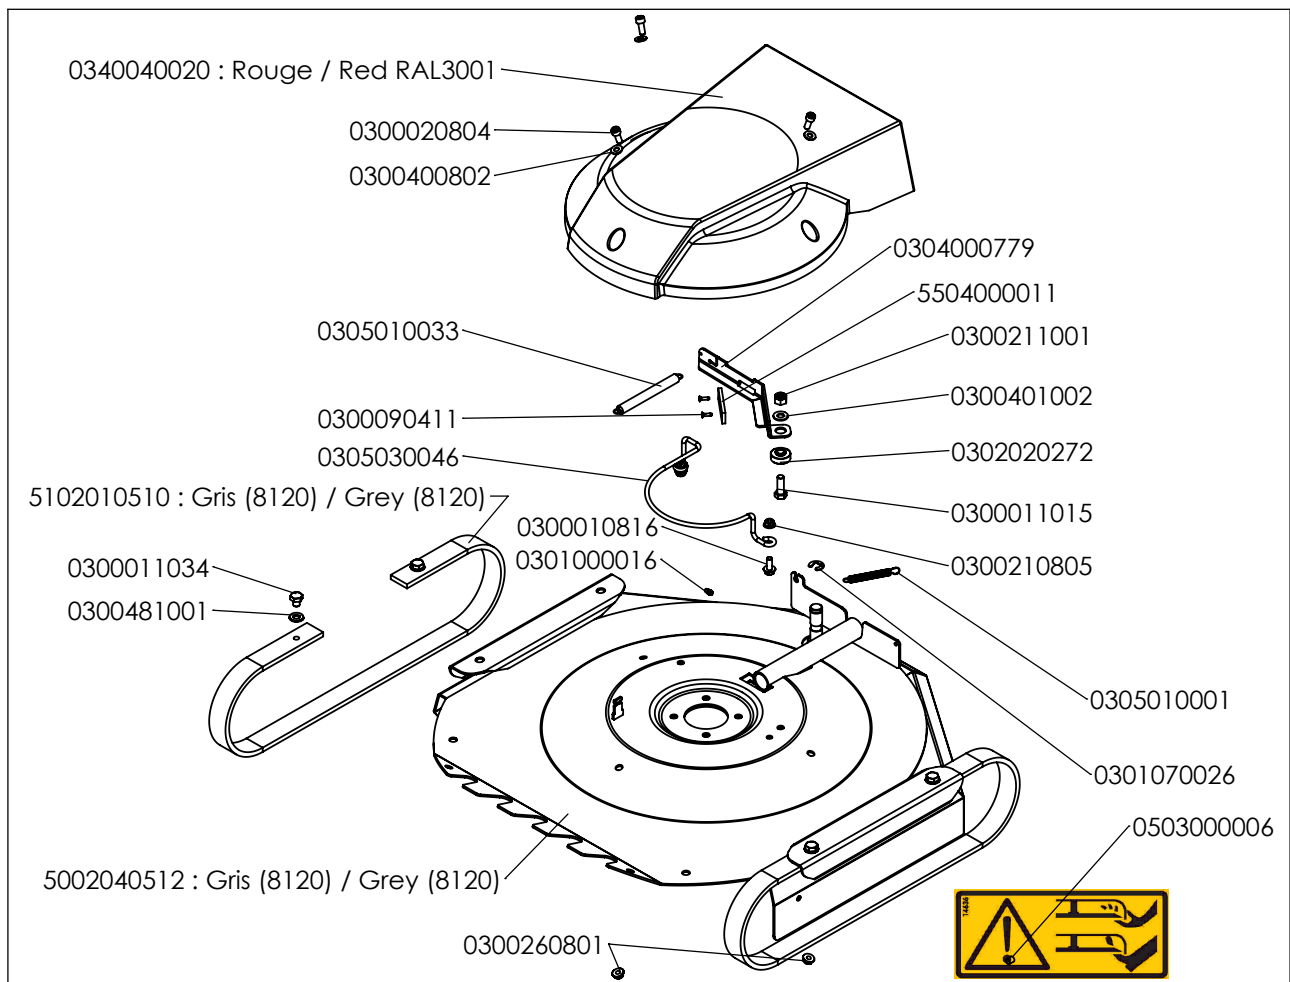

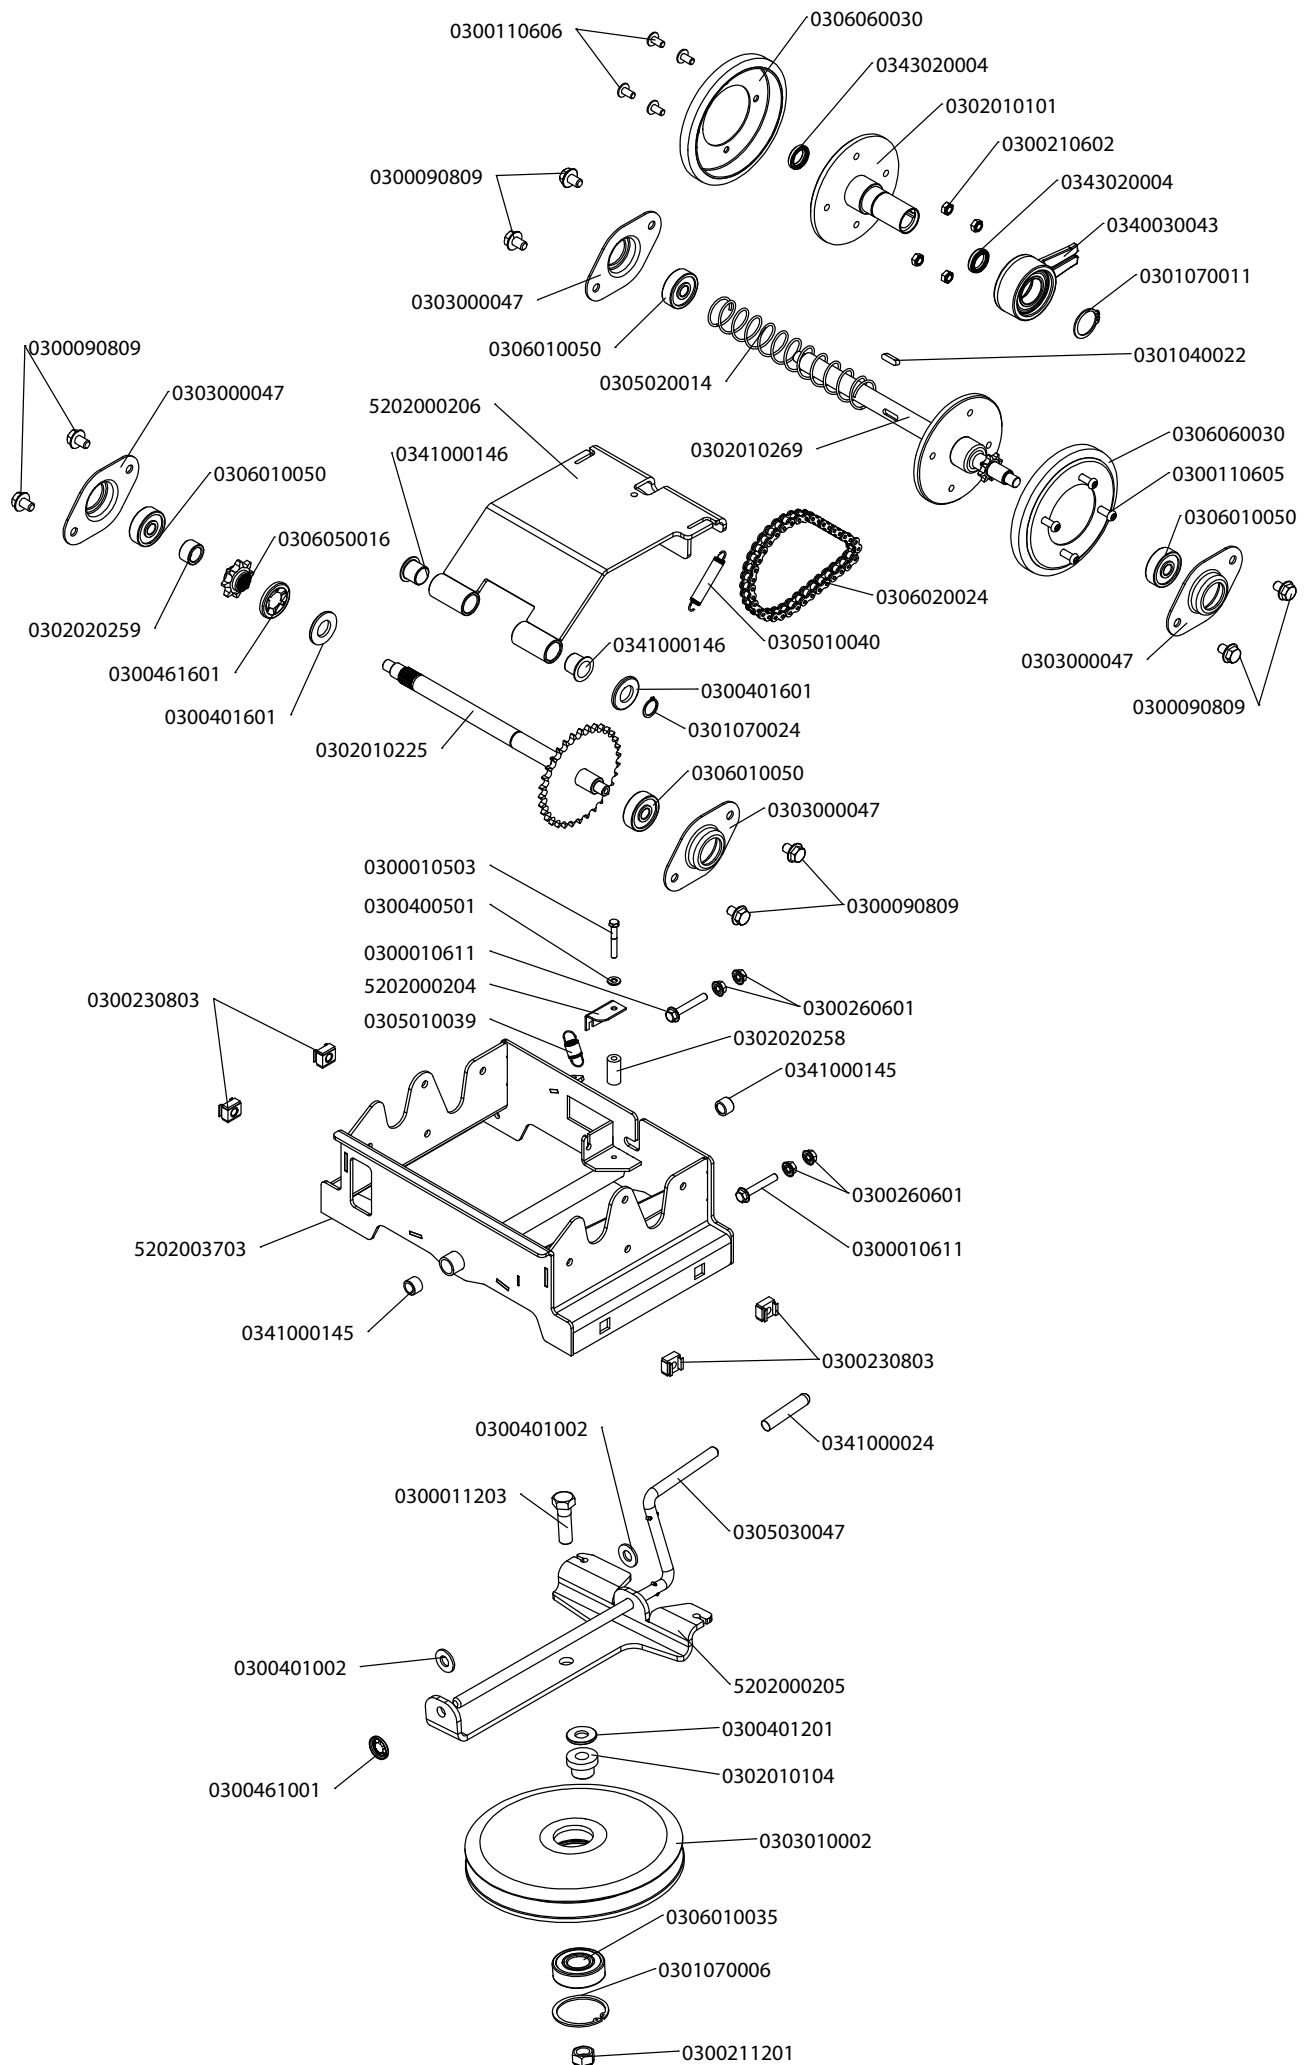


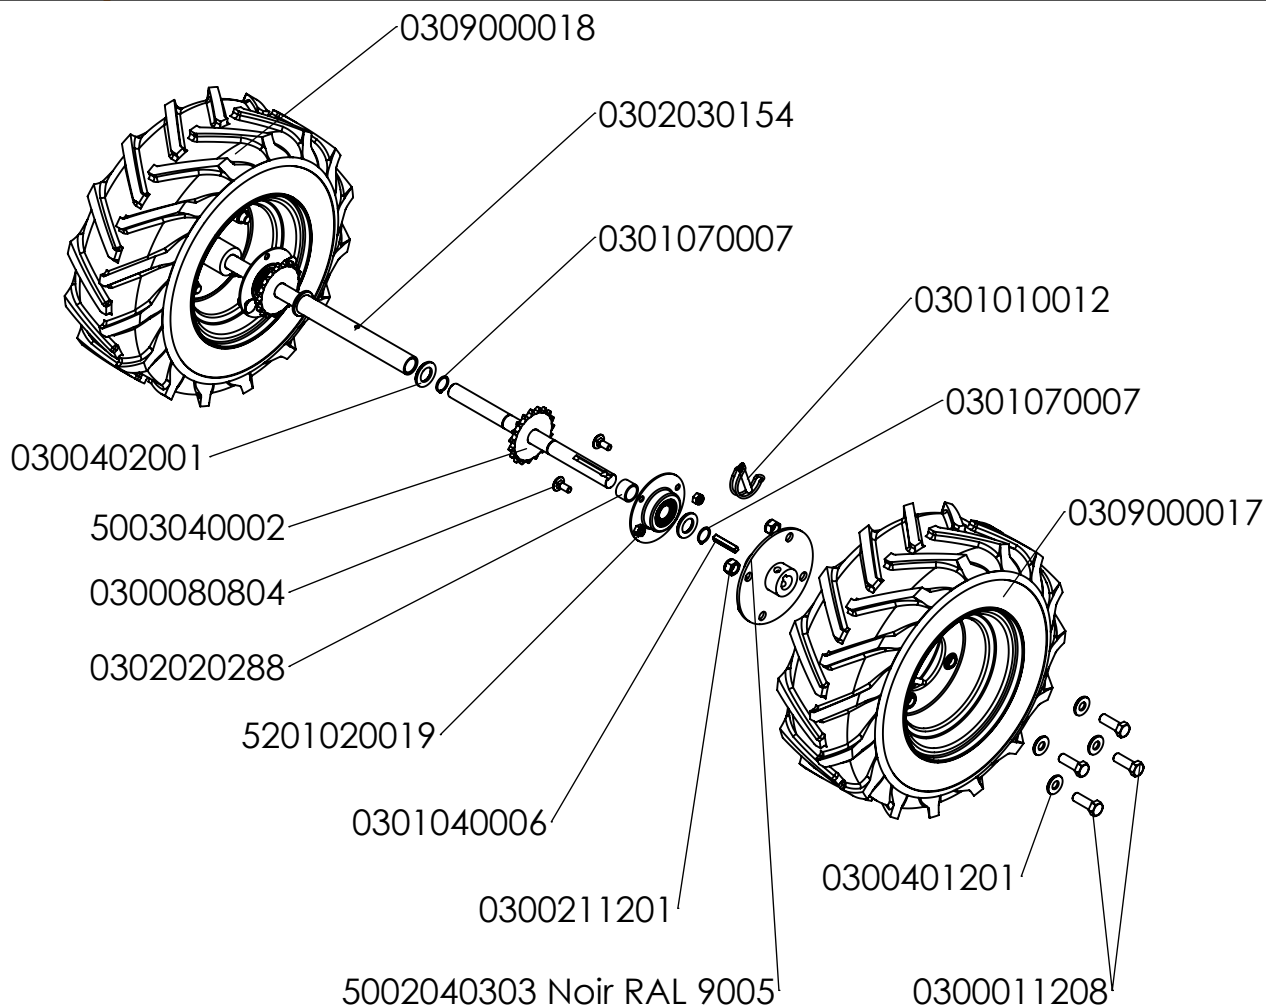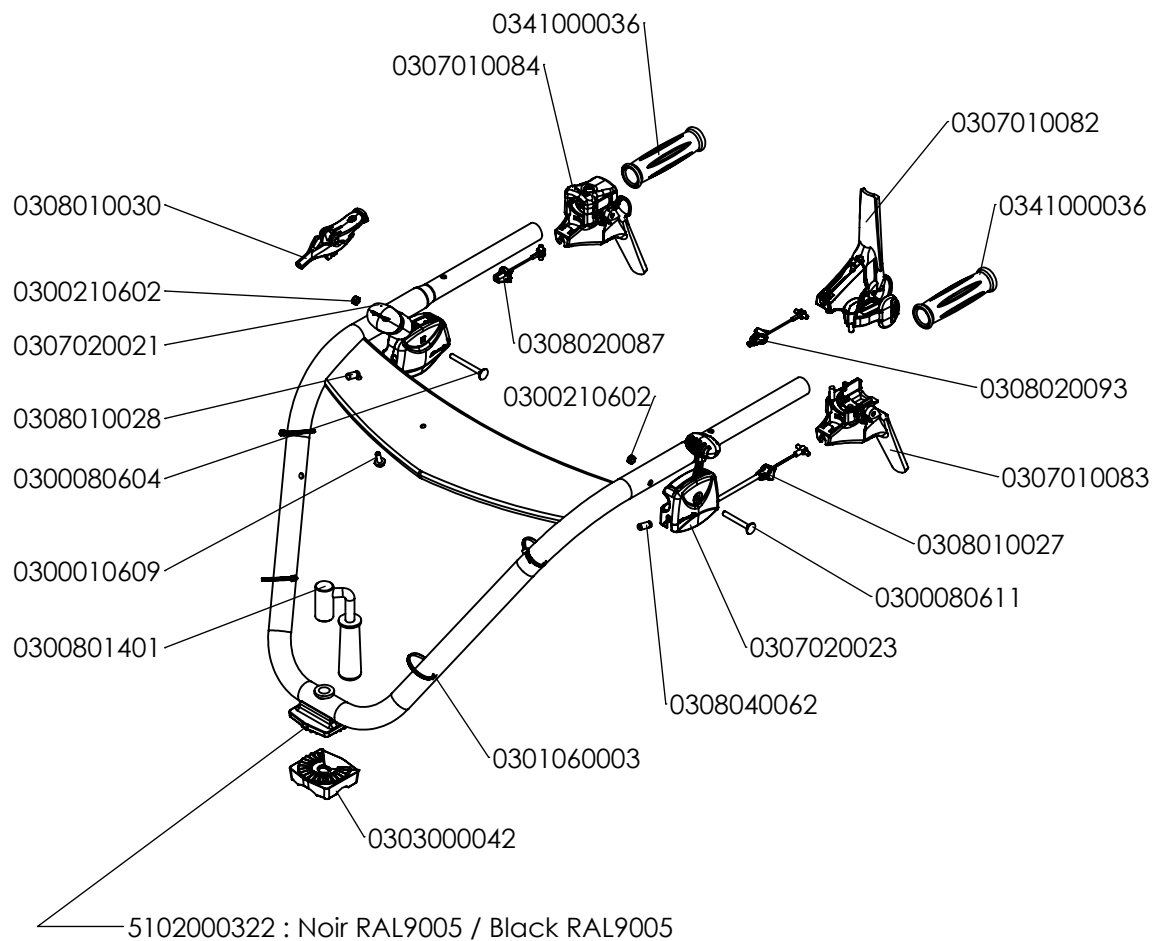

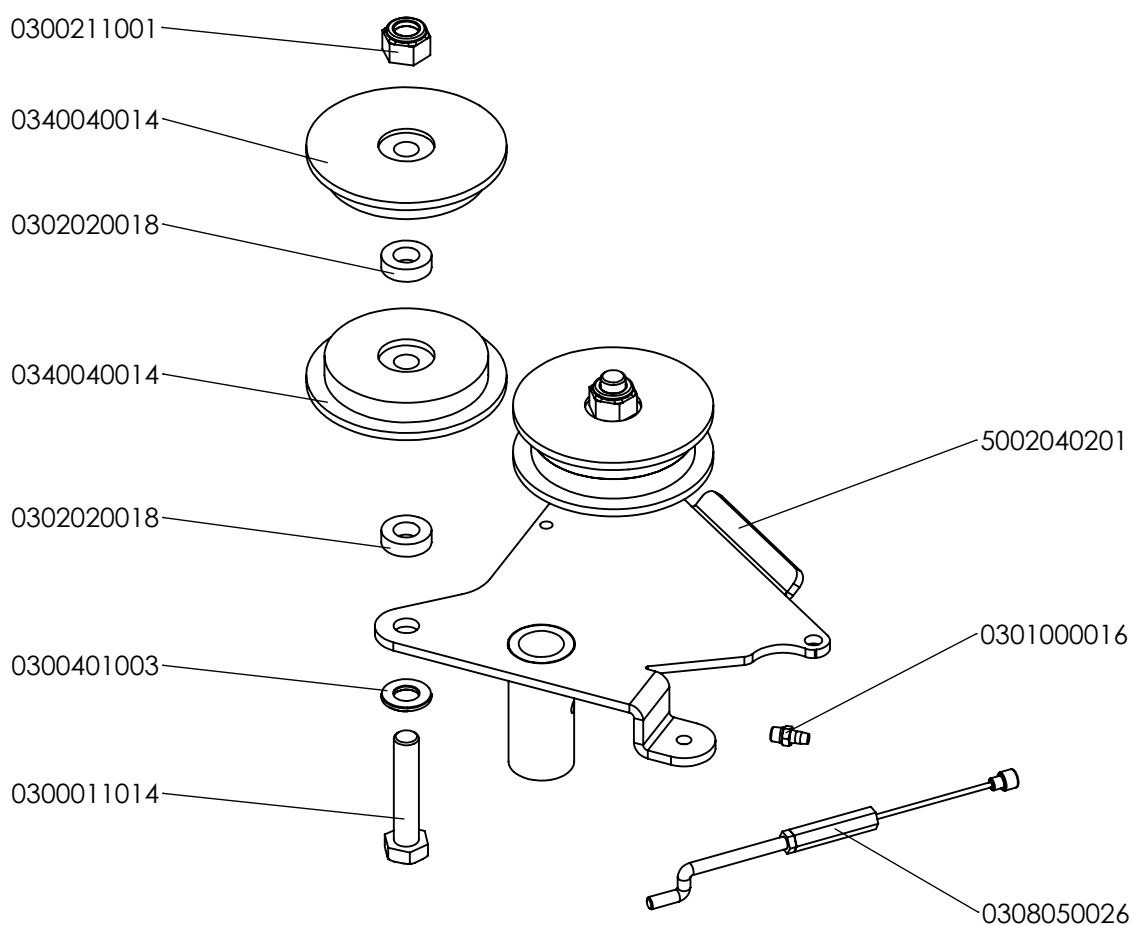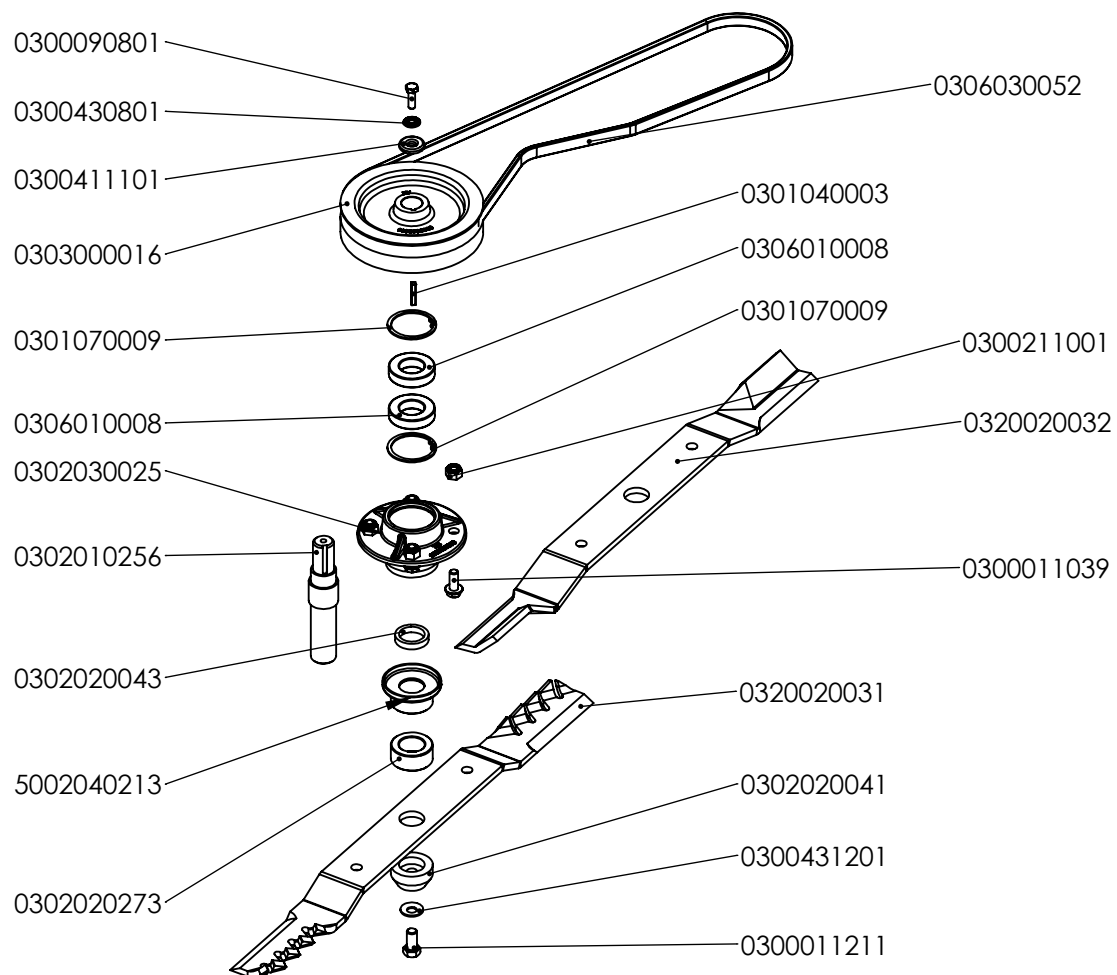


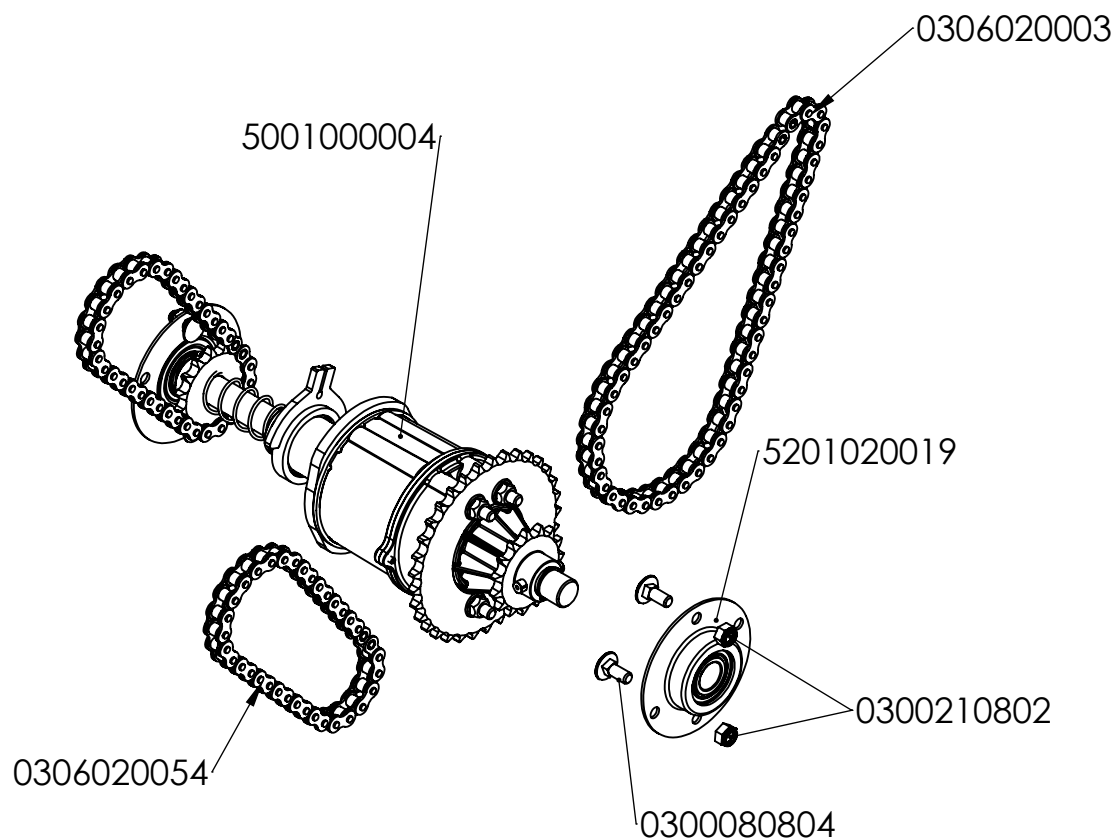

50_Différentiel Lsénior V3 Détout

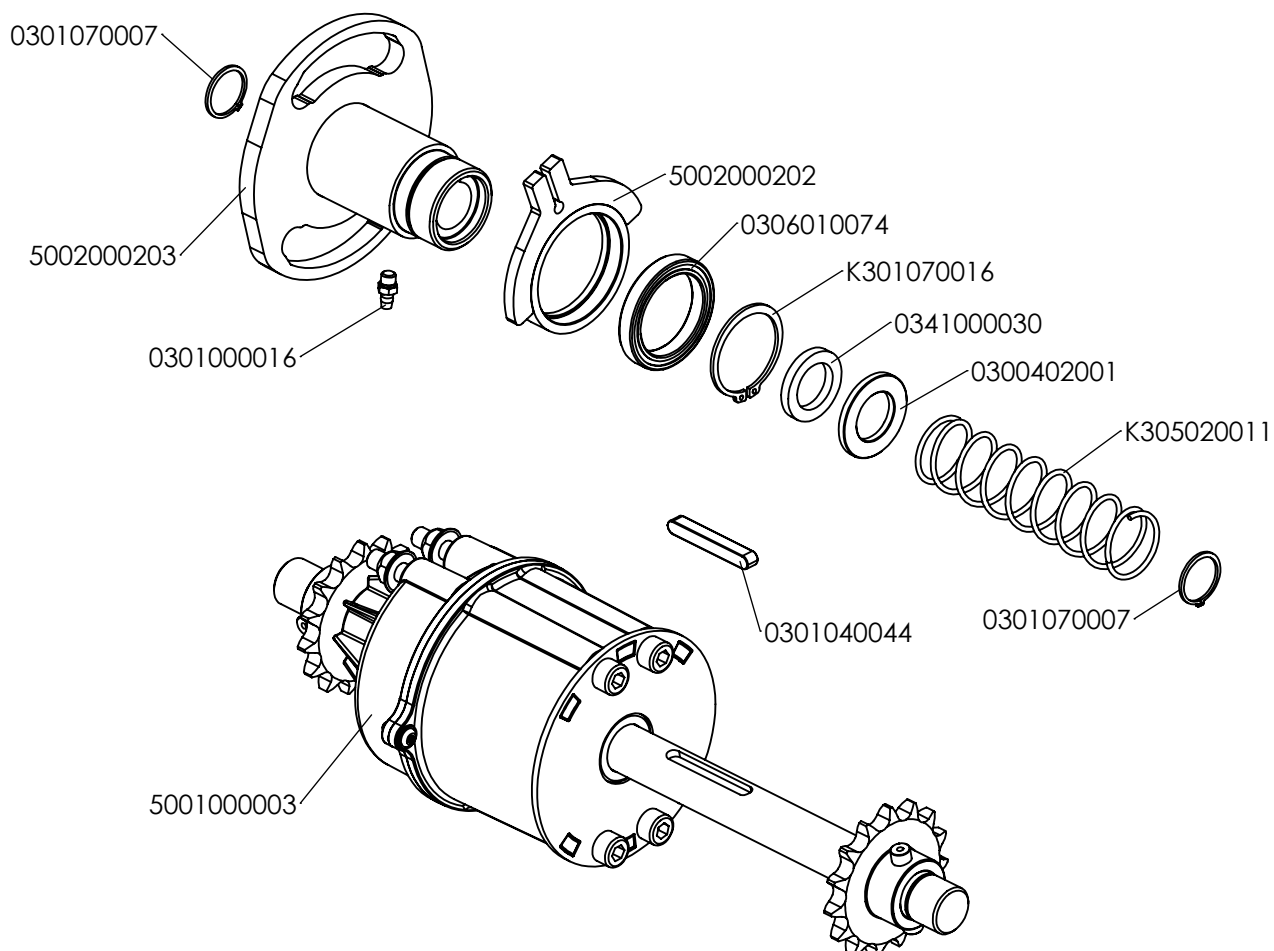

5001000004_Part list

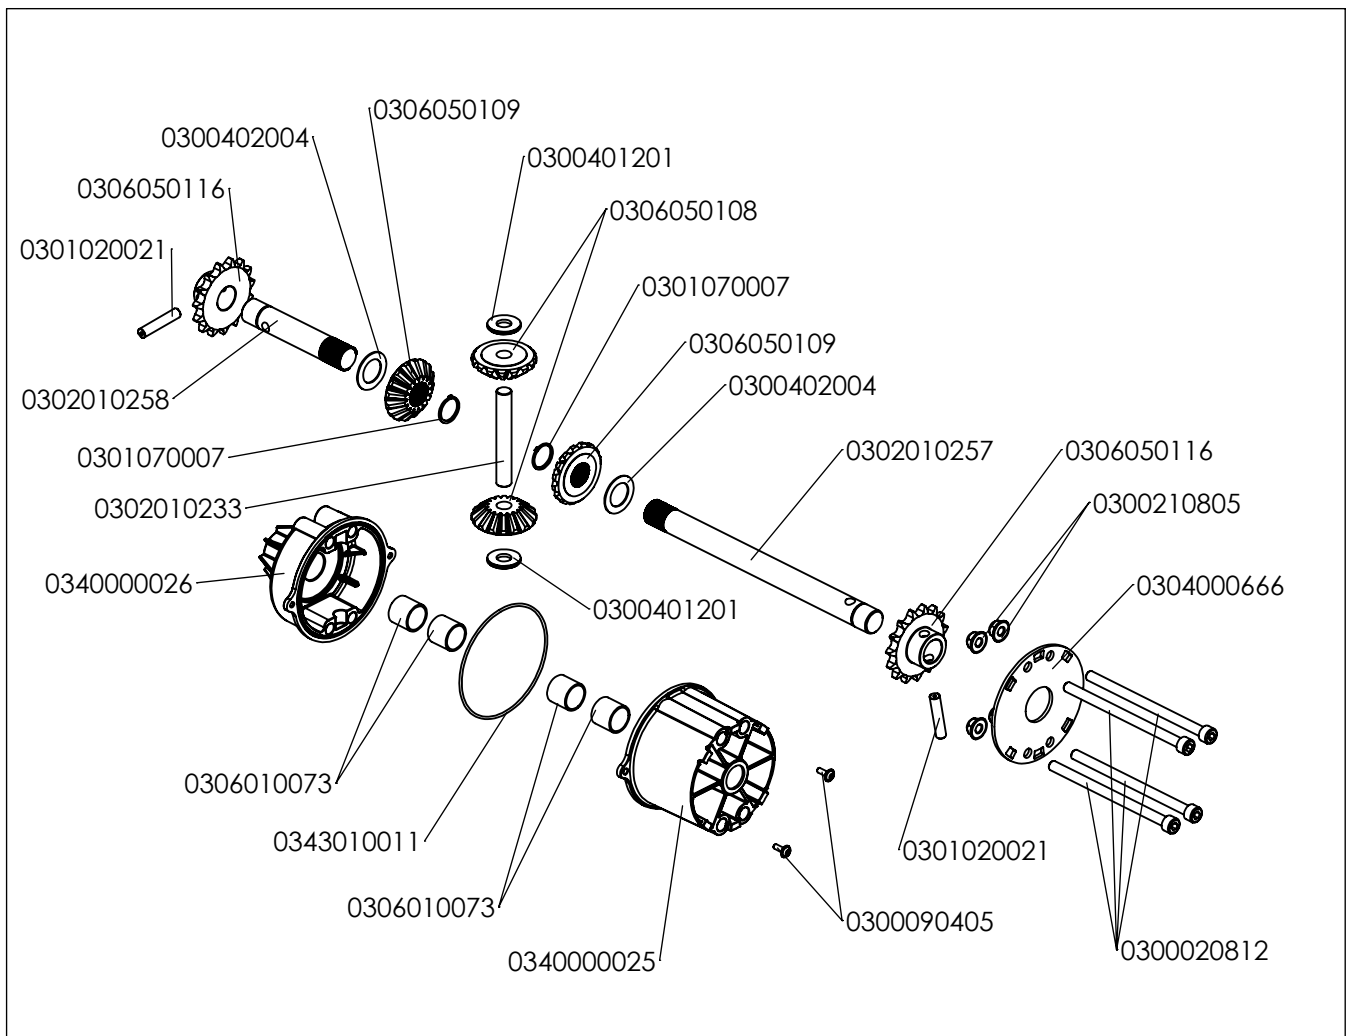

5001000003_Part list