
# ILLUSTRATED PARTS LIST

## MODEL NO. 96041003009
## CUSTOMER CATALOG NO. LTH152
## PRODUCT NO. 960 41 00-30




## TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30
## DECALS 27

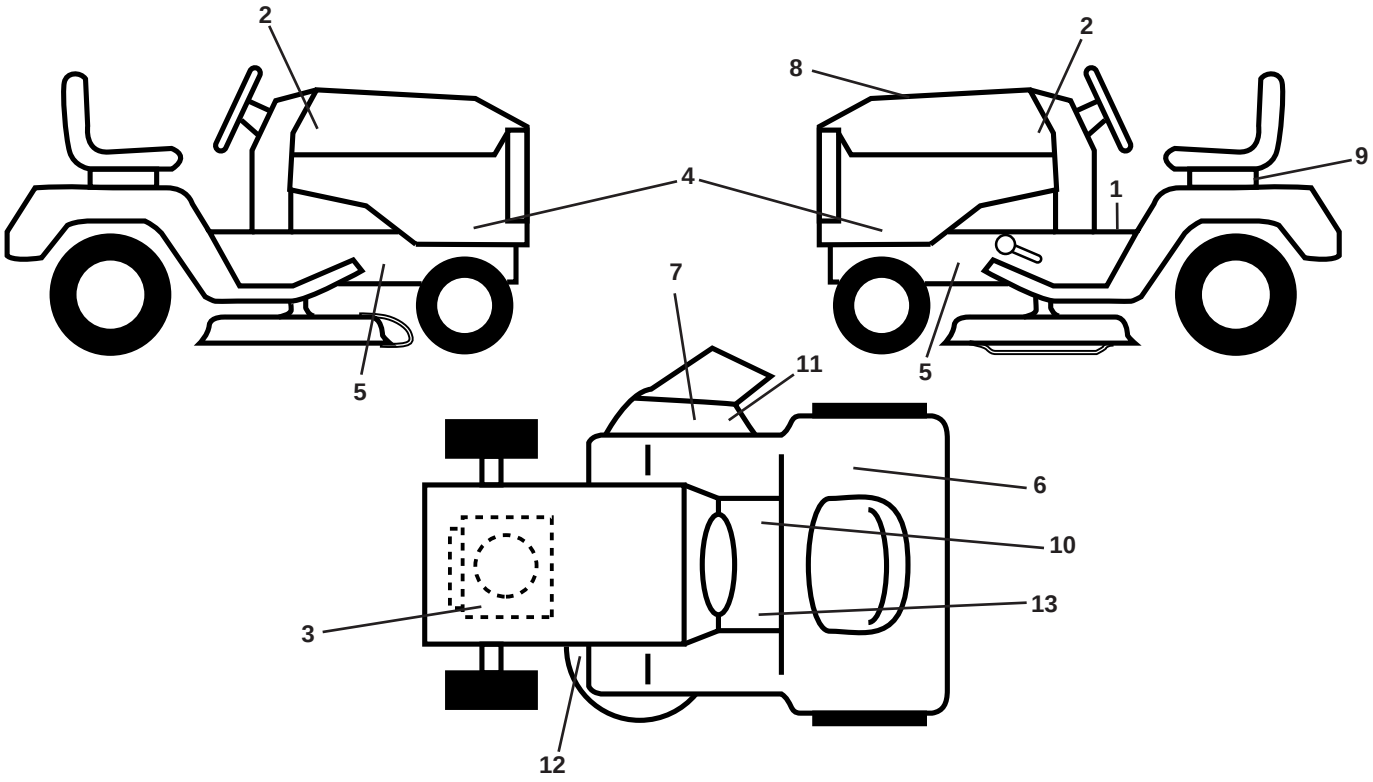


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 40 03-89 | Decal, Operators |
| 2 | 581 62 73-01 | Emblem, Hood |
| 3 | 532 19 68-41 | Decal, Warning Eng. Symbols |
| 4 | 532 43 79-18 | Decal, Hood Panel |
| 5 | 532 15 97-36 | Decal, Chassis Hot Muffler |
| 6 | 532 18 04-32 | Decal, Fender 100 DB/CE |
| 7 | 532 18 21-66 | Decal, Cutfinger CE |
| 8 | 532 43 35-12 | Decal, Rpl |
| 9 | 532 14 50-05 | Decal, Battery Dnge/Poi |
| 10 | 532 14 08-37 | Decal, Saddle Brake Parking |
| 11 | 532 19 63-57 | Decal, Warning |
| 12 | 532 16 03-96 | Decal, Mower V-Belt Schematic |
| 13 | 532 15 97-37 | Decal, Brake/Clutch Symbol |
| - - | 532 16 69-60 | Decal, Bypass |
| - - | 532 43 96-81 | Pad, Footrest, LH |
| - - | 532 43 99-66 | Pad, Footrest, RH |
| - - | 532 16 25-98 | Decal, Drawbar Load Limit |
| - - | 532 43 10-55 | Manual Oper. Euro |
| - - | 532 43 10-56 | Manual Oper. Scand |
| - - | 532 43 10-57 | Manual Oper. E-Bloc |
| - - | 532 43 10-58 | Manual Oper. Baltic |

## WHEELS AND TIRES

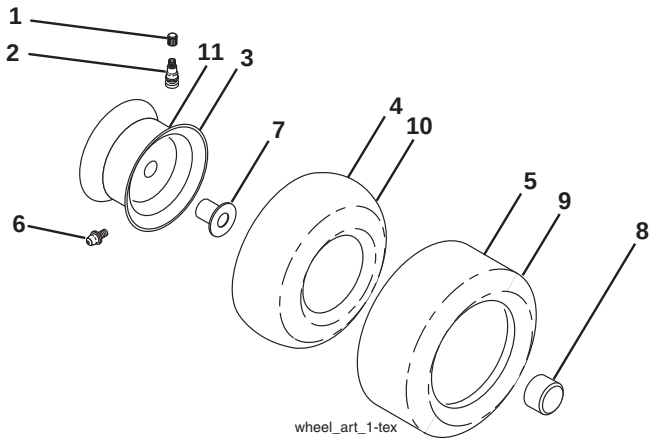



| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 05 91-92 | Cap Valve Tire |
| 2 | 532 06 51-39 | Stem Valve |
| 3 | 532 13 83-36 | Rim Asm 6" Front |
| 4 | 532 05 99-04 | Tube Front (Service Item Only) |
| 5 | 532 10 62-22 | Tire F T 15 x 6 0 - 6 |
| 6 | 532 12 49-57 | Fitting Grease (Front Wheel Only) |
| 7 | 532 12 49-59 | Bearing Flange (Front Wheel Only) |
| 8 | 532 17 50-39 | Cap Axle Blk 1 50 x 1 00 |
| 9 | 532 42 05-31 | Tire R 18 x 9.5-8 Turf Saver |
| 10 | 532 12 49-26 | Tube Rear (Service Item Only) |
| 11 | 532 13 83-37 | Rim Asm 8" Rear |
| - - | 532 14 43-34 | Sealant, Tire (10 oz. Tube) |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30
# SCHEMATIC 38

SCH10

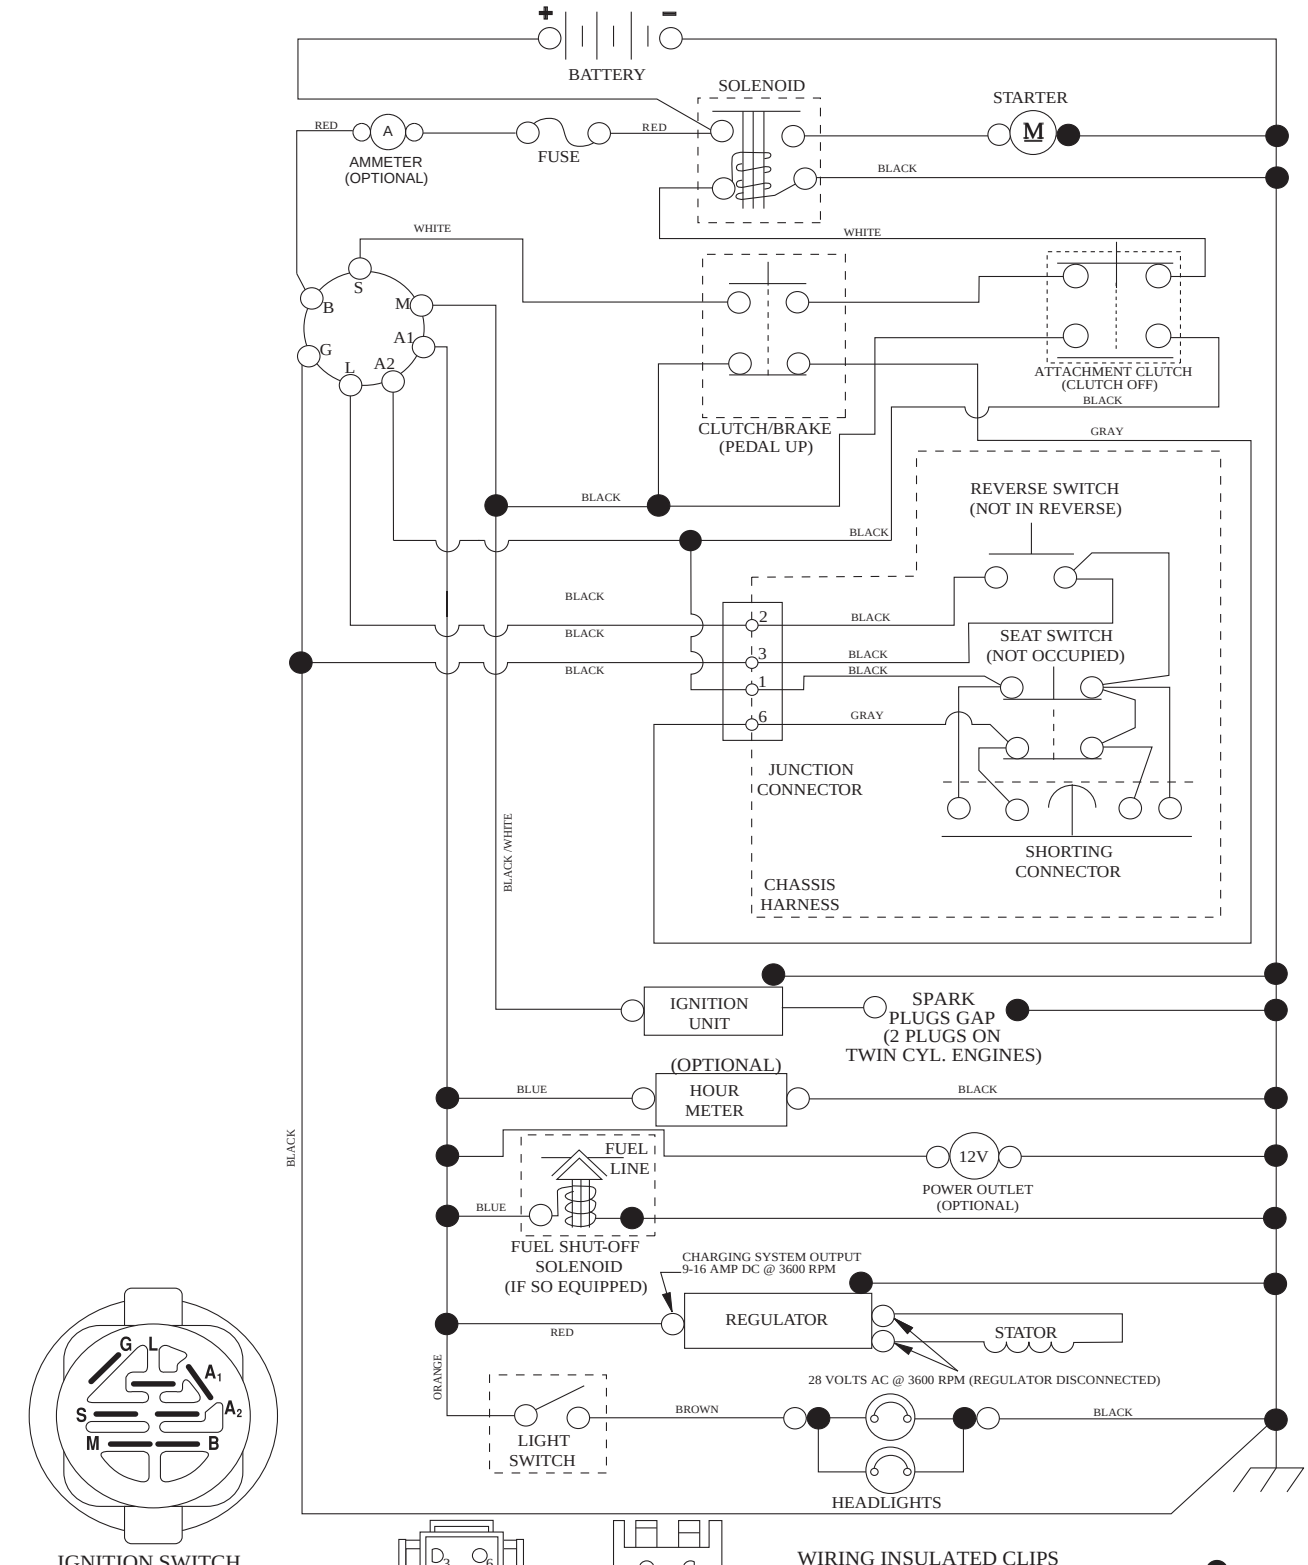







IGNITION SWITCH

| POSITION | CIRCUIT | "MAKE" |
|---|---|---|
| OFF | M+G+A1 | |
| RUN/OVERRIDE | B+A1 | |
| RUN | B+A1 | L+A2 |
| START | B + S + A1 | |

03107

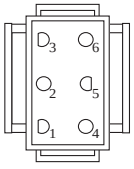


CHASSIS HARNESS CONNECTOR (MATING SIDE)





DASH HARNESS CONNECTOR (MATING SIDE)

WIRING INSULATED CLIPS
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS


**TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30**
**ELECTRICAL 32**

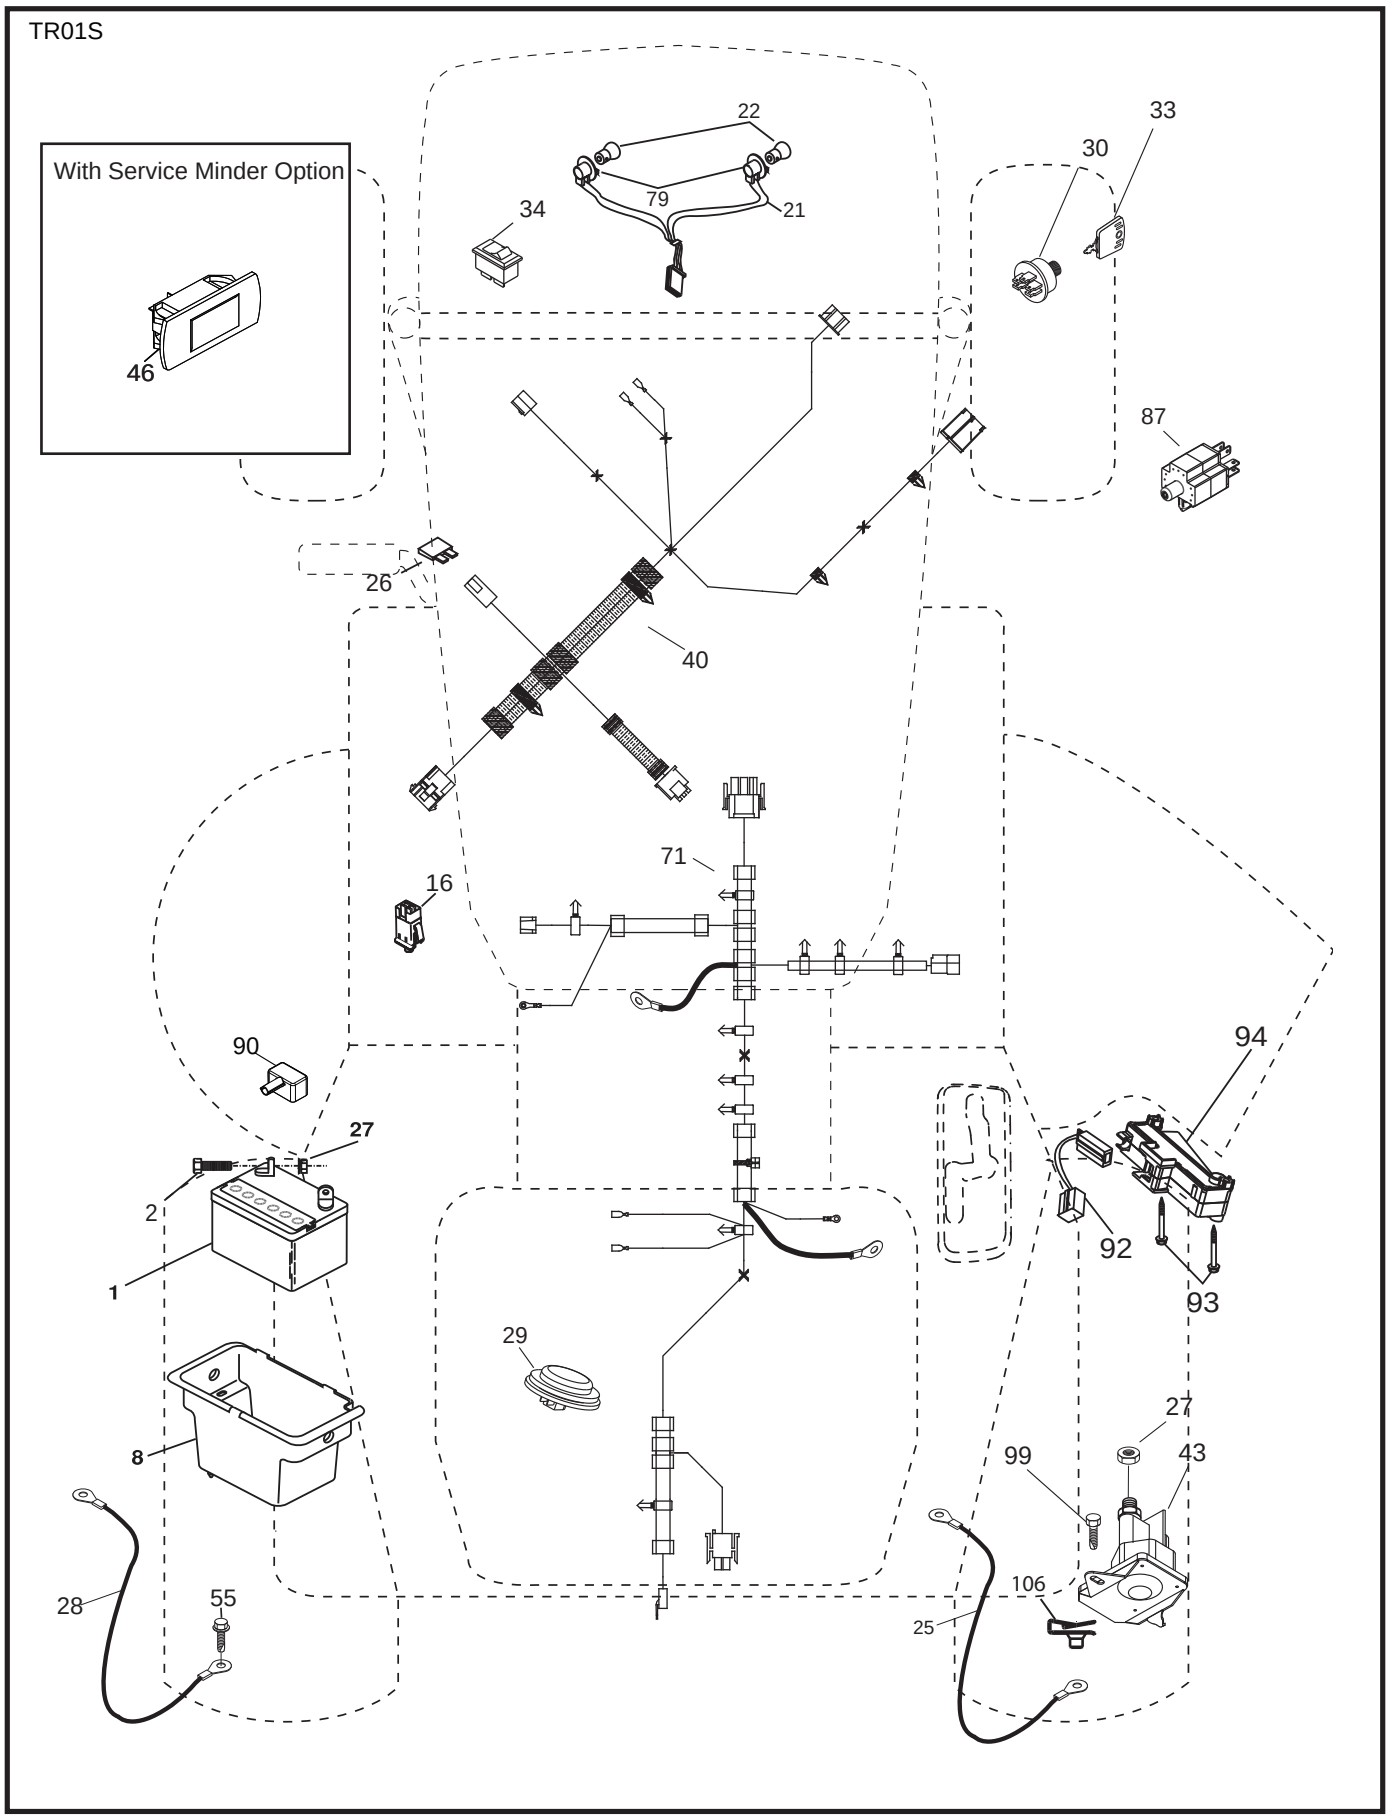

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 16 34-65 | Battery |
| 2 | 874 76 04-12 | Bolt Hex Head 1/4-20 x 3/4 |
| 8 | 532 19 32-28 | Box Battery |
| 16 | 532 17 61-38 | Switch Interlock Push-In |
| 21 | 532 40 02-52 | Harness Socket Light w/4152J |
| 22 | 532 00 41-52 | Bulb Light |
| 25 | 581 49 80-01 | Cable Starter |
| 26 | 532 17 51-58 | Fuse |
| 27 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 28 | 532 42 16-86 | Cable, Ground |
| 29 | 532 40 15-45 | Switch, Seat |
| 30 | 532 19 33-50 | Switch, Ign |
| 33 | 532 41 19-35 | Key/Chain |
| 34 | 532 11 07-12 | Switch Light/Reset |
| 40 | 581 02 31-01 | Harness Ign. Dash |
| 43 | 532 19 25-07 | Solenoid |
| 55 | 817 06 05-12 | Screw Thdrol 5/16-18 x 3/4 TYTT |
| 71 | 581 02 30-01 | Harness Ign. Chassis |
| 79 | 532 17 52-42 | Socket Asm |
| 87 | 532 19 78-02 | Switch Interlock Clutch Cable |
| 90 | 532 43 53-95 | Cover Terminal |
| 92 | 532 19 66-15 | Harness Pigtail Reverse Switch |
| 93 | 532 19 25-40 | Screw Plastite 10-14 x 2.0 |
| 94 | 532 19 18-34 | Module Reverse ROS |
| 99 | 817 67 04-12 | Screw Hexwsh Thdrol 1/4-20 x 3/4 |
| 106 | 532 17 48-14 | Palnut 1/4 Lugs |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30**
**CHASSIS AND ENCLOSURES 39**

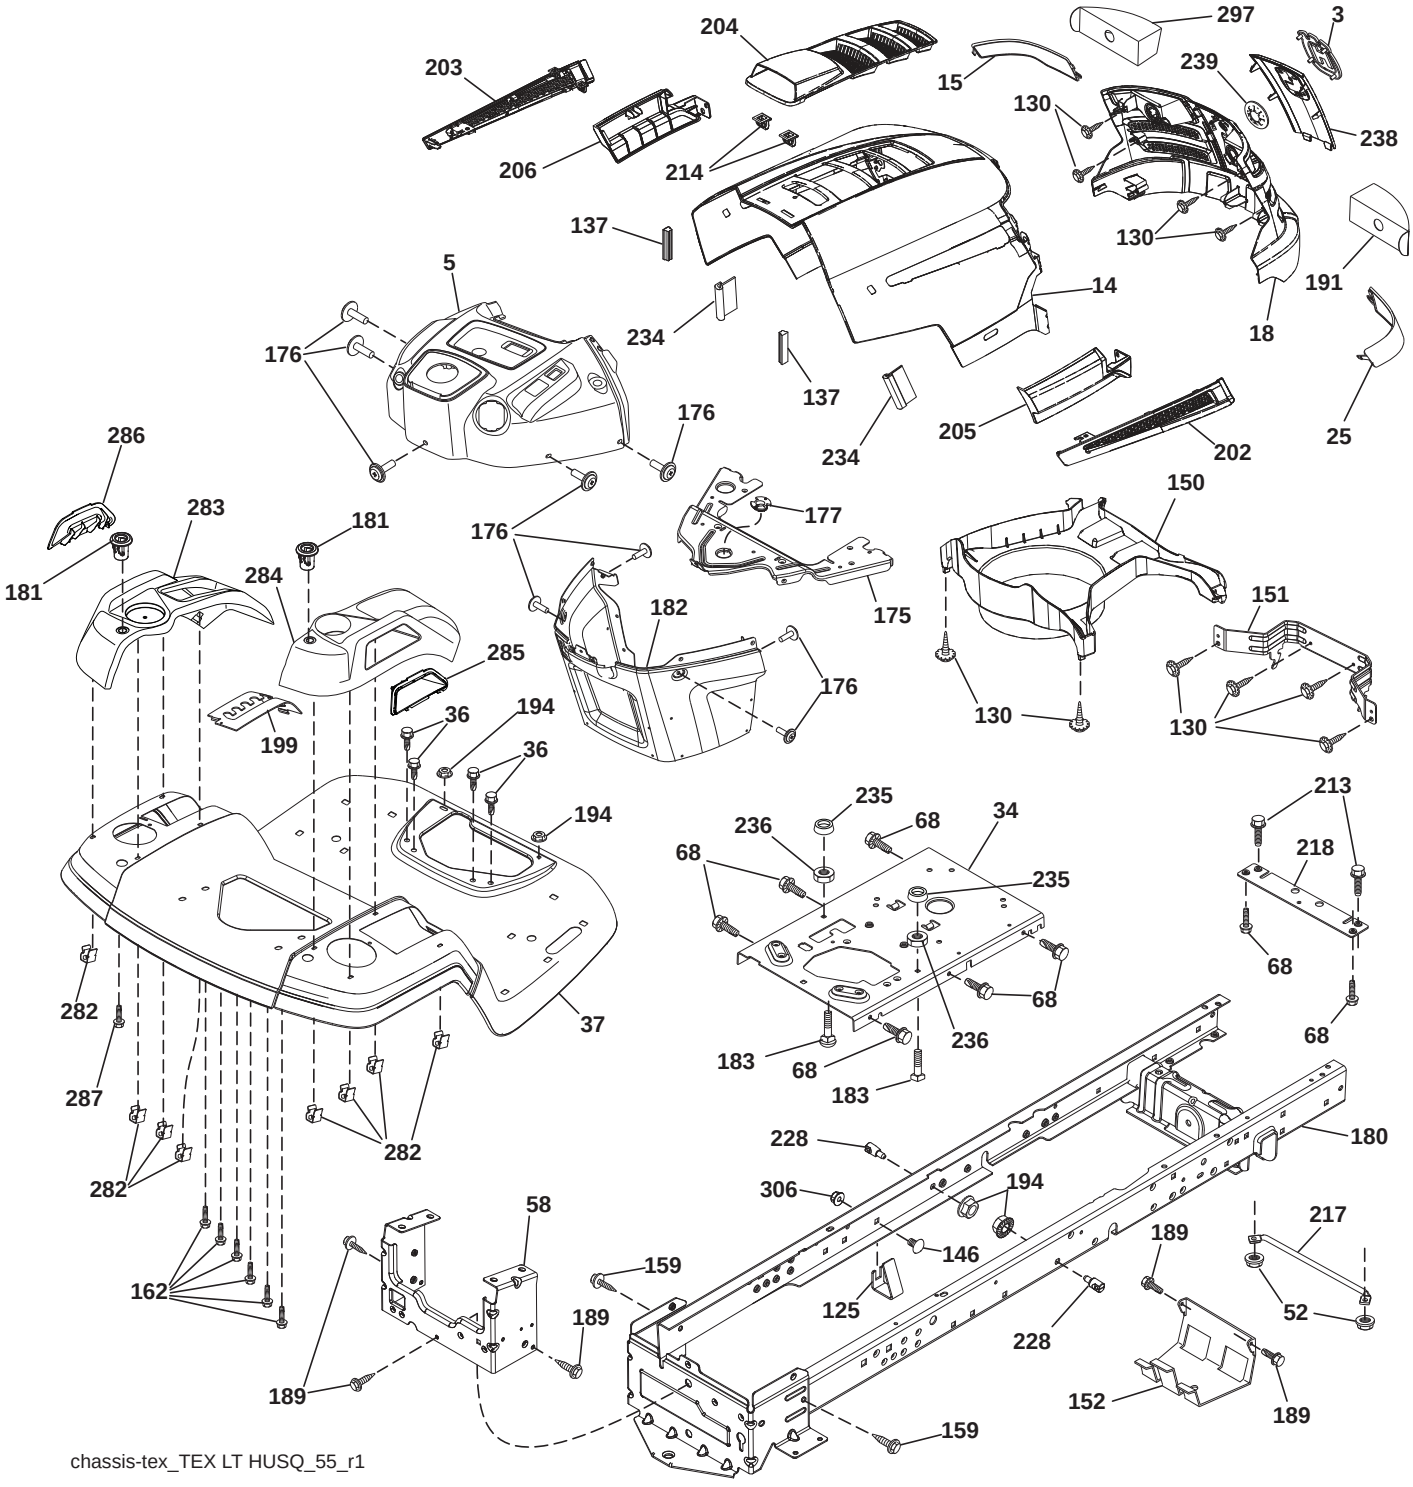



chassis-tex_TEX LT HUSQ_55_r1

## TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30
## CHASSIS AND ENCLOSURES 39

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 3 | 581 05 63-01 | Logo |
| 5 | 532 43 89-64 | Dash |
| 14 | 532 44 12-67 | Hood |
| 15 | 532 44 14-28 | Lens LH |
| 18 | 532 44 13-68 | Grille |
| 25 | 532 44 14-27 | Lens RH |
| 34 | 532 44 72-53 | Plate Engine |
| 36 | 817 06 05-12 | Screw 5/16-18 x 3/4 |
| 37 | 532 44 12-66 | Fender |
| 52 | 873 68 05-00 | Nut Crown Lock 5/16 |
| 58 | 532 41 22-80 | Drawbar, Upper |
| 68 | 817 49 05-08 | Screw THDROL 5/16-18 x 1/2 |
| 125 | 581 68 48-01 | Clip Fuel Line |
| 130 | 532 41 63-58 | Screw 10 x .750 BOS Thread |
| 137 | 532 40 75-90 | Bumper Dash |
| 146 | 581 85 79-01 | Bolt |
| 150 | 532 40 75-37 | Air Duct |
| 151 | 532 40 78-07 | Bracket Pivot |
| 152 | 532 19 95-35 | Shield Browning |
| 159 | 817 00 06-12 | Screw 3/8-7/16 x 3/4 |
| 162 | 532 14 24-32 | Screw |
| 175 | 532 19 94-72 | Crossmember |
| 176 | 532 40 07-76 | Screw 10-24 x 5/8 |
| 177 | 532 19 52-28 | Bushing Steering |
| 180 | 532 41 50-63 | Chassis |
| 181 | 532 43 97-46 | Bushing Fender |
| 182 | 532 40 71-76 | Dash Lower |
| 183 | 874 52 05-20 | Bolt 5/16-18 x 1-1/4 |
| 189 | 817 00 05-12 | Screw 5/16-18 x 3/4 |
| 191 | 532 41 65-01 | Insert Reflective RH |
| 194 | 873 90 05-00 | Nut Lock Hex Flange 5/16-18 |
| 199 | 532 41 34-85 | Plate Deck Lift |
| 202 | 532 44 13-42 | Vent Side Hood RH |
| 203 | 532 44 13-43 | Vent Side Hood LH |
| 204 | 532 44 13-75 | Vent Top Hood |
| 205 | 532 44 13-44 | Skirt Side RH |
| 206 | 532 44 13-45 | Skirt Side LH |
| 213 | 874 76 05-12 | Bolt 5/16-18 x 3/4 |
| 214 | 532 19 91-45 | Clip Retainer |
| 217 | 532 40 91-67 | Rod Pivot Hood |
| 218 | 532 19 63-95 | X-Piece Hood Stop |
| 228 | 532 19 51-61 | Stud Fastener |
| 234 | 532 40 47-42 | Bumper Hood |
| 235 | 532 40 61-29 | Spacer Fender |
| 236 | 873 93 05-00 | Nut Lock 5/16-18 UNC |
| 238 | 532 44 13-74 | Trim |
| 239 | 532 40 48-83 | Clip Tinnerman |
| 282 | 532 41 41-10 | Clip Retainer Console |
| 283 | 532 43 91-52 | Console Deck Lift |
| 284 | 532 43 91-48 | Console Shift |
| 285 | 532 41 63-15 | Console Insert R.H. |
| 286 | 532 41 63-17 | Console Insert L.H. |
| 287 | 817 60 04-06 | Screw Hex Washead 1/4-20 x 3/8 |
| 297 | 532 40 66-65 | Insert Reflective LH |
| 306 | 873 90 06-00 | Nut |
| - - - | 532 43 99-76 | Plug Dash SRVMNDR |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30**
**DRIVE 40**

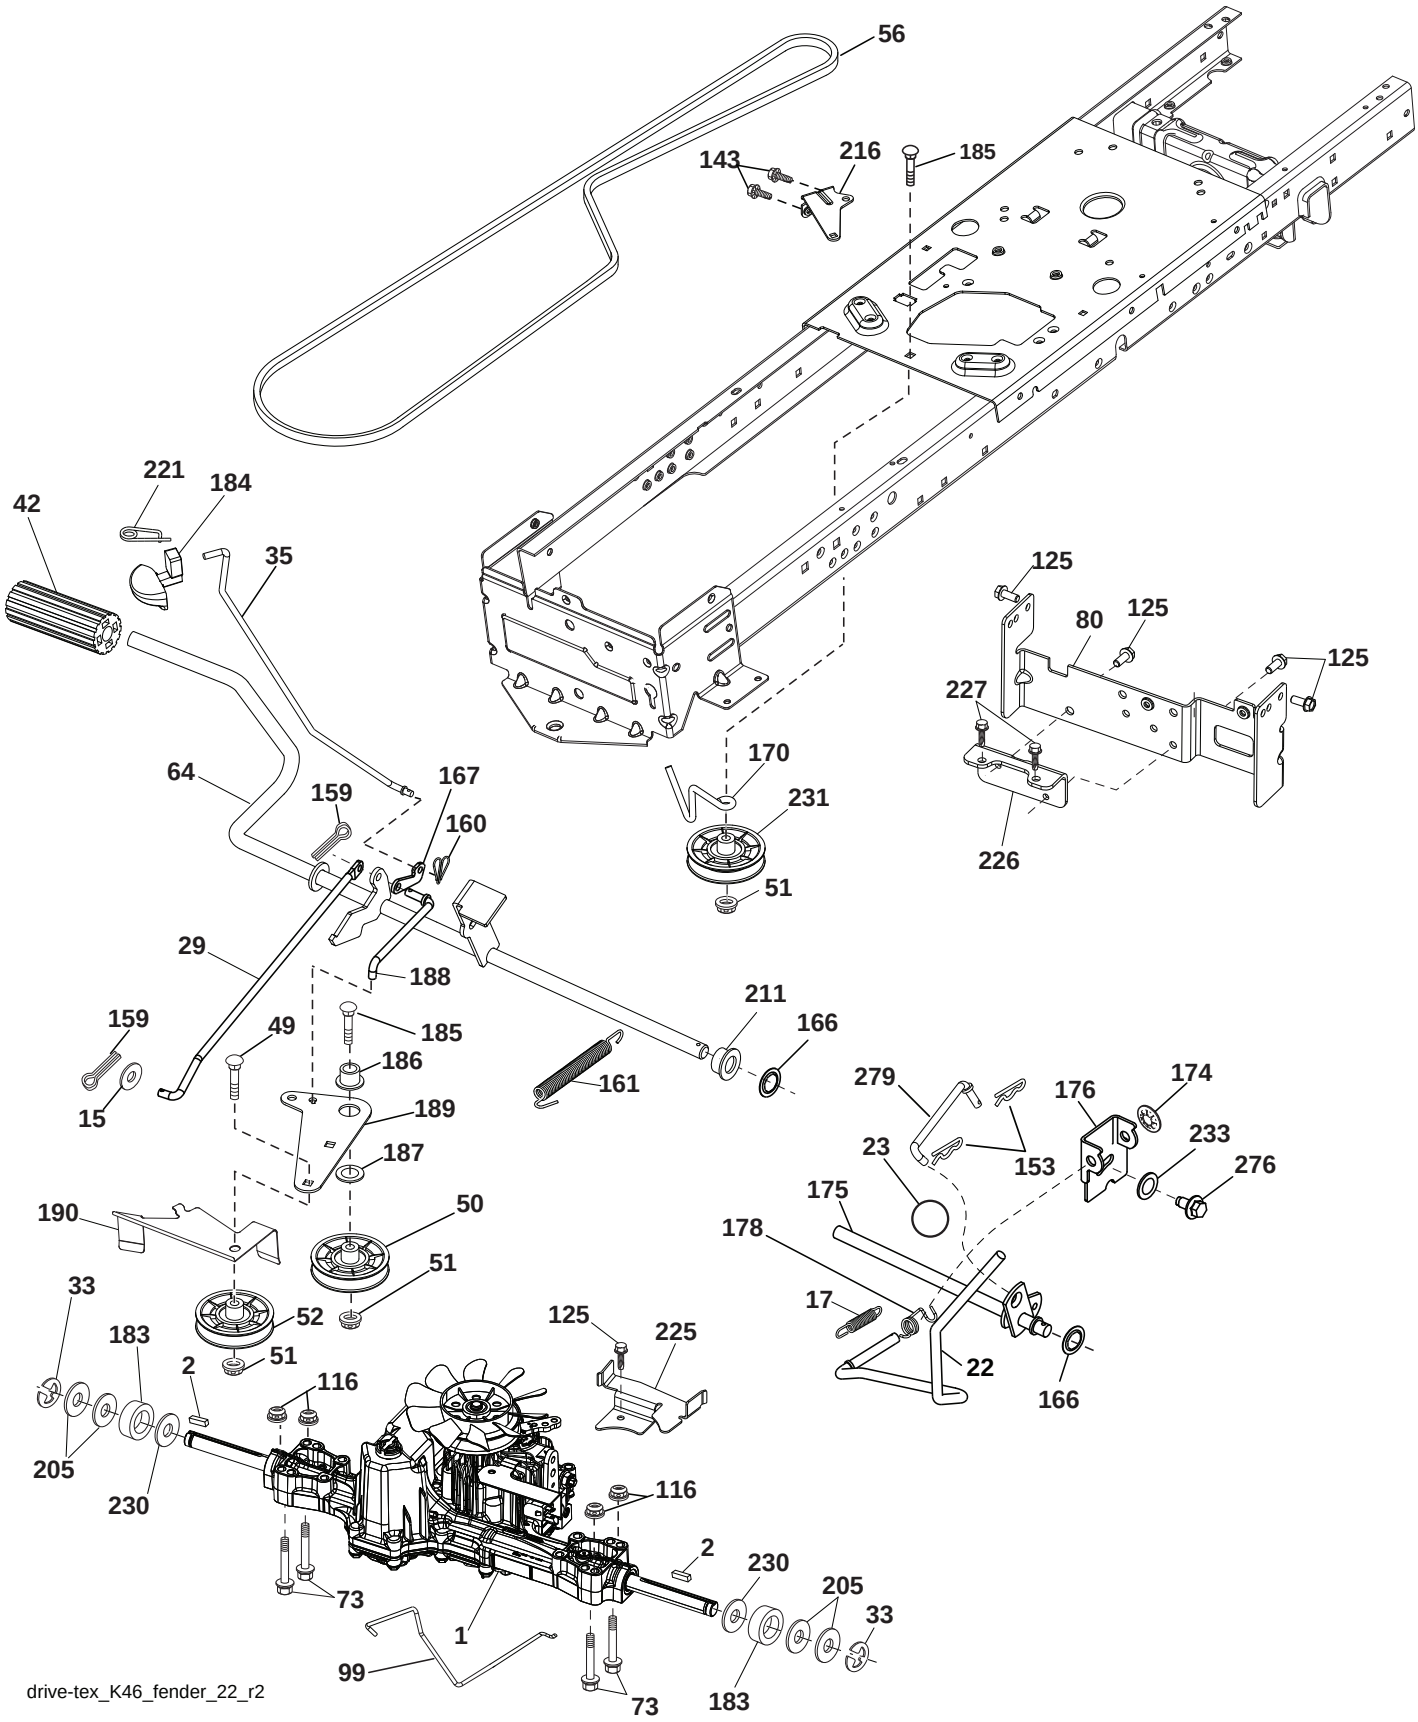


## TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30
## DRIVE 40

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | – – – – – – | Transaxle, TuffTorq K46BA (448348)(Order parts from transaxle manufacturer.) |
| 2 | 532 12 35-83 | Key Square |
| 15 | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga. |
| 17 | 532 41 36-78 | Spring, Brake |
| 22 | 532 19 76-60 | Rod Shift |
| 23 | 532 12 12-74 | Knob |
| 29 | 532 40 38-06 | Rod, Brake |
| 33 | 812 00 00-01 | Ring E |
| 35 | 532 40 10-31 | Rod, Brake, Park |
| 42 | 532 12 48-72 | Cover, Foot Pedal |
| 49 | 872 11 06-14 | Bolt |
| 50 | 532 19 43-27 | Pulley Idler Flat |
| 51 | 873 90 06-00 | Lock Nut 3/8-16 |
| 52 | 532 19 43-26 | Idler V-Groove 910" Offset |
| 56 | 532 13 09-69 | V-Belt, Drive |
| 64 | 532 19 62-00 | Shaft Asm. Pedal Brake Control |
| 73 | 874 49 05-40 | Bolt 5/16-18 x 1/2 Gr. 5 |
| 80 | 532 44 06-19 | Strap Torque |
| 99 | 532 41 57-42 | Rod Spring Bypass |
| 116 | 873 90 05-00 | Nut Lock Hex Flange 5/16-18 |
| 125 | 817 00 05-12 | Screw 5/16 - 18 x 3/4 |
| 143 | 817 49 05-08 | Screw 5/16 - 18 x 1/2 |
| 153 | 532 12 47-88 | Retainer Spring 1" |
| 159 | 876 02 04-12 | Pin Cotter 1/8 x 3/4 |
| 160 | 532 16 94-84 | Retainer Clip |
| 161 | 532 10 57-09 | Spring, Return, Clutch |
| 166 | 532 42 91-64 | Nut Push |
| 167 | 532 40 52-57 | Latch Brake Parking |
| 170 | 532 41 34-30 | Keeper Belt Centerspan |
| 174 | 532 19 72-89 | Nut Push |
| 175 | 532 40 85-39 | Shaft Asm Shift |
| 176 | 532 19 62-14 | Arm Clevis Rod Shift |
| 178 | 532 19 74-56 | Spring Shift |
| 183 | 532 13 70-57 | Spacer Split |
| 184 | 532 44 14-07 | Handle Parking Brake |
| 185 | 872 11 06-22 | Bolt |
| 186 | 532 19 43-21 | Spacer Retainer |
| 187 | 819 13 32-10 | Washer |
| 188 | 532 19 43-23 | Link Clutch Ground Drive |
| 189 | 532 19 43-17 | Bellcrank Ground Drive |
| 190 | 532 19 43-18 | Keeper Bellcrank Ground Drive |
| 205 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 211 | 532 19 62-12 | Bushing Brake Shaft |
| 216 | 532 19 61-31 | Bracket Pulley Idler |
| 221 | 532 40 31-87 | Retainer Spring Clip Handle |
| 225 | 532 40 33-19 | Keeper Belt Trans. |
| 227 | 817 49 05-12 | Screw 5/16-18 x 3/4 |
| 226 | 532 40 15-64 | Bracket Mount Torque |
| 230 | 532 18 89-67 | Washer Hardened |
| 231 | 532 40 72-87 | Idler V-Groove 1.688" Offset |
| 233 | 532 40 52-96 | Washer Serrated |
| 276 | 874 78 07-16 | Bolt 7/16-14 x 1 Gr. 5 |
| 279 | 532 41 31-50 | Link Shift |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30**
**ENGINE 24**

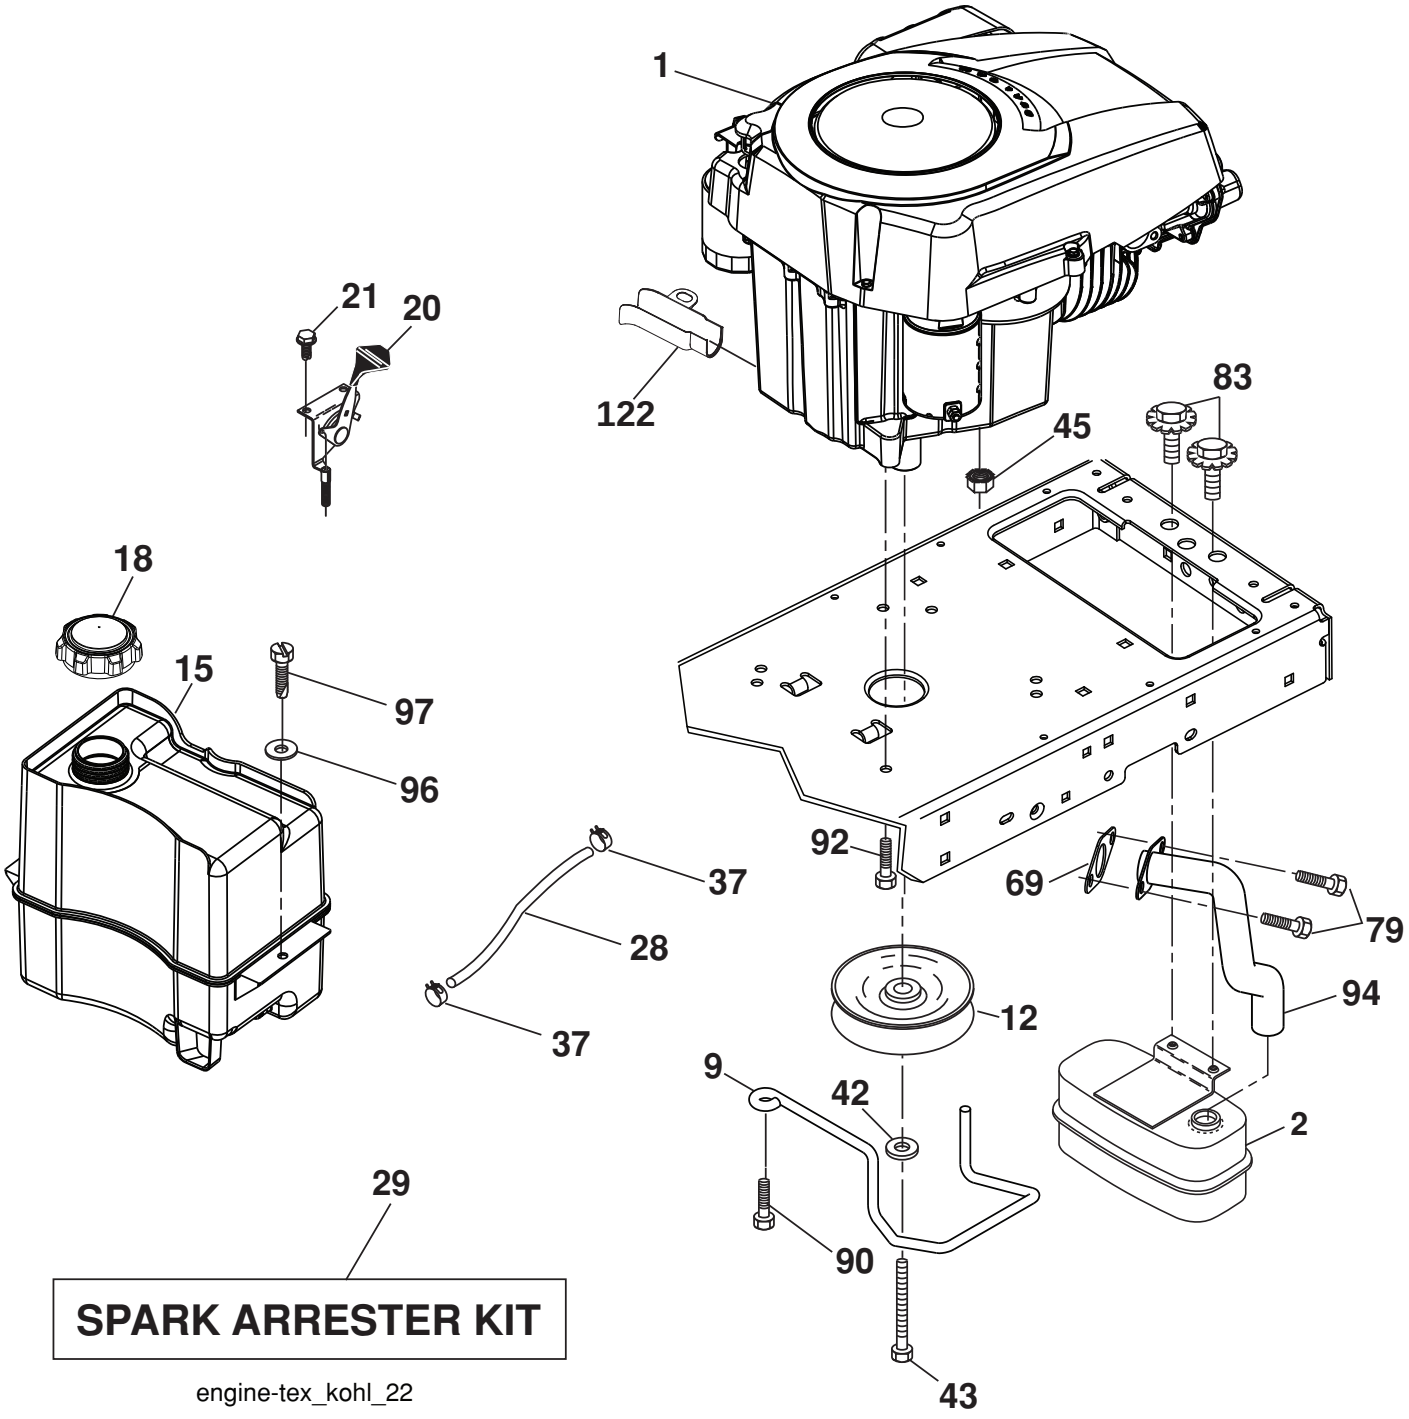


## TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30
## ENGINE 24

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | – – – – – – | Engine Kohler Model No. SV470-3212 (438330)(Order parts from engine manufacturer.) |
| 2 | 532 18 86-55 | Muffler |
| 9 | 532 19 43-20 | Keeper Belt Engine |
| 12 | 532 40 54-71 | Pulley Engine |
| 15 | 532 40 75-45 | Tank Fuel 1.5 |
| 18 | 532 43 02-20 | Cap Asm |
| 20 | 532 18 38-97 | Control Throttle |
| 21 | 532 41 63-58 | Screw #10 x 0.750 |
| 28 | 532 13 70-40 | Fuel Line |
| 29 | 532 13 71-80 | Spark Arrester Kit |
| 37 | 532 12 34-87 | Clamp Hose |
| 42 | 810 04 07-00 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 43 | 532 17 39-37 | Bolt Hex 7/16-20 x 4 Gr. 5 |
| 45 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 69 | 532 18 59-09 | Gasket |
| 79 | 532 19 23-34 | Screw 5/16 - 18 x .75 |
| 83 | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 90 | 817 00 06-16 | Screw 3/8-16 x 1 |
| 92 | 817 12 06-16 | Screw 3/8-16 x 1 |
| 94 | 532 18 86-54 | Tube Exhaust |
| 96 | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga. |
| 97 | 817 67 04-12 | Screw 1/4-20 x 3/4 |
| 122 | 532 42 19-22 | Extension Drain Oil |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30**
**STEERING ASSEMBLY 41**

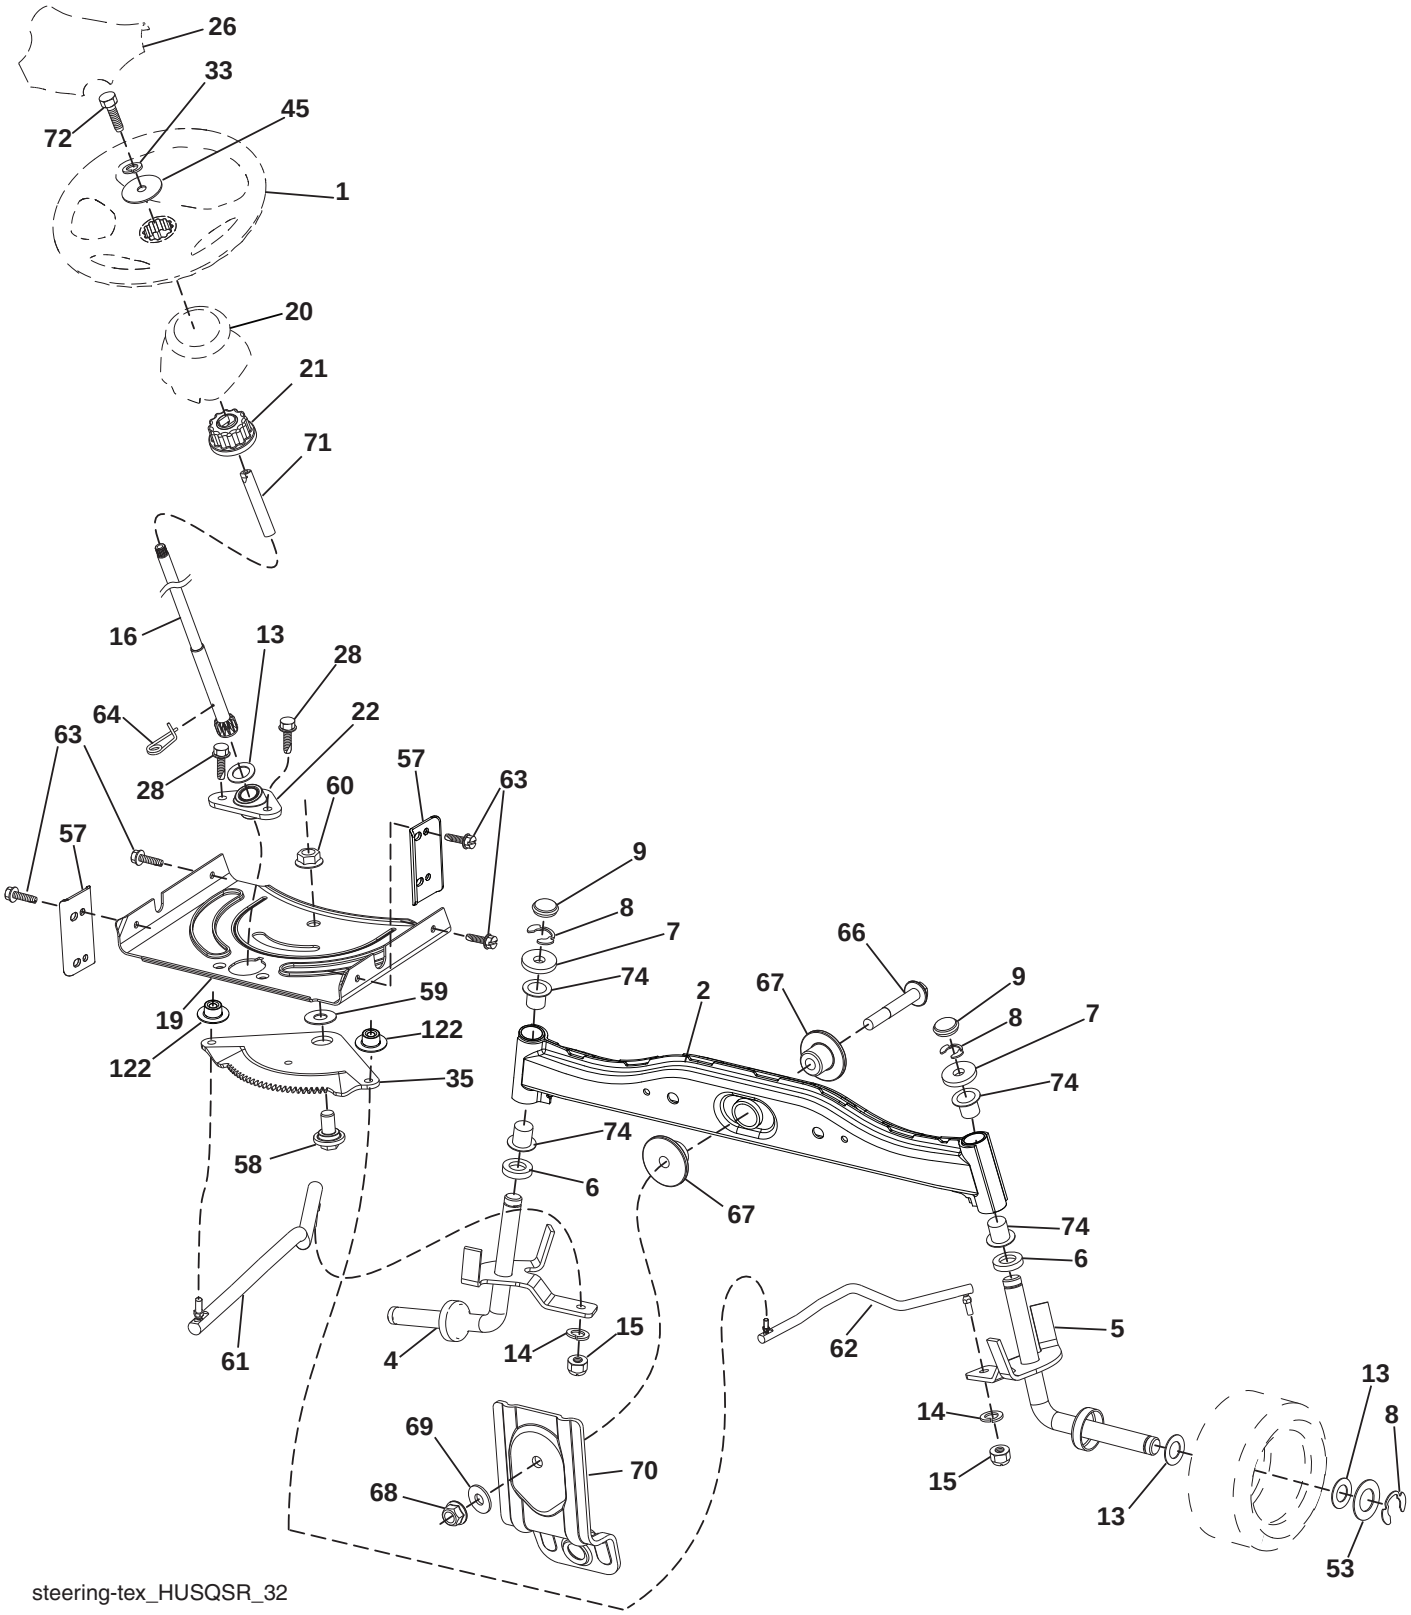


## TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30
## STEERING ASSEMBLY 41

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 43 97-40 | Wheel, Steering Husq SR |
| 2 | 532 41 81-68 | Axle Asm. |
| 4 | 532 40 30-87 | Spindle Asm., LH |
| 5 | 532 40 30-88 | Spindle Asm., RH |
| 6 | 532 12 49-31 | Bearing, Race Thrust Harden |
| 7 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 8 | 812 00 00-29 | Ring, Clip #T5304-75 |
| 9 | 532 12 12-32 | Cap, Spindle |
| 13 | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga. |
| 14 | 810 04 06-00 | Washer, Lock Hvy Hlcl Spr 3/8 |
| 15 | 873 54 06-00 | Nut, Crown Lock 3/8-24 unf |
| 16 | 532 42 93-73 | Shaft Steering |
| 19 | 532 19 47-29 | Plate Steering |
| 20 | 532 44 14-25 | Boot, Steering |
| 21 | 532 18 67-37 | Adapter, Wheel Steering |
| 22 | 532 42 05-37 | Strg. Supt. Lower |
| 26 | 532 43 97-43 | Insert, Wheel Steering Husq SR |
| 28 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 33 | 810 04 05-00 | Washer Lock 5/16 |
| 35 | 532 19 47-32 | Gear, Sector Plate |
| 45 | 819 11 38-12 | Washer 11/32 x 3/8 x 12 Ga. |
| 53 | 532 18 89-67 | Washer Hardened .793 x 1.637 x .060 |
| 57 | 532 40 74-65 | Bracket Upstop |
| 58 | 532 19 47-47 | Bolt Shoulder Sector Pivot CFM |
| 59 | 532 19 47-48 | Washer Thrust Sector Steering |
| 60 | 873 97 10-00 | Nut Flange Lock 5/8-11 |
| 61 | 532 19 47-40 | Draglink, LH |
| 62 | 532 19 47-41 | Draglink, RH |
| 63 | 817 00 05-12 | Screw 5/16-18 x 3/4 |
| 64 | 532 19 98-49 | Retainer Clip Spring Steering |
| 66 | 871 02 07-48 | Bolt Hex Fghd 7/16-14 x 3 Serr |
| 67 | 532 19 47-37 | Bushing PM Front Axle |
| 68 | 873 90 07-00 | Nut Lock Flange 7/16-14 Gr. 5 |
| 69 | 532 19 91-62 | Washer 1.5 x .505 x .118 |
| 70 | 532 19 61-97 | Bracket Deck Susp. Front |
| 71 | 532 19 07-52 | Shaft Extension Steering |
| 72 | 532 42 89-82 | Bolt Fin Hex 5/16-18 x 4 w/Patch |
| 74 | 532 12 49-37 | Bearing |
| 122 | 532 44 49-62 | Cap Gear |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30**
**MOWER DECK 44**

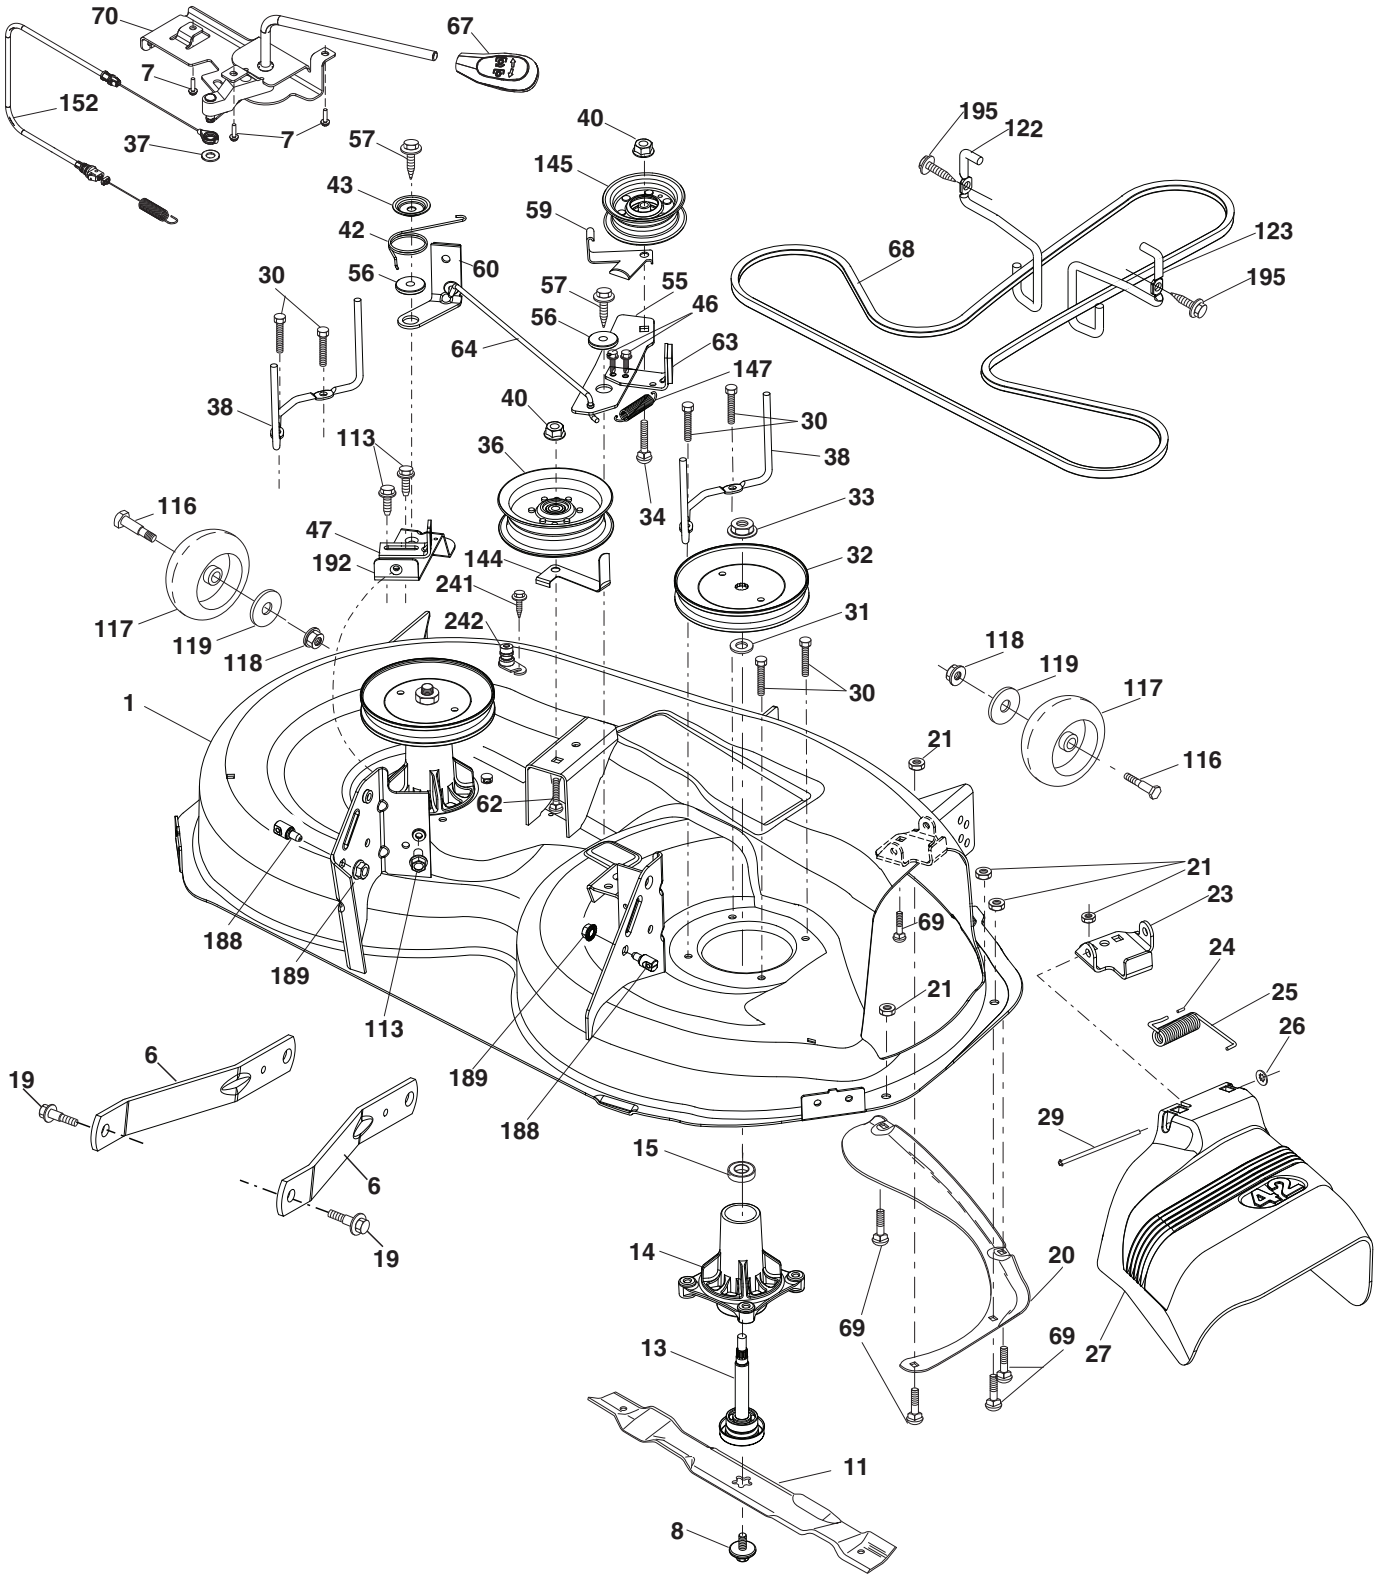


## TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30 MOWER DECK 44

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 43 98-17 | Mower Housing |
| 6 | 532 19 51-86 | Arm Suspension |
| 7 | 532 41 63-58 | Screw #10 x 0.750 |
| 8 | 532 19 30-03 | Bolt/Washer asm 7/16-20 unf |
| 11 | 532 13 89-71 | Blade Mower 42" Hi Lift Premium (For better wear when mulching) |
| 13 | 532 19 28-72 | Shaft Assembly, Mandrel |
| 14 | 532 18 72-81 | Housing, Mandrel |
| 15 | 532 11 04-85 | Bearing, Ball, Mandrel |
| 19 | 532 19 65-39 | Bolt, Shoulder |
| 20 | 532 15 97-70 | Baffle Vortex |
| 21 | 873 68 05-00 | Nut, Crownlock 5/16-18 unc |
| 23 | 532 19 25-57 | Bracket, Deflector |
| 24 | 532 10 53-04 | Cap, Sleeve |
| 25 | 532 19 70-26 | Spring, Torsion, Deflector |
| 26 | 532 11 04-52 | Nut, Push |
| 27 | 532 40 30-04 | Shield, Deflector |
| 29 | 532 13 14-91 | Rod, Hinge |
| 30 | 532 17 39-84 | Screw Thdrol Rolling Wsh Hd |
| 31 | 532 18 76-90 | Washer, Spacer |
| 32 | 532 19 74-73 | Pulley, Mandrel |
| 33 | 532 40 02-34 | Nut, Toplock, Flanged |
| 34 | 872 11 06-12 | Bolt Carr Sh. 3/8-16 x 1-1/2 Gr. 5 |
| 36 | 532 19 73-79 | Pulley, Idler, Flat |
| 37 | 819 13 13-16 | Washer |
| 38 | 532 43 25-20 | Keeper Belt Mandrel |
| 40 | 873 90 06-00 | Nut, Lock Flg. 3/8-16 unc |
| 42 | 532 19 84-10 | Spring Torsion Brake |
| 43 | 532 19 72-56 | Spring Torsion Retainer |
| 46 | 532 13 77-29 | Screw 1/4-20 x 5/8 |
| 47 | 532 19 72-50 | Bracket Clutch Cable |
| 55 | 532 43 71-10 | Arm, Idler |
| 56 | 532 19 90-92 | Spacer, Retainer |
| 57 | 817 00 06-16 | Screw 3/8-16 x 1 |
| 59 | 532 14 10-43 | Guard, Tuv Idler |
| 60 | 532 19 72-61 | Arm Brake Mower |
| 62 | 872 11 06-16 | Bolt 3/8-16 unc x 2 |
| 63 | 532 19 94-77 | Arm Brake Mower |
| 64 | 532 19 99-18 | Link Brake |
| 67 | 532 40 30-12 | Handle Clutch Cable |
| 68 | 532 42 96-36 | V-Belt |
| 69 | 872 14 05-05 | Bolt |
| 70 | 532 40 12-46 | Clutch Asm Manual |
| 113 | 817 00 05-10 | Screw 5/16-18 |
| 116 | 532 12 48-42 | Bolt Shoulder |
| 117 | 532 18 86-06 | Wheel Gauge |
| 118 | 873 90 06-00 | Nut Centerlock 3/8-16 unc |
| 119 | 819 12 14-14 | Washer 3/8 x 7/8 x 14 Ga. |
| 122 | 532 19 72-58 | Keeper Belt Engine LH |
| 123 | 532 19 72-59 | Keeper Belt Engine RH |
| 144 | 532 19 92-04 | Keeper Belt |
| 145 | 532 19 31-97 | Pulley Idler |
| 147 | 532 40 19-71 | Spring Return |
| 152 | 532 43 51-11 | Manual Clutch Cable |
| 188 | 532 19 51-61 | Stud Fastener |
| 189 | 873 90 05-00 | Nut Lock Hex Flange |
| 192 | 532 19 72-60 | Bracket Brake Stand LH |
| 195 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 241 | 532 15 29-27 | Screw TT#10-32 5. 3/8 Flange |
| 242 | 532 41 55-98 | Port Washout |
| - - | 532 19 28-70 | Mandrel Assembly (Includes housing, shaft assembly, and bearing only - pulley/nut/washer and blade bolt/washers not included) |
| - - | 532 43 29-37 | Replacement Mower, Complete |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

## TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30
## MOWER LIFT 45

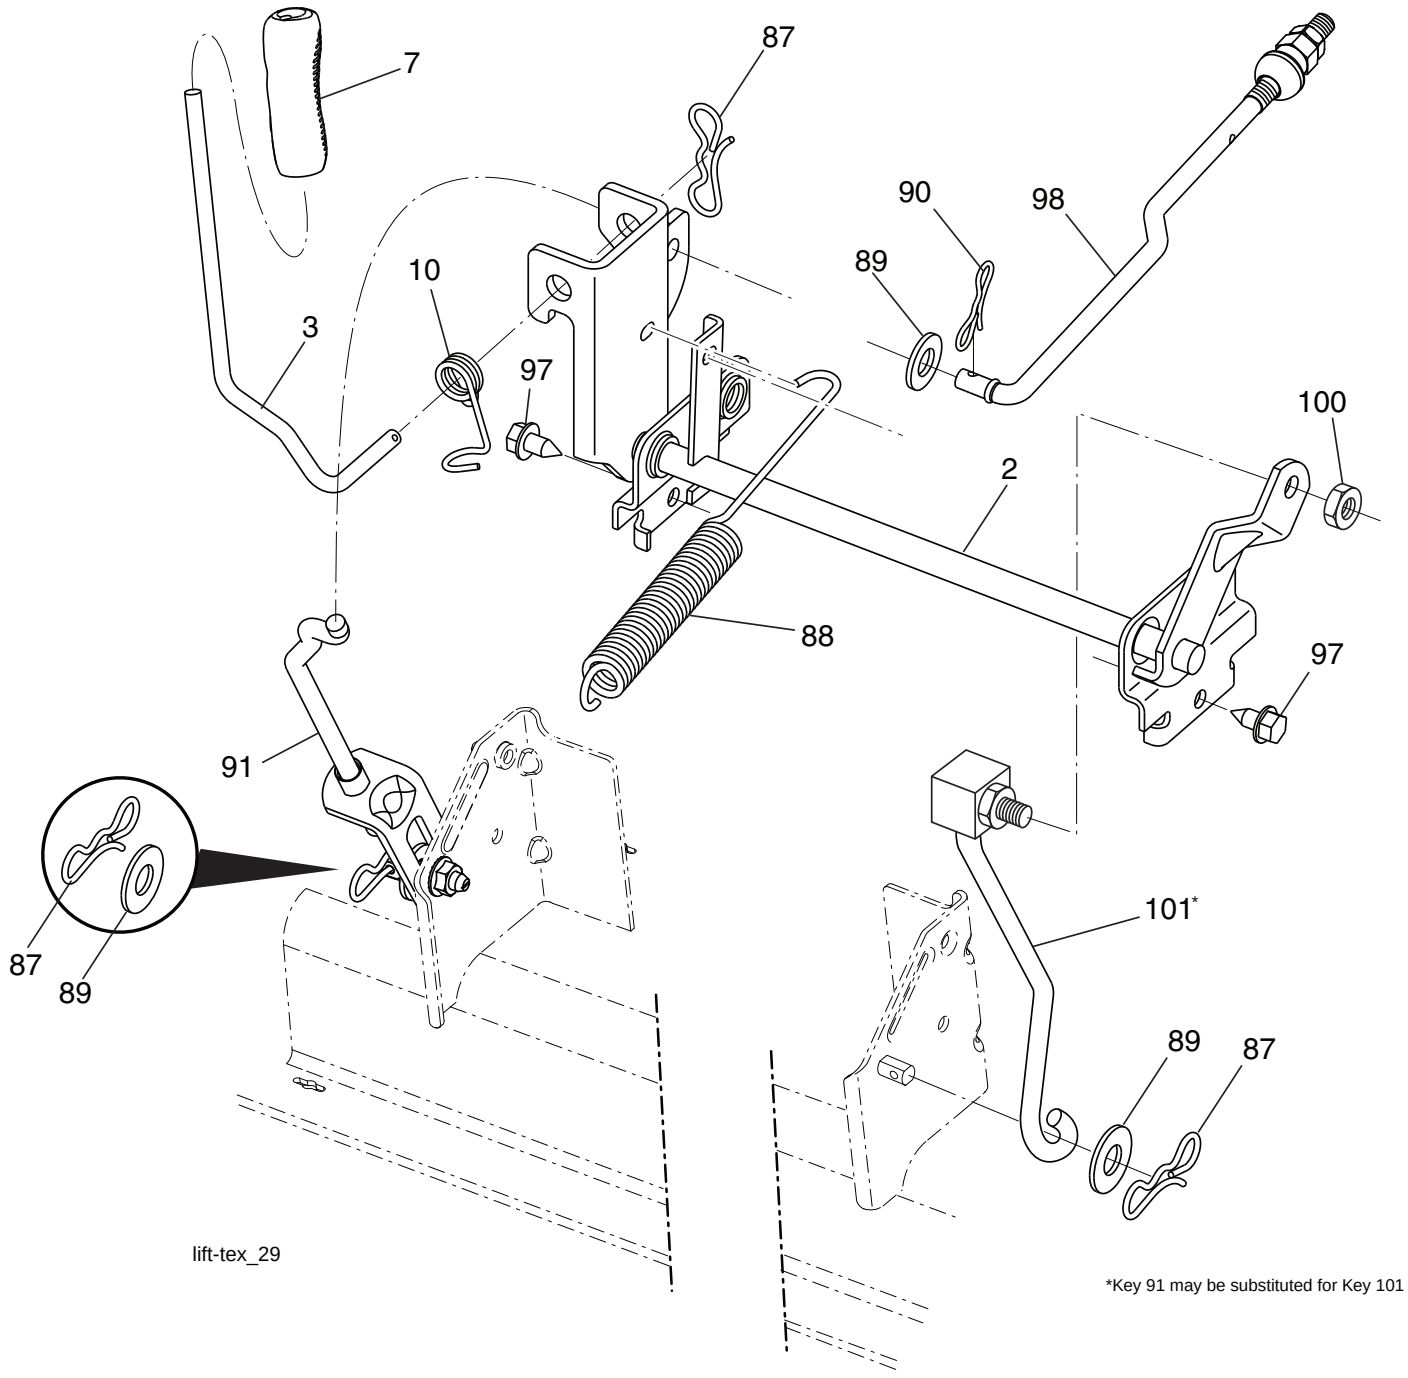



*Key 91 may be substituted for Key 101

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 2 | 532 42 20-27 | Shaft Asm., Lift |
| 3 | 532 19 52-31 | Lever Asm., Lift RH |
| 7 | 580 96 23-01 | Grip, Lever |
| 10 | 532 19 63-14 | Spring Torsion |
| 87 | 532 19 42-09 | Pin Cotter 7/16 Bow Tie Lock |
| 88 | 532 41 07-10 | Spring Lift Assist |
| 89 | 819 19 19-12 | Washer Clear Zinc |
| 90 | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 91 | 532 19 51-81 | Link Lift Susp Mower Rear |
| 97 | 817 00 06-12 | Screw 3/8-16 x .75 Smgml Tap/R.Z |
| 98 | 532 19 52-70 | Link Lift Susp. Front Mower |
| 100 | 873 93 06-00 | Nut Centerlock 3/8-16 |
| 101 | 532 40 70-03 | Link Asm. Lift FXD |

**NOTE**: All component dimensions given in U.S. inches
1 inch = 25.4 mm

## TRACTOR - - MODEL NO. LTH152 (96041003009), PRODUCT NO. 960 41 00-30
## SEAT ASSEMBLY 42

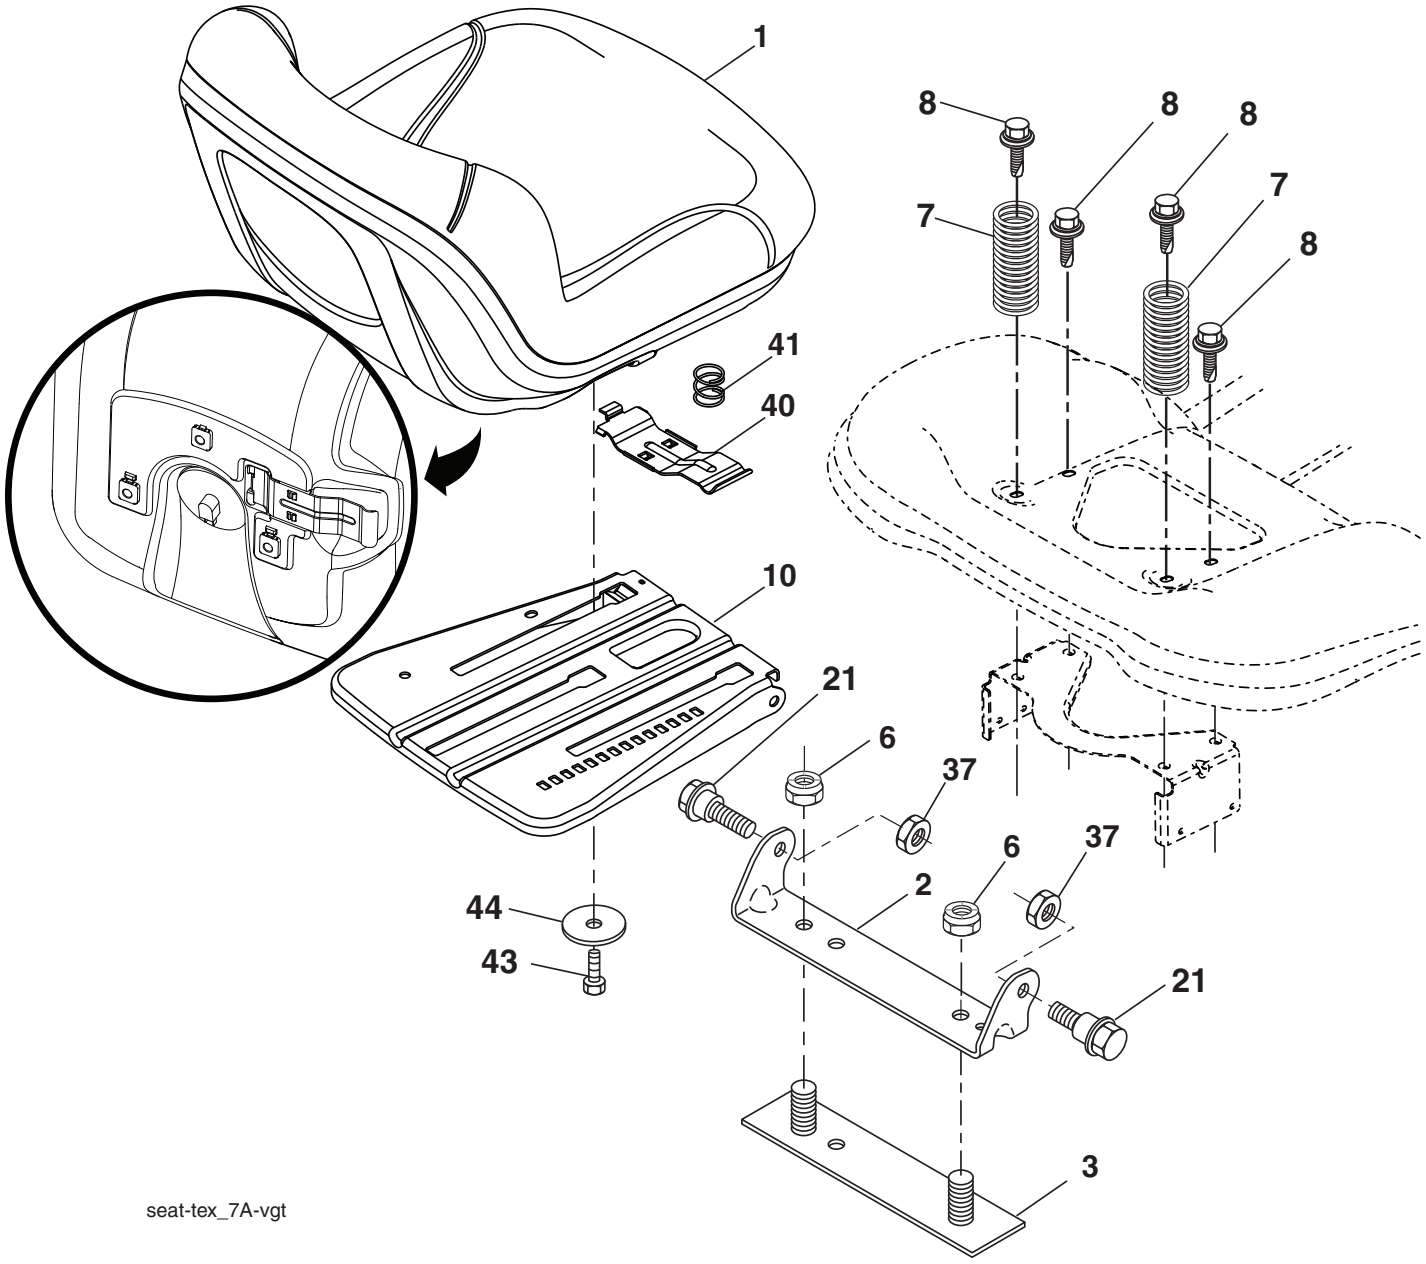


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 43 98-19 | Seat |
| 2 | 532 18 01-66 | Bracket Pivot Fender |
| 3 | 532 14 06-75 | Strap, Asm Fender |
| 6 | 873 80 06-00 | Nut, Lock w/Ins. 3/8-16 unc |
| 7 | 532 12 41-81 | Spring, Seat Cprsn |
| 8 | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 10 | 532 19 69-77 | Pan, Seat |
| 21 | 532 17 18-52 | Bolt, Shoulder 5/16-18 |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 37 | 873 80 05-00 | Nut, Lock 5/16-18 unc |
| 40 | 532 19 76-61 | Handle Slde |
| 41 | 532 19 82-00 | Spring Latch |
| 43 | 874 76 06-12 | Bolt 3/8-16 unc x 3/4 |
| 44 | 819 13 38-12 | Washer 13/32 x 2-3/8 x 12 Ga. |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm