
Husqvarna

Illustrated Parts List	1995-03
	I9502003

LRH 125

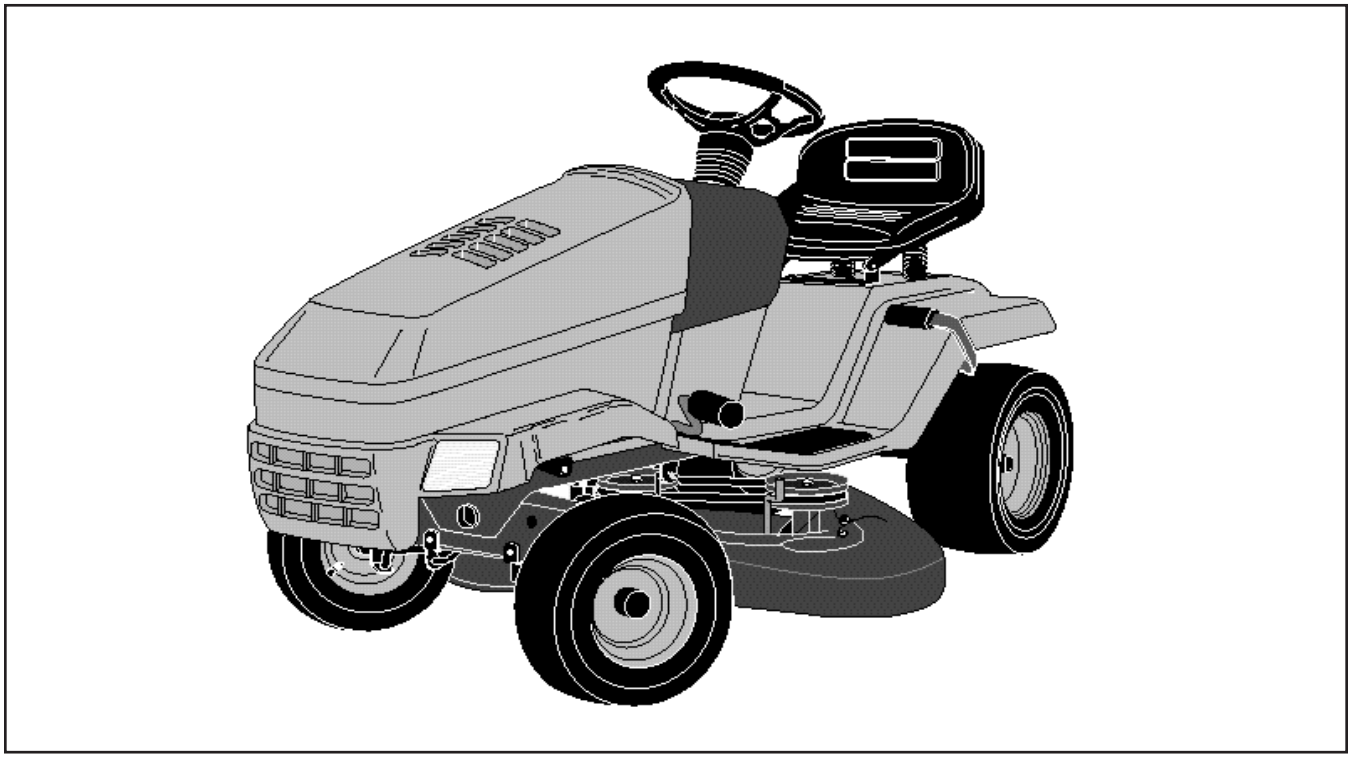


Ride Mower

954001222B

TRACTOR-MODEL NO. LRH125 (954001222B)

SCHEMATIC

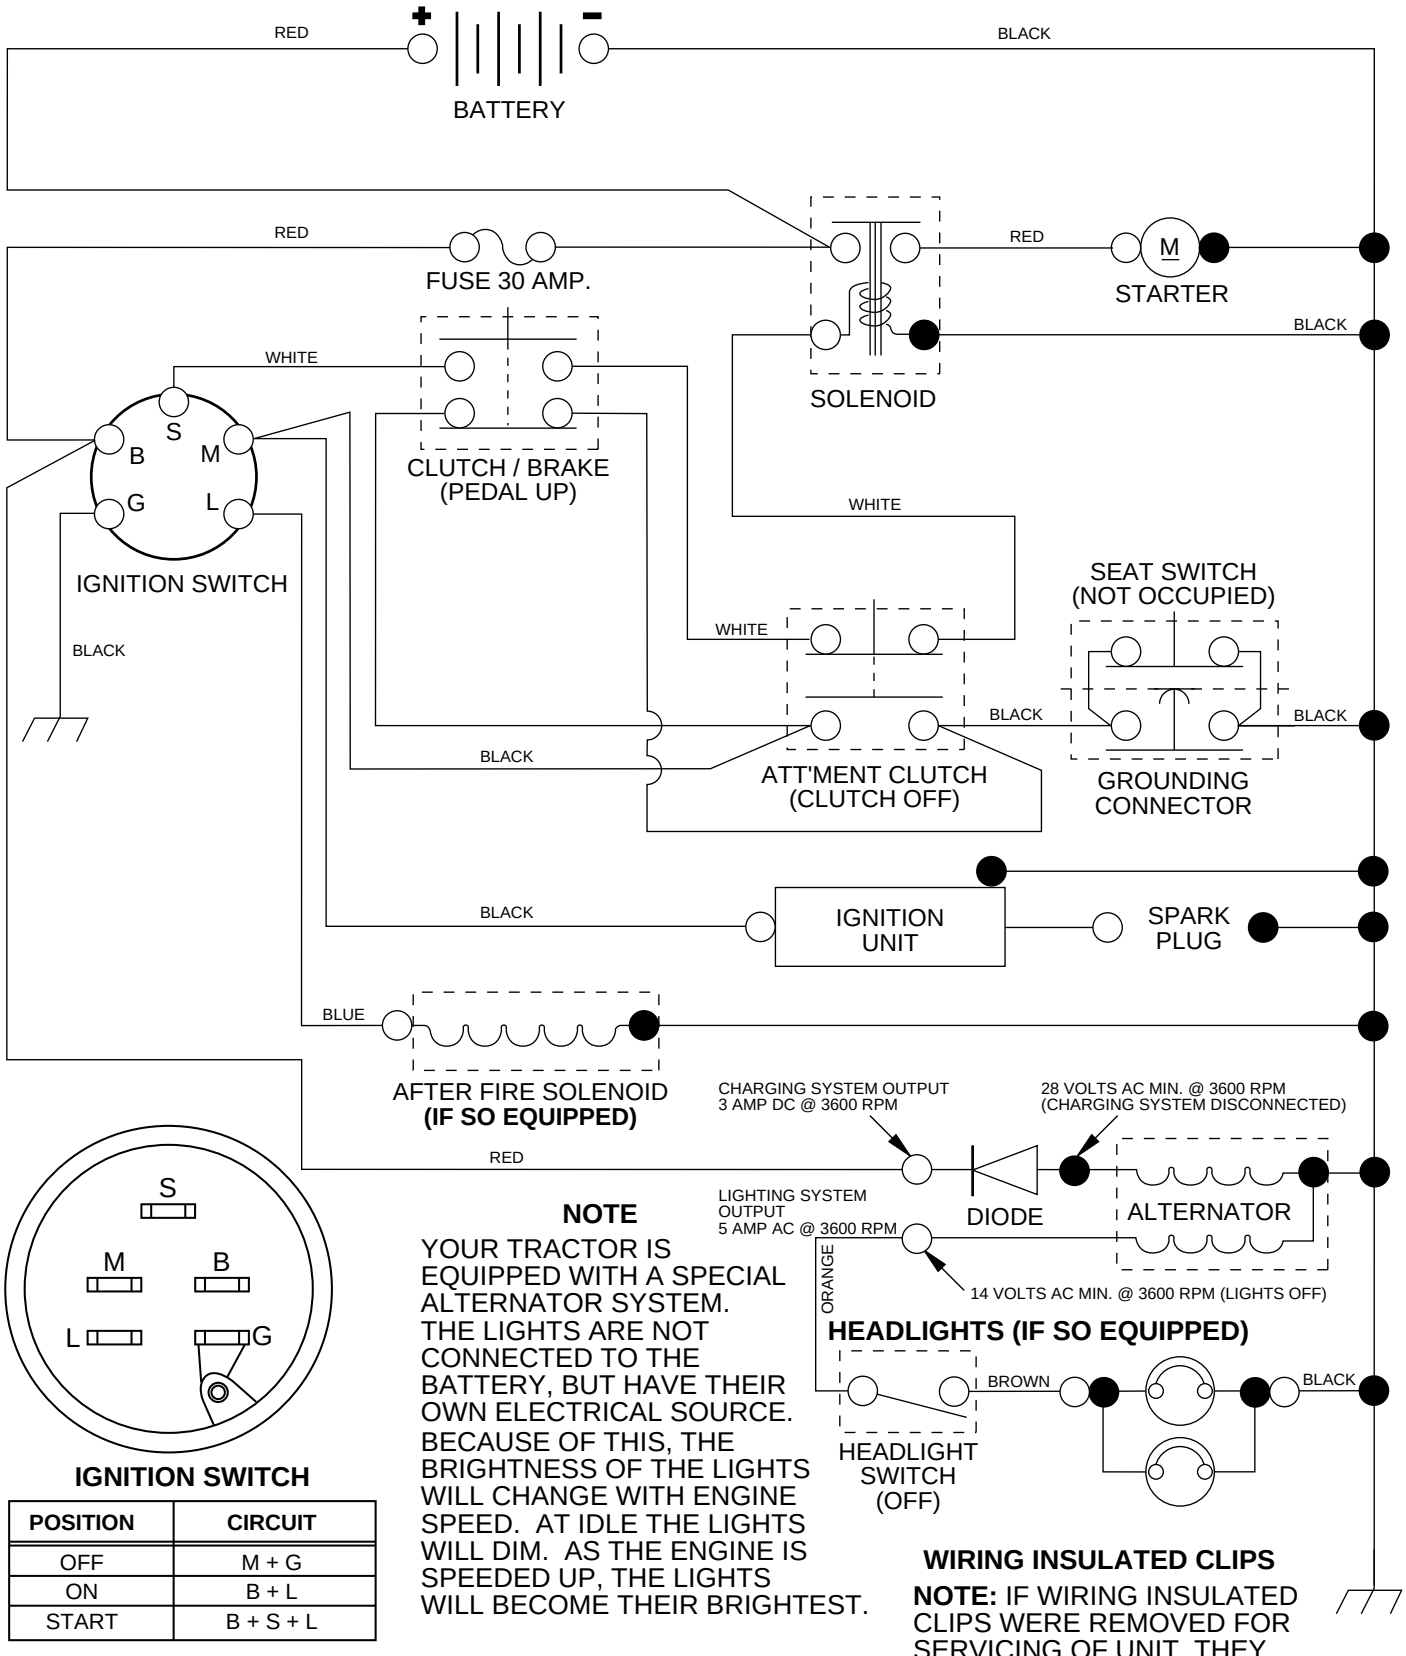

IGNITION SWITCH

POSITION	CIRCUIT
OFF	M + G
ON	B + L
START	B + S + L

NOTE

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.


NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

HOOD

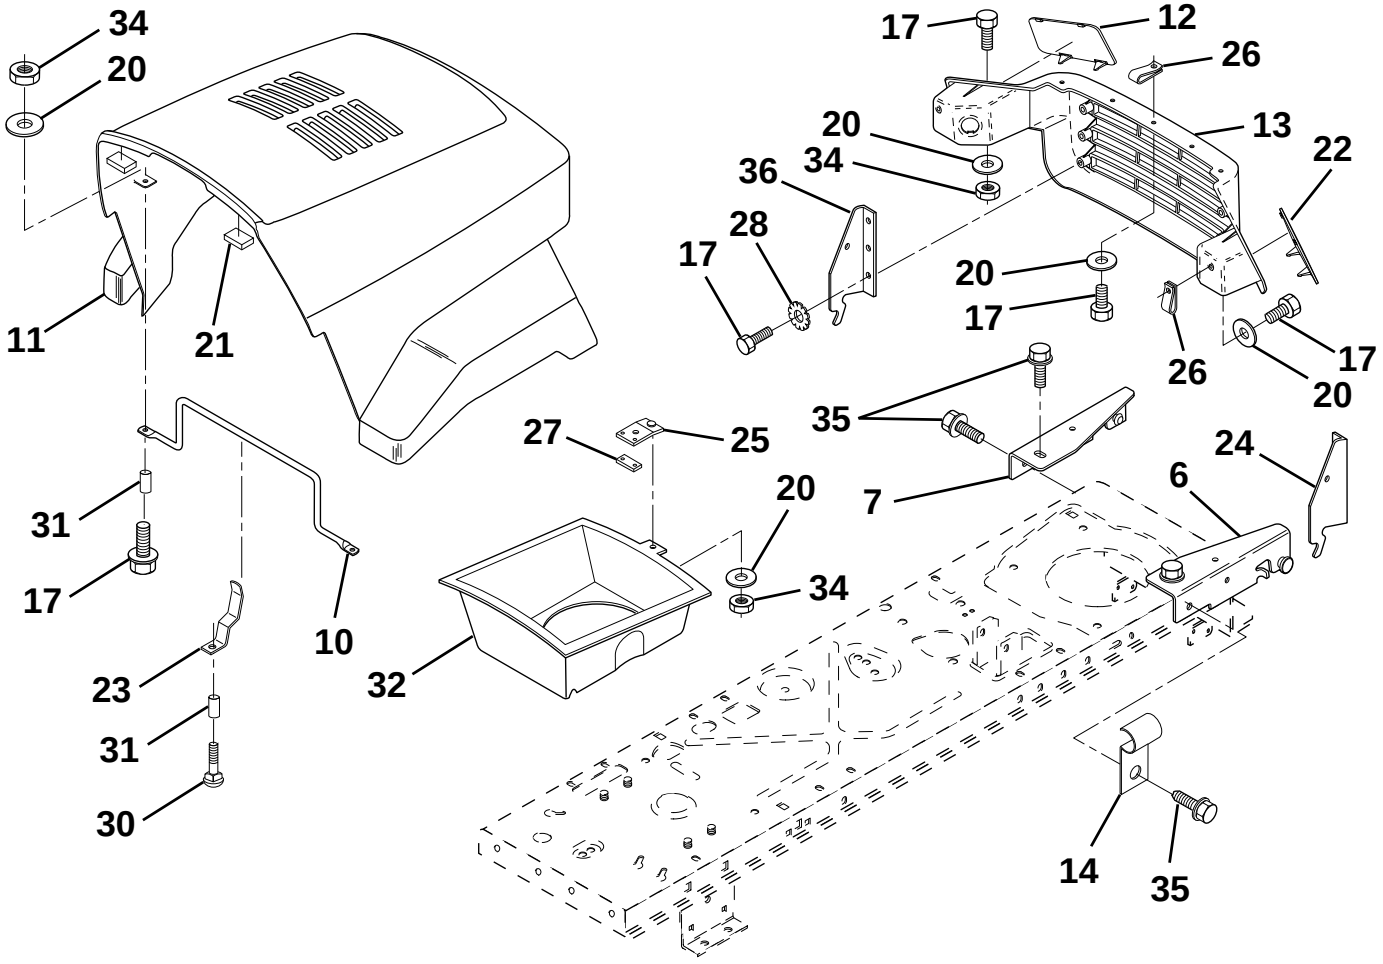

KEY NO.	PART NO.	DESCRIPTION
6	532140051	Bracket Asm. Pivot Hood RH
7	532140050	Bracket Asm. Pivot Hood LH
10	532130850	Brace Hood
11	532140142	Hood
12	532130986	Lens LH
13	532130984	Grille
14	532124996	Clip Line Fuel
17	874780410	Bolt Fin Hex 1/4-20 x 5/8
20	819091016	Washer 9/32 x 3/4 x 16 Ga.
21	532126938	Bumper Hood
22	532130985	Lens RH
23	532139969	Latch Hood

KEY NO.	PART NO.	DESCRIPTION
24	532142873	Bracket Pivot Hood RH
25	532138740	Clip Asm. Duct Air
26	532052921	Clip Tinnerman
27	532131028	Clip Tinnerman
28	811050400	Washer Lock Ext Tooth
30	872050411	Bolt RDHD Sht Nk 1/4 - 20 x 1-3/8
31	532147031	Spacer
32	532123840	Duct Air Hood
34	873680400	Nut Keps 1/4-20
35	817490512	Screw Thdrol 5/16-18 x 3/4
36	532128445	Bracket Pivot Hood LH


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

ELECTRICAL

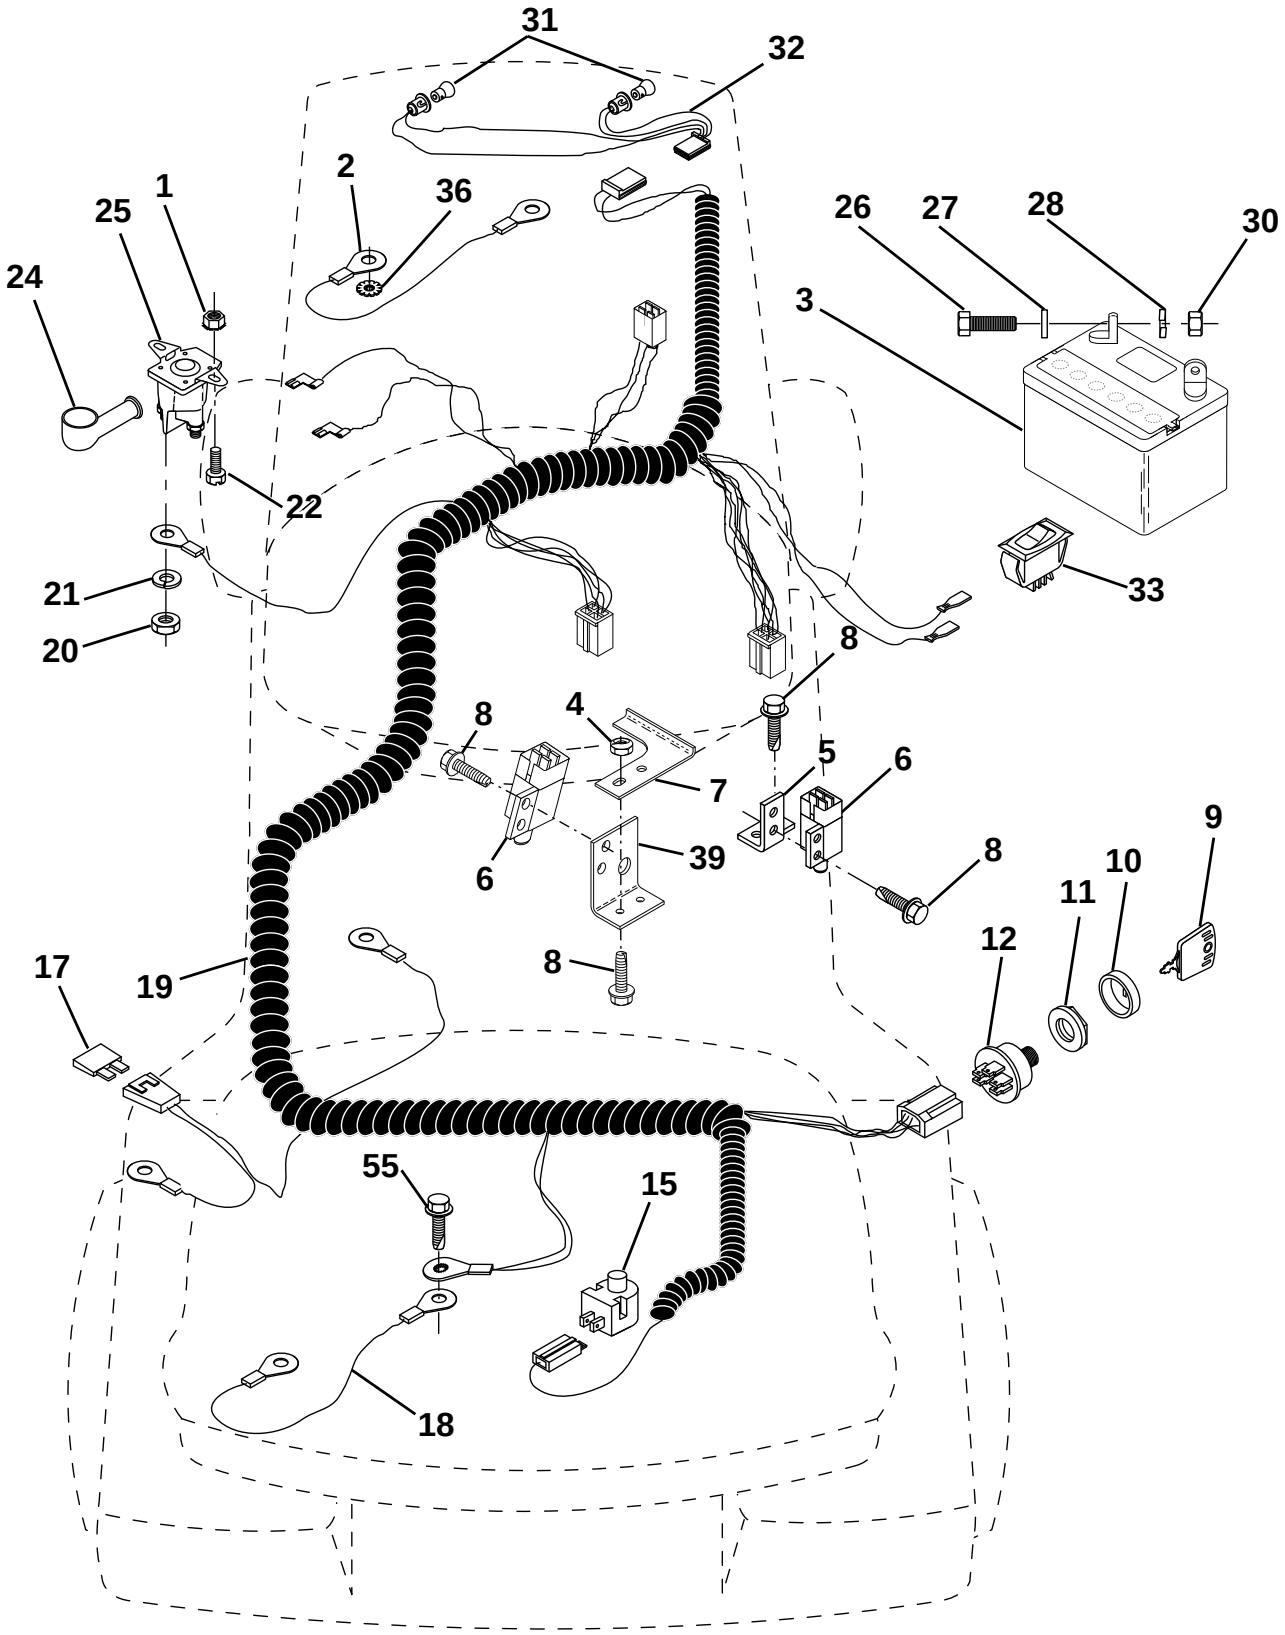

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	873640400	Nut, Hex, Keps 1/4-20
2	532108423	Assembly, Cable
3	532144924	Battery
5	532108236	Bracket, Switch
6	532109553	Switch, Interlock, 4 Terminal
8	817021008	Screw, Hex Head, Self-Tapping #10-24 x 1/2
9	532140401	Key, Molded
10	532141226	Cover, Ignition Key
11	532140400	Nut, Ignition
12	532144921	Switch, Ignition
15	532121305	Switch, Plunger
17	532108824	Fuse
18	532128353	Assembly, Cable
19	532146064	Harness, Ignition
20	873350400	Nut, Hex, Jam 1/4-20
21	810090400	Washer, Lock 1/4
22	871110408	Bolt, Hex, Fin. 1/4-20 UNC x 1/2 Grade 5
24	532131563	Cover, Terminal
25	532145673	Solenoid
26	874760412	Bolt, Hex Head 1/4-20 UNC x 3/4
27	819091016	Washer 9/32 x 5/8 x 16 Gauge
28	810040400	Washer, Lock 1/4
30	873220400	Nut, Hex, Fin. 1/4-20 UNC
31	532004152	Bulb, Light
32	532142881	Harness, Headlight
33	532110712	Switch, Light
36	811150400	Washer, Lock, Internal Tooth 1/4
39	532141735	Bracket Switch Clutch
55	817490508	Screw Thdrol 5/16 -18 x 1/2


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

SEAT

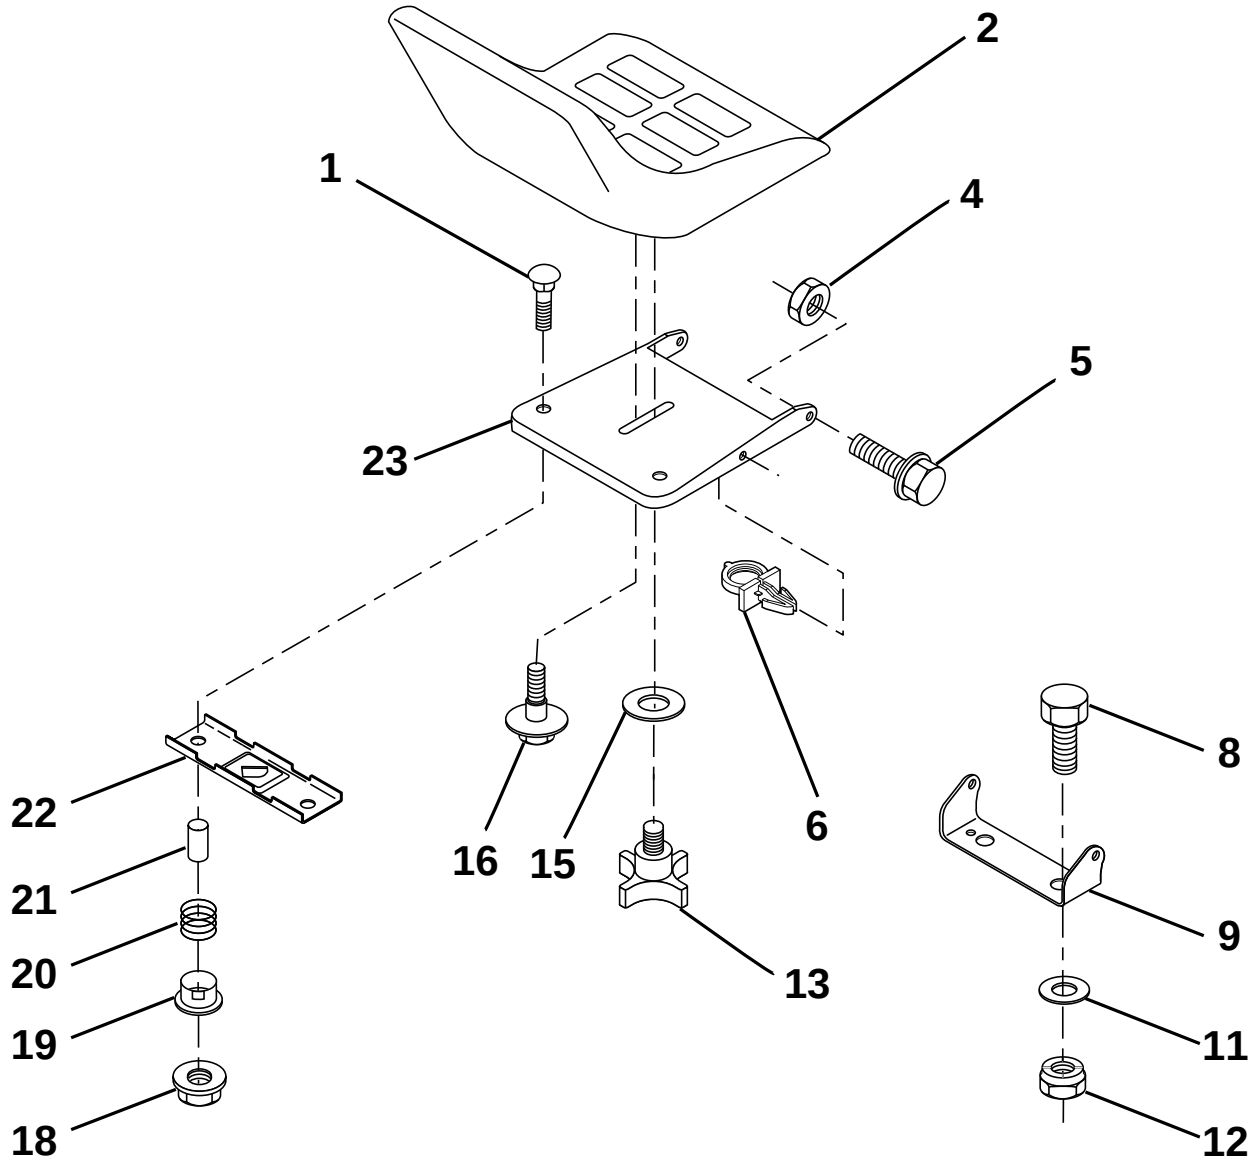

KEY NO.	PART NO.	DESCRIPTION
1	872050411	Bolt, Carriage 1/4-20 x 1-3/8
2	532127398	Seat
4	873800500	Nut, Hex, Lock w/wsh 5/16-18
5	532139888	Bolt, Shoulder 5/16-18 UNC
6	532145006	Clip, Push-in
8	874760616	Bolt, Hex, Fin. 3/8-16 UNC x 1
9	532140551	Bracket, Pivot, Seat
11	819133210	Washer 12/32 x 2 x 10 Gauge
12	873800600	Nut, Hex, Lock Hex w/wsh 3/8-16
13	532120068	Knob, Seat

KEY NO.	PART NO.	DESCRIPTION
15	819171912	Washer 17/32 x 1-3/16 x 12 Gauge
16	532127018	Bolt, Shoulder
18	532123976	Nut, Hex, Large, Flange Lock
19	532121248	Bushing, Snap
20	532121250	Spring, Compression
21	532134300	Spacer, Split, Large .28 Id. x .96
22	532121246	Bracket, Switch Mounting
23	532140552	Pan, Seat


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

DASH

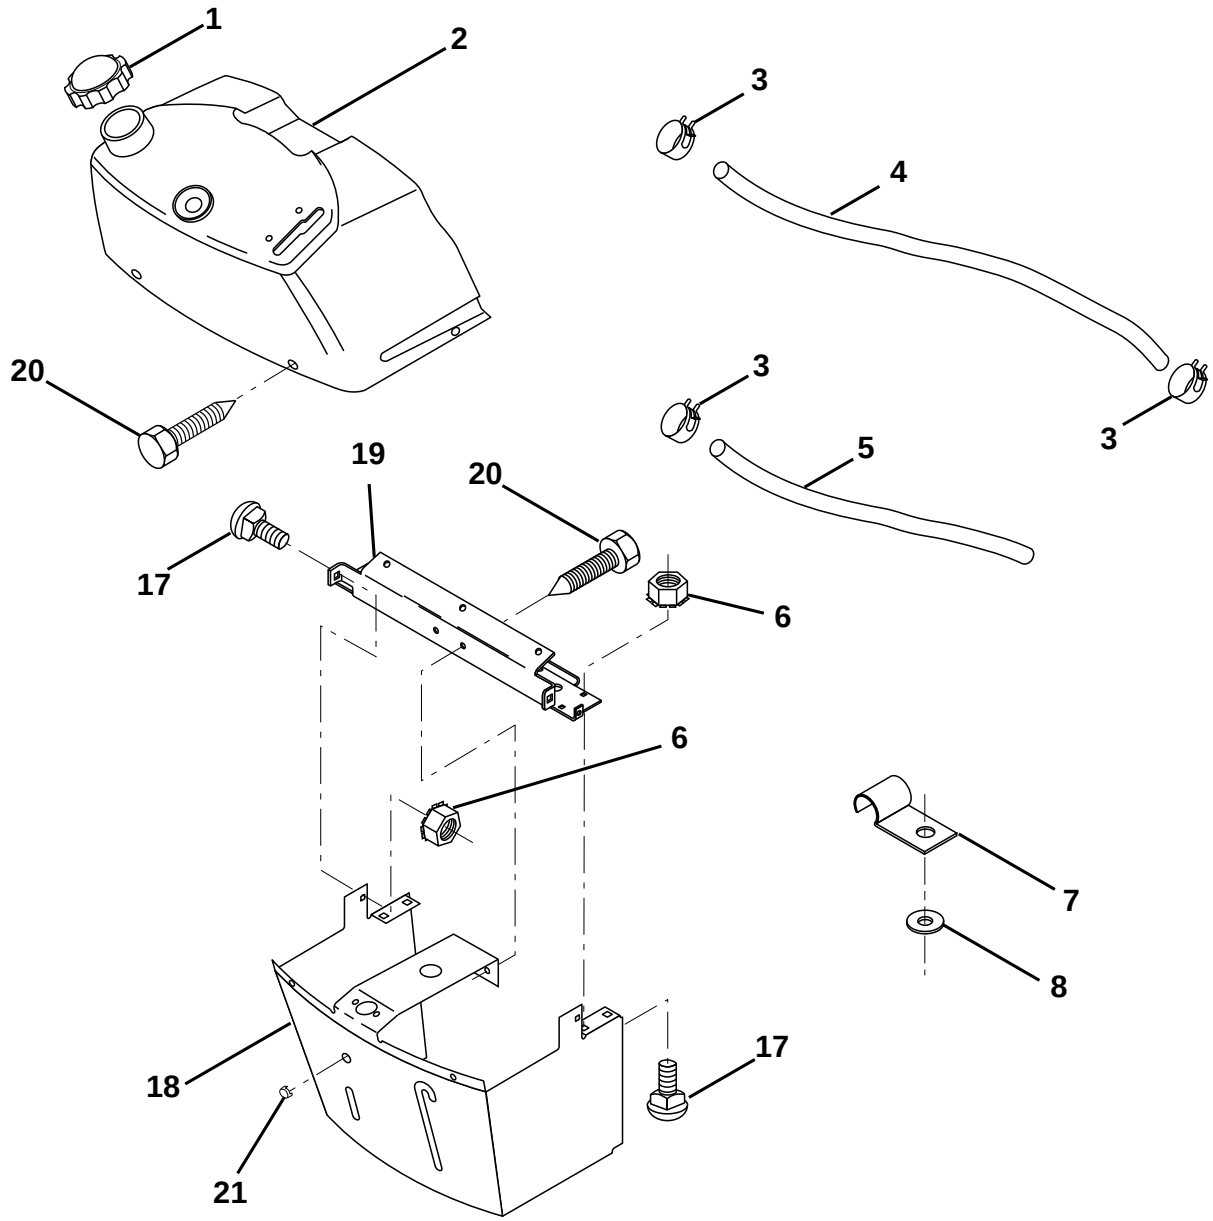

KEY NO.	PART NO.	DESCRIPTION
1	532142187	Cap, Fuel Tank
2	532138395	Assembly, Dash & Fuel Tank
3	532123487	Clamp, Hose
4	532008544	Line, Fuel
5	532008548	Line, Fuel
6	873640400	Nut, Hex, Keps 1/4-20
7	532124996	Clip, Fuel Line
8	819091216	Washer 9/32 x 3/4 x 16 Gauge
17	872110404	Bolt, Carriage 1/4-20 x 1/2 Grade 5
18	532131886	Support Assembly, Dash
19	532134744	Brace, Cross
20	817060408	Screw, Self-Tapping 1/4-20 x 1/2
21	532134014	Plug, Dome, Black


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

STEERING WHEEL

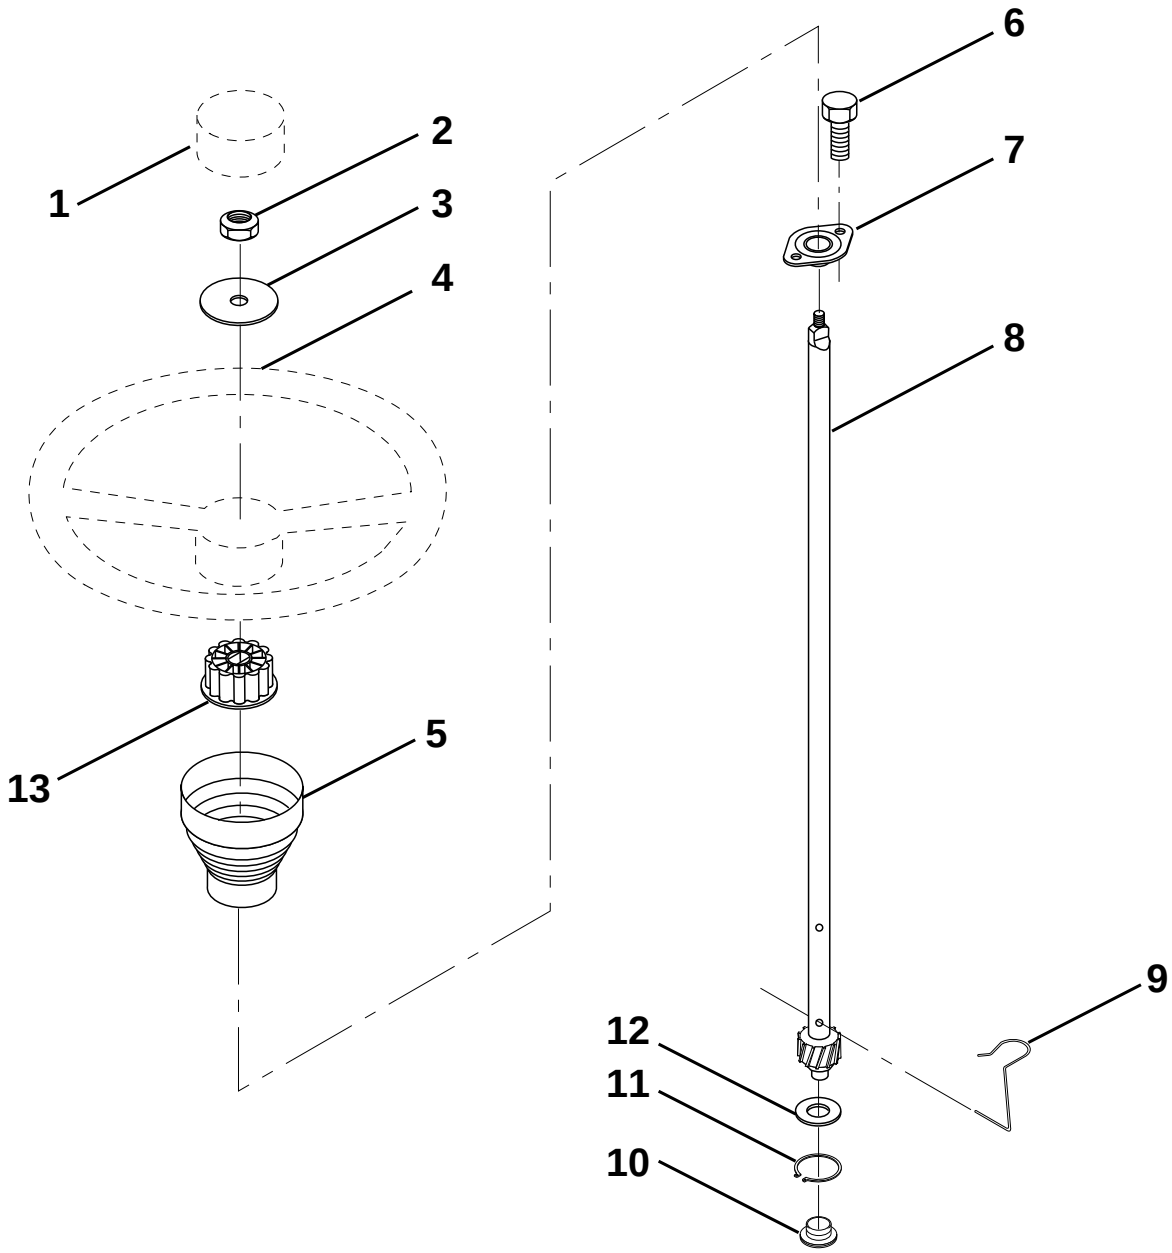

KEY NO.	PART NO.	DESCRIPTION
1	532124416	Insert, Steering Wheel
2	532124701	Locknut 3/8-24 UNF
3	819133808	Washer 12/32 x 2-3/8 x 8 Gauge
4	532124415	Steering Wheel
5	532127396	Sleeve, Steering
6	817431008	Screw, Hex Head #10-16 x 1/2
7	532102803	Bushing, Steering
8	532123651	Shaft, Steering
9	532124210	Clip, Steering
10	532123438	Bushing, Lower, Steering
11	812000045	Ring, Retaining
12	819211616	Washer 21/32 x 1 x 16 Gauge
13	532104820	Adaptor, Steering Wheel


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

SECTOR GEAR / AXLE SUPPORT

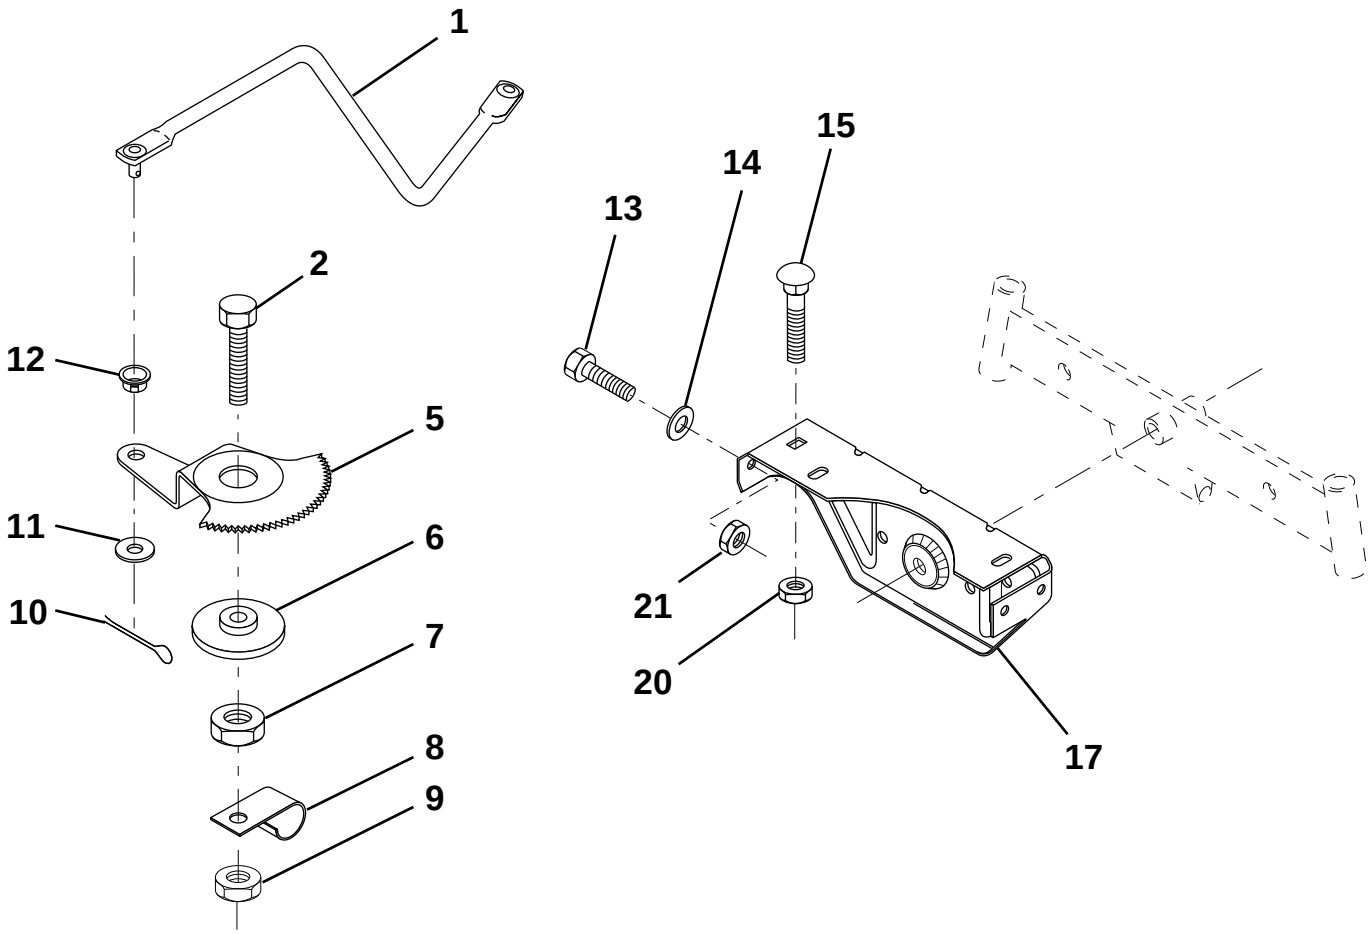

KEY NO.	PART NO.	DESCRIPTION
1	532132566	Link, Drag
2	874780828	Bolt, Hex, Fin. 1/2-13 x 1-3/4
5	532121926	Gear, Sector
6	532121927	Bushing
7	873030800	Nut, Heavy Hex, Top Lock 1/2-13 UNC
8	532126472	Clip, Insulated
9	873680800	Nut, Crownlock 3/8-16
10	876020412	Pin, Cotter 1/8 x 3/4
11	819131316	Washer 13/32 x 13/16 x 16 Gauge
12	532126847	Bushing
13	874760512	Bolt, Hex Head 5/16-18 UNC x 1
14	819111416	Washer 11/32 x 7/8 x 16 Gauge
15	872110606	Bolt, Carriage 3/8-16 UNC x 3/4
17	532137096	Support, Front Axle
20	873680600	Nut, Crownlock 3/8-16
21	873680500	Nut, Crownlock 5/16-18


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

FRONT AXLE

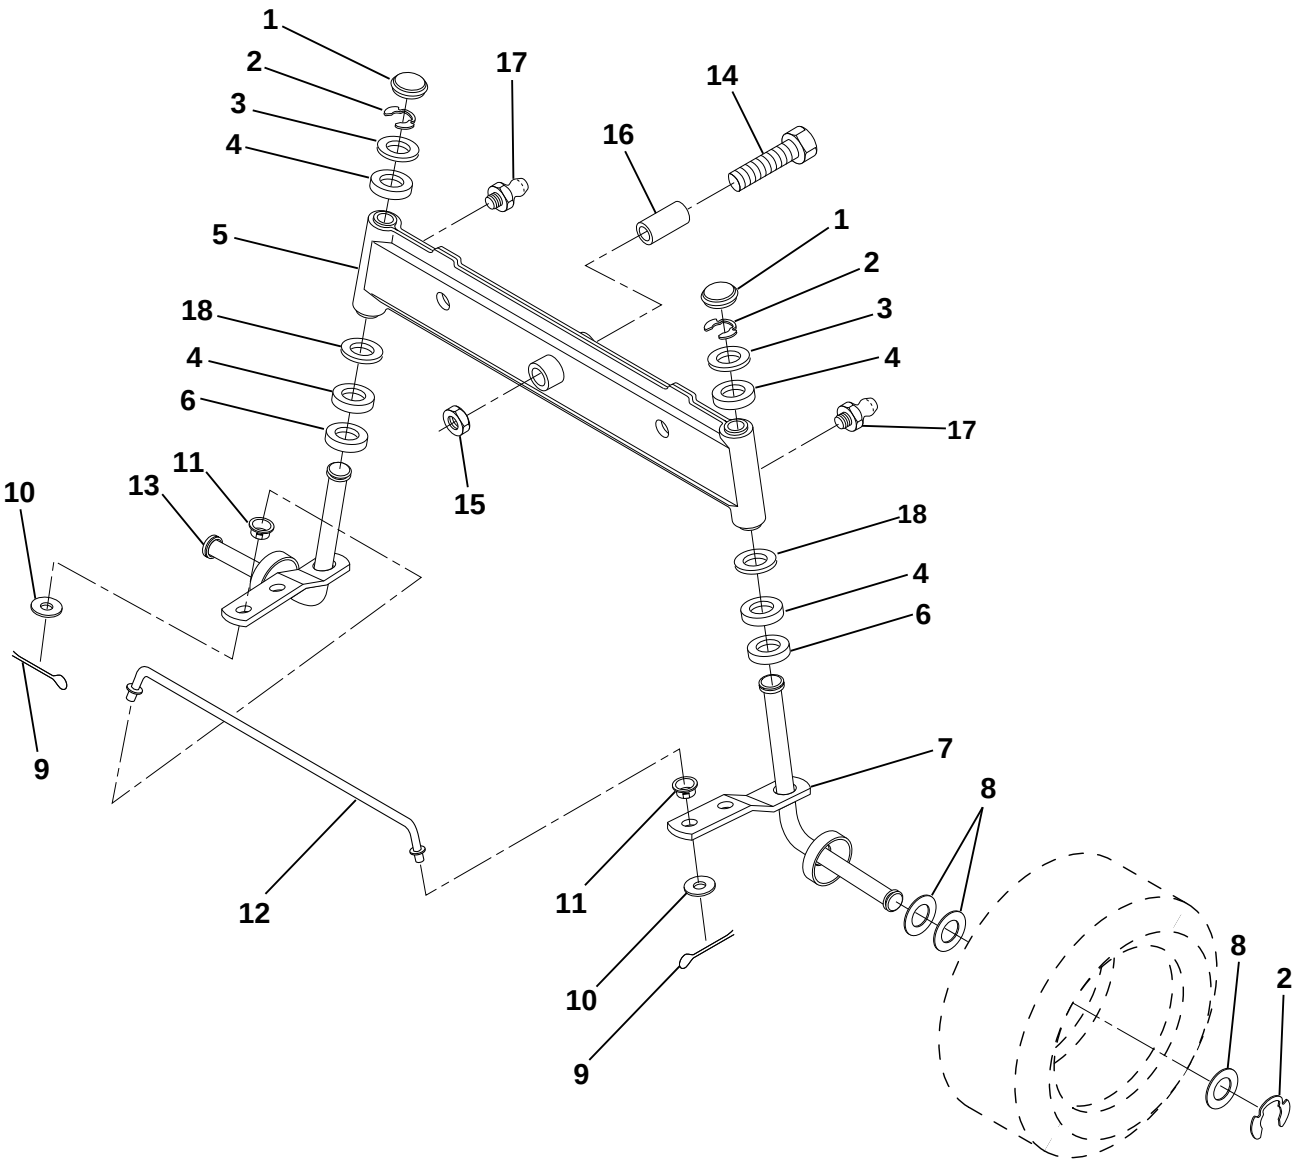

KEY NO.	PART NO.	DESCRIPTION
1	532121232	Cap, Spindle
2	812000029	Ring, Clip
3	532121748	Washer 25/32 x 1-5/8 x 16 Gauge
4	532124937	Bearing
5	532142033	Axle, Front
6	532124931	Bearing, Thrust
7	532137062	Spindle Assembly, R.H.
8	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
9	876020412	Pin, Cotter 1/8 x 3/4
10	819131316	Washer 13/32 x 13/16 x 16 Gauge
11	532126847	Bushing
12	532130465	Tie Rod
13	532137061	Spindle Assembly, L.H.
14	874011056	Bolt Hex 5/8-11 Unc x 3-1/2
15	873901000	Nut Lock Flange 5/8-11 Unc
16	532110438	Spacer Bearing
17	532124836	Fitting Grease
18	819272016	Washer 27/32 x 1-1/4 x 16 Ga.


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

BRAKE / REAR MOWER LIFT ASSEMBLY

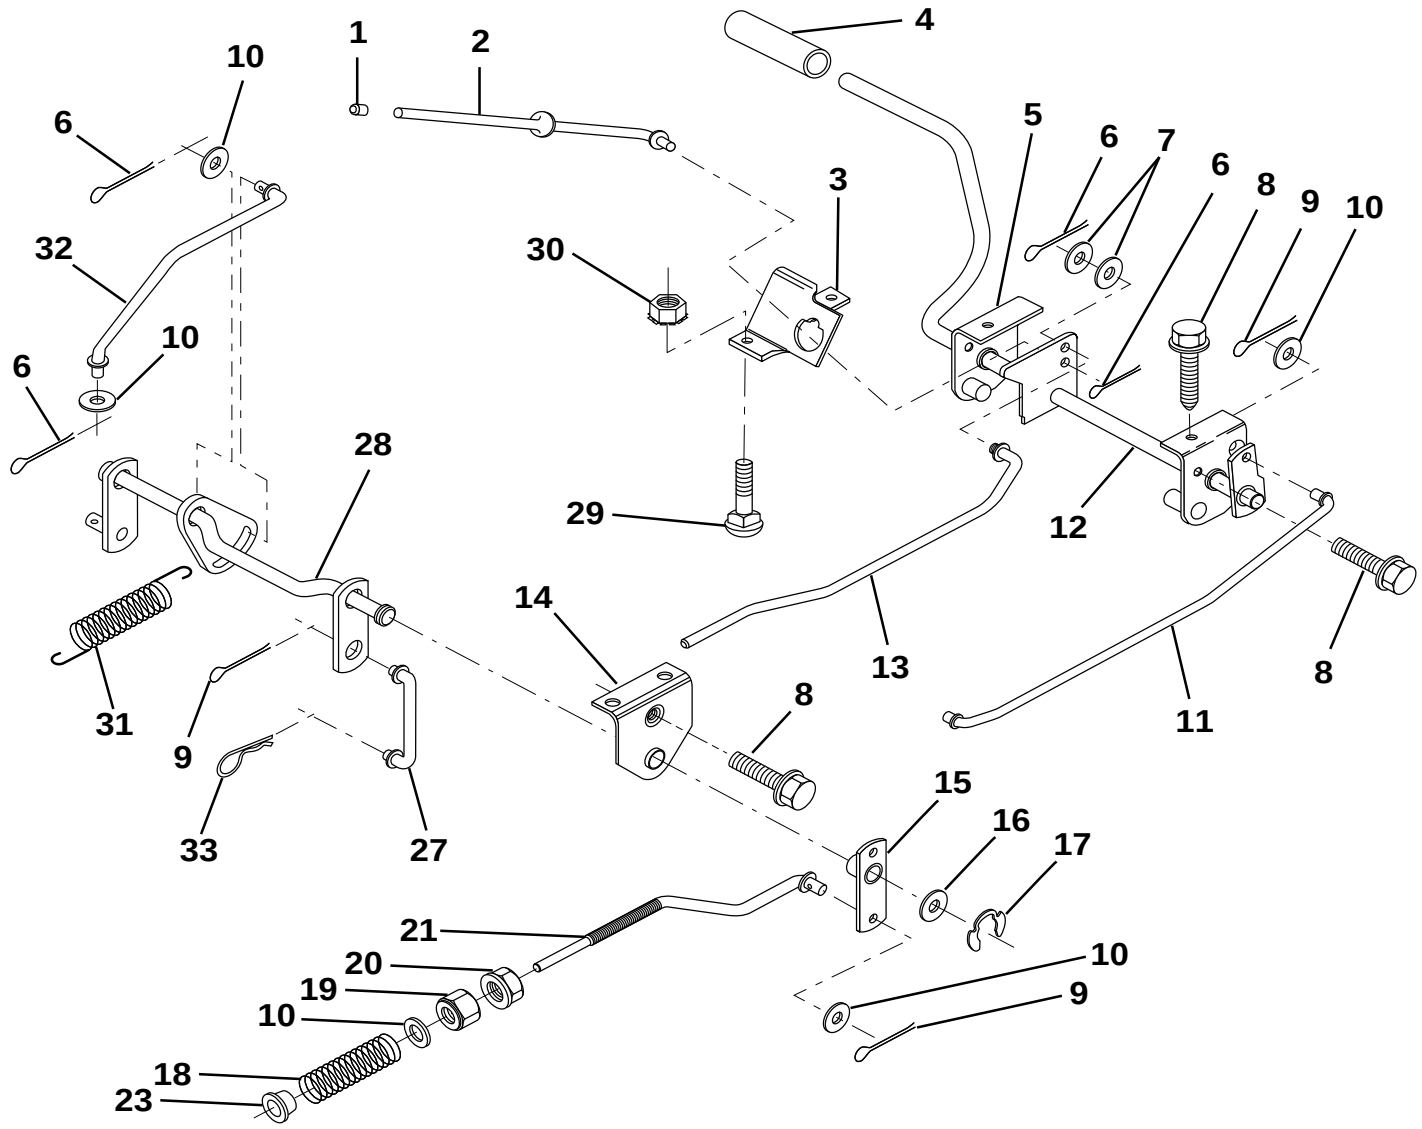

KEY NO.	PART NO.	DESCRIPTION
1	532071673	Cap, Plunger
2	532123436	Rod, Parking Brake
3	532123437	Bracket, Parking Brake
4	532008156	Cover, Pedal
5	532132205	Bracket, Clutch/Brake Pedal, L.H.
6	876020312	Pin, Cotter 3/32 x 3/4
7	819131016	Washer 13/32 x 5/8 x 16 Gauge
8	817490508	Screw, Hex Hd, Thdrl 5/16-18 x 1/2
9	876020412	Pin, Cotter 1/8 x 3/4
10	819131316	Washer 13/32 x 13/16 x 16 Gauge
11	532123543	Rod, Brake, Front
12	532139934	Assembly, Clutch/Brake Pedal
13	532123394	Rod, Clutch
14	532121978	Bracket, Lift Shaft
15	532133332	Assembly, Brake, Pivot, Arm

KEY NO.	PART NO.	DESCRIPTION
16	819251816	Washer 25/32 x 1-1/8 x 16 Gauge
17	812000034	Ring, Klip
18	532106888	Spring, Brake Rod
19	873800600	Locknut, Hex, w/Wsh Ins 3/8-16 Unc
20	873350600	Nut, Hex, Jam 3/8-16 UNC
21	532144413	Rod, Brake, Rear
23	532126847	Bushing, Link, Drag
27	532136780	Link, Lift, Rear
28	532140777	Assembly, Rear Mower Lift
29	872110506	Bolt, Carriage 5/16-18 UNC x 3/4
30	873510500	Nut, Hex, Keps 5/16-16 UNC
31	532133095	Spring, Counterbalance
32	532133721	Link, Lift Lever
33	532124670	Retainer Spring


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

ENGINE

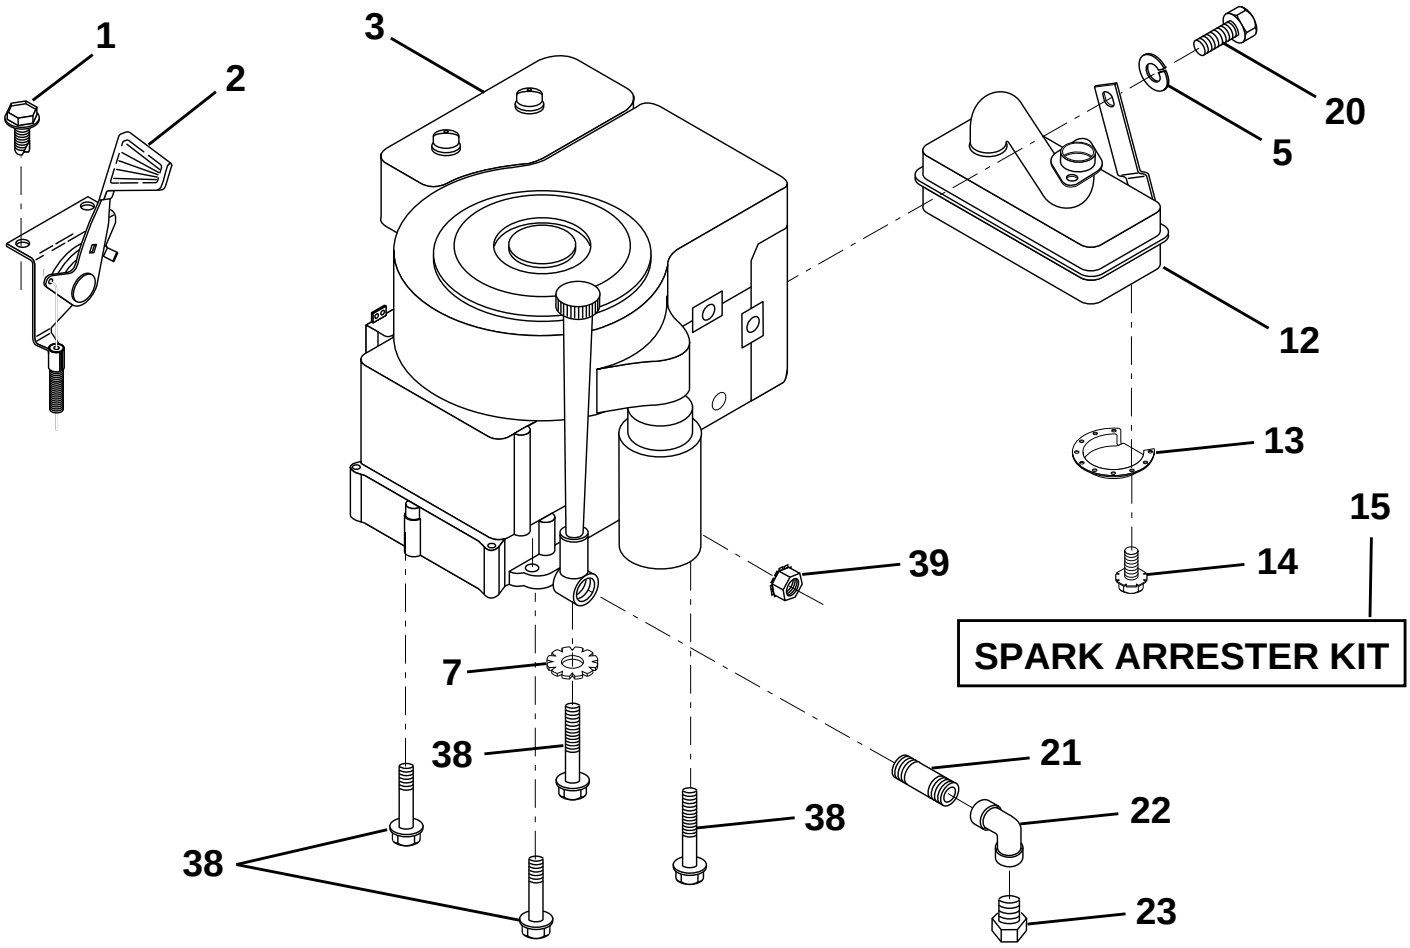

KEY NO.	PART NO.	DESCRIPTION
1	817060408	Screw, Hex Head, Thread Cutting 1/4-20 x 1/2
2	532132753	Control, Throttle
3	- - - - - - - - -	Engine, Kohler, 12.5 HP
5	810040500	Washer, Lock, Hvy Hlcl Spring 5/16
7	811050600	Washer Lock Ext. Tooth 3/8
12	532138149	Muffler
13	532101326	Deflector Muffler
14	817030808	Screw Spiderloc Hex Hd # 8 x 1/2 AB

KEY NO.	PART NO.	DESCRIPTION
15	532137180	Arrester, Spark (Optional Equip.)
20	874760508	Bolt, Hex, Fin. 5/16 - 18 x 1/2
21	813280328	Nipple Pipe
22	813200300	Elbow
23	- - - -	Oil Drain Plug (Order From Eng Mfg)
38	532125398	Bolt Hex
39	873510400	Nut, Keps, Hex 1/4-20


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

GROUND DRIVE

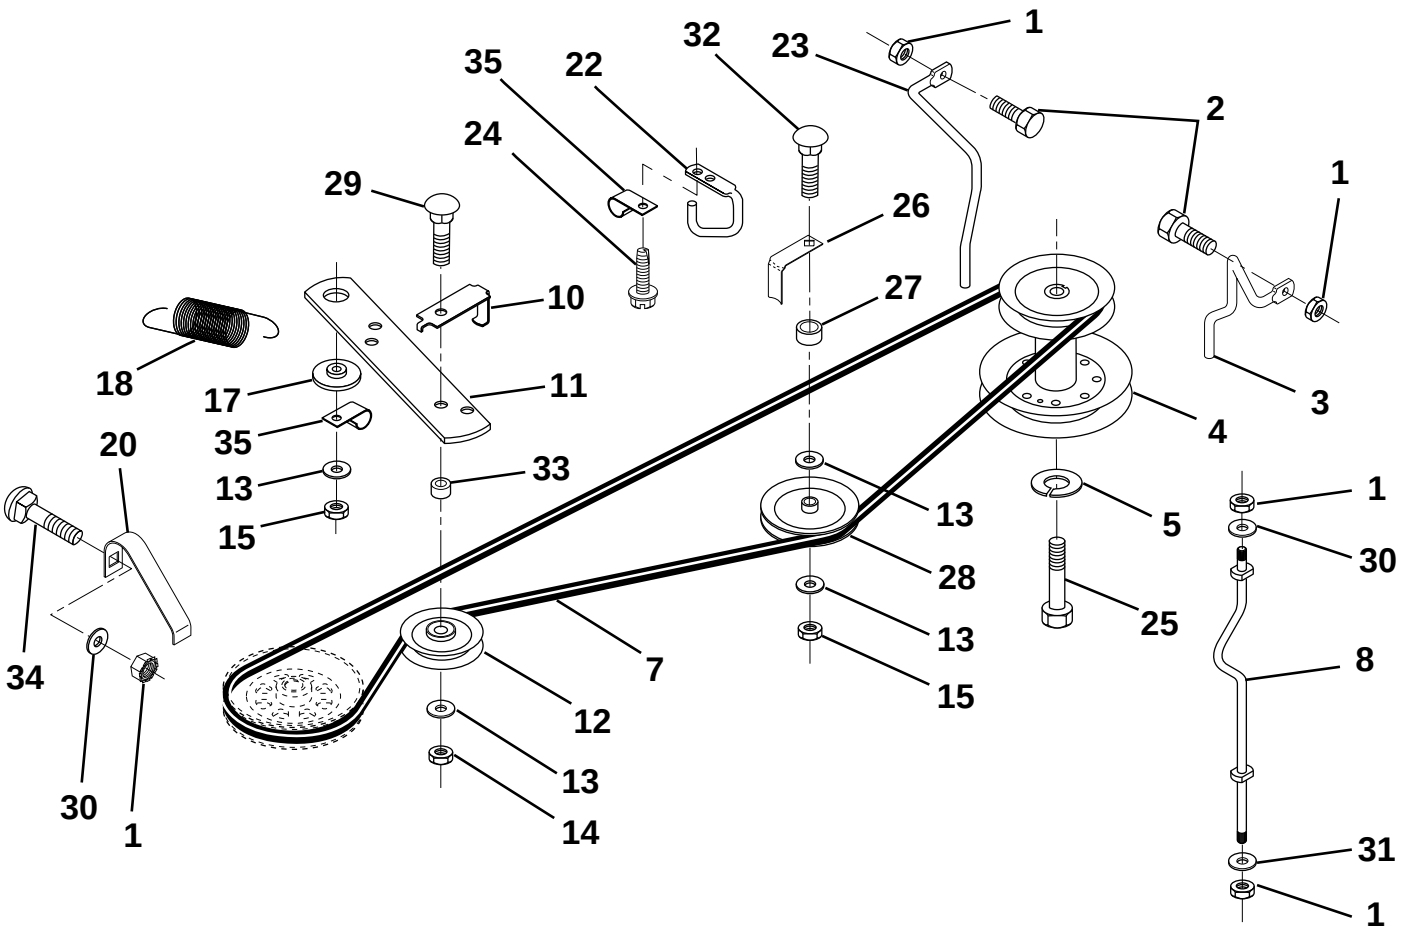

KEY NO.	PART NO.	DESCRIPTION
1	873800500	Nut, Lock Hx w/Ins 5/16-18
2	874760512	Bolt, Hex Head 5/16-18 x 3/4
3	532140917	Keeper, Belt RH Front
4	532138029	Pulley, Engine
5	810040700	Washer, Lock 7/16
6	532138887	Bolt, Hex Fin M10 x 1.5 x 75mm
7	532140910	V-Belt
8	532140785	Keeper, Belt RH
10	532140780	Keeper,Belt, Idler Pulley
11	532140911	Arm, Idler
12	532123674	Idler, Flat
13	819131316	Washer 13/32 x 13/16 x 16 Gauge
14	873930600	Nut, Centerlock 3/8-16
15	873680600	Nut, Crownlock 3/8-16
17	532122052	Spacer, Retainer
18	532131459	Spring, Extension

KEY NO.	PART NO.	DESCRIPTION
20	532140909	Keeper,Belt LH
22	532123404	Keeper Frame Ground Drive Belt
23	532146792	Keeper,Belt LH Front
24	817720408	Scew, Thd. Cut. 1/4-20 X 1/2
26	532140913	Keeper, Belt
27	532140914	Spacer
28	532139123	Pulley, V-Idler
29	872140618	Bolt, RDHD SQ 3/8-16 x 2-1/4
30	819111116	Washer Nut Lock Hex w/Ins. 5/6-18
31	819111216	Washer 11/32 x 3/4 x 16 Ga.
32	872140620	Carriage Bolt
33	532000160	Spacer
34	872140506	Carriage Bolt
35	532126472	Clip Insulator


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

MOWER LIFT LEVER

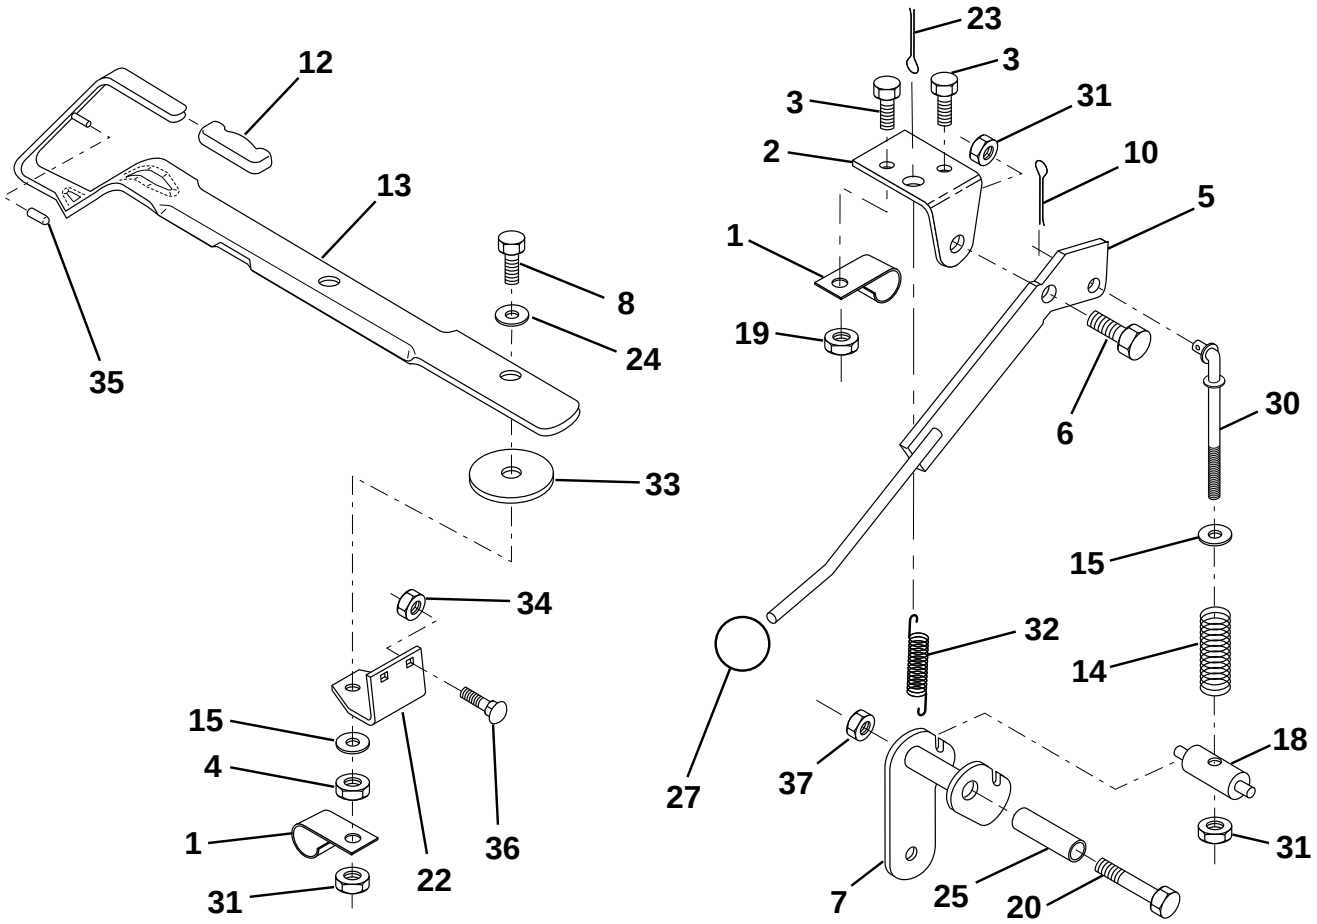

KEY NO.	PART NO.	DESCRIPTION
1	532126470	Clip, Insulated
2	532122018	Bracket, Mower Clutch
3	871110408	Bolt, Hex Hd, Fin. 1/4-20 UNC x 1/2 Grade 5
4	873930600	Nut, Centerlock 3/8-16 UNC
5	532145187	Assembly, Clutch Lever
6	532106451	Bolt, Shoulder
7	532141435	Assembly, Mower Clutch Arm
8	874930624	Bolt, Hex Head 3/8-16 UNC x 1-1/2
10	876020412	Pin, Cotter 1/8 x 3/4
12	532122027	Handle, Lift Lever
13	532136658	Assembly, Lift Handle
14	532133939	Spring, Compression
15	819131616	Washer 13/32 x 1 x 11 Gauge
18	532135107	Trunnion, Threaded 3/8-16
19	873680400	Nut, Crownlock 1/4-20

KEY NO.	PART NO.	DESCRIPTION
20	874760644	Bolt, Hex Hd, Fin. 3/8-16 UNC x 2-3/4
22	532132561	Bracket, Lift Lever
23	876020312	Pin, Cotter 3/32 x 3/4
24	532007672	Washer 25/64 x 1-1/4 x 12 Gauge
25	532121933	Tube, Spacer
27	532121466	Knob
30	532135039	Rod, Tension, Clutch
31	873800600	Nut Lock Hex w/wsh 3/8 - 16
32	532133435	Spring, Extension, Return
33	532062333	Washer .390 x 1.437 x .074
34	873800500	Nut, Lock Hx w/Ins 5/16-18
35	532133603	Cap, Vinyl, Red
36	872140506	Bolt, Carriage 5/16-18 x 3/4
37	873680600	Nut Crownlock 3/8-16


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

TRANSAXLE

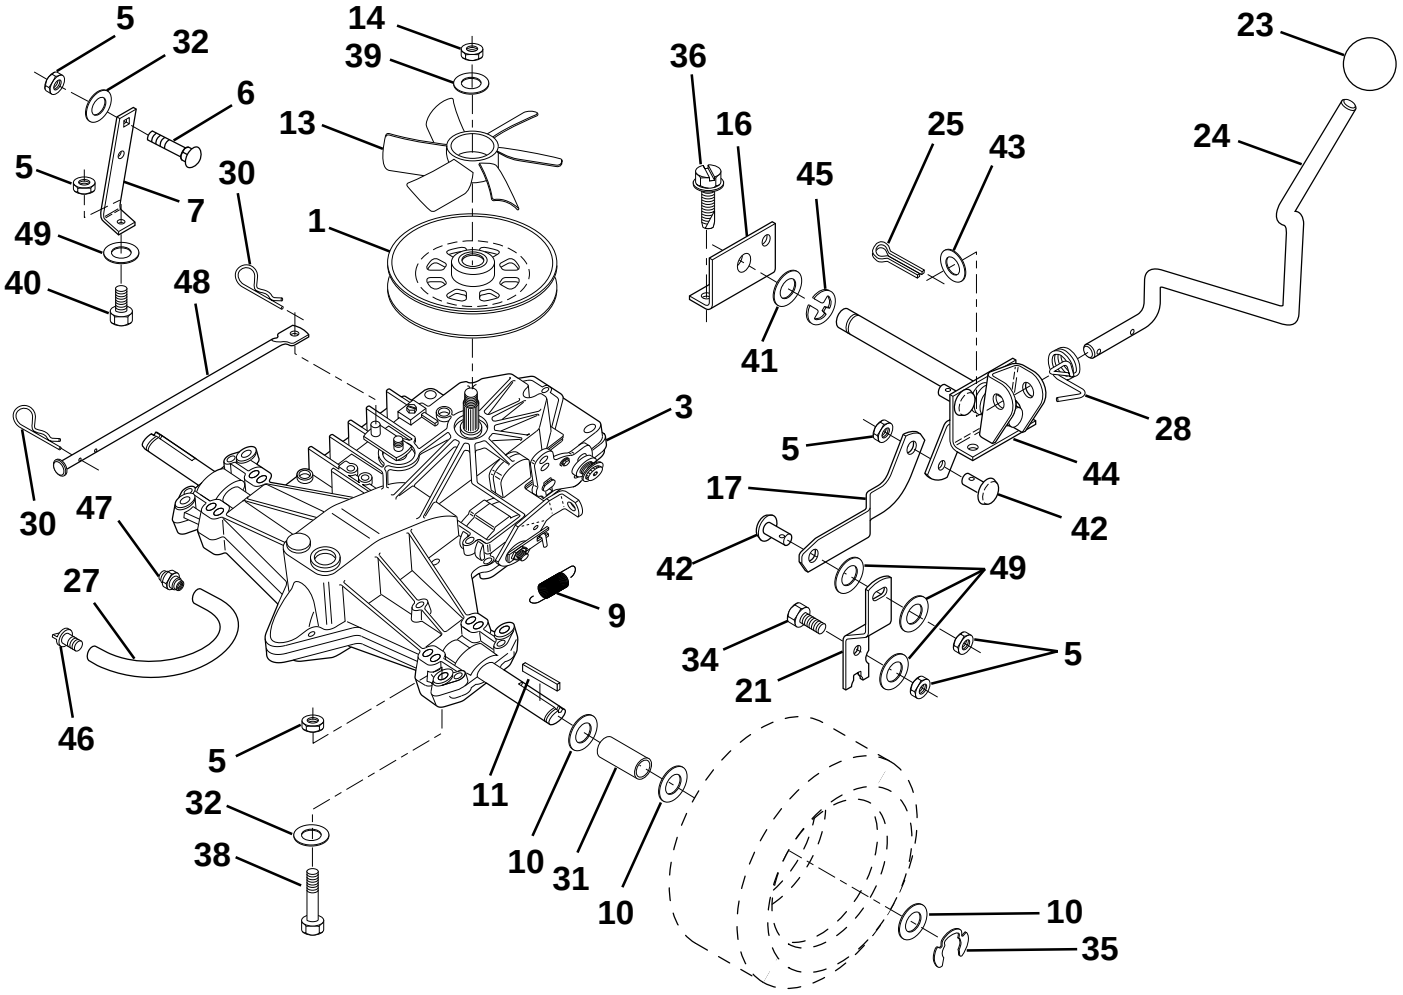

KEY NO.	PART NO.	DESCRIPTION
1	532140779	Pulley
3	532140607	Transaxle, Hydro 0310-0500
5	873800500	Nut Lock Hex w/Ins. 5/16-18
6	872140506	Bolt, Carriage
7	532140774	Strap, Torque
9	532146682	Spring Brake
10	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
11	532123583	Key, Square
13	532140778	Fan, Transaxle, Hydro
14	532009204	Nut Lock 1/2-20 UNF x 3/4 x 7/16
16	532140763	Support, Shift Handle
17	532140767	Link, Shift
21	532140773	Lever, Shift
23	532140845	Knob, Shifter
24	532140765	Rod, Shifter
25	876020416	Pin, Cotter 1/8 x 1
27	532142564	Hose, Vent
28	532140772	Spring, Torsion
30	532124788	Retainer Spring

KEY NO.	PART NO.	DESCRIPTION
31	532121199	Spacer
32	819111116	Washer 11/32 x 11/16 x 16 Ga.
34	874760516	Bolt Hex Hd. 5/16-18 x 1
35	812000001	E-Ring
36	817720408	Screw, Thd. Cut. 1/4-20 X 1/2
38	874760540	Bolt, Hex Head 5/16-18 x 2-1/2
39	819171912	Washer 17/32 x 1-3/16 x 12 Ga.
40	874760524	Bolt Fin Hex 5/16-18 x 1-1/2
41	819212013	Washer 21/32 x 1-1/4 x 13 Ga.
42	532140769	Pivot Pin
43	819171216	Washer 17/32 x 3/4 x 16 Ga.
44	532140764	Pivot Shaft Assembly
45	812000002	E-Ring
46	- - - - -	Cap, Vent Hose
47	- - - - -	Nipple, Vent Hose
48	532140912	Actuator, Bypass, Hydro
49	819111216	Washer 11/32 x 3/4 16 Ga.


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

MOWER DECK

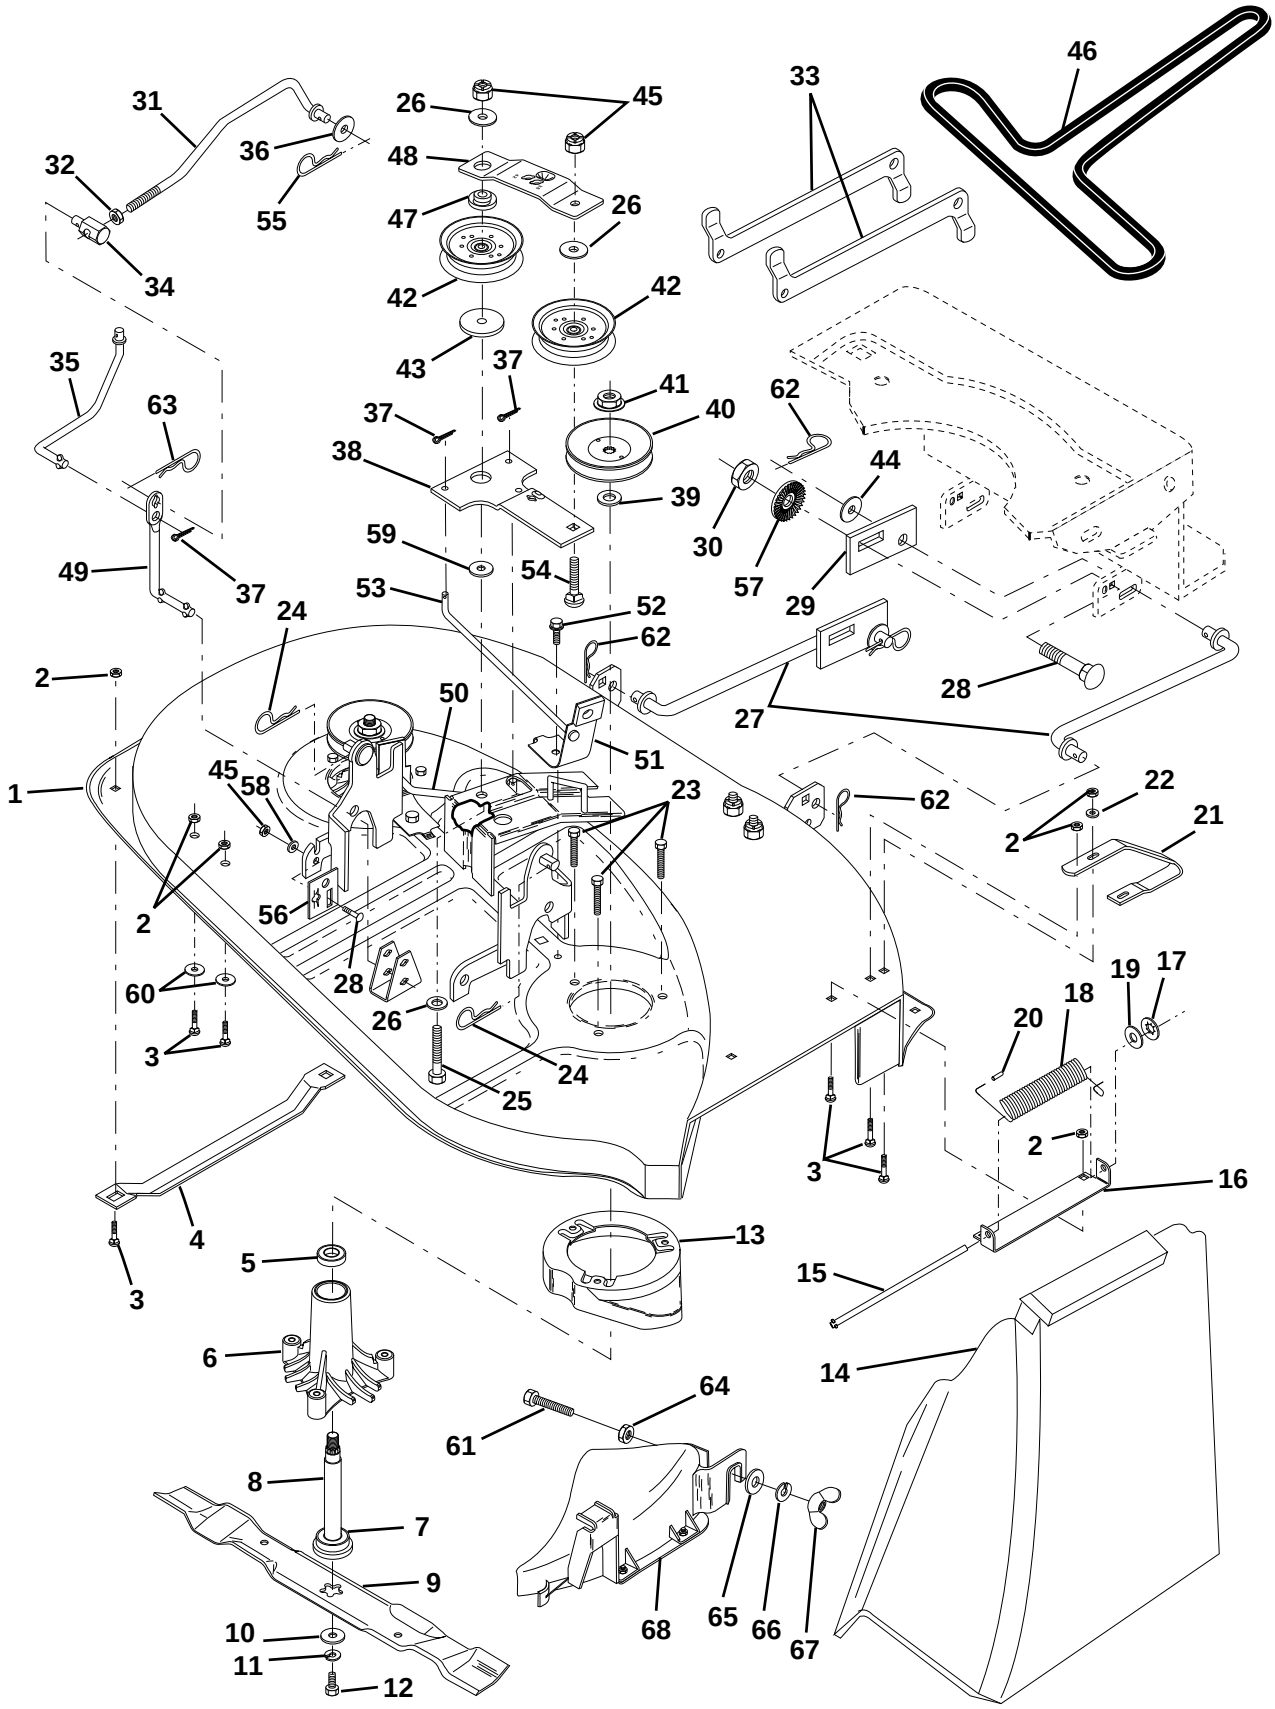

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

MOWER DECK

KEY NO.	PART NO.	DESCRIPTION
1	532142830	Mower Deck Assembly
2	873680500	Nut, Crownlock 5/16-18
3	872140506	Bolt, Carriage 5/16-18 x 3/4
4	532125074	Runner, L.H.
5	532110485	Bearing
6	532128774	Housing, Mandrel
7	532129895	Bearing
8	532137645	Shaft and Bearing Assembly, Mandrel (Includes Key Number 7)
9	532134148	Blade
10	532140296	Washer, Hardened
11	810030600	Washer, Lock 3/8
12	532850857	Bolt, Hex 3/8-24 x 1-1/4 Grade 8
13	532140329	Stripper, Mower, Vented
14	532106736	Shield, Deflector
15	532106735	Rod, Hinge
16	532137607	Bracket Assembly, Deflector
17	532110452	Pushnut
18	532123713	Spring, Deflector
19	819111016	Washer 11/32 x 5/8 x 16 Gauge
20	532105304	Cap, Sleeve
21	532128772	Runner, R.H.
22	819111216	Washer 11/32 x 3/4 x 16 Gauge
23	532138776	Screw Thdrol Hex Head Zinc MWR
24	532124670	Retainer, Spring
25	874600636	Bolt Hex 3/8-16 x 2-1/4
26	819131612	Washer 13/32 x 1 x 12 Gauge
27	532139756	Link Assembly, Front
28	872140608	Bolt RDHD SQNK 3/8 - 16 x 1
29	532139757	Plate Slide Link
30	873800600	Nut, Lock Hex w/washer 3/8 - 16
31	532140915	Clutch Rod, Primary
32	873350600	Nut, Hex, Jam 3/8-16
33	532132559	Arm, Suspension, Rear
34	532133604	Trunnion 3/8-16
35	532132554	Clutch Rod, Secondary
36	819131316	Washer 13/32 x 13/16 x 16 Gauge
37	876020312	Pin, Cotter 3/32 x 3/4
38	532133840	Idler Arm
39	532129963	Washer .150 Thick
40	532129206	Pulley, Mandrel
41	532137266	Nut, Flangelock 9/16
42	532121316	Pulley, Flat Idler
43	532122052	Spacer, Retainer
44	819131612	Washer 13/32 x 1 x 12 Gauge
45	873680600	Nut, Crownlock 3/8-16
46	532126520	Belt
47	532133502	Spacer, Idler Arm
48	532133503	Stiffener, Idler Arm
49	532133551	Rod, Pivot
50	532131289	Rod, Brake, L.H.
51	532130840	Brake Assembly
52	817490512	Screw, Hex Washer Head, Thd., Roll. 5/16-18 x 3/4
53	532131288	Rod, Brake, R.H.
54	872110614	Bolt, Carriage 3/8-16 x 1-3/4 Grade 5
55	532124961	Spring, Retainer
56	532136782	Adjustment Plate, Rear Link, L.H.
57	532144283	Rondelle 13/32 x 1
58	819131212	Washer 13/32 x 3/4 x 12 Gauge
59	532133943	Washer Hardened
60	819111112	Washer 11/32 x 11/16 x 12 Gauge
61	874930620	Bolt 3/8-16 X 1-1/4
62	532124660	Retainer Spring
63	532124788	Retainer Spring
64	873930600	Nut Centerlock 3/8-16
65	819132016	Washer 13/32 X 1-1/4 X 16
66	810040600	Washer, Lock, Hvy
67	532135651	Nut Wing
68	532132803	Cover Asm. Mulching 38
- -	532130794	Mandrel Assembly (Includes Key Numbers 5-8, 10-12, 39 and 41)
- -	532142862	Mower Deck, Complete (Std. Deck Order Mulcher Plate Components Separately Key Nos. 61, 64-68)


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

FENDER/CHASSIS

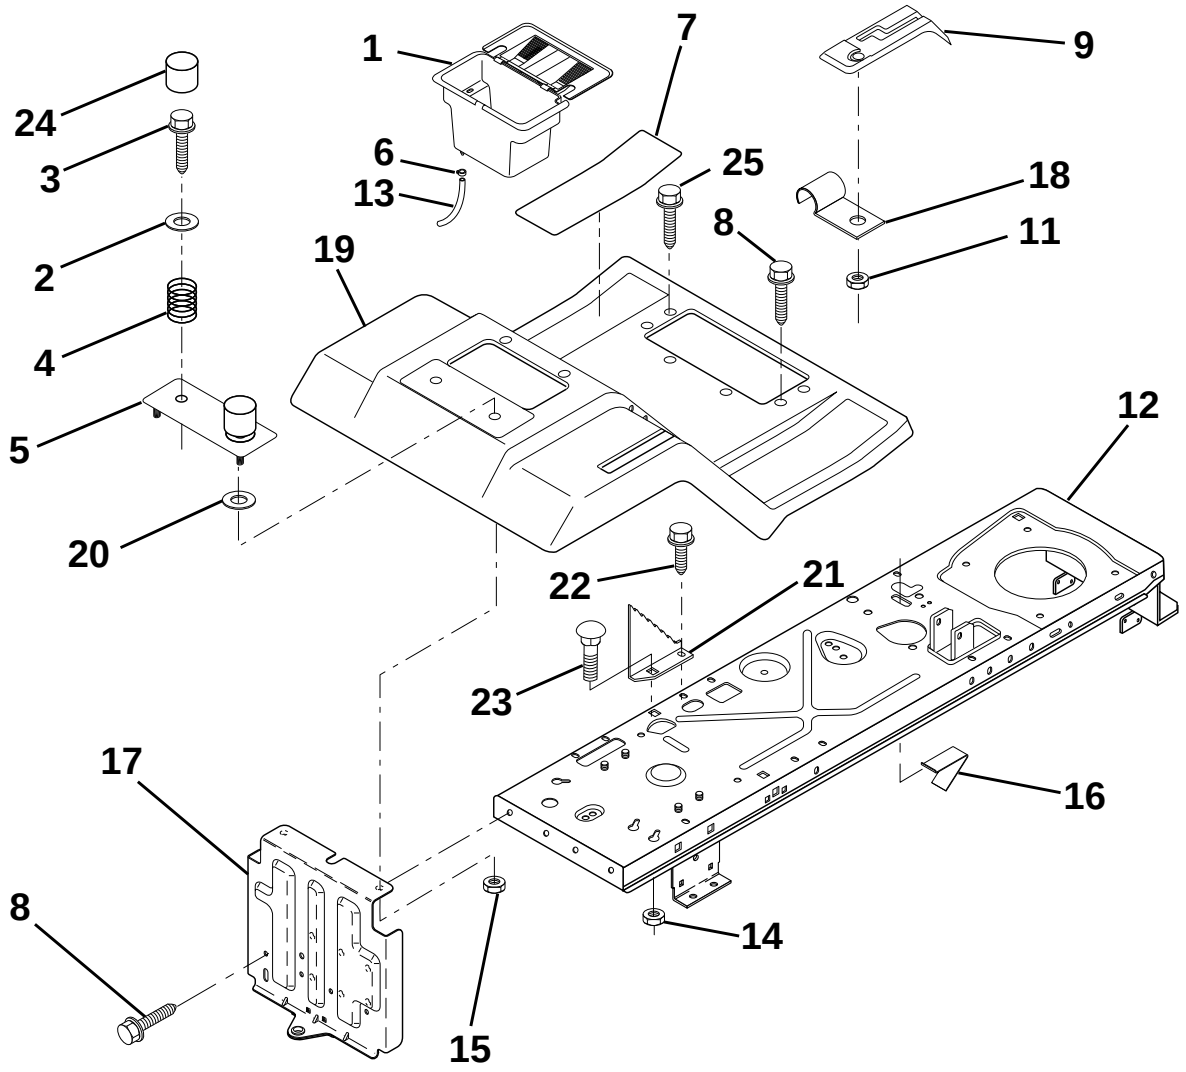

KEY NO.	PART NO.	DESCRIPTION
1	532144940	Case Asm. Battery
2	819132012	Washer 13/32 x 1-1/4 x 12 Ga.
3	817490612	Screw Thdrol. 3/8-16 x 3/4
4	532124181	Spring seat
5	532125142	Plate Asm. Pnt Battery Fender
6	532109596	Clamp Hose Olive
7	532126700	Pad Footrest Rubber Deluxe
8	817490512	Screw Thdrol. 5/16-18 x 3/4
9	532140919	Console Shf. 6sp W/Ign.
11	532124346	Nut Self Thd. Wsh-Hd 1/4
12	532145190	Chassis Asm. Weldment
13	532109238	Tube Plastic
14	873680500	Nut Crownlock 5/16-18 UNC
15	873640400	Nut Keps Hex 1/4-20

KEY NO.	PART NO.	DESCRIPTION
16	532141736	Switch Actuator
17	532140782	Drawbar Asm.
18	532126470	Clip Insulated
19	532141366	Fend/Foot Asm. Pnt Shf. Fnd.
20	819091413	Washer 9/32 x 7/8 x 13 Ga.
21	532140297	Bracket Stop Depth
22	817490508	Screw Thdrol 5/16-18 x 1/2
23	872110506	Bolt Rdhdsqnk. 5/16-18 x 3/4
24	532124238	Cap Spring
25	817190516	Scr-Hex Wsh Rol 5/16-18 x 1
24	532124238	Cap Spring


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

DECALS

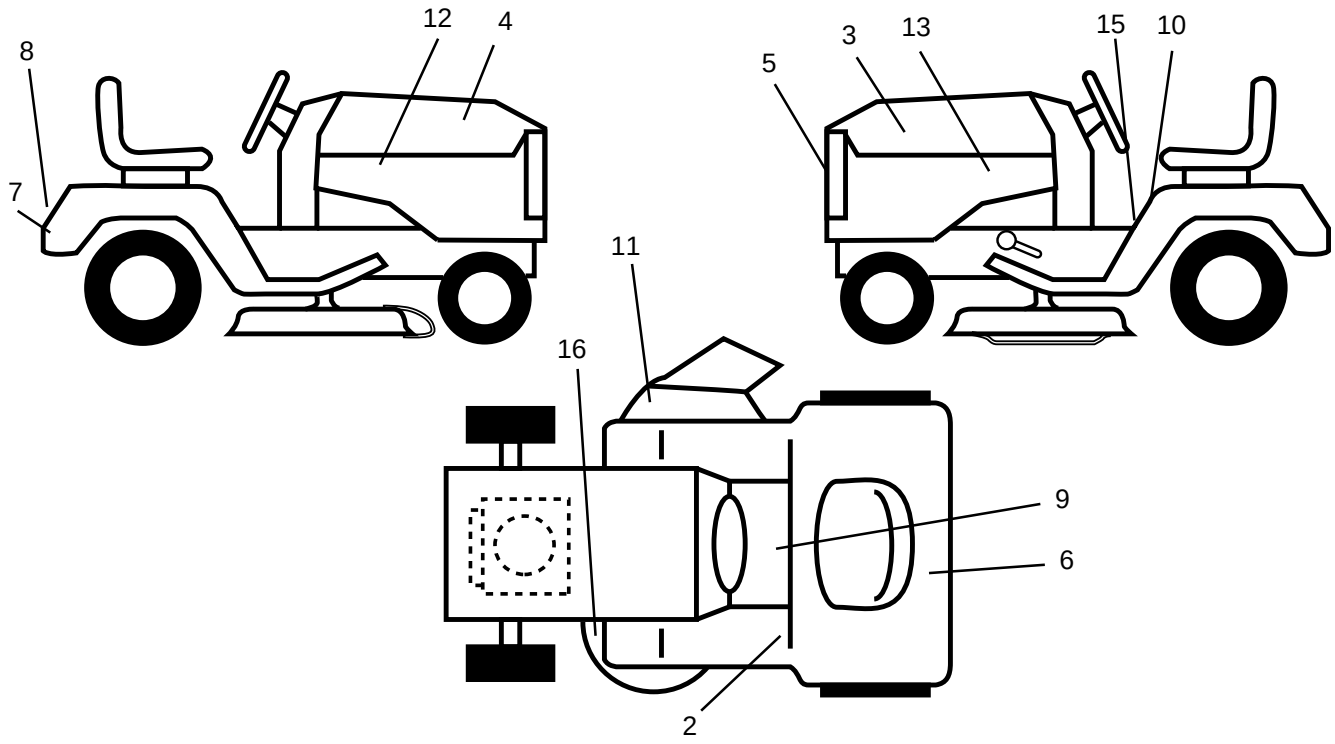


KEY NO.	PART NO.	DESCRIPTION
2	532132928	Decal Indicator Height
3	532140206	Decal, Hood, L.H.
4	532140205	Decal, Hood, R.H.
5	532140213	Decal, Logo, Grill
6	532145005	Decal, Caution Battery
7	532141484	Decal, Drawbar
8	532131582	Decal, Logo, Fender
9	532142337	Decal, Cold Start
10	532133795	Decal, Fender, Caution
11	532137259	Decal, Warning, Multi-Language
12	532140848	Decal, Hood, Insert, R.H.
13	532140849	Decal, Hood, Insert, L.H.
15	532138269	Decal, Instruction, Operating
16	532136832	Decal, V-Belt Schematic
- -	532147263	Manual, Owner's (Eng.)
- -	532147264	Manual, Owner's (Fre.)

Available accessories not included with tractor:

- -	CR 38	Grass Catcher
- -	MK 380	Mulcher Kit

WHEELS & TIRES

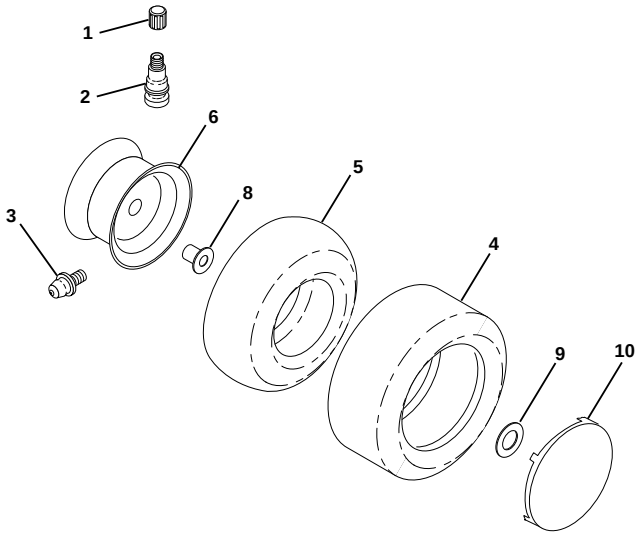


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap, Valve Stem
2	532065139	Stem, Valve
3	532124957	Fitting, Grease (Front Wheels Only)
4	532137422	Tire, Front
	532132703	Tire, Rear
5	532059904	Tube, Front Tire (Optional - Service Item Only)
	532008134	Tube, Rear Tire (Optional - Service Item Only)
6	532142537	Rim, Front
	532140453	Rim, Rear
8	532124959	Bearing Flange
9	532121748	Washer 25/32 x 1-5/8 x 16 Gauge
10	532124577	Wheel cover
	532124578	Wheel cover
- -	532144334	Sealant, Tire (10oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

TRANSAXLE HYDROGEAR, MODEL NO. 319-0500

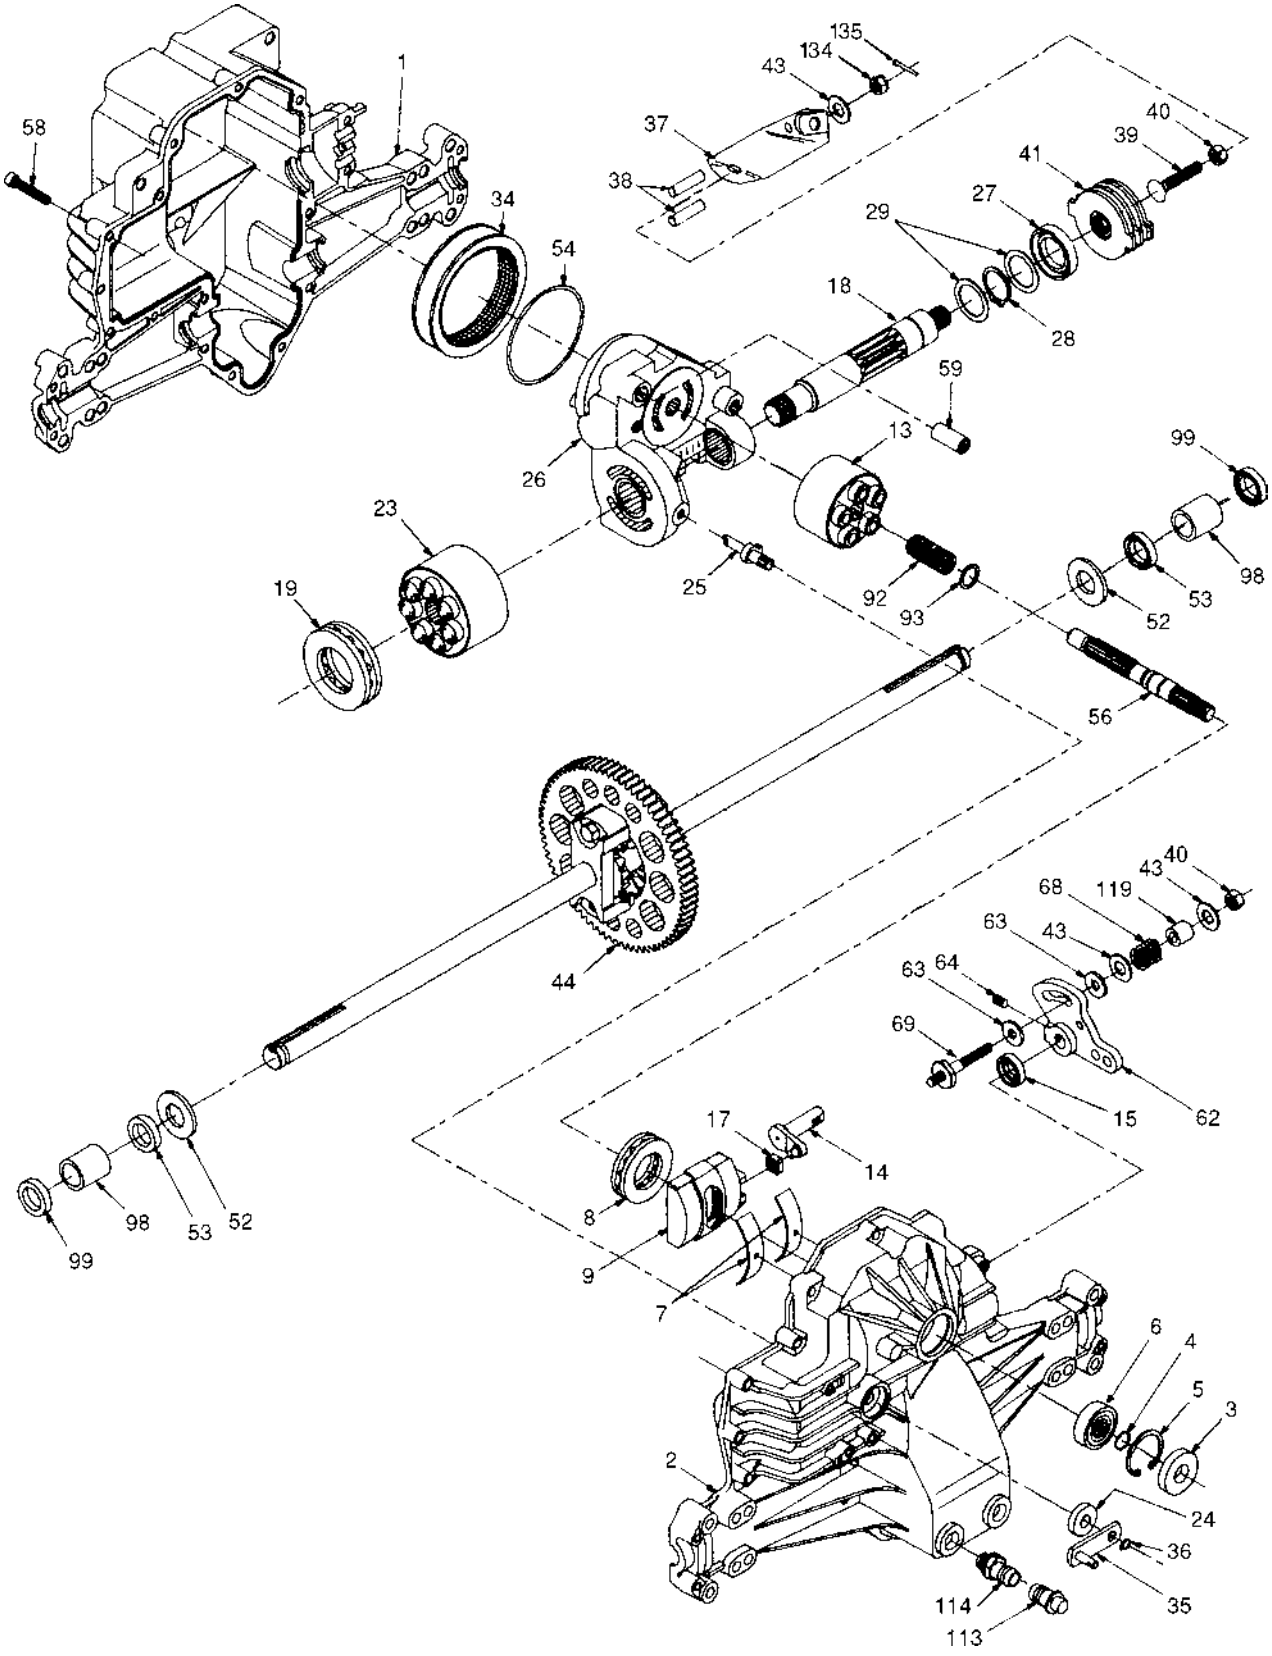

REPAIR PARTS

TRACTOR-MODEL NO. LRH125 (954001222B)

TRANSAXLE HYDROGEAR, MODEL NO. 319-0500

KEY NO.	PART NO.	DESCRIPTION
1	532142986	Housing, Lower
2	532142987	Assembly, Upper Housing
3	532142932	Seal, Lip
4	532142928	Ring, Wire Retaining
5	532142933	Ring, Retaining
6	532142934	Bearing, Shaft Ball
7	532142935	Bearing, Cradle
8	532142936	Bearing, Thrust 30 x 52 x 13
9	532142937	Swashplate, Variable
13	532142938	Block, Cylinder Assembly
14	532142939	Arm, Trunnion
15	532142940	Seal, Lip
17	532142941	Guide, Slot
18	532142988	Shaft, Motor
19	532142943	Bearing, Thrust 42 x 68 x 16
23	532142944	Block, Cylinder Assembly
24	532142945	Seal, Lip 10 x 25 x 7
25	532142946	Actuator, Bypass
26	532142947	Center Section Assembly Kit
27	532142948	Seal, Lip 26 x 42 x 8
28	532142949	Ring, Retaining
29	532142950	Washer 26 x 35 x 1
34	532142951	Oil Filter Element
35	532142952	Arm, Bypass
36	532142953	Ring, Retaining
37	532142954	Arm, Actuating
38	532142955	Pin, Actuating
39	532142956	Bolt 5/16-24 x 1-3/4
40	532142957	Locknut, Hex 5/16-24 UNJC
41	532142958	Brake Rotor/Stator Kit
43	532142884	Washer 7/16 x 7/8 x .060
44	532142990	Differential Assembly
52	532142991	Washer 3/4 x 1.5 x .13
53	532142961	Seal .75 x 1.25 x .250
54	532142962	O-Ring .103 x 2.987 ID
56	532142963	Shaft, Input
58	532142964	Bolt 1/4-20 x 1.38
59	532142965	Pin .5 OD x .43 ID x .750
62	532142966	Arm, Control
63	532142967	Puck, Dampener
64	532142920	Set Screw
65	532142968	Bolt #8-32 x .875
68	532142969	Spring
69	532144610	Stud 5/16-24
92	532142977	Spring, Block
93	532142978	Washer, Block Thrust
98	532142993	Sleeve Bearing
99	532142976	Seal, Wiper
113	532142917	Cap, Vent Assembly
114	532142918	Fitting, O-Ring Assembly
119	532142980	Spacer
134	532144607	Nut, Castle 5/16-24
135	532144608	Pin, Cotter

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm