
Husqvarna

7

LTH 145

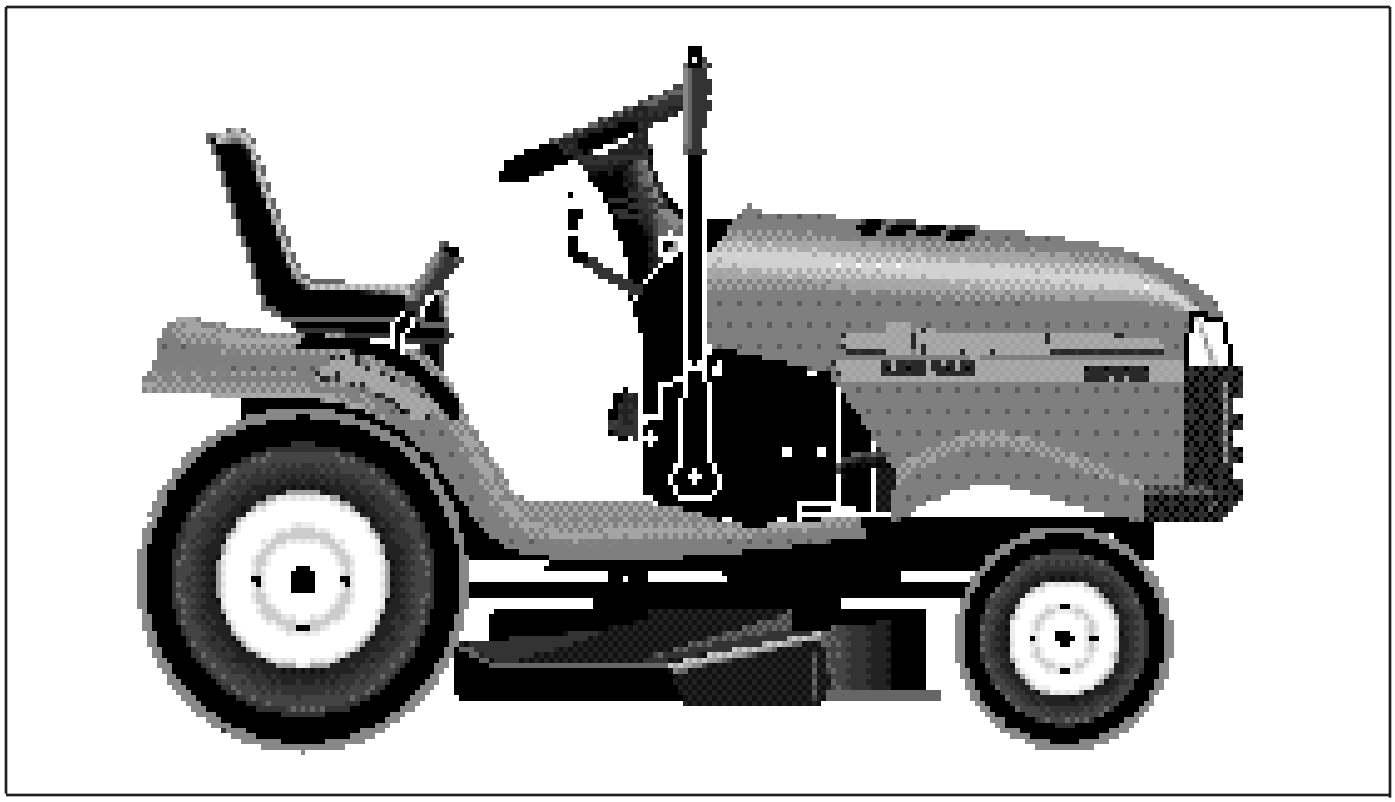


1.1997


Spare Parts

954 14 00-06A

TRACTOR - MODEL NO. LTH145 (954140006A) PRODUCT NO. 954 14 00-06

SCHEMATIC

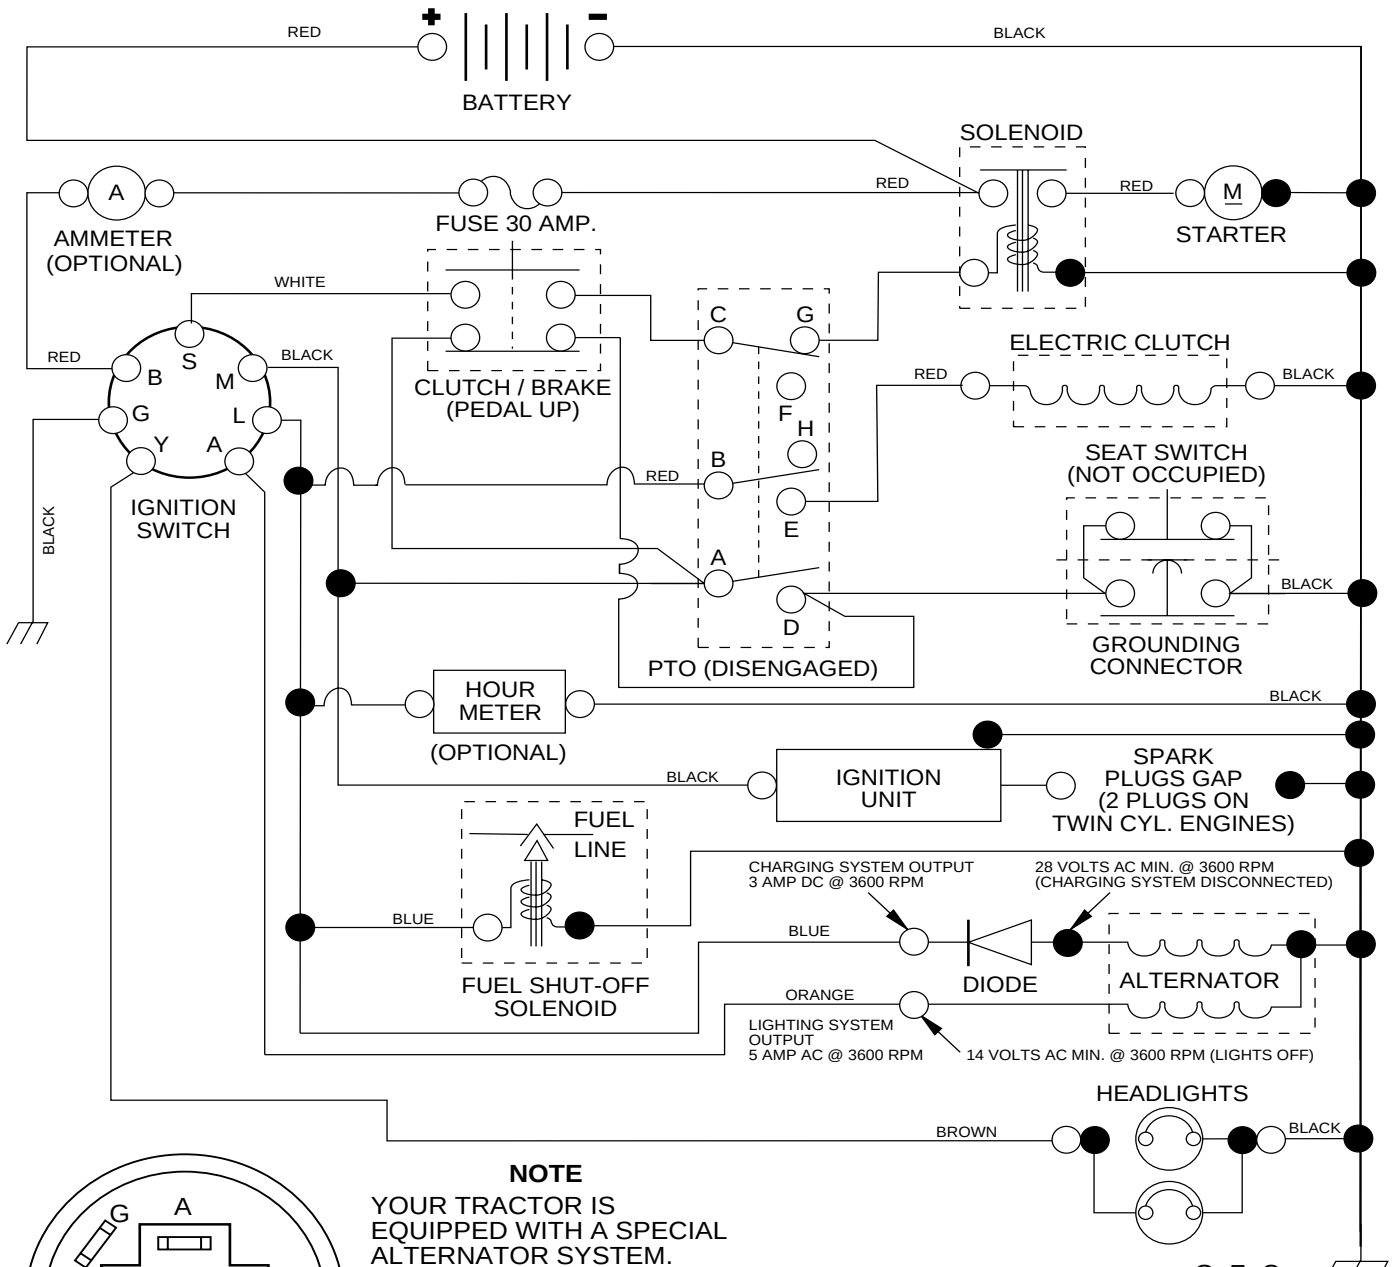

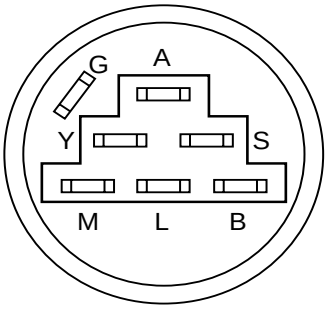


NOTE

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

PTO SWITCH

POSITION	CIRCUIT
OFF	C + G, B + H
ON	C + F, B + E, A + D

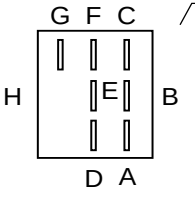

IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	G + M + L	NONE
RUN/LIGHT	B + L	A + Y
RUN	B + L	NONE
START	B + L + S	NONE

REMOVABLE CONNECTIONS

NON-REMOVABLE CONNECTIONS


WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

ELECTRICAL

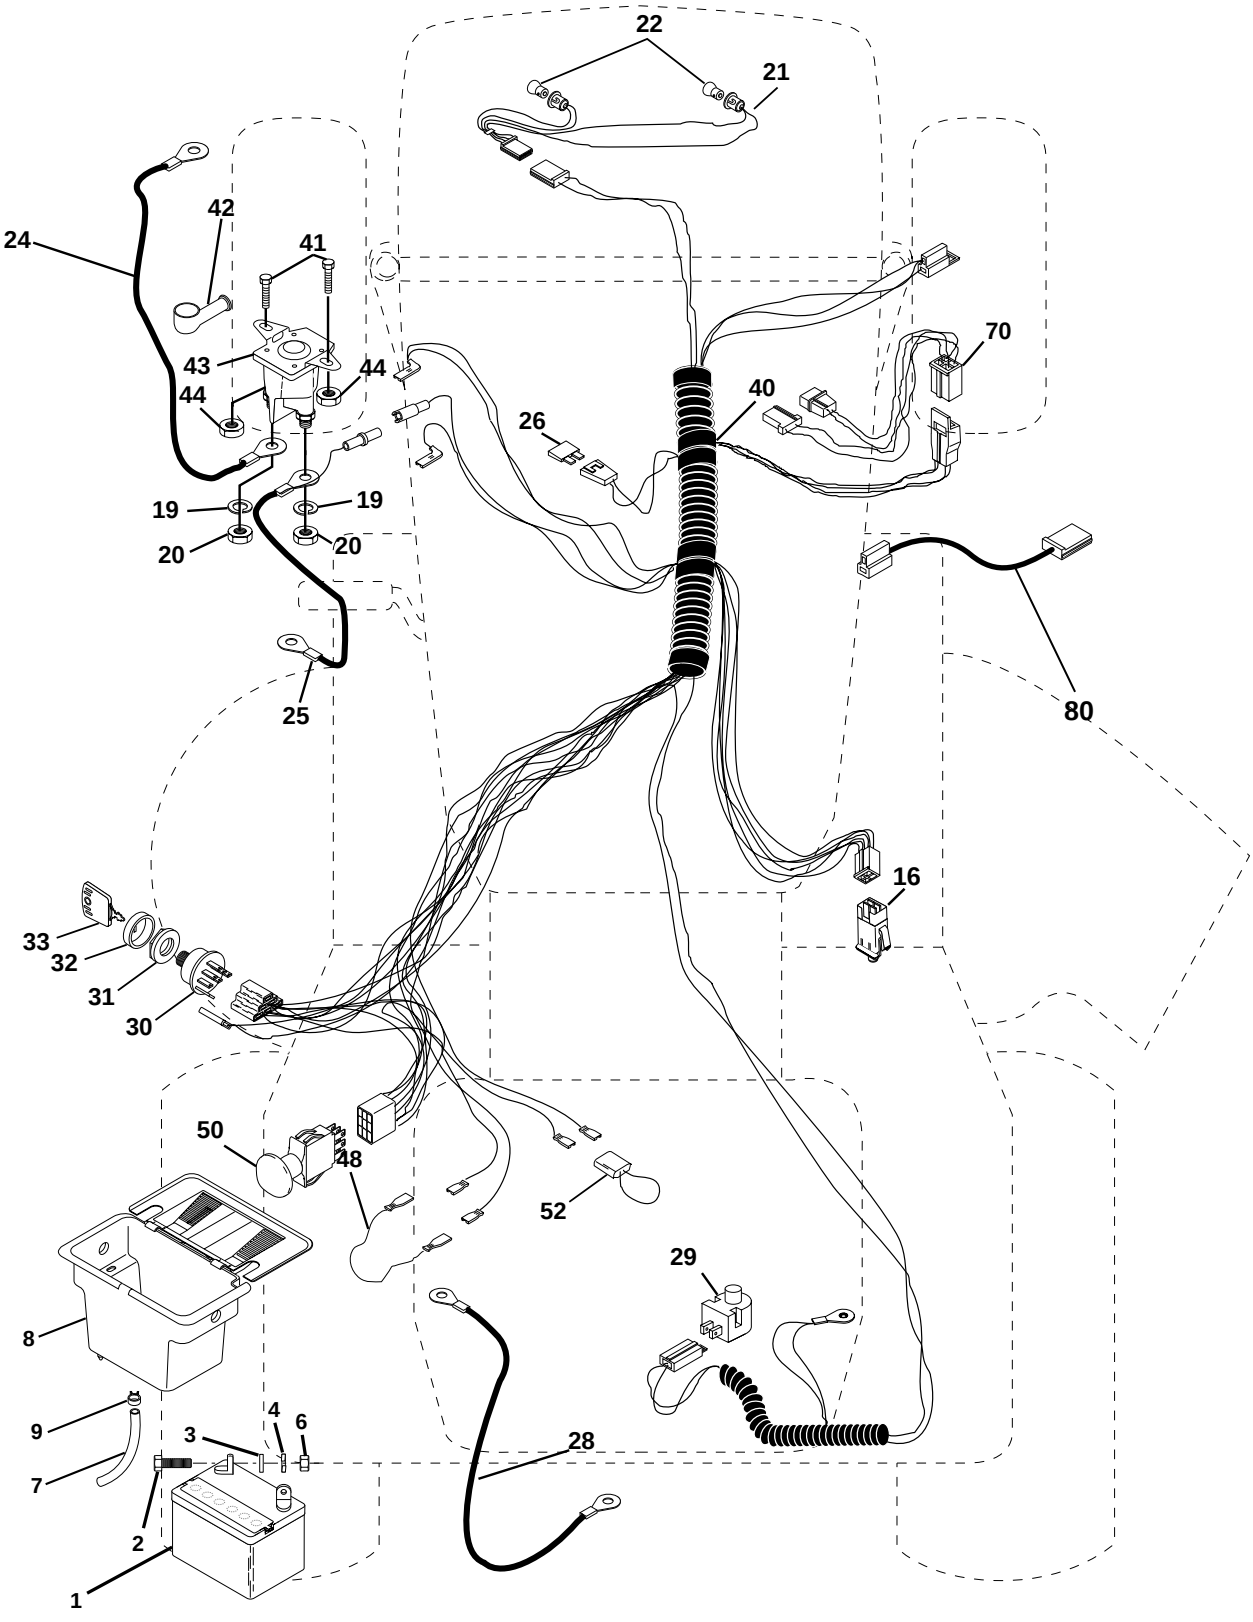

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

ELECTRICAL


KEY NO.	PART NO.	DESCRIPTION
1	532 14 61-39	Battery 12 Volt 25 AMP
2	874 76 04-12	Bolt Hex Hd 1/4-20 UNC X 3/4
3	819 09 10-16	Washer 9/32 X 5/8 X 16 Ga.
4	810 04 04-00	Washer Lock Hvy Helical 1/4
6	873 22 04-00	Nut Fin Hex 1/4-20 UNC
7	532 10 92-38	Tube Plastic 12"
8	532 15 64-17	Case Battery Mech Hinge
9	532 10 95-96	Clamp Hose Olive
16	532 15 36-64	Switch Interlock Push-In
19	810 09 04-00	Washer Lock 1/4
20	873 35 04-00	Nut Jam Hex 1/4-20 UNC
21	532 13 68-50	Harness Asm Light W/4152j
22	532 00 41-52	Bulb Light #1156
24	532 12 47-80	Cable Battery 6 Ga 11" red
25	532 14 61-47	Cable Battery 6 Ga 44" red w/16 wire
26	532 10 88-24	Fuse 30 AMP Auto Green
28	532 12 47-73	Cable Ground 6 Ga 12" black
29	532 12 13-05	Switch Plunger Nc Gray
30	532 14 03-01	Switch Ign 4 pos w/lights
31	532 12 42-11	Nut Ignition
32	532 14 12-26	Cover Sw Ignition
33	532 12 21-47	Key Ign Modelled Generic
40	532 15 64-43	Harness Ign.
41	871 11 04-08	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532 13 15-63	Cover Terminal Red
43	532 14 56-73	Solenoid
44	873 64 04-00	Nut Keps Hex 1/4-20 UNC
48	532 14 08-44	Adapter Ammeter Rectangular
50	532 15 49-59	Switch, PTO 3PDT Black Delta 96
52	532 14 19-40	Protection Wire Loop
70	532 14 04-22	Harness, Eng. B&S 14 OHV Dual
80	532 14 66-85	Harness, Clutch EVX

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

CHASSIS AND ENCLOSURES

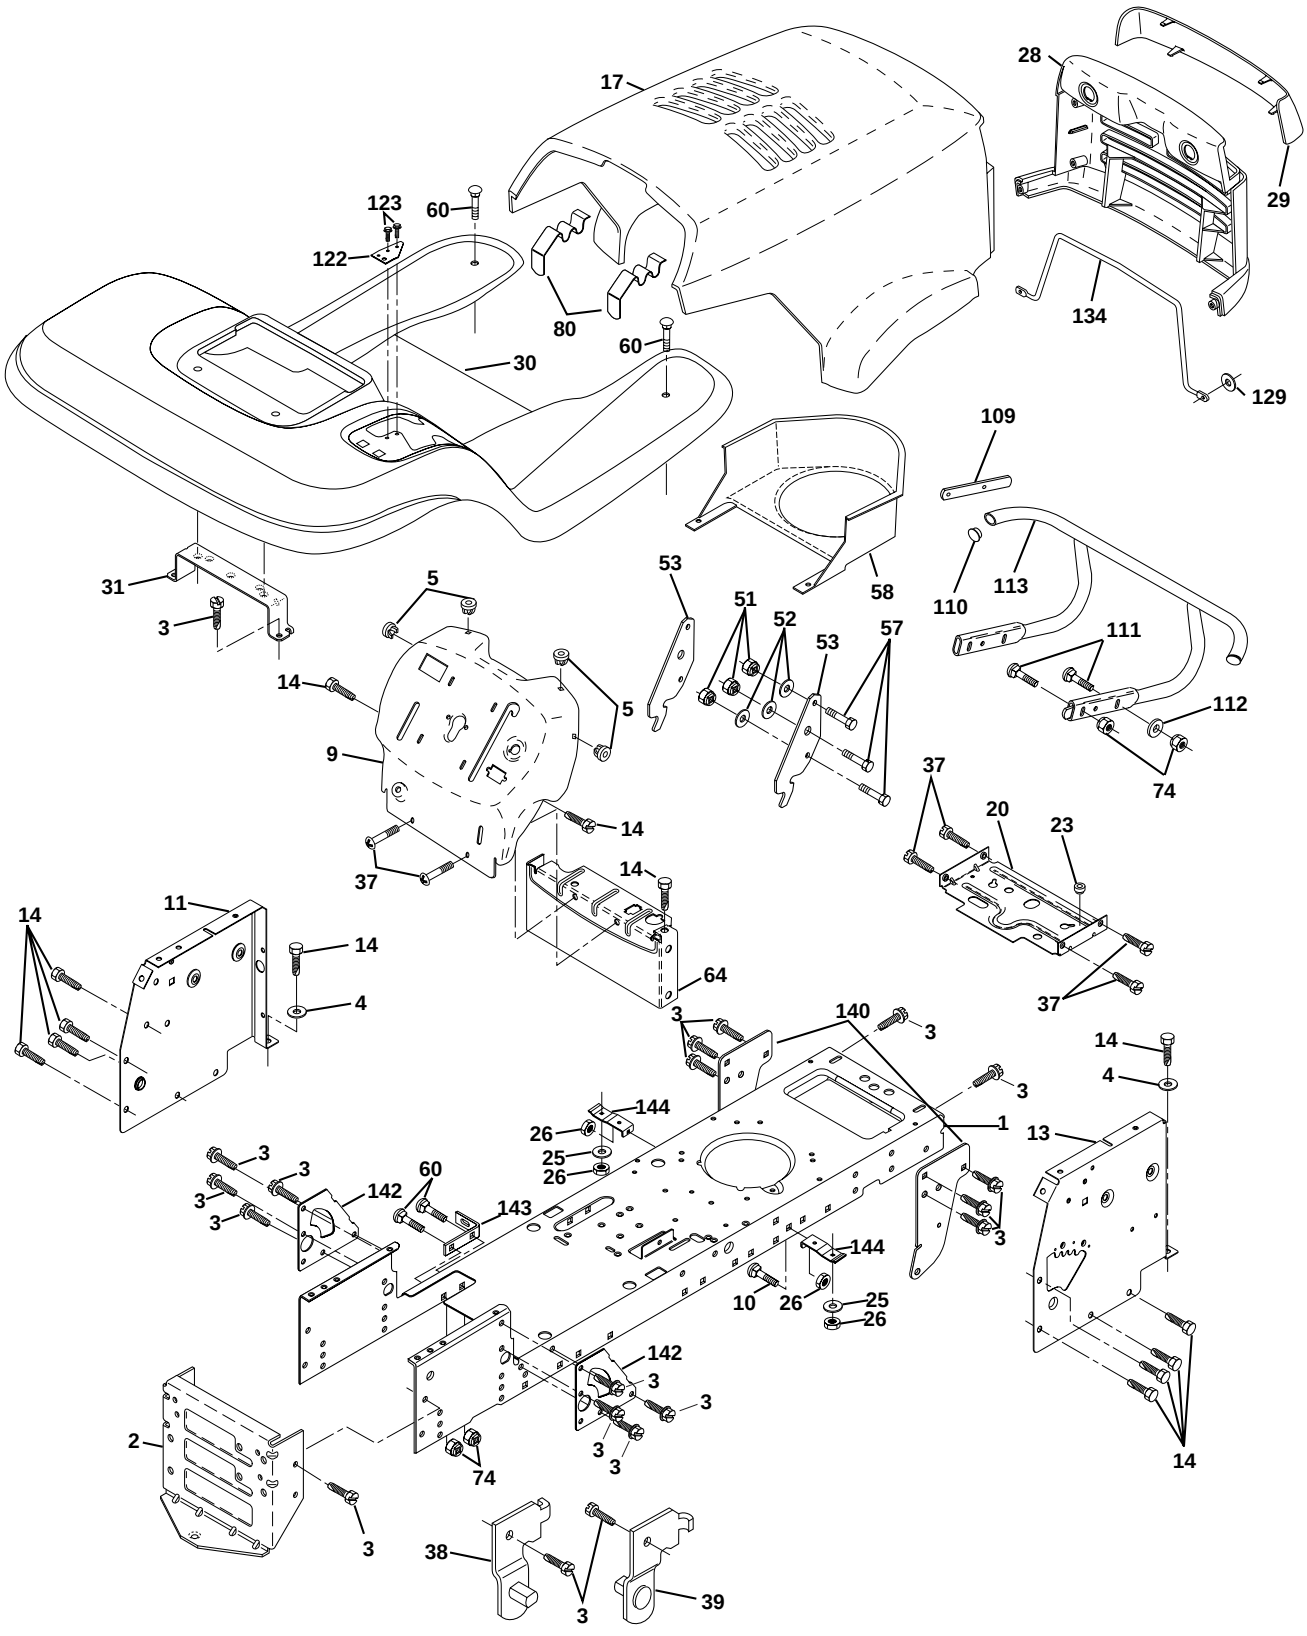

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

CHASSIS AND ENCLOSURES


KEY NO.	PART NO.	DESCRIPTION
1	532 15 38-71	Chassis Weldment
2	532 14 03-56	Drawbar, Stretch
3	817 49 06-12	Screw Thdrol 3/8-16x3/4 Ty-tt
4	819 13 12-16	Washer 13/32 x 3/4 x 16 Ga.
5	532 15 52-72	Bumper Hood/Dash
9	532 15 74-09	Dash P/L M, Slkscr Elec N/A N/Hm
10	872 14 06-08	Bolt Carriage 3/8-16 x 1
11	532 15 59-27	Panel Dash Lh
13	532 15 72-62	Panel Dash Rh
14	817 49 06-08	Screw Thdrol 3/8-16x1/2 Ty-tt
17	532 15 60-51	Hood LT/PL Husqvarna
20	532 15 64-37	Plate Mtg Battery Fuel Tank Fr
23	532 12 40-28	Bushing
25	819 13 13-12	Washer 13/32 X 13/16 X 12 Ga
26	873 80 06-00	Nut Lock Hex W/Ins 3/8-16 Unc
28	532 14 97-76	Grille LT/PL Husqvarna
29	532 14 97-77	Lens LT/PL Husqvarna
30	532 15 64-89	Fender Footrest STLT Pnt
31	532 13 99-76	Bracket Support Fender
37	817 49 05-08	Screw Thdrol 6/16-18 x 1/2 TYT
38	532 13 98-86	Bracket, Asm. Pivot, L.H., Mower Rear
39	532 13 98-87	Bracket, Asm. Pivot, R.H., Mower Rear
51	873 80 04-00	Nut Lock Hex W/Ins 1/4-20
52	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
53	532 15 00-67	Bracket Pnt. Pick off LT/PL Husqvarna
57	874 78 04-12	Bolt Hex 1/4-20 x 3/4
58	532 15 01-27	Air Duct Engine P/L
60	872 14 06-06	Bolt Rdhd Sqnk 3/8-16unc x 3/4
64	532 15 47-98	Dash Lower STLT
74	873 68 06-00	Nut Crownlock 3/8-16 UNC
80	532 15 58-54	Latch Hood Plm Husqvarna
109	532 14 14-61	Bracket Extension, Bumper
110	532 14 36-79	Plug, Plastic
111	872 14 06-12	Bolt, Rdhd 3/8-16 UNC x 1-1/2
112	819 13 13-16	Washer, 13/32 x 13/16 x 16 Ga.
113	532 15 03-00	Bumper Asm
129	819 09 10-16	Washer 9/32 x 5/8 x 16 Ga.
134	532 15 01-32	Rod Support Hood LT/PL Husq.
140	532 15 05-56	Bracket Chassis Front 7 Ga.
142	532 15 60-95	Plate Reinforcement STLT
143	532 15 49-66	Bracket Swaybar Chassis
144	532 15 42-07	Bracket Pnt Footrest STLT
146	532 15 43-34	Screw Torx Hd Thd 5/16-18 UN-2A
- -	532 00 54-79	Plug Button

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

STEERING ASSEMBLY

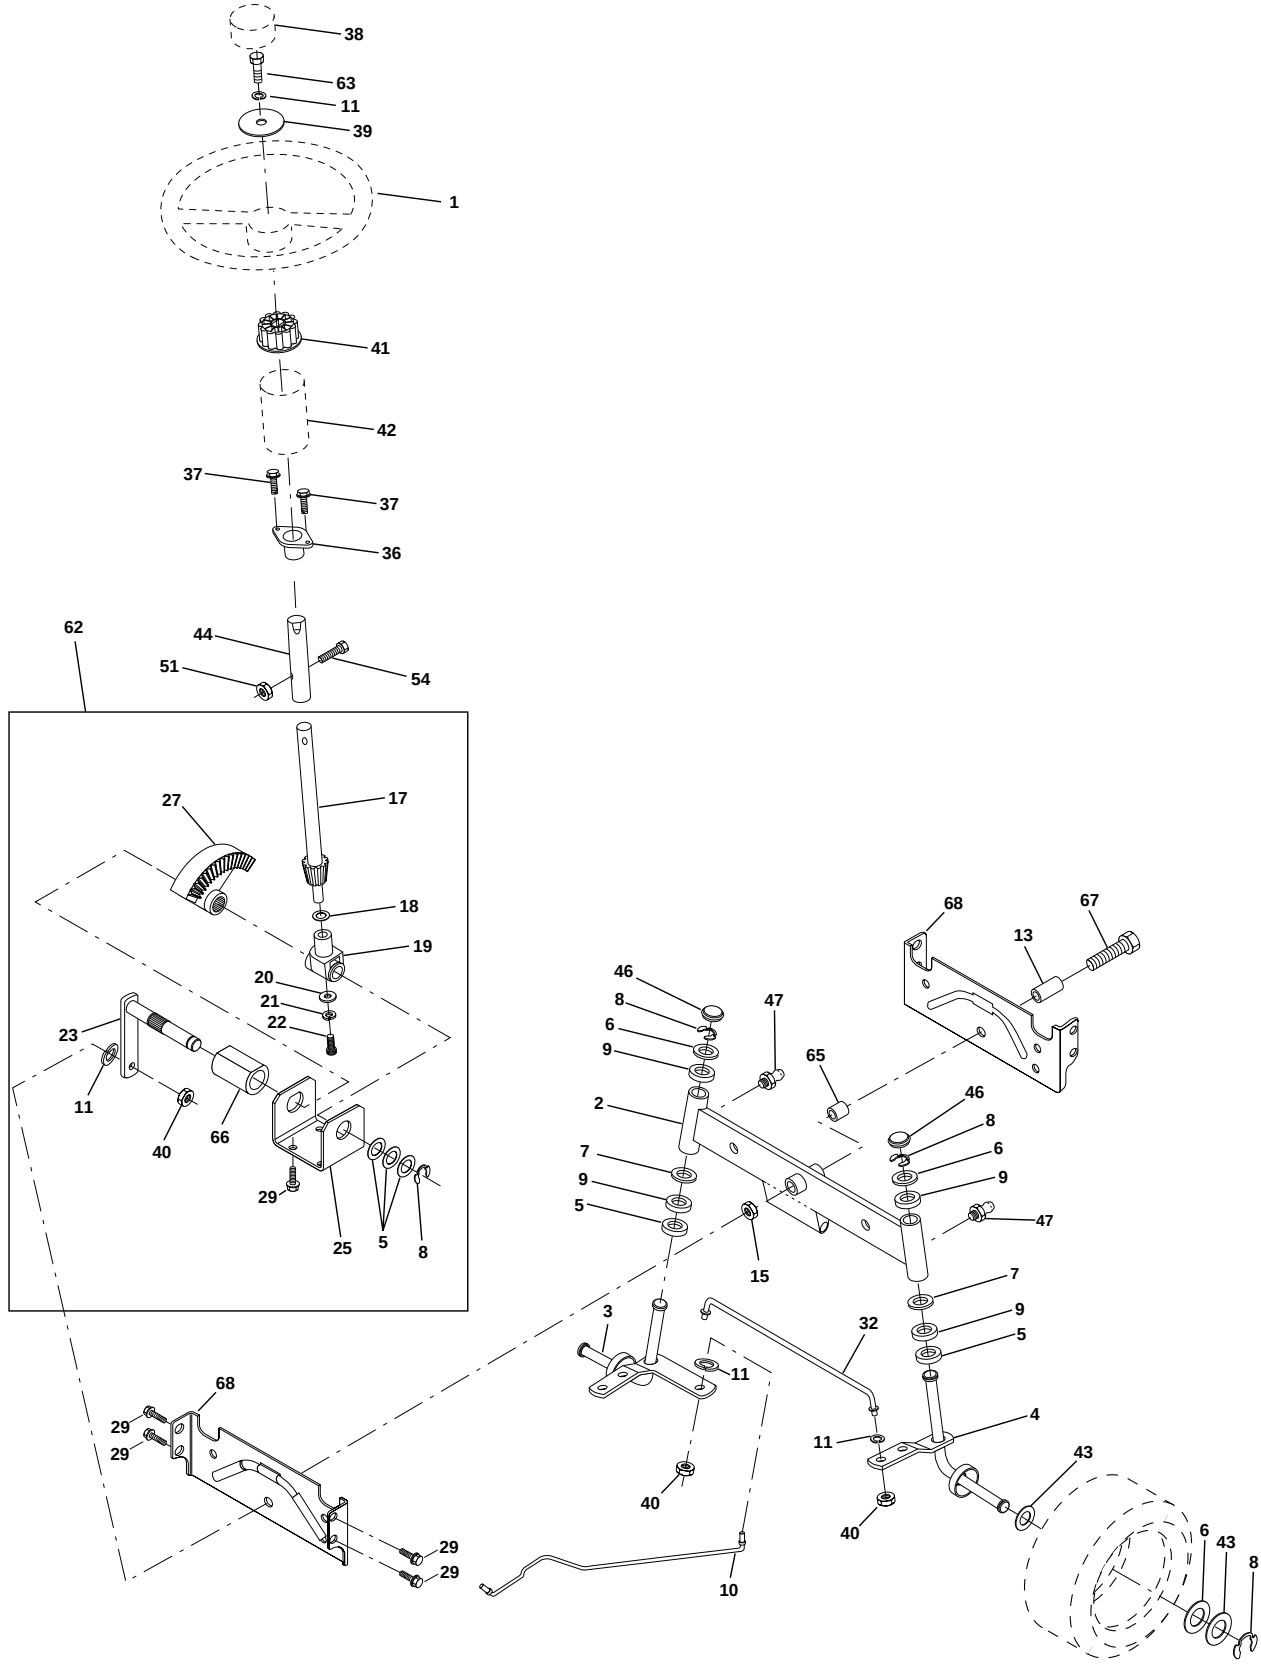

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

STEERING ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
1	532 12 44-15	Wheel Steering
2	532 13 70-94	Axle Front Casting Machined
3	532 15 49-20	Spindle Asm LH
4	532 15 49-21	Spindle Asm RH
5	532 12 49-31	Bearing Race Thrust Harden
6	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
7	819 27 20-16	Washer 27/32 X 1-1/4 X 16 Ga
8	812 00 00-29	Ring Klip #t5304-75
9	532 12 49-37	Bearing Col Strg Blk
10	532 15 44-32	Link Drag Extended Cast
11	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
13	532 15 47-79	Bearing Axle STLT/GT
15	873 90 10-00	Nut Lock Flange 5/8-11 Unc
17	532 15 65-46	Shaft Asm Strg
18	532 05 70-79	Washer Thrust 515x 750x 033
19	532 12 40-35	Support Shaft
20	532 12 66-84	Washer Shim 1/4 X 5/8 X 062
21	810 04 04-00	Washer Lock Hvy Helical 1/4
22	871 10 04-10	Screw Cap Sckt Hd Phos & Oil
23	532 12 75-01	Shaft Asm Pittman
25	532 15 44-06	Bracket Steering
27	532 13 68-74	Gear Sector
29	817 49 06-12	Screw Thdrol 3/8-16x3/4 Ty-tt
32	532 13 73-47	Rod Tie Ball J Adj VGT
36	532 15 50-99	Bushing Strg
37	532 15 29-27	Screw
38	532 12 44-16	Insert Cap Strg Wh Au
39	819 13 38-08	Washer 13/32 X 2-3/8 X 8 Ga
40	532 12 47-01	Lock nut
41	532 10 07-11	Adaptor Wheel Strg
42	532 15 50-92	Boot Steering Shaft
43	532 12 17-49	Washer 25/32 X 1 1/4 X 16 Ga
44	532 15 37-20	Extension Steering Shaft LR/LT
46	532 12 12-32	Cap Spindle Fr Top Blk
47	532 12 48-36	Fitting Grease
51	873 80 05-00	Nut Lock Hex w/Ins 5/16-18
54	874 78 05-20	Bolt Fin Hex 5/16-18 Unc x 1-1/4
62	532 15 65-94	Kit, Steering Assembly Svc
63	874 78 06-16	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65	532 15 47-80	Spacer Axle
66	532 15 44-04	Bearing Arm Pittman
67	874 78 10-44	Bolt, Fin Hex 5/8-11 UNC x 2-3/4
68	532 15 44-29	Axle, Brace

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

SEAT ASSEMBLY

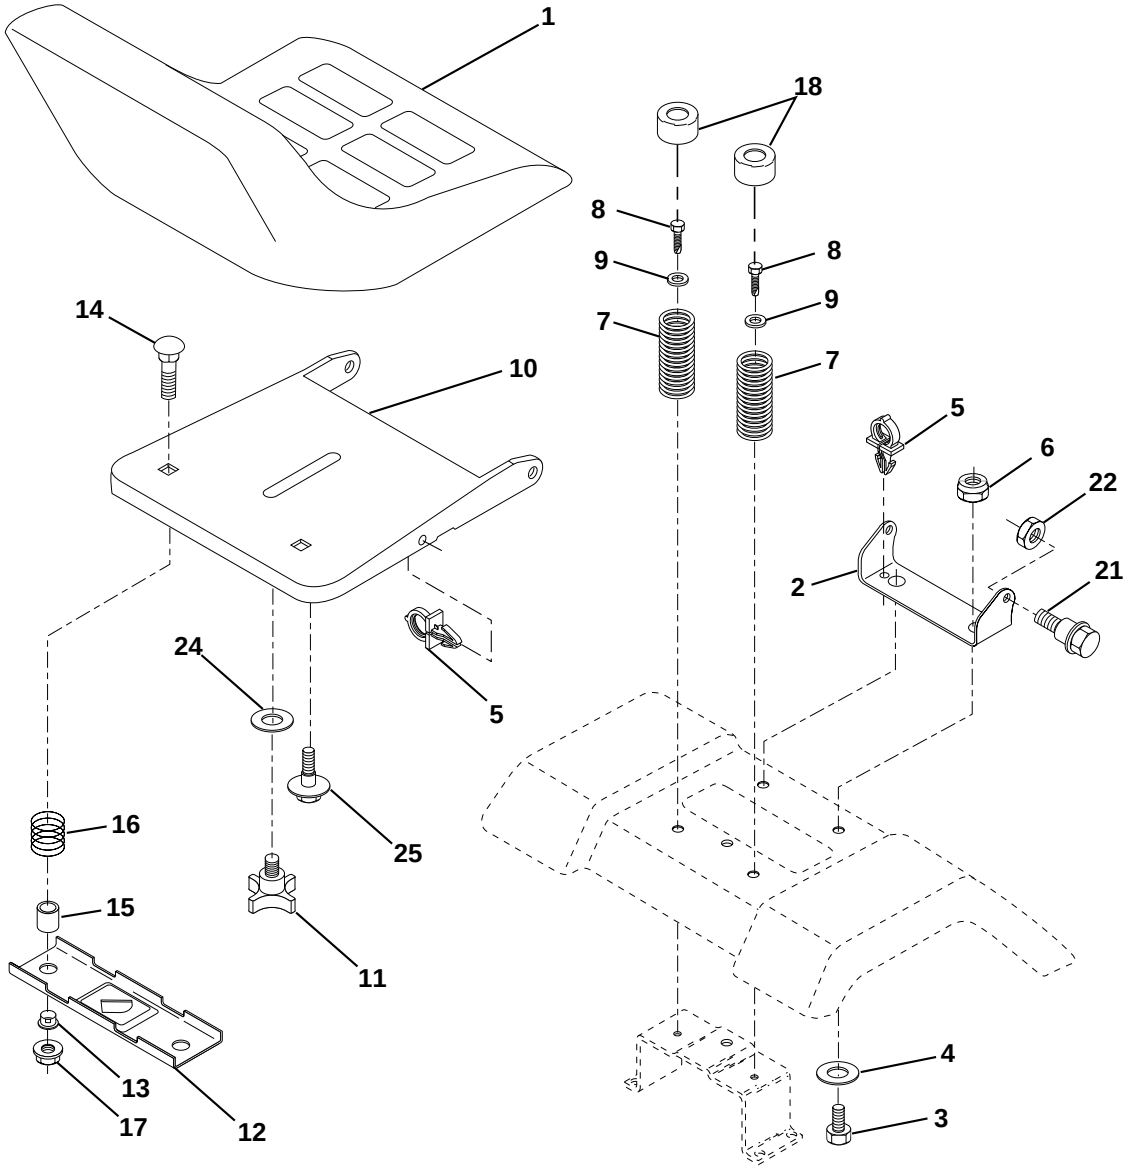


KEY NO.	PART NO.	DESCRIPTION
1	532 14 08-38	Seat
2	532 14 05-51	Bracket Pivot Seat 8 720
3	874 76 06-16	Bolt Fin Hex 3/8-16unc X 1
4	819 13 16-10	Washer 13/32 X 1 X 10 Ga
5	532 14 50-06	Clip Push-In
6	873 80 06-00	Nut Hex w/Ins. 3/8-16 Unc
7	532 12 41-81	Spring Seat Cprsn 2 250 Blk Zi
8	817 49 06-16	Screw Thdrol 3/8-16 X 1 Ty-tt
9	819 13 16-14	Washer 13/32 X 1 X 14 Ga.
10	532 15 59-25	Pan, Seat
11	532 12 00-68	Knob, Seat
12	532 12 12-46	Bracket Mounting Switch
13	532 12 12-48	Bushing Snap Blk Nyl 50 Id
14	872 05 04-11	Bolt Rdhd Sqnk 1/4-20x1-3/8
15	532 13 43-00	Spacer Split 28x 96 Yel Zinc
16	532 12 12-50	Spring Cprsn 1 27 Blk Pnt
17	532 12 39-76	Nut Lock 1/4 Lge Flg Gr 5 Zinc
18	532 12 42-38	Cap Spring, Seat Blk 1.75 x 1.0
21	532 15 32-36	Bolt Shoulder 5/16-18 Unc
22	873 80 05-00	Nut Hex Lock W/Ins 5/16-18
24	819 17 19-12	Washer 17/32 X 1-3/16 X 12 Ga.
25	532 12 70-18	Bolt Shoulder 5/16-18 X 62

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

DECALS

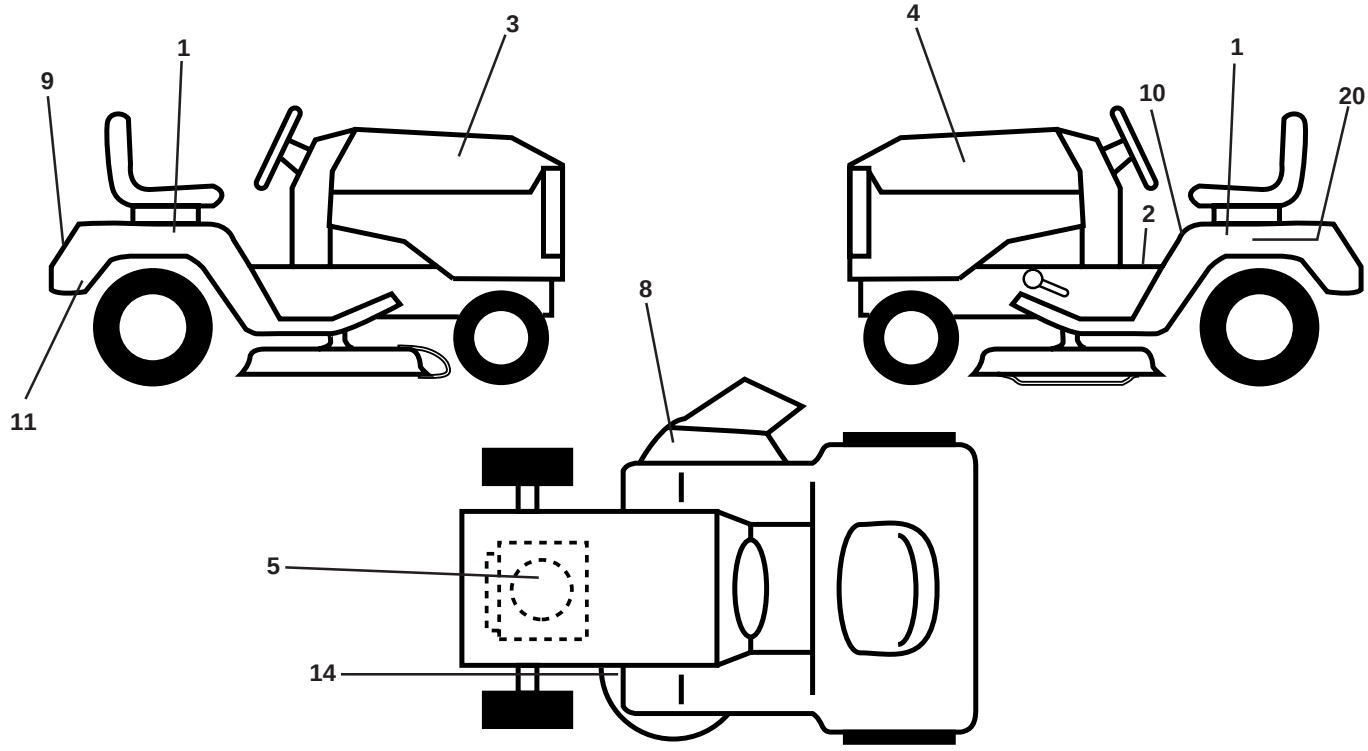


KEY NO.	PART NO.	DESCRIPTION
1	532 15 70-07	Decal Fender Auto Husq
2	532 15 70-32	Decal Oper Step Thru Eng/Fr
3	532 15 71-97	Decal Hood LH
4	532 15 71-96	Decal Hood RH
5	532 27 29-91	Decal HP Engine
8	532 13 72-59	Decal Warning Mult-Language
9	532 15 06-17	Decal Fender Husq
10	532 15 71-40	Decal Fender Danger Eng/Fr
11	532 14 23-41	Decal Drawbar Contrl Mvt
14	532 13 68-32	Decal V-Belt Schematic
20	532 14 64-51	Decal Bat Dan/Psn

KEY NO.	PART NO.	DESCRIPTION
- -	532 15 45-15	Pad Footrest LH STLT
- -	532 15 45-16	Pad Footrest RH STLT
- -	532 13 83-11	Decal Handle Lft Height Adjust
- -	532 15 72-27	Manual Owner's (English)
- -	532 15 72-28	Manual Owner's (French)

Available accessories not included with tractor:

- -	MP42	Mulcher Plate
- -	LSB42	42" Snow Blower
- -	LC05	Wheel Weights
- -	CH12	Tire Chains
- -	LBD48	48" Snow Blade

WHEELS & TIRES

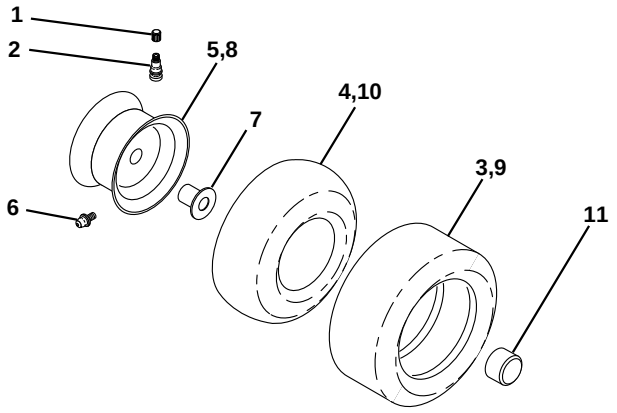


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 10 62-22	Tire F Ts 15 X 6 0 - 6 Service
4	532 05 99-04	Tube Front (Service Item Only)
5	532 13 83-36	Rim Asm 6"front Silver Service
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 13 83-37	Rim Asm 8"rear Silver Service
9	532 12 46-35	Tire R Ts 18x8 5-8 C Service
10	532 12 49-26	Tube Rear (Service Item Only)
11	532 10 47-57	Cap Axle Blk 1 50 X 1 00
- -	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

ENGINE

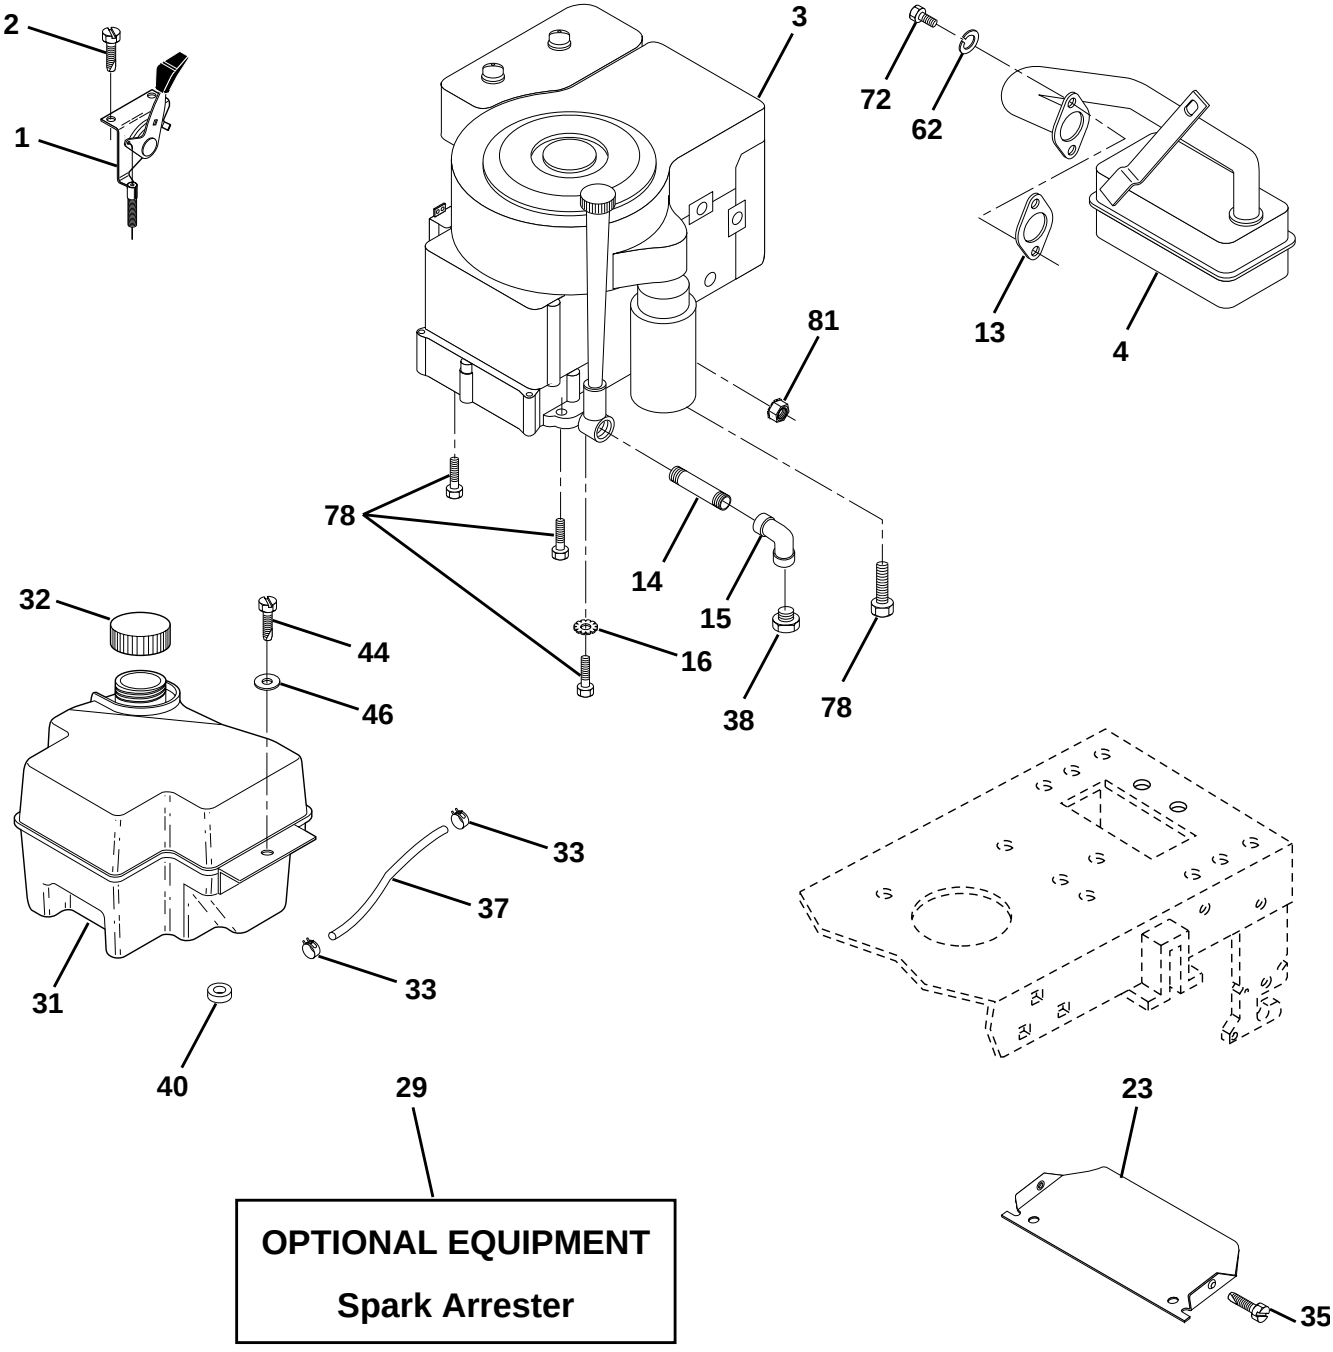

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

ENGINE


KEY NO.	PART NO.	DESCRIPTION
1	532 14 03-10	Control Th/ch 23 5 LH Flag
2	817 72 04-10	Screw Hex Thd Cut 1/4-20x5/8 T
3	- - - - - - - -	Engine B&S Model No. 287707
4	532 13 73-52	Muffler LT B&S 14.5
13	532 27 22-93	Gasket Eng 1 313 Id Tin Plated
14	813 28 03-24	Nipple Pipe 3/8 Npt X 3"
15	813 20 03-00	Elbow Std 90 Degree 3/8-18 Npt
16	811 05 06-00	Washer Lock Ext Tooth 3/8
23	532 15 61-23	Shield Heat
29	532 13 71-80	Kit Spark Arrestor (Flat Scrn)
31	532 14 02-80	Tank Fuel Front 2 00
32	532 14 05-27	Cap Asm Fuel W/sym Vented
33	532 12 34-87	Clamp Hose Black
35	817 49 05-12	Screw
37	532 13 70-40	Line Fuel 20"
38	- - - - - - --	Plug Oil Drain (Order From Engine Manufacturer)
40	532 12 40-28	Bushing Snap Nyl Blk Fuel Line
44	817 49 04-12	Screw Hexwsh Thdrol 1/4-20x3/4
46	819 09 14-16	Washer 9/32 X 7/8 X 16 Ga
62	810 04 05-00	Washer Lock Hvy Hlcl Spr 5/16
72	871 07 05-12	Screw Hexhd Cap 5/16-18x 3/4
78	817 49 06-20	Screw Thdrol 3/8-16x1-1/4 TYTT
81	532 12 88-61	Nut Flange 1/4-20 Starter Nut

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (95140006A) PRODUCT NO. 954-14 00-06

DRIVE

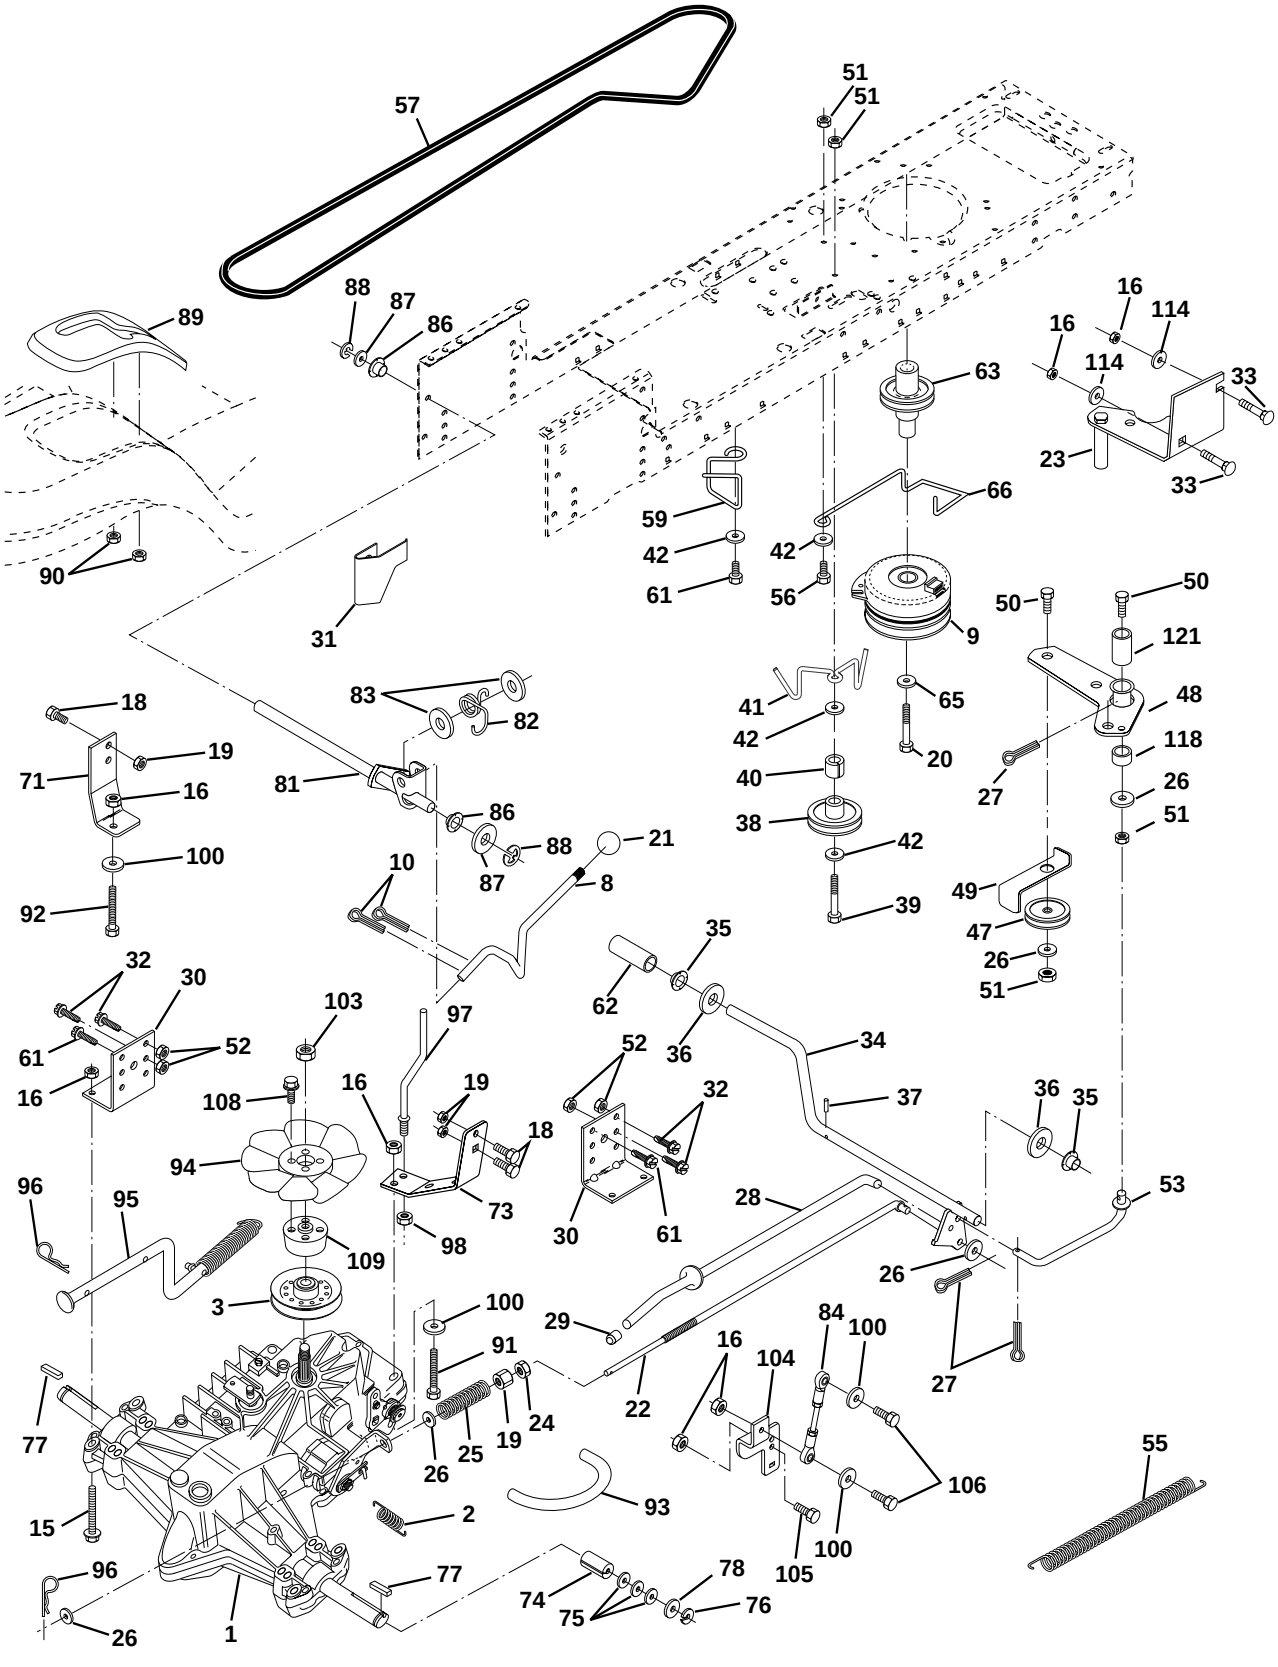

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (95140006A) PRODUCT NO. 954-14 00-06

DRIVE


KEY NO.	PART NO.	DESCRIPTION
1	532 14 06-07	Transaxle (See Breakdown) Hydro Gear, Model No. 310-0500
2	532 14 24-31	Spring, Return, Brake
3	532 14 46-98	Pulley, Transaxle
8	532 15 47-92	Rod Shift Fender STLT
9	532 14 50-28	Clutch, Elect. EVX LT Mag 5217-2
10	876 02 04-16	Pin Cotter 1/8 x 1 CAD
15	874 49 05-44	Bolt, Hex Flghd 5/16-18 Gr. 5
16	873 80 05-00	Nut Lock Hex W/Ins. 5/16-18 Unc P
18	874 78 06-16	Bolt Fin Hex 3/8-16 Unc x 1 Gr. 5
19	873 80 06-00	Nut Lock Hex W/Wsh 3/8-16 Unc
20	532 15 02-80	Bolt Hex 7/16-20 x 4-1/4 Ga. 1.38
21	532 12 12-74	Knob, Duckhead 1/2-13
22	532 14 56-27	Rod, Brake Hydro
23	532 15 49-78	Bracket, Asm Clutch Mtg EVX
24	873 35 06-00	Nut
25	532 10 68-88	Spring, Brake Rod
26	819 13 13-16	Washer
27	876 02 04-12	Pin Cotter 1/8 x 3/4 CAD.
28	532 14 52-04	Rod, Parking Brake
29	532 07 16-73	Cap, Parking Brake
30	532 13 08-07	Bracket, Transaxle
31	532 12 72-75	Keeper Belt Lh
32	874 76 05-12	Bolt Hex Hd 5/16-18 Unc x 3/4
33	872 14 05-06	Bolt Rdhd Sqnk 5/16-18 UNC x 3/4
34	532 15 50-71	Shaft, Foot Pedal
35	532 12 01-83	Bearing, Nylon
36	819 21 16-16	Washer
37	532 12 49-63	Pin, Roll
38	532 12 36-74	Pulley, Idler, Flat
39	874 76 06-44	Bolt
40	532 12 49-65	Spacer, Split
41	532 15 47-77	Keeper, Belt Idler
42	819 13 13-12	Washer 13/32 x 13/16 x 12 Gauge
47	532 12 77-83	Pulley, Idler, V-Groove
48	532 15 46-04	Bellcrank Assembly
49	532 12 32-05	Retainer, Belt
50	874 76 06-24	Bolt
51	873 68 06-00	Nut
52	873 68 05-00	Nut Crownlock 5/16-18
53	532 10 57-10	Link, Clutch
55	532 10 57-09	Spring, Return, Clutch
56	874 76 06-20	Bolt Fin Hex 3/8-16 UNC x 1-1/4
57	532 14 14-16	V-Belt, Ground Drive
59	532 14 03-12	Keeper, Center Span
60	532 10 57-30	Keeper Belt Engine
61	817 49 06-12	Screw Thdrol. 3/8-16 x 3/4 Ty. TT
62	532 12 48-72	Cover, Pedal
63	532 14 58-68	Pulley, Clutch Electric EVX
65	810 04 07-00	Washer
66	532 15 47-78	Keeper Belt Engine Full-Proof
71	532 14 14-17	Strap Torque Lh Hydro
73	532 14 14-18	Strap Torque Rh Hydro
74	532 12 11-99	Spacer, Split
75	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Gauge
76	812 00 00-01	E-Ring
77	532 12 35-83	Key, Square
78	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Gauge
81	532 15 60-48	Shaft Asm. Cross Hydro
82	532 12 37-82	Spring Torsion T/A
83	819 17 12-16	Washer 17/32 x 3/4 x 16 Ga.
84	532 14 14-23	Rod, Tie Hydro
86	532 07 12-08	Bushing Rod Steering 629/632 ID
87	819 21 20-16	Washer 21/32 x 1-1/4 x 16 Ga.
88	812 00 00-08	Ring Klip #5304-62
89	532 15 48-82	Console, Shift
90	532 12 43-46	Nut, Self-Thd Wsh-hd 1/4 Zinc
91	874 78 05-36	Bolt Fin Hex 5/16-18 x 2-1/4
92	874 78 05-24	Bolt Fin Hex 5/6-18 Unc x 1-1/2
93	532 14 25-64	Line Fuel Hydro 4"
94	532 14 04-62	Fan, Hydro 7"
95	532 14 46-43	Control Asm Bypass Hydro
96	532 12 47-88	Retainer Spring 1" Zinc/Cad
97	532 14 42-01	Keeper Belt Rh Hydro
98	873 51 06-00	Nut Keps Hex 3/8-16 Unc
100	819 11 12-16	Washer 11/32 x 3/4 x 16 Ga.
103	873 94 08-00	Nut Nylon Insert 1/2-20 Unf.
104	532 14 14-21	Arm, Control Hydro
105	871 07 05-16	Screw Cap Hex 5/16 x 18 x 1
106	874 78 05-20	Bolt Fin Hex 5/16-18 Unc x 1-1/4
108	817 54 10-26	Screw Hex Wh Hd #10-24 x
109	532 14 50-98	Adaptor Fan Hydro LT Hyd Alum
114	819 11 12-14	Washer 11/32 x 3/4 x 14 Ga.
118	532 15 47-74	Spacer, Bellcrank
121	532 15 44-19	Nyliner Clutching STL

NOTE: All component dimensions give in U.S. inches. 1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

MOWER LIFT

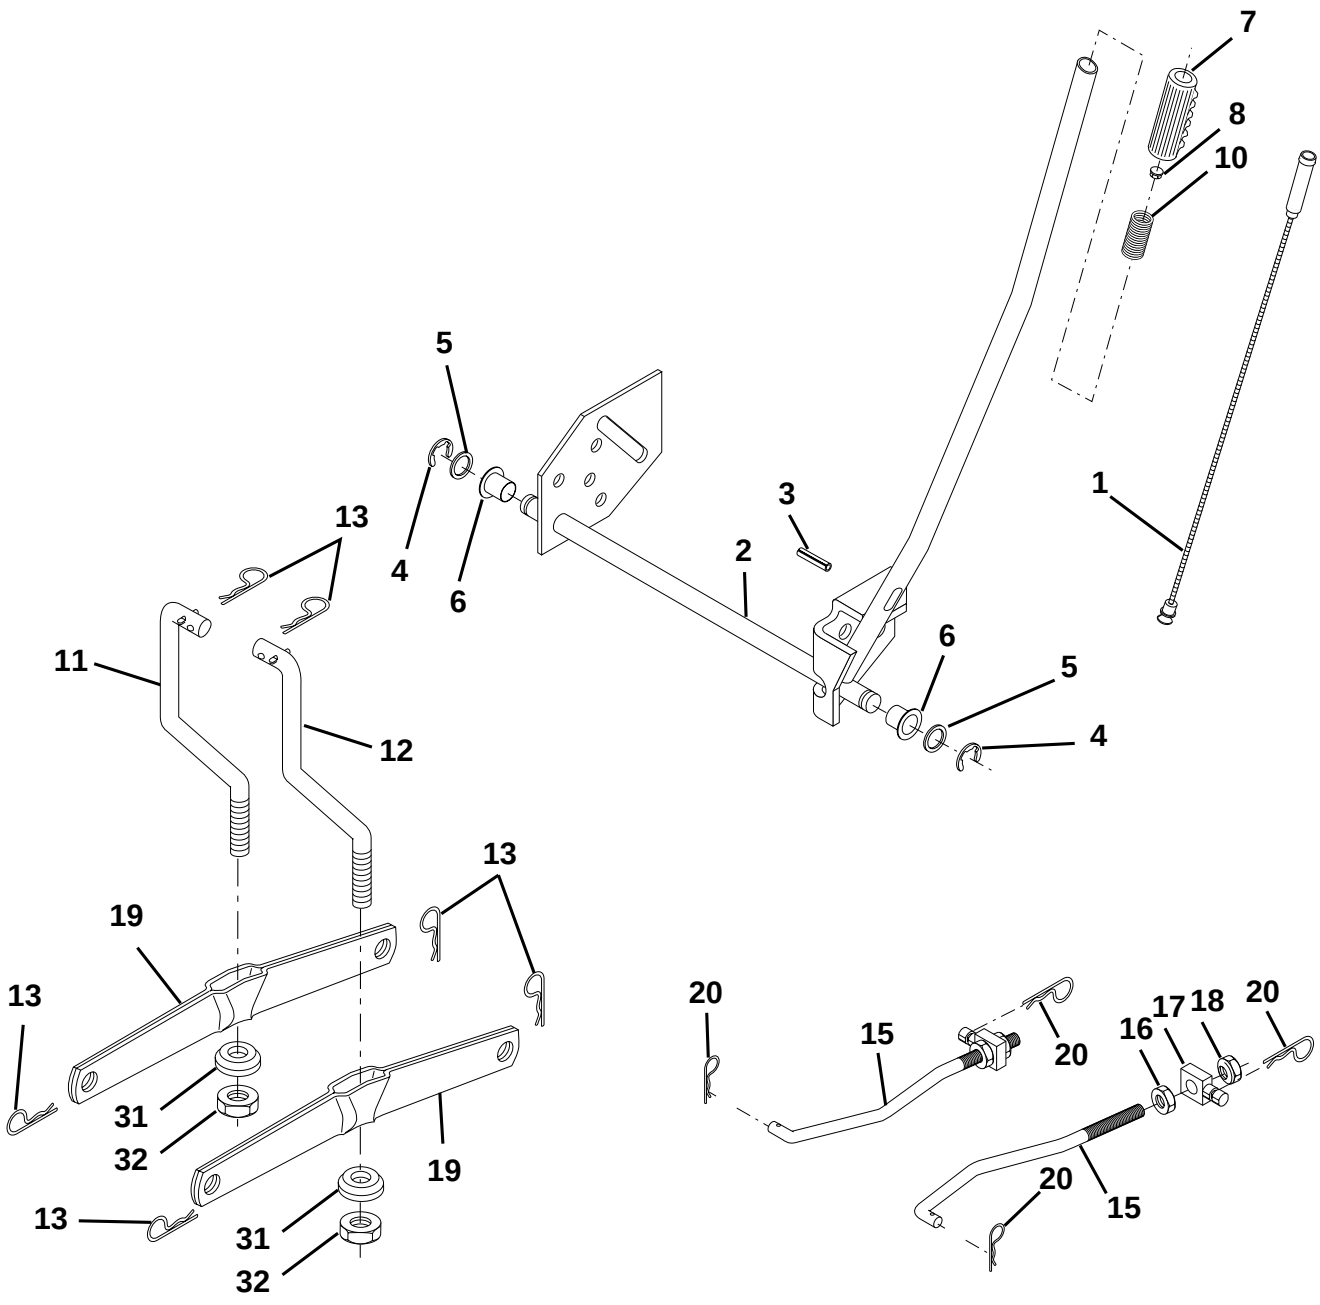

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

MOWER LIFT


KEY NO.	PART NO.	DESCRIPTION
1	532 13 69-73	Wire Asm Inner W/plunger 17 32
2	532 14 51-17	Shaft Asm Lift
3	532 10 57-67	Pin Groove
4	812 00 00-02	E Ring #5133-62
5	819 21 16-21	Washer PLTD 21/32 X 1 X 21ga
6	532 12 01-83	Bearing Nylon Blk 629 Id
7	532 10 94-13	Grip Handle Bicycle
8	532 12 45-26	Button Plunger Black
10	532 12 25-12	Spring Cprsn 3 750 Oiled
11	532 13 98-65	Link Lift LH
12	532 13 98-66	Link Lift RH
13	532 12 46-70	Retainer Spring
15	532 12 72-18	Link Front
16	873 35 08-00	Nut Jam Hex 1/2-13 Unc
17	532 13 01-71	Trunnion Blk Zinc
18	873 80 08-00	Nut Lock W/wsh 1/2-13unc
19	532 13 98-68	Arm Suspension Rear
20	532 12 46-60	Spring, Retainer
31	532 14 03-02	Bearing Pvt. Lift Spherical
32	873 54 06-00	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A) PRODUCT NO. 954 1400-6

MOWER DECK

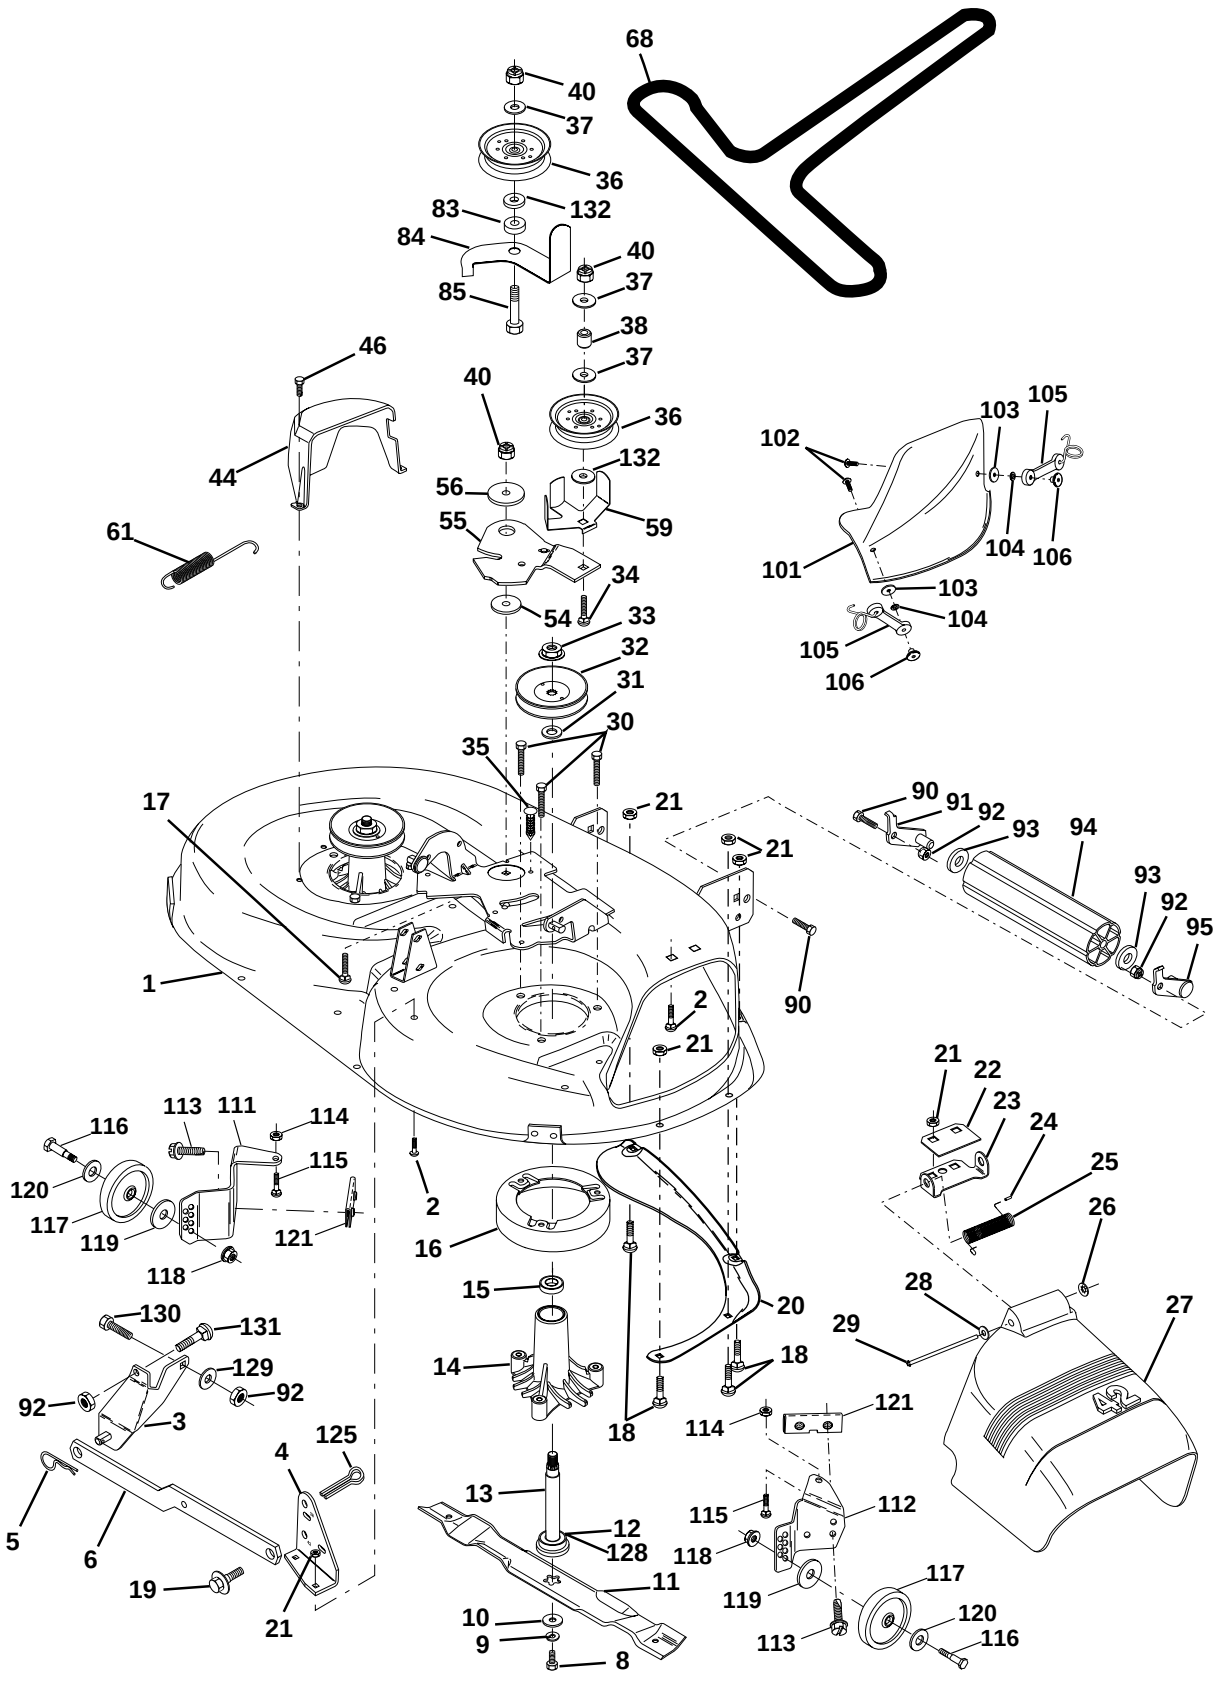

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A) PRODUCT NO. 954 1400-6

MOWER DECK


KEY NO.	PART NO.	DESCRIPTION
1	532 14 43-93	Housing Asm Mower 42"94 T-Path
2	872 14 05-06	Bolt Rdhd Sqnk 5/16-18unc X3/4
3	532 13 80-17	Bracket Asm Fr Sway Bar 38/42
4	532 13 84-40	Bracket Asm Deck 42"sway Bar
5	532 12 46-70	Retainer Spring
6	532 13 08-32	Arm Suspension Rear
8	532 85 08-57	Bolt 3/8-24x1 25 Gr8 Patched
9	810 03 06-00	Washer Lock Hvy 3/8 Unplated
10	532 14 02-96	Washer Hard Blade Mower Vented
11	532 13 41-49	Blade Mower Mulching 42"
12	532 12 98-95	Bearing Ball #6204 (Mandrel)
13	532 13 76-45	Shaft Asm W/lower Bearing
14	532 12 87-74	Housing Mandrel Vented(machd)
15	532 11 04-85	Bearing Ball Mandrel
16	532 14 03-29	Stripper Round Mower
17	872 11 06-18	Bolt Rdhd Sqnk 3/8-16 X 2-1/4
18	872 14 05-05	Bolt Carr 5/16-18 X 5/8
19	532 13 28-27	Bolt Shoulder
20	532 13 68-88	Baffle Vortex 42
21	873 68 05-00	Nut Crown Lock 5/16-18
22	532 13 47-53	Stiffener Bracket 42"deck
23	532 13 12-67	Bracket Deflector Mower 42"
24	532 10 53-04	Cap Sleeve 80x 112 Blk Mower
25	532 12 37-13	Spring Torsion Deflector 2 52
26	532 11 04-52	Nut Push Phos & Oil
27	532 13 09-68	Shield Deflector Mower 42" Blk
28	819 11 10-16	Washer 11/32 X 5/8 X 16 Ga
29	532 13 14-91	Rod Hinge 42"6 75 Wlg
30	532 13 87-76	Screw Thdrol Hex Hd Zinc Mwr.
31	532 12 99-63	Washer Spacer Mower Vented
32	532 15 35-35	Pulley Mandrel 42"
33	532 13 72-66	Nut 9/16top Lock Flng Cntr
34	872 11 06-22	Bolt RDHD 3/8-16 UNC x 2-3/4 Gr. 5
35	532 13 38-35	Fastner Christmas Tree
36	532 13 14-94	Pulley Idler Flat 3 060
37	819 13 13-16	Washer 13/32 X 13/16 X 16 Ga
38	532 13 28-23	Spacer Spring Stop Idler
40	873 68 06-00	Nut Lock 3/8-16 Unc
44	532 14 00-88	Guard Mandrel LH Black
46	532 13 77-29	Screw Thdrol 1/4-20x5/8
54	532 13 39-43	Washer Hardened
55	532 14 00-84	Arm Idler 42"mower LT/YT
56	532 12 20-52	Spacer Retainer Pm Mower
59	532 14 10-43	Guard, Belt
61	532 13 19-50	Spring Ext. Elect
68	532 14 42-00	V-Belt Mower
83	532 12 09-58	Washer Sintered
84	532 15 60-84	Keeper Belt Idler
85	872 14 06-18	Bolt Carriage 3/8-16 x 2-1/4 Gr.5
90	874 76 06-16	Bolt Fin Hex 3/8-16unc X 1
91	532 13 22-74	Bracket Asm Noseroller LH
92	873 80 06-00	Nut Lock Hex w/ins. 3/8-16 UNC
93	819 17 14-16	Washer 17/32 X 7/8 X 16 Ga
94	532 13 22-64	Roller Nose 38 & 42
95	532 13 22-73	Bracket Asm Noseroller RH
101	532 13 64-20	Cover Mulching 42” Blk
102	871 16 10-10	Screw
103	819 06 12-16	Washer #10
104	810 07 10-00	Washer Lock #10
105	532 13 07-58	Latch Asm Bagger
106	532 12 50-04	Nut Weld .327/.304 #10-24
111	532 15 51-97	Bracket Wheel Gauge Lh 42” Deck
112	532 15 51-98	Bracket Gauge Wheel Rh 42” Deck
113	817 49 05-12	Screw Thdrol 5/16-18 x 3/4 TYT
114	873 51 05-00	Nut Keps 5/16 - 18 UNC
115	872 11 05-04	Bolt Carriage 5/16 - Unc x 1/2
116	532 12 48-42	Bolt Shld “A” 2.41 “B” 1.66
117	532 10 54-55	Wheel Gauge blk. 4.93
118	873 93 06-00	Nut Centerlock 3/8 - 16 UNC
119	819 12 14-14	Washer 3/8 x 7/8 x 14 Ga.
120	819 17 15-12	Washer 17/32 x 15/16 x 12 Ga.
121	532 14 37-23	Bracket
125	876 02 08-16	Cotter Pin
128	532 15 33-90	Washer Felt
129	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.
130	874 78 06-16	Bolt Fin Hex 3/8-16 UNC x 1 Gr. 5
131	872 14 06-08	Bolt Rdhd Sqnk 3/8-16 x 1
- -	532 14 54-52	Deck Serv 42" Elec Vent (Standard Deck - Order Nose Roller, Gauge Wheel and Mulcher Plate components separately Key Nos. 90-95, 101-106 and 111-121)
- -	532 13 07-94	Mandrel Assembly (Includes Key Numbers 8-10, 12-15, 31 and 33)

NOTE: All component dimensions give in U.S. inches. 1 inch = 25.4 mm.

REPAIR PARTS

RACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

HYDRO GEAR TRANSAXLE - MODEL NUMBER 319-0500

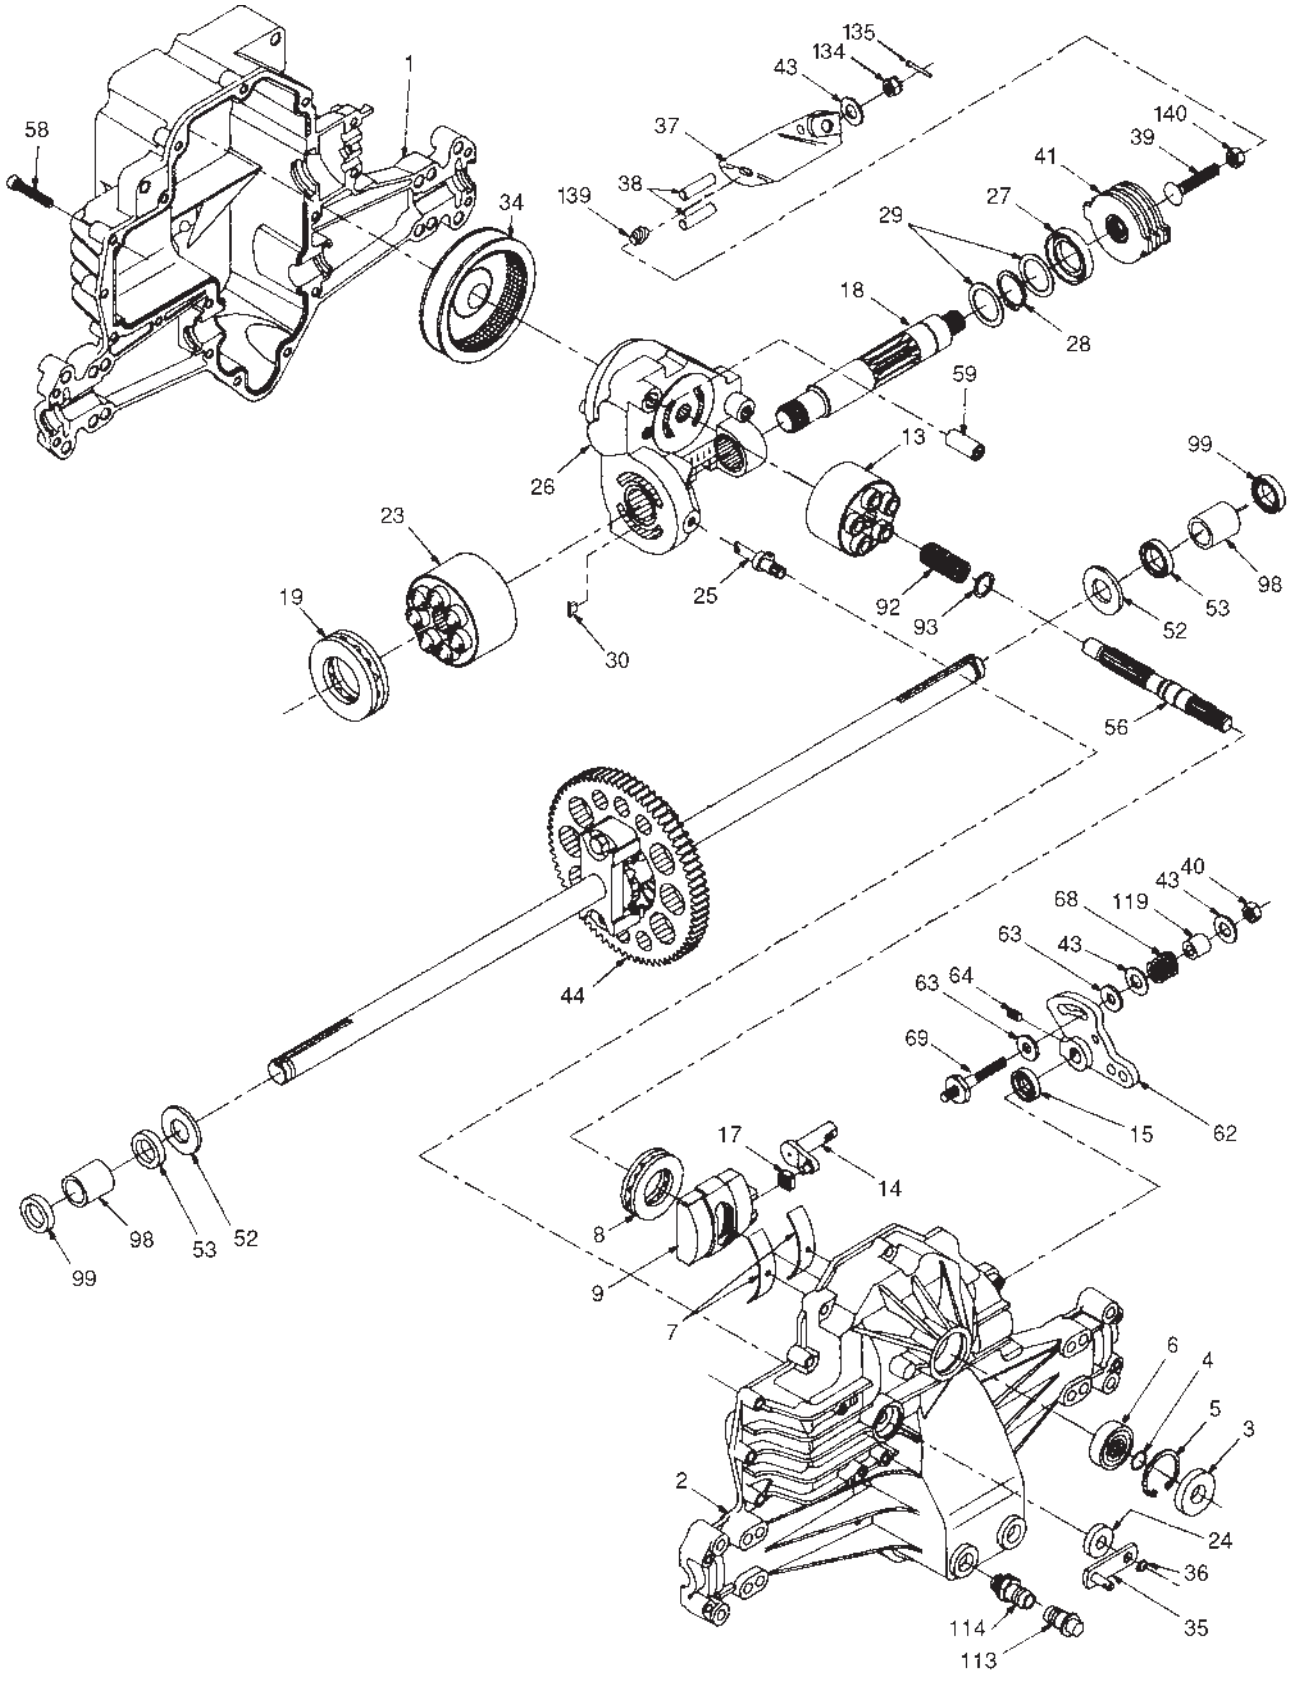

REPAIR PARTS

TRACTOR - MODEL NO. LTH145 (954140006A), PRODUCT NO. 954 14 00-06

HYDRO GEAR TRANSAXLE - MODEL NUMBER 319-0500

KEY NO.	PART NO.	DESCRIPTION
1	532 14 29-86	Housing, Lower
2	532 14 29-87	Assembly, Upper Housing
3	532 14 29-32	Seal, Lip
4	532 14 29-28	Ring, Wire Retaining
5	532 14 29-33	Ring, Retaining
6	532 14 29-34	Bearing, Shaft Ball
7	532 14 29-35	Bearing, Cradle
8	532 15 07-71	Bearing, Thrust 30 x 52 x 13
9	532 14 29-37	Swashplate, Variable
13	532 14 29-38	Block, Cylinder Assembly
14	532 14 29-39	Arm, Trunnion
15	532 14 29-40	Seal, Lip
17	532 14 29-41	Guide, Slot
18	532 15 07-72	Shaft, Motor
19	532 15 07-73	Bearing, Thrust 42 x 68 x 16
23	532 14 29-44	Block, Cylinder Assembly
24	532 14 29-45	Seal, Lip 10 x 25 x 7
25	532 14 29-46	Actuator, Bypass
26	532 15 07-74	Center Section Assembly Kit
27	532 14 29-48	Seal, Lip 26 x 42 x 8
28	532 14 29-49	Ring, Retaining
29	532 14 29-50	Washer 26 x 35 x 1
30	532 15 07-87	Nut, Jam
34	532 14 29-51	Oil Filter Element
35	532 14 29-52	Arm, Bypass
36	532 14 29-53	Ring, Retaining
37	532 14 29-54	Arm, Actuating
38	532 14 29-55	Pin, Actuating
39	532 15 07-77	Bolt 5/16-24 x 1-3/4
40	532 15 07-78	Locknut, Hex 5/16-24 UNJC
41	532 14 29-58	Brake Rotor/Stator Kit
43	532 14 28-84	Washer 7/16 x 7/8 x .060
44	532 14 29-90	Differential Assembly
52	532 14 29-91	Washer 3/4 x 1.5 x .13
53	532 14 29-61	Seal .75 x 1.25 x .250
56	532 14 29-63	Shaft, Input
58	532 14 29-64	Bolt 1/4-20 x 1.38
59	532 14 29-65	Pin .5 OD x .43 ID x .750
62	532 14 29-66	Arm, Control
63	532 14 29-67	Puck, Dampener
64	532 14 29-20	Set Screw
68	532 14 29-69	Spring
69	532 14 46-10	Stud 5/16-24
92	532 14 29-77	Spring, Block
93	532 14 29-78	Washer, Block Thrust
98	532 14 29-93	Sleeve Bearing
99	532 14 29-76	Seal, Wiper
113	532 14 29-17	Cap, Vent Assembly
114	532 14 29-18	Fitting, O-Ring Assembly
119	532 14 29-80	Spacer
134	532 14 46-07	Nut, Castle 5/16-24
135	532 14 46-08	Pin, Cotter
139	532 15 07-75	Spring, Compression
140	532 15 07-76	Nut, Hex 5/16-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm