
Husqvarna

7

LT 120

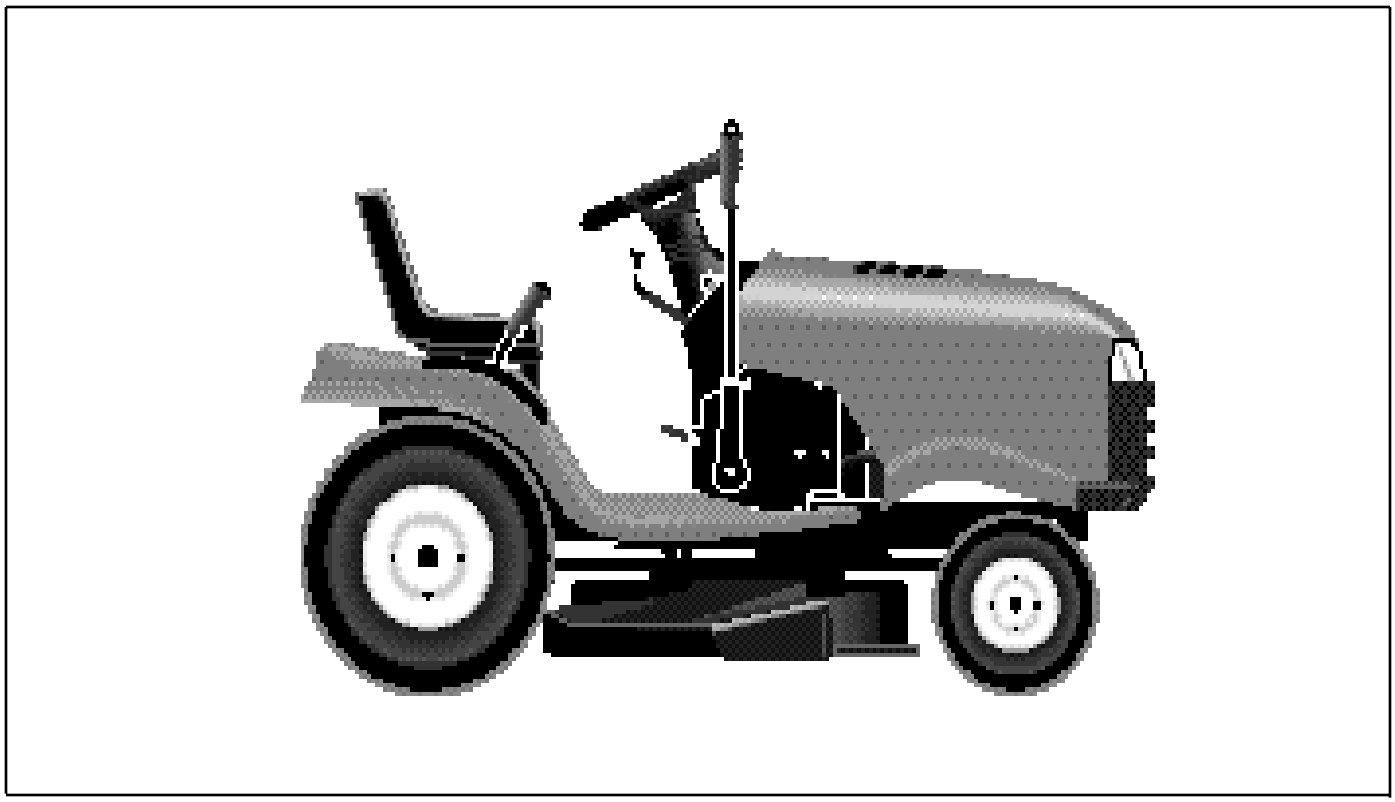


1.1997

954 14 00-02B

Spare Parts

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 1400-02

SCHEMATIC

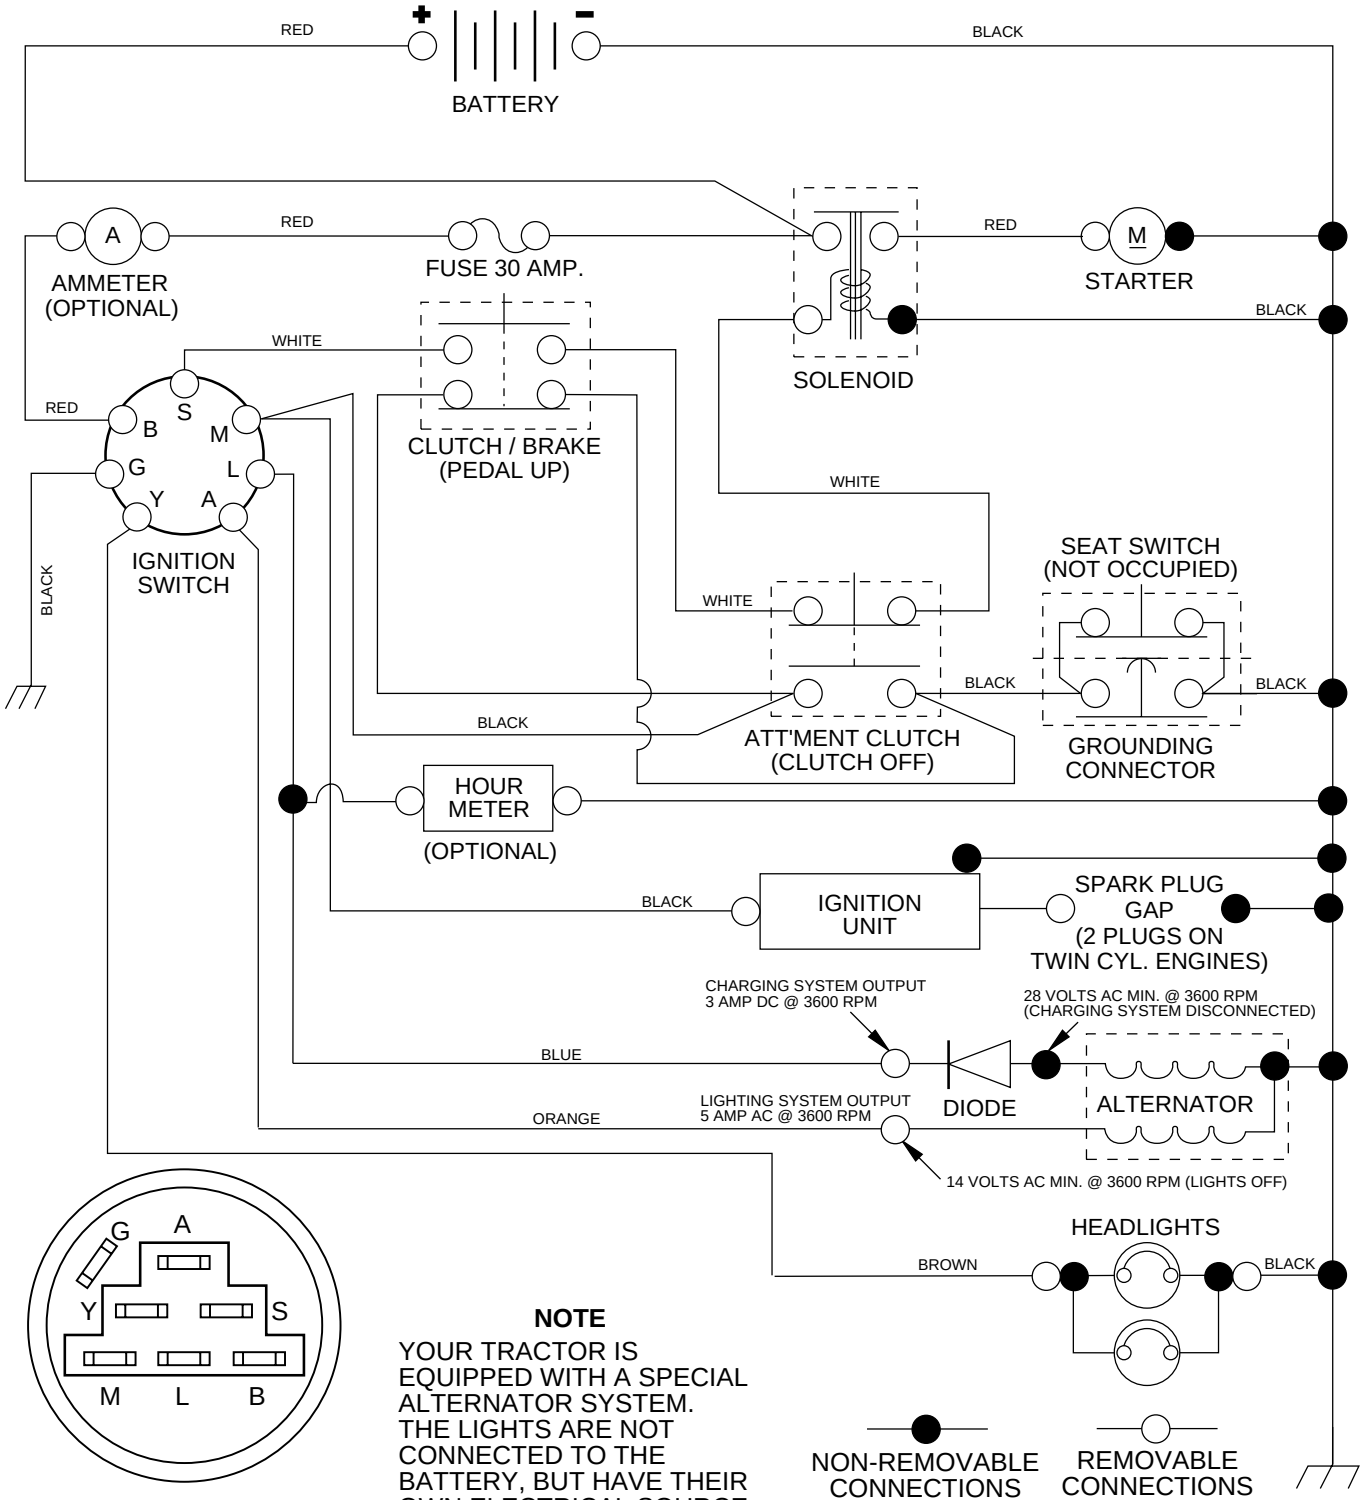

IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	G + M + L	NONE
RUN/LIGHT	B + L	A + Y
RUN	B + L	NONE
START	B + L + S	NONE

NOTE

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.


WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

ELECTRICAL

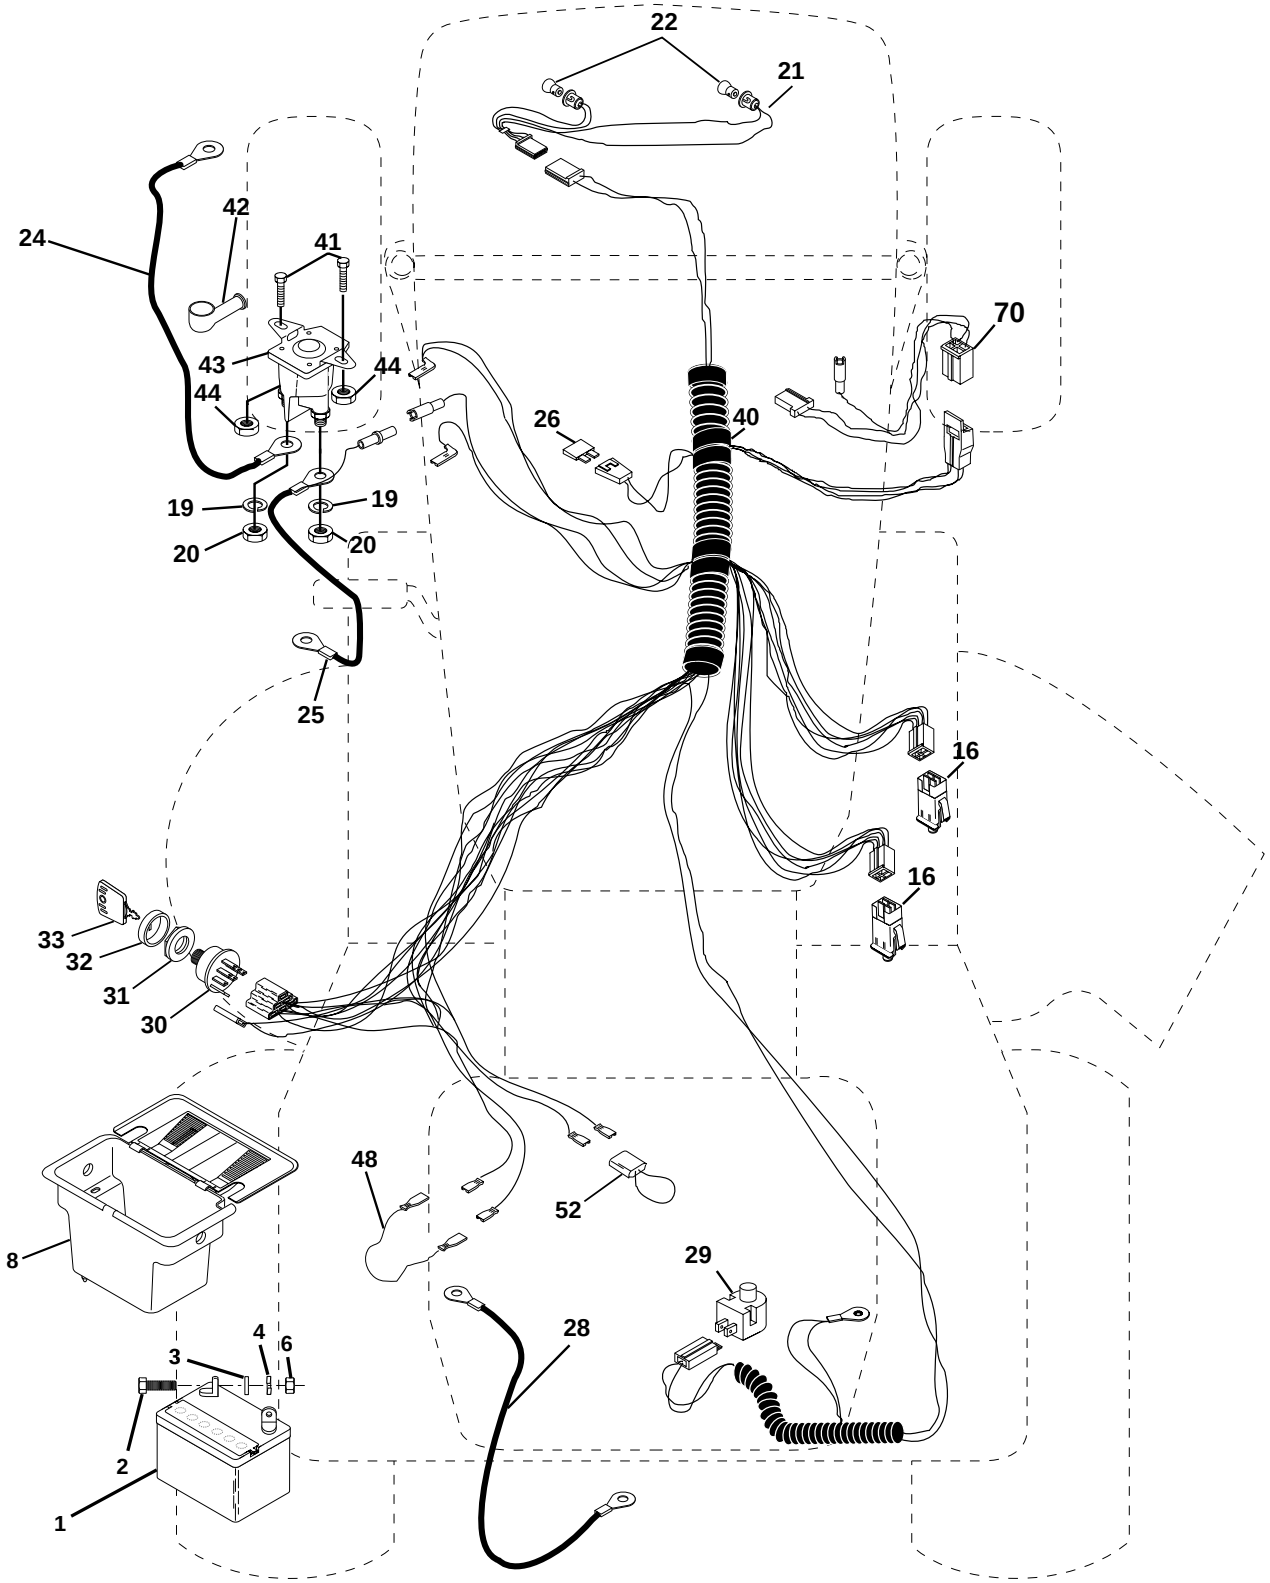

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

ELECTRICAL


KEY NO.	PART NO.	DESCRIPTION
1	532144925	Battery 12 Volt 25 AMP
2	874760412	Bolt Hex Hd 1/4-20unc X 3/4
3	819091016	Washer 9/32 X 5/8 X 16 Ga.
4	810040400	Washer Lock Hvy Helical 1/4
6	873220400	Nut Fin Hex 1/4-20 Unc
8	532156417	Case Battery Mech Hinge
16	532153664	Switch Interlock Push-In
19	810090400	Washer Lock 1/4
20	873350400	Nut Jam Hex 1/4-20 Unc
21	532136850	Harness Asm Light W/4152j
22	532004152	Bulb Light #1156
24	532124780	Cable Battery 6 Ga 11" red
25	532146147	Cable Battery 6 Ga 44" red w/16 wire
26	532108824	Fuse 30 AMP Auto Green
28	532124773	Cable Ground 6 Ga 12" black
29	532121305	Switch Plunger Nc Gray
30	532140301	Switch Ign 4 pos w/lights
31	532124211	Nut Ignition
32	532141226	Cover Sw Ignition
33	532122147	Key Ign Modelled Generic
40	532156442	Harness Ign.
41	871110408	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532131563	Cover Terminal Red
43	532145673	Solenoid
44	873640400	Nut Keps Hex 1/4-20 Unc
48	532140844	Adapter Ammeter Rectangular
52	532141940	Protection Wire Loop
70	532140413	Harness, Eng. B&S/Tec Dual

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

CHASSIS AND ENCLOSURES

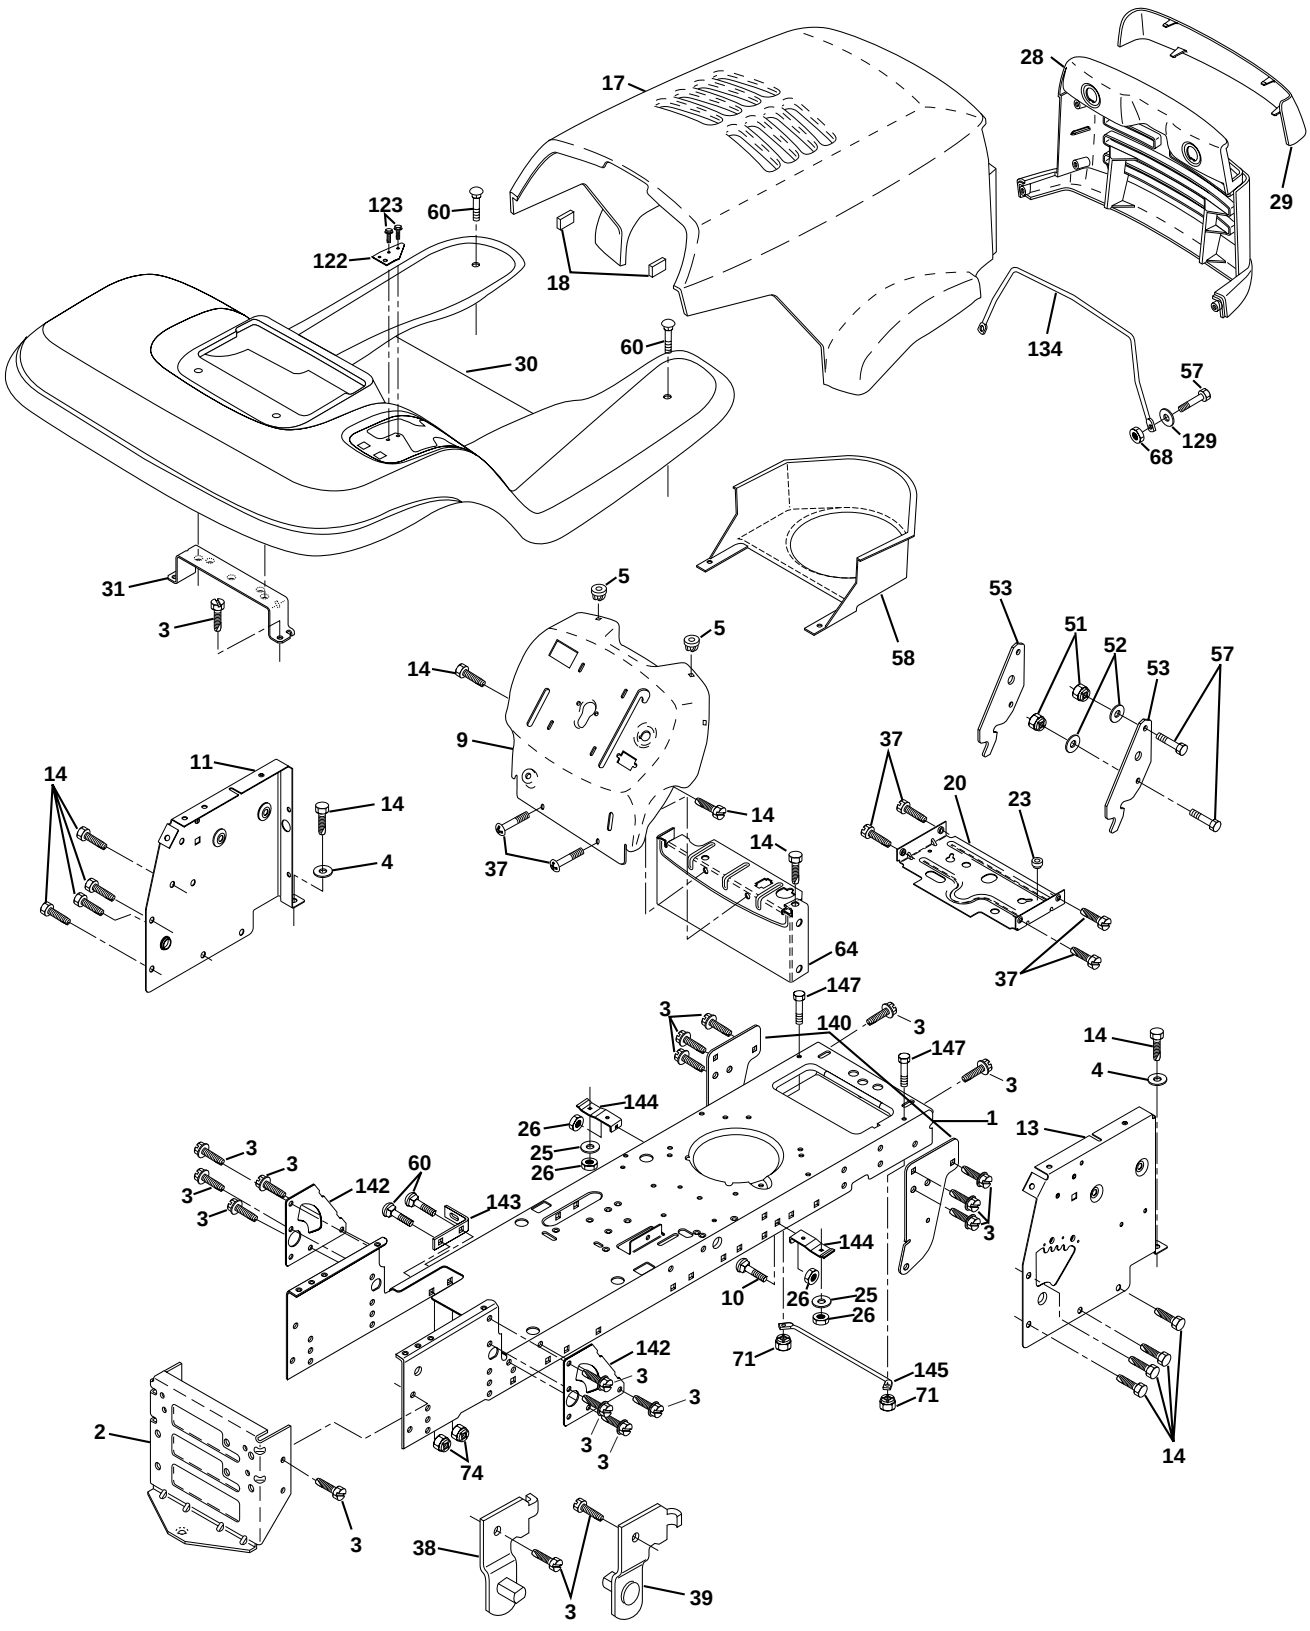

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

CHASSIS AND ENCLOSURES


KEY NO.	PART NO.	DESCRIPTION
1	532159527	Chassis Weldment
2	532140356	Drawbar, Stretch
3	817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
4	819131216	Washer 13/32 x 3/4 x 16 Ga.
5	532155272	Bumper Hood/Dash
9	532157261	Dash P/L M, N/AMM N/HM Grey
10	872140608	Bolt Carriage 3/8-16 x 1
11	532155927	Panel Dash Lh
13	532157262	Panel Dash Rh
14	817490608	Screw Thdrol 3/8-16x1/2 Ty-tt
17	532156051	Hood LT/PL Husqvarna
18	532126938	Bumper Hood
20	532156437	Plate Mtg Battery Fuel Tank Fr
23	532124028	Bushing
25	819131312	Washer 13/32 X 13/16 X 12 Ga
26	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
28	532149776	Grille LT/PL Husqvarna
29	532149777	Lens LT/PL Husqvarna
30	532156489	Fender Footrest STLT Pnt
31	532139976	Bracket Support Fender
37	817490508	Screw Thdrol 6/16-18 x 1/2 TYT
38	532139886	Bracket, Asm. Pivot, L.H., Mower Rear
39	532139887	Bracket, Asm. Pivot, R.H., Mower Rear
51	873800400	Nut Lock Hex W/Ins 1/4-20
52	819091416	Washer 9/32 x 7/8 x 16 Ga.
53	532150067	Bracket Pnt. Pick off LT/PL Husqvarna
57	874780412	Bolt Hex 1/4-20 x 3/4
58	532150127	Air Duct Engine P/L
60	872140606	Bolt Rdhd Sqnk 3/8-16unc x 3/4
64	532154798	Dash Lower STLT
68	873510400	Nut Keps Hex 1/4-20unc
71	873680400	Nut Crownlock 1/4-20unc
74	873680600	Nut Crownlock 3/8-16 UNC
122	532157301	Bracket Shift STLT
123	532152927	Screw
129	819091016	Washer 9/32 x 5/8 x 16 Ga.
134	532160219	Rod Support Hood LT/PL Husq.
140	532158418	Bracket Suspension Front
142	532156095	Plate Reinforcement STLT
143	532154966	Bracket Swaybar Chassis
144	532154207	Bracket Pnt Footrest STLT
145	532156524	Rod Pivot Chassis/Hood
147	874760412	Bolt Hex Hd 1/4-20unc x 3/4
- -	532005479	Plug Button

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

DRIVE

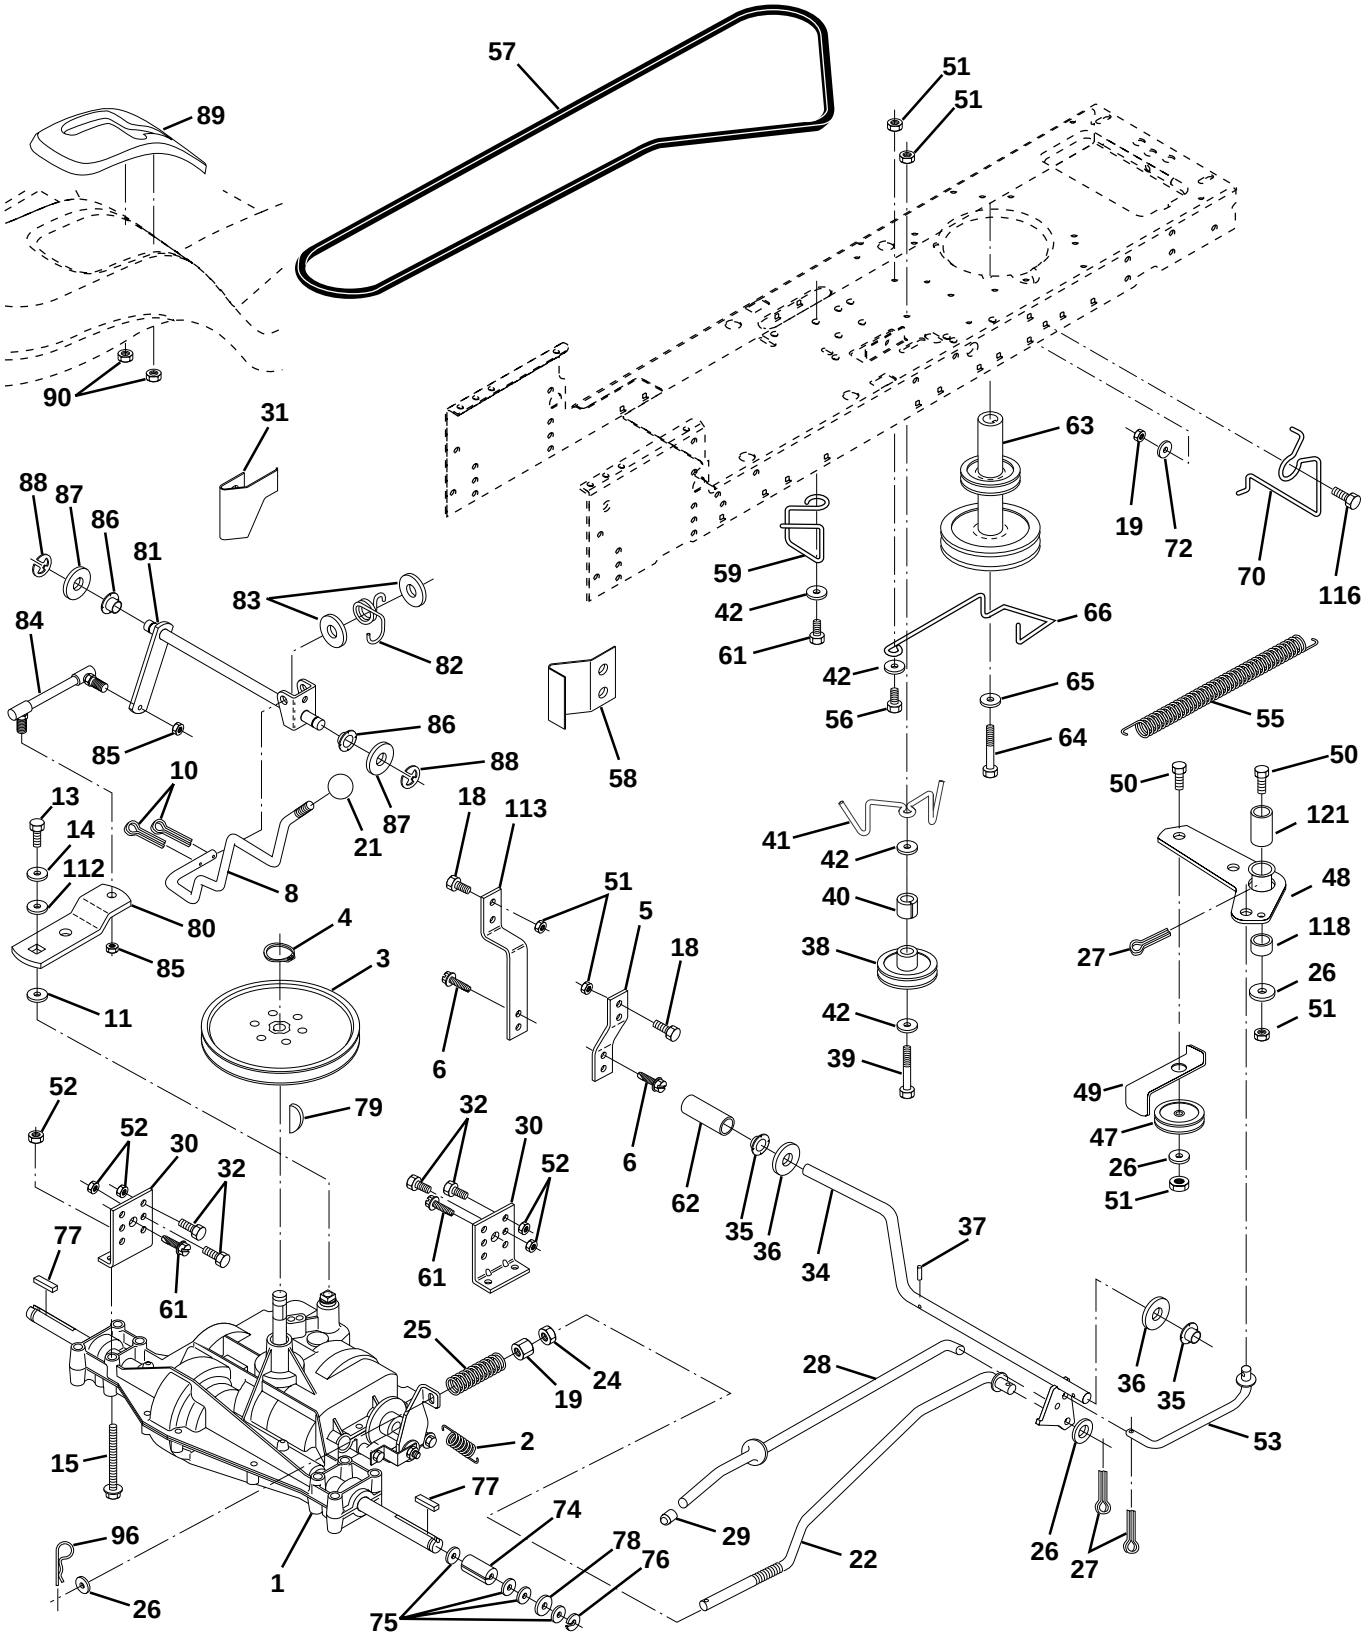

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

DRIVE


KEY NO.	PART NO.	DESCRIPTION
1	- - - - - - - - -	Transaxle (See Breakdown) Peerless 930-054A
2	532146682	Spring Return Brake T/a Zinc
3	532123666	Pulley Transaxle 18" tires
4	812000028	Ring Retainer # 5100-62
5	532121520	Strap Torque 30 Degrees
6	817490512	Screw Thdrol 5/16-18 X 3/4 TYT
8	532154792	Rod Shifter
10	876020416	Pin Cotter 1/8 X 1 Cad
11	532105701	Washer Plate Shf 388 Sq Hole
13	874550412	Bolt 1/4-28 Unf Gr 8 W/Patch
14	810040400	Washer Lock Hvy Helical 1/4
15	874490544	Bolt Hex 5/16-18 Gr. 5
18	874780616	Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5
19	873800600	Nut Lock 3/8-16 Unc
21	532106933	Knob
22	532130804	Rod Brake Blk Zinc 26 840
24	873350600	Nut Hex Jam 3/8-16 Unc
25	532106888	Spring Rod Brake 2 00 Zinc
26	819131316	Washer 13/32 X 13/16 X 16 Ga
27	876020412	Pin Cotter 1/8 X 3/4 Cad
28	532145204	Rod Brake Parking LT/YT
29	532071673	Cap Brake Parking Black
30	532130807	Bracket Mtg Transaxle
31	532127275	Keeper Belt LH LT 14 Ga
32	874760512	Bolt Hex Hd 5/16-18unc X 3/4
34	532155071	Shaft Asm Pedal Foot
35	532120183	Bearing Nylon Blk 629 Id
36	819211616	Washer 21/32 X 1 X 16 Ga
37	532124963	Pin Roll 3/16 X 1"
38	532123674	Pulley Idler Flat
39	874760644	Bolt Fin Hex 3/8-16unc X 2-3/4
40	532124965	Spacer Split 395 X 59 Bzp
41	532154777	Keeper Belt Retainer Idler Foolproof
42	819131312	Washer 13/32 X 13/16 X 12 Ga
47	532127783	Pulley Idler V Groove Plastic
48	532154604	Bellcrank Asm
49	532123205	Retainer Belt Style Spring
50	874760624	Bolt Hex Hd 3/8-16unc X 1-1/2
51	873680600	Nut Crownlock 3/8-16 Unc
52	873680500	Nut Crownlock 5/16-18 Unc
53	532105710	Link Clutch
55	532105709	Spring Return Clutch 6 75
56	874760620	Bolt Fin Hx 3/8-16 X 1/4
57	532130801	V-Belt Ground Drive 95 25
58	532127274	Keeper Belt RH LT Pnt/zinc 16g
59	532140312	Keeper Belt Span Ctr
61	817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
62	532124872	Cover Pedal Blk Round
63	532140186	Engine Pulley LT/YT
64	871170764	Bolt Hex
65	810040700	Washer Lock Hvy Hlcl Spr 7/16
66	532154778	Keeper Belt Engine Foolproof
70	532134683	Guide Belt Mower Drive RH
72	819132012	Washer 13/32 X 1-1/4 X 12 Ga
74	532137057	Spacer Axle
75	532121749	Washer 25/32 X 1 1/4 X 16 Ga
76	812000001	E-ring #5133-75
77	532123583	Key Square 2 0 X 1845/ 1865
78	532121748	Washer 25/32 X 1-5/8 X 16 Ga
79	532125096	Key Woodruff #9 3/16 x 3/4
80	532131486	Arm Shift
81	532156043	Shaft Asm Cross 20"t
82	532123782	Spring Torsion T/a
83	819171216	Washer 17/32 X 3/4 X 16 Ga
84	532123793	Rod Shift
85	532150360	Nut Lock Center 1/4 - 28 FNTHD
86	532071208	Bushing Rod Strg 629/632 Id
87	819212016	Washer 21/32 X 1-1/4 X 16 Ga
88	812000008	Ring Klip #5304-62
89	532154885	Console Shift STLT
90	532124346	Nut Self-thd Wsh-hd 1/4 Zinc
96	532124788	Retainer Spring 1"
112	819091210	Washer 9/32 x 3/4 x 10 Ga.
113	532127285	Strap Torque LT
116	872110610	Bolt Rdhd Sq Neck 3/8-16 x 1.25
118	532154774	Spacer Bellcrank
121	532154419	Nyliner Clutching STL

NOTE: All component dimensions give in U.S. inches. 1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

STEERING ASSEMBLY

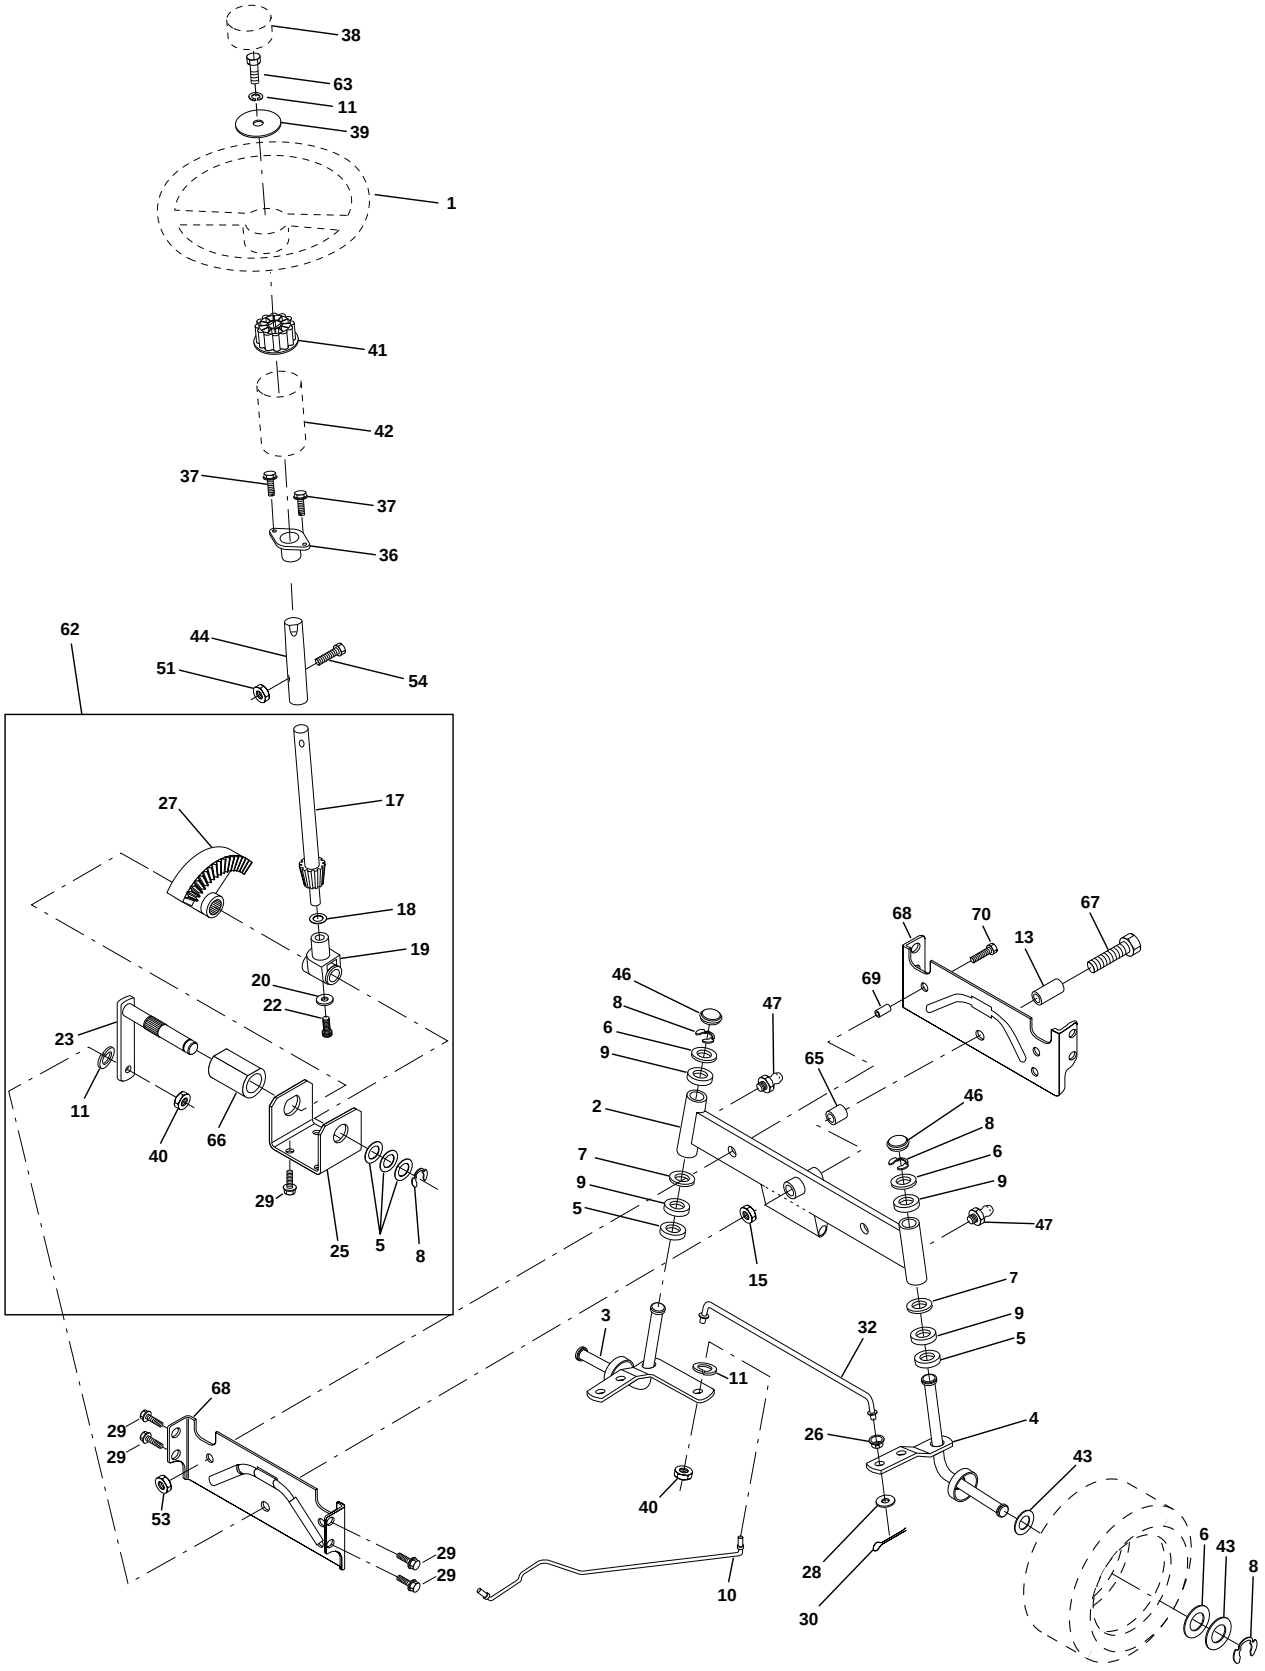

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

STEERING ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
1	532124415	Wheel Steering
2	532154427	Axle Asm STMP Dropped STL
3	532156483	Spindle Asm LH
4	532157473	Spindle Asm RH
5	532124931	Bearing Race Thrust Harden
6	532121748	Washer 25/32 X 1-5/8 X 16 Ga
7	819272016	Washer 27/32 X 1-1/4 X 16 Ga
8	812000029	Ring Klip #t5304-75
9	532124937	Bearing Col Strg Blk
10	532156438	Link Drag Extended Stamp
11	810040600	Washer Lock Hvy Hlcl Spr 3/8
13	532154779	Bearing Axle STLT/GT
15	873901000	Nut Lock Flange 5/8-11 Unc
17	532156546	Shaft Asm Strg
18	532057079	Washer Thrust 515x 750x 033
19	532124035	Support Shaft
20	532126684	Washer Shim 1/4 X 5/8 X 062
22	871200410	Screw Hex Socket 1/4-20 x 5/8
23	532127501	Shaft Asm Pittman
25	532154406	Bracket Steering
26	543126847	Bushing Link Drag Blk LR
27	532136874	Gear Sector
28	819131416	Washer 13/32 X 7/8 X 16 Ga
29	817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
30	876020412	Pin Cotter 1/8 X 3/4 Cad
32	532130465	Rod Tie Wire Form 19 75 Mech
36	532155099	Bushing Strg
37	532152927	Screw
38	532124416	Insert Cap Strg Wh Au
39	819133808	Washer 13/32 X 2-3/8 X 8 Ga
40	532124701	Lock nut
41	532100711	Adaptor Wheel Strg
42	532155092	Boot Steering Shaft
43	532121749	Washer 25/32 X 1 1/4 X 16 Ga
44	532153720	Extension Steering Shaft LR/LT
46	532121232	Cap Spindle Fr Top Blk
47	532124836	Fitting Grease
51	873800500	Nut Lock Hex w/Ins 5/16-18
53	873680600	Nut Crownlock 3/8-16unc
54	874780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
62	532156594	Kit, Steering Assembly Svc
63	874780616	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65	532154780	Spacer Axle
66	532154404	Bearing Arm Pittman
67	874781044	Bolt, Fin Hex 5/8-11 UNC x 2-3/4
68	532154429	Axle, Brace
69	532160367	Spacer Brace Axle
70	874780636	Bolt Fin Hex 3/8-16unc x 2-1/4

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

SEAT ASSEMBLY

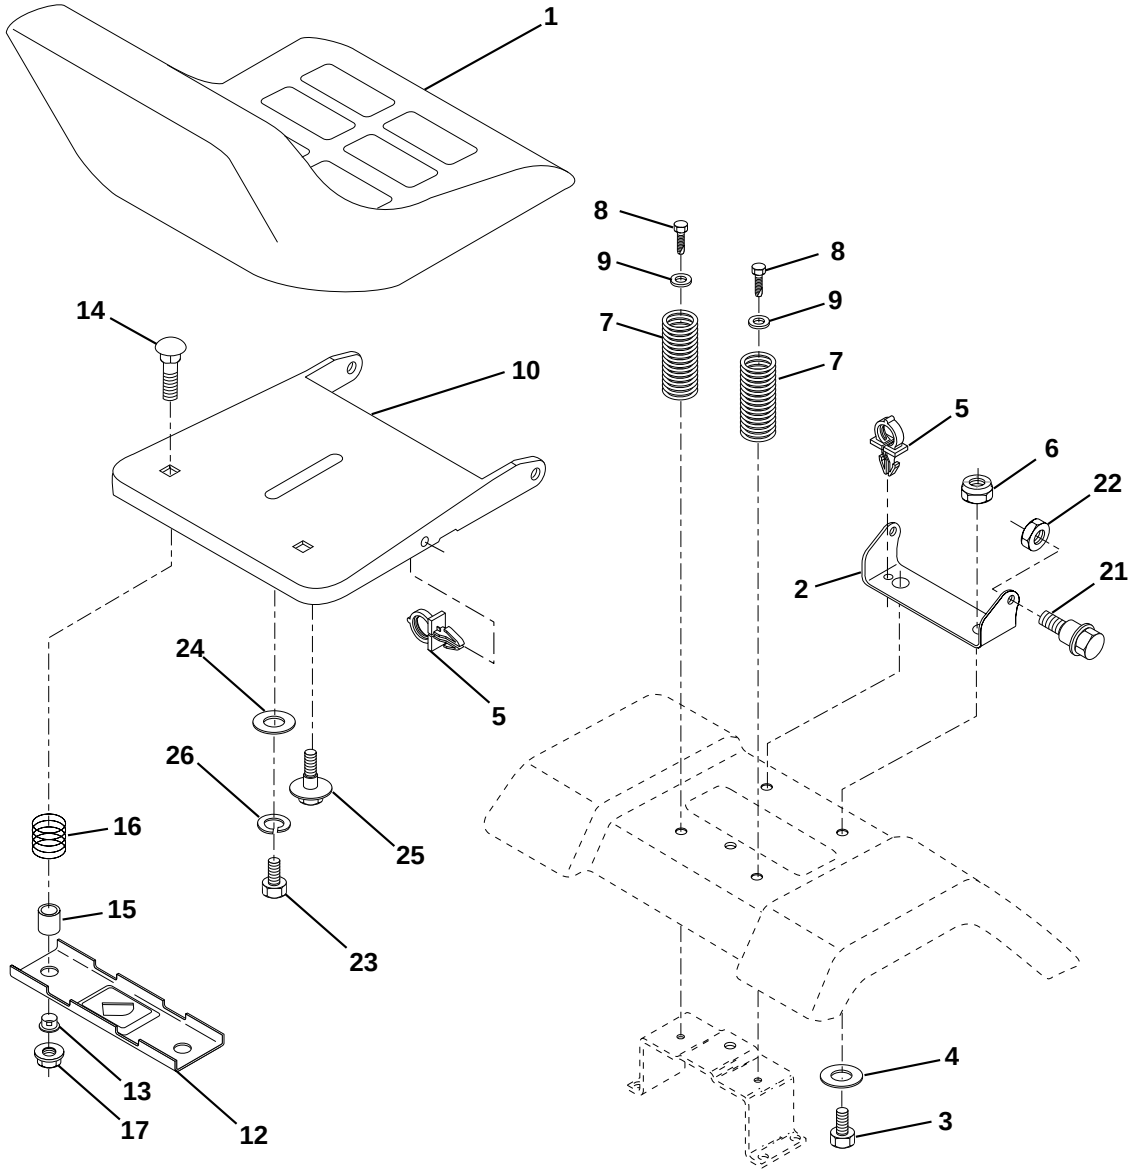

KEY NO.	PART NO.	DESCRIPTION
1	532140838	Seat
2	532140551	Bracket Pivot Seat 8 720
3	874760616	Bolt Fin Hex 3/8-16unc X 1
4	819131610	Washer 13/32 X 1 X 10 Ga
5	532145006	Clip Push-In
6	873800600	Nut Hex w/Ins. 3/8-16 Unc
7	532124181	Spring Seat Cprsn 2 250 Blk Zi
8	817490616	Screw Thdrol 3/8-16 X 1 Ty-tt
9	819131614	Washer 13/32 X 1 X 14 Ga.
10	532155925	Pan Seat
12	532121246	Bracket Mounting Switch
13	532121248	Bushing Snap Blk Nyl 50 Id


KEY NO.	PART NO.	DESCRIPTION
14	872050412	Bolt Rdhd Sqnk 1/4-20x1-1/2
15	532134300	Spacer Split 28x 96 Yel Zinc
16	532121250	Spring Cprsn 1 27 Blk Pnt
17	532123976	Nut Lock 1/4 Lge Flg Gr 5 Zinc
21	532153236	Bolt Shoulder 5/16-18 Unc
22	873800500	Nut Hex Lock W/Ins 5/16-18
23	874780814	Bolt, Hex Head, Fin 1/2-13 x 7/8 Grade 5
24	819171912	Washer 17/32 X 1-3/16 X 12 Ga.
25	532127018	Bolt Shoulder 5/16-18 X 62
26	810040800	Washer Lock

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

DECALS

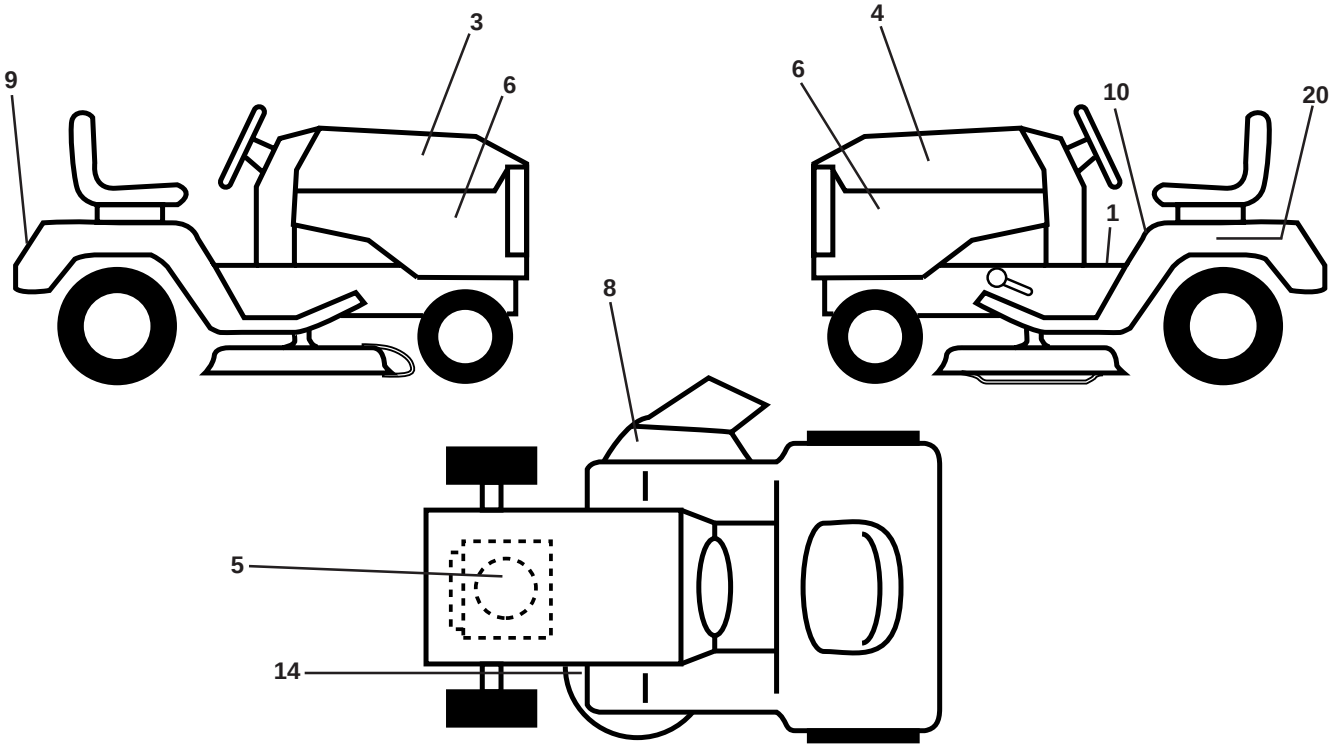


KEY NO.	PART NO.	DESCRIPTION
1	532156369	Decal Oper. Step Thru Eng/Fr
3	532157189	Decal Hood RH
4	532157191	Decal Hood LH
5	532272440	Decal HP Engine
6	532159713	Decal Pnl Side
8	532137259	Decal Warning
9	532150617	Decal Fender Husq
10	532157140	Decal Fender Danger Eng/Fr
14	532136832	Decal V-Belt Schematic
20	532145005	Decal Bat Dan/Psn

KEY NO.	PART NO.	DESCRIPTION
- -	532154515	Pad Footrest LH STLT
- -	532154516	Pad Footrest RH STLT
- -	532138311	Decal Handle Lft Height Adjust
- -	532161094	Manual Owner's (English)
- -	532161095	Manual Owner's (French)

Available accessories not included with tractor:

- -	MK380	Mulcher Kit with Blades
- -	C38	Grass Catcher

WHEELS & TIRES

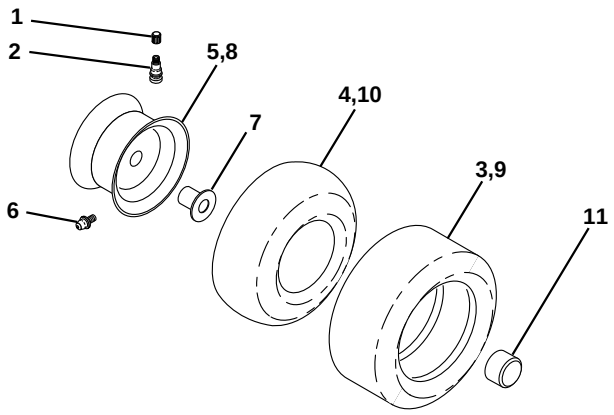


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap Valve Tire
2	532065139	Stem Valve
3	532106222	Tire F Ts 15 X 6 0 - 6 Service
4	532059904	Tube Front (Service Item Only)
5	532138336	Rim Asm 6"front Silver Service
6	532124957	Fitting Grease (Front Wheel Only)
7	532124959	Bearing Flange (Front Wheel Only)
8	532138337	Rim Asm 8"rear Silver Service
9	532124635	Tire R Ts 18x8 5-8 C Service
10	532124926	Tube Rear (Service Item Only)
11	532104757	Cap Axle Blk 1 50 X 1 00
- -	532144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

ENGINE

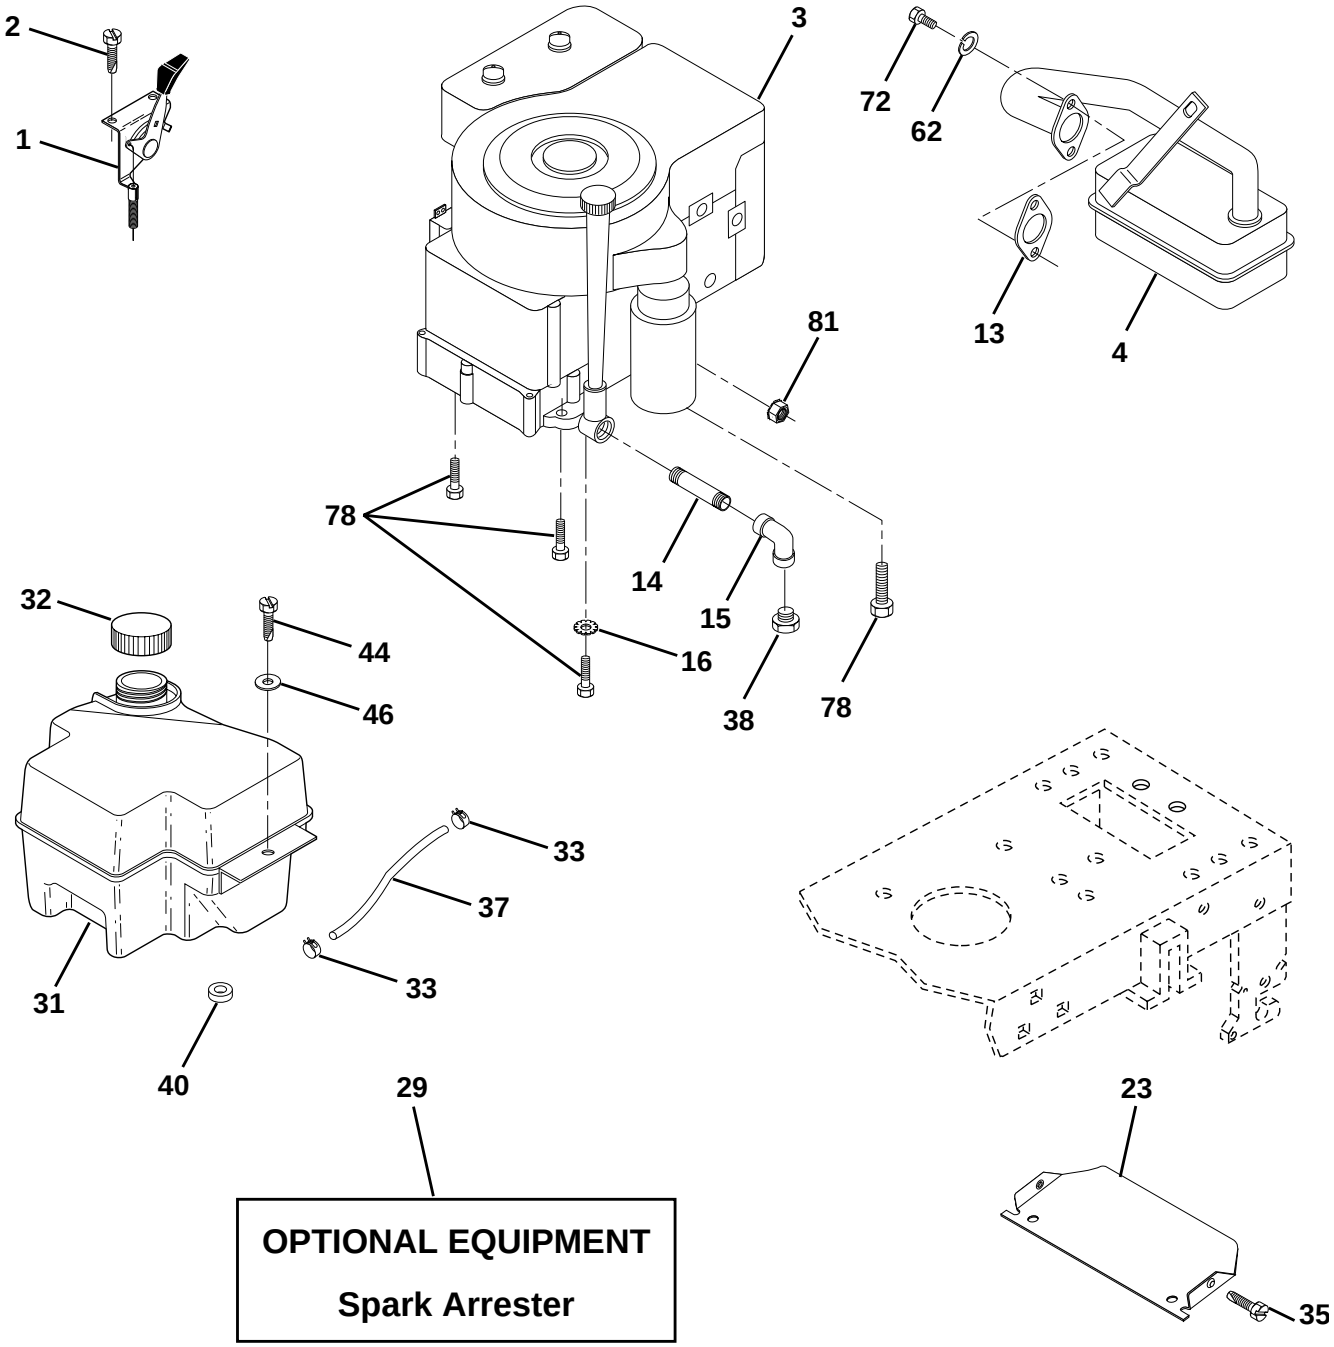

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

ENGINE


KEY NO.	PART NO.	DESCRIPTION
1	532140310	Control Th/ch 23 5 LH Flag
2	817720410	Screw Hex Thd Cut 1/4-20x5/8 T
3	- - - - - - - -	Engine, Briggs 285707
4	532137348	Muffler LT B&S 12/12.5/13HP
13	532272293	Gasket Eng 1 313 Id Tin Plated
14	813280324	Nipple Pipe 3/8 Npt X 3"
15	813200300	Elbow Std 90 Degree 3/8-18 Npt
16	811050600	Washer Lock Ext Tooth 3/8
23	532156123	Shield Heat
29	532137180	Kit Spark Arrestor (Flat Scrn)
31	532140280	Tank Fuel Front 2 00
32	532140527	Cap Asm Fuel W/sym Vented
33	532123487	Clamp Hose Black
35	817490512	Screw
37	532137040	Line Fuel 20"
38	- - - - - - - --	Plug Oil Drain (Order From Engine Manufacturer)
40	532124028	Bushing Snap Nyl Blk Fuel Line
44	817490412	Screw Hexwsh Thdrol 1/4-20x3/4
46	819091416	Washer 9/32 X 7/8 X 16 Ga
62	810040500	Washer Lock Hvy Hlcl Spr 5/16
72	871070512	Screw Hexhd Cap 5/16-18x 3/4
78	817490620	Screw Thdrol 3/8-16x1-1/4 TYTT
81	532128861	Nut Flange 1/4-20 Starter Nut

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

MOWER DECK

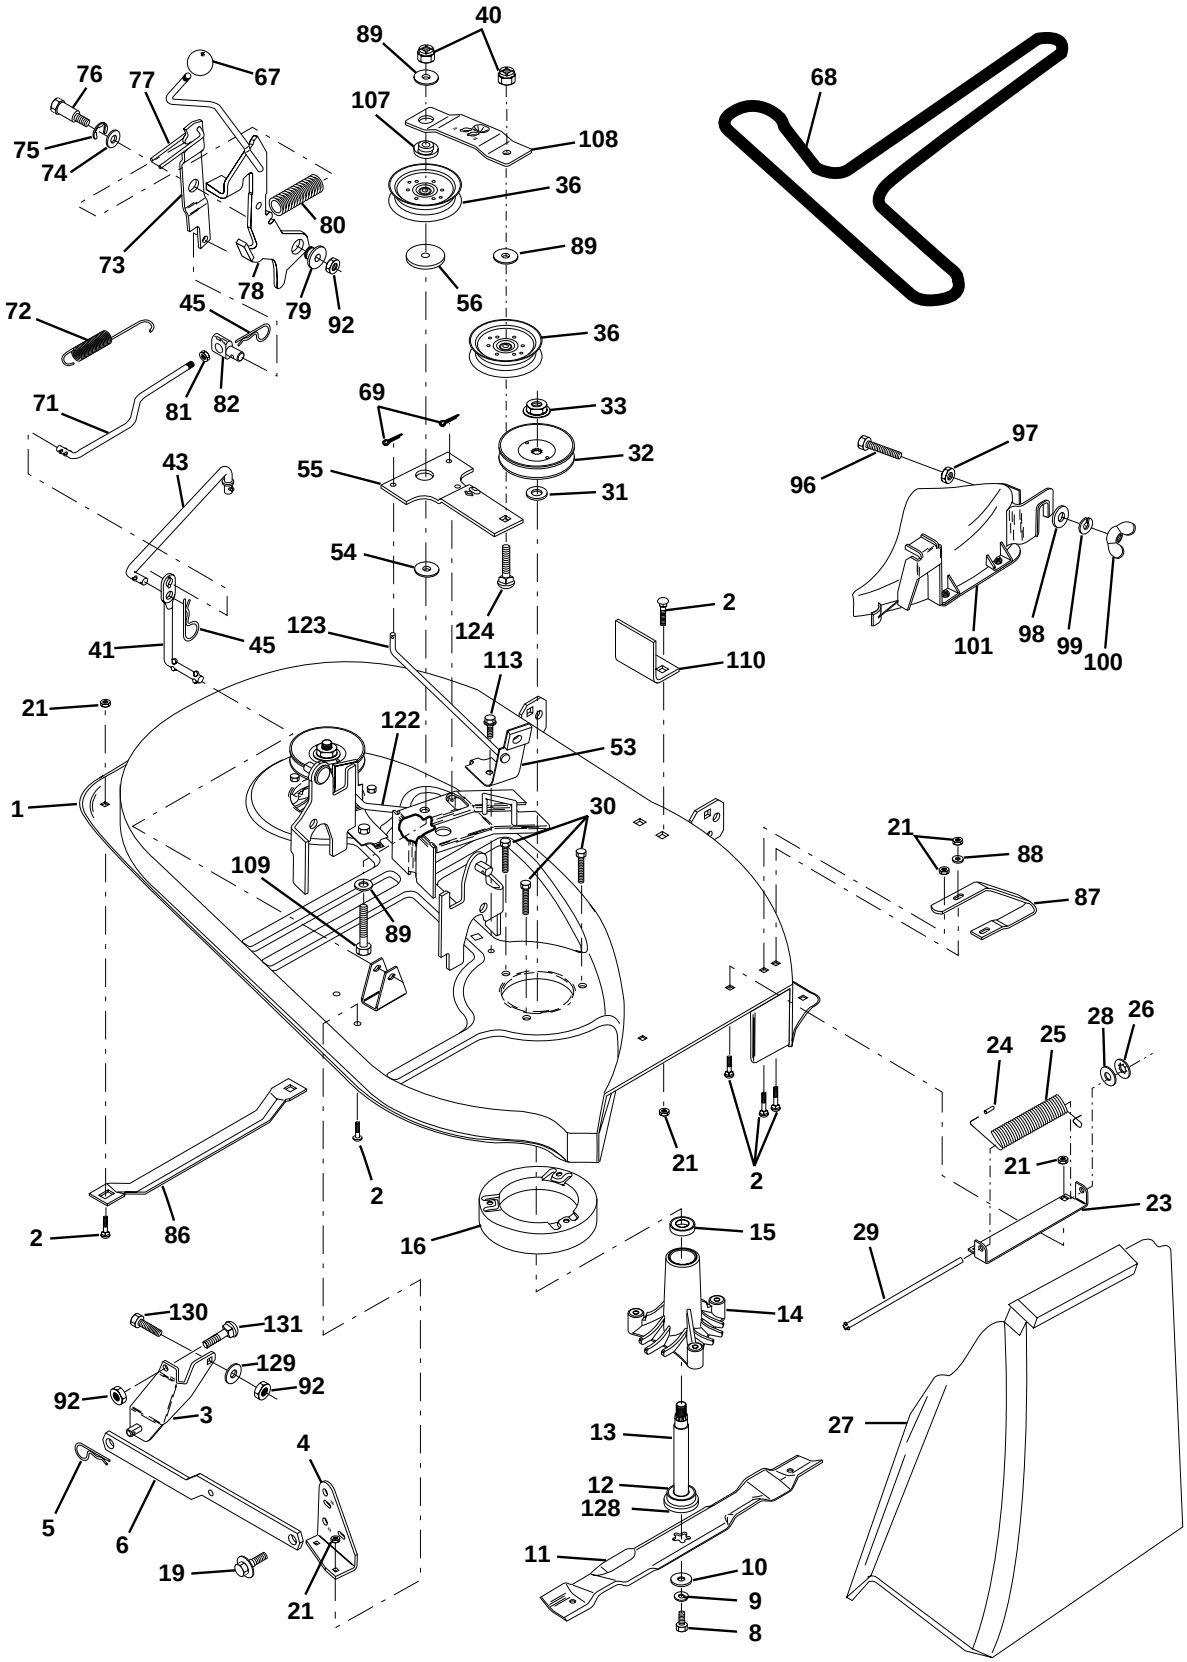

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

MOWER DECK


KEY NO.	PART NO.	DESCRIPTION
1	532142829	Deck Asm Weldment
2	872140506	Bolt Rdhd Sqnk 5/16-18unc X3/4
3	532138017	Bracket Asm Fr Sway Bar 38/42
4	532138440	Bracket Asm Deck Sway Bar
5	532124670	Retainer Spring
6	532130832	Arm Suspension Rear
8	532850857	Bolt 3/8 - 24 X 1.25 Gr 8
9	810030600	Washer Lock Hvy 3/8
10	532140296	Washer Hard Blade Mower Vented
11	532134148	Blade Mower Mulching 38"
12	532129895	Bearing Ball #6024 (Mandrel)
13	532137645	Shaft Asm W/lower Bearing
14	532128774	Housing Mandrel Vented
15	532110485	Bearing Ball Mandrel
16	532140329	Stripper Mower Vented
19	532132827	Bolt Shoulder
21	873680500	Nut Crownlock 5/16-18 UNC
23	532137607	Bracket Deflector Mower
24	532105304	Cap Sleeve 80x 112 Blk Mower
25	532123713	Spring Torsion Deflector 2 52
26	532110452	Nut Push Phos & Oil
27	532106736	Shield Deflector
28	819111016	Washer 11/32 X 5/8 X 16 Ga
29	532106735	Rod Hinge
30	532157722	Screw Thdrol Rolling Washer Head
31	532129963	Washer Spacer Mower Vented
32	532153532	Pulley Mandrel
33	532137266	Nut 9/16 Toplock Flng Oil Dip
36	532131494	Pulley Idler Flat 3 060
40	873680600	Nut Crownlock 3/8-16 UNC
41	532133551	Rod Pivot W/nibs
43	532133504	Rod Clutch Secondary
45	532124788	Spring Retainer 1" Zinc/cad
53	532130840	Asm Brake
54	532133943	Washer Hardened
55	532133840	Arm Idler
56	532122052	Spacer Retainer Pm Mower
67	532106932	Knob Rd 3/8-16 Plstc Thds Blk
68	532144200	V-Belt Mower
69	876020312	Pin, Cotter 3/32 x 3/4
71	532142427	Rod Clutch Primary 38/42
72	532131870	Spring Return
73	532127847	Arm Clutch Secondary
74	532121748	Washer 25/32 X 1-5/8 X 16 Ga
75	812000029	Ring Klip #t5304-75
76	532128903	Bolt Shoulder 3/8-16 Unc 1 44
77	532127845	Keeper Spring 4 000
78	532154809	Arm Asm Clutch Primary
79	532127498	Bushing 747 Od X 794 Lg Brass
80	532153701	Spring Clutch Mower
81	873350600	Nut Hex Jam 3/8-16
82	532142028	Trunnion Adj 94
86	532125074	Runner, LH
87	532128772	Runner, RH
88	819111216	Washer 11/32 x 3/4 x 16 Ga.
89	819131612	Washer 13/32 x 1 x 12 Ga.
92	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
96	874930620	Bolt 3/8-16 x 1-1/4 Mulcher
97	873930600	Nut Crownlock 3/8-16 UNC
98	819132016	Washer 13/32 x 1-1/4 x 16 Ga.
99	810040600	Washer Lock Hvy Hlcl Spr 3/8
100	532135651	Nut Wing
101	532132803	Cover Asm Mulching 38"
107	532133502	Spacer, Retainer
108	532133503	Stiffener, Idler Arm
109	874760640	Bolt, Hex Head 3/8-16 x 2-1/2
110	532142587	Upstop Deck Front 38"
113	817490512	Screw Thdrol 5/16-18 X 3/4
122	532131289	Rod, Brake, LH
123	532131288	Rod, Brake, RH
124	872110614	Bolt, Carriage 3/8-16 x 1-3/4
128	532153390	Washer Felt
129	819131312	Washer 13/32 x 13/16 x 12 Ga.
130	874780616	Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5
131	872140608	Bolt, Rdhd Sqnk 3/8-16 x 1
- -	532130794	Mandrel Asm Service (Includes Key Nos. 8-10, 12-15, 31 and 33)
- -	532142820	Mower Deck Complete (Std. Deck - order separately mulcher plate components key nos. 96-101)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

MOWER LIFT

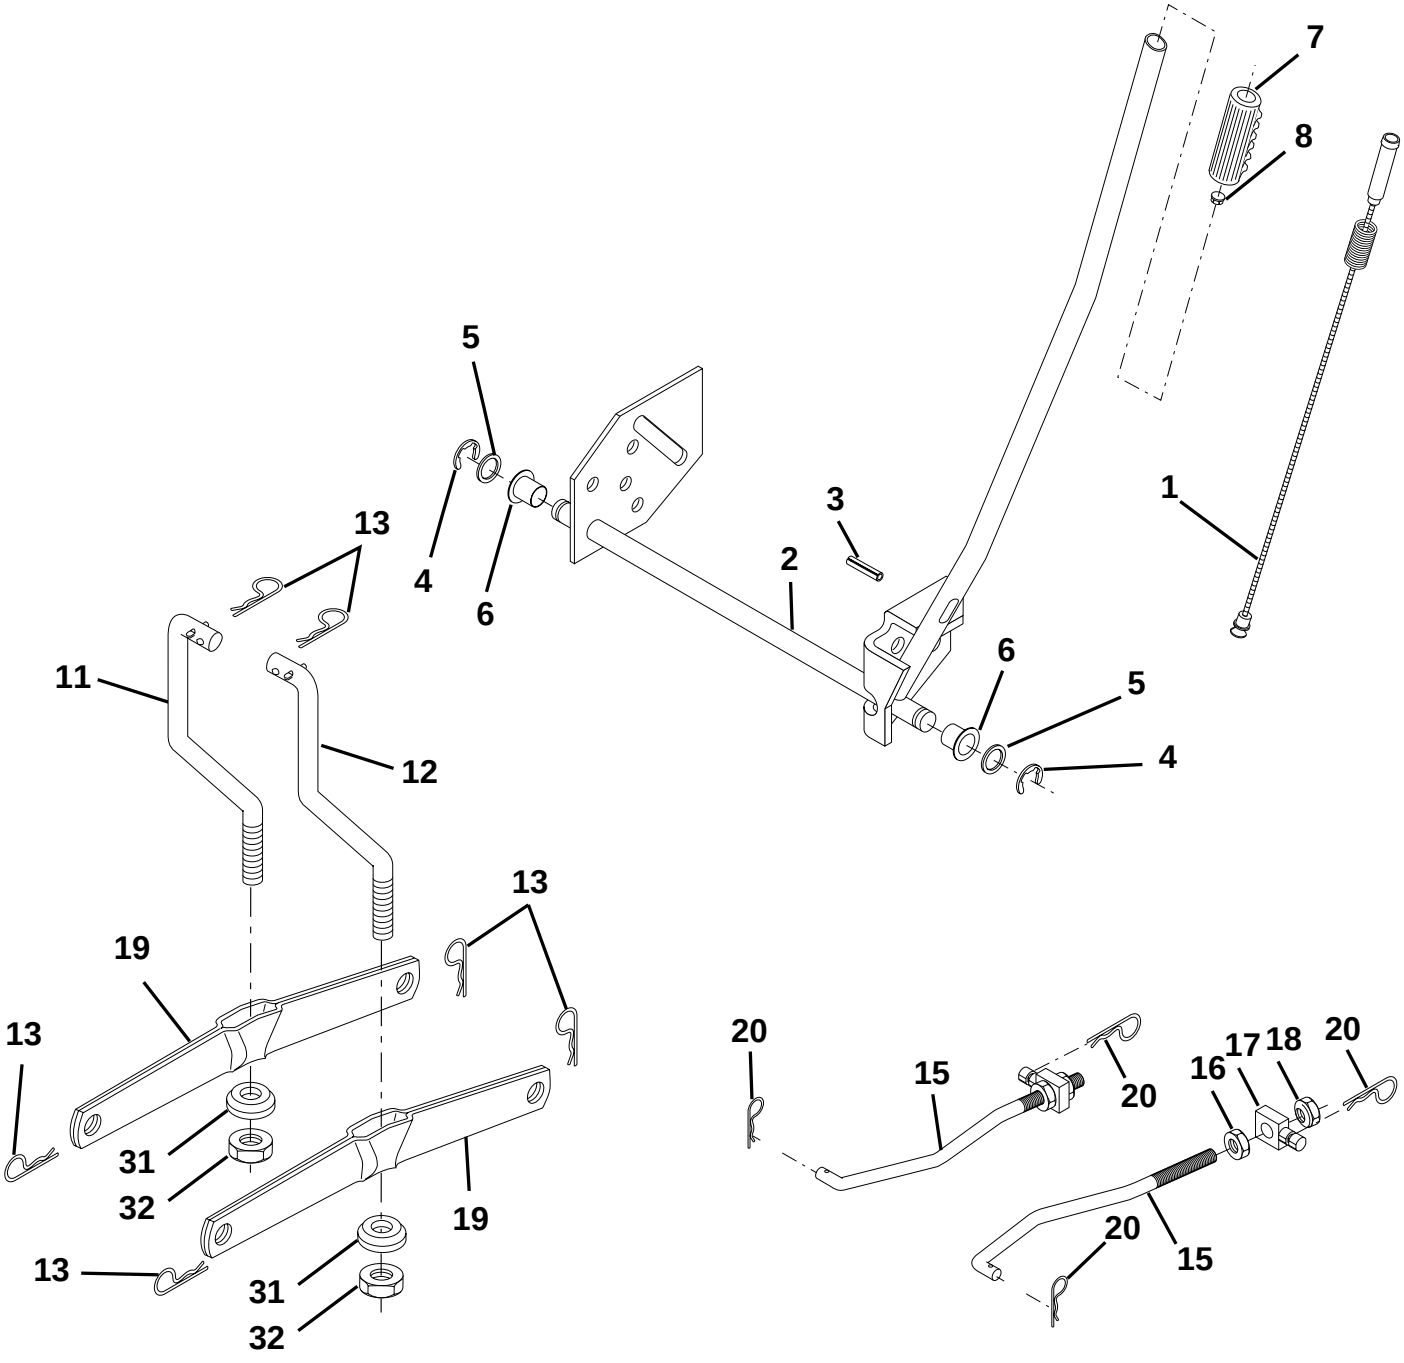

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

MOWER LIFT


KEY NO.	PART NO.	DESCRIPTION
1	532159460	Wire Asm Inner W/plunger LT
2	532159471	Shaft Asm Lift
3	532105767	Pin Groove
4	812000002	E Ring #5133-62
5	819211621	Washer PLTD 21/32 X 1 X 21ga
6	532120183	Bearing Nylon Blk 629 Id
7	532109413	Grip Handle Bicycle
8	532124526	Button Plunger Black
11	532139865	Link Lift LH
12	532139866	Link Lift RH
13	532124670	Retainer Spring
15	532127218	Link Front
16	873350800	Nut Jam Hex 1/2-13 Unc
17	532130171	Trunnion Blk Zinc
18	873800800	Nut Lock W/wsh 1/2-13unc
19	532139868	Arm Suspension Rear
20	532124660	Spring, Retainer
31	532140302	Bearing Pvt. Lift Spherical
32	873540600	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

PEERLESS TRANSAXLE - MODEL NUMBER 930-054A

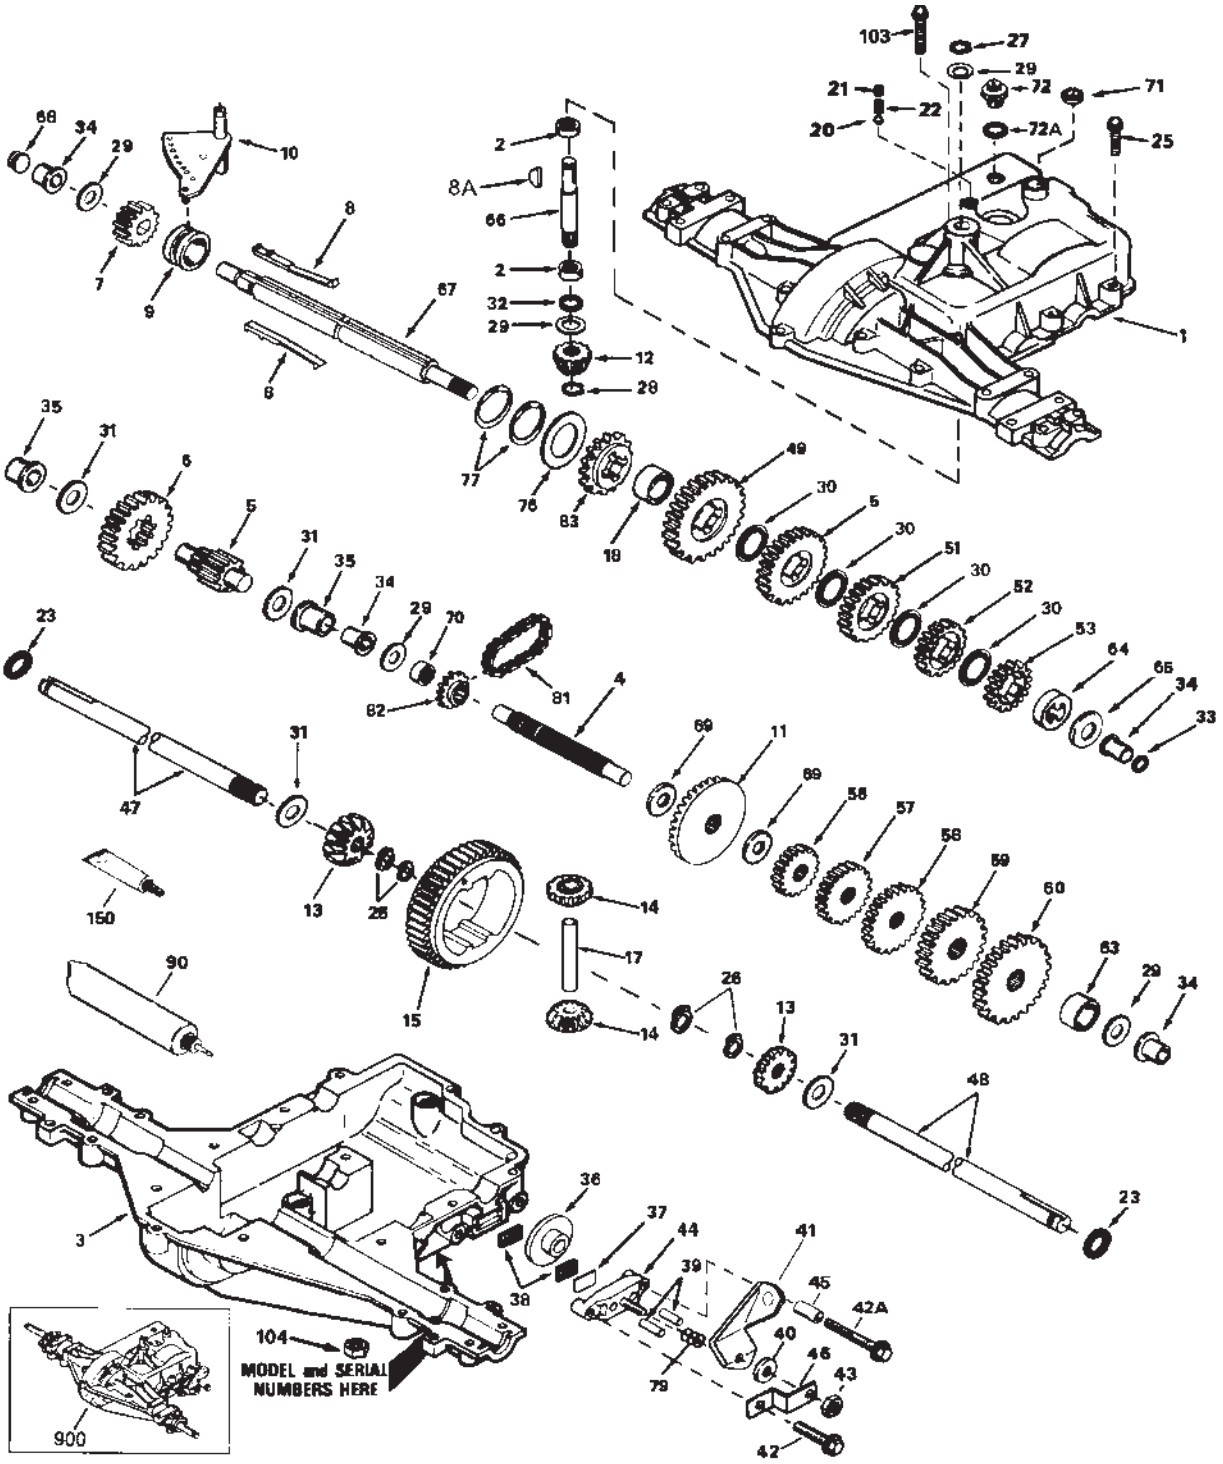

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002B), PRODUCT NO. 954 14 00-02

PEERLESS TRANSAXLE - MODEL NUMBER 930-054A

REF NO.	PART NO.	DESCRIPTION
1	772108A	Cover, Transaxle
2	780086	Bearing, Needle
3	770102A	Case, Transaxle
4	776260	Shaft, Counter
5	776219B	Shaft and Pinion Assembly, Output
6	778139	Gear, Output
7	778136	Gear, Spur, 15 Teeth
8	792136A	Key, Shift
8A	792047	Key, Woodruff
9	784352	Collar, Shifter
10	784355	Rod and Fork Assembly, Shift
11	778229	Gear, Bevel, 42 Teeth
12	778113A	Bevel Pinion, Input
13	778221	Gear, Bevel
14	778068	Gear, Bevel Pinion
15	778260	Gear, Ring
17	786139	Pin, Drive
18	786102	Spacer, Neutral
20	792077	Ball, Steel 5/16" diameter
21	792078	Set Screw 3/8-16 x 3/8
22	792079	Spring
23	788061	Ring, Seal
25	792073	Screw, Flanged Hex Head, Thread Forming 1/4-20 x 1-1/4
26	792125	Ring, Retainer (4 Required, Package of 2)
27	792035	Ring, Retainer
28	788040	Ring, Retainer
29	780072	Washer, Thrust
30	780108	Washer, Thrust
31	780001	Washer
32	792001	"O" Ring
33	788095	Seal, Square Cut
34	780105A	Bushing, Flanged
35	780118A	Bushing, Flanged
36	790003	Disk, Brake
37	790007	Plate, Brake Pad
38	799021	Pad, Brake
39	786026	Pin, Dowel
40	792076A	Washer, Flat
41	790079	Lever, Brake
42	792073	Screw, Flanged Hex Head, Thread Forming 1/4-20 x 1-1/4
42A	792085A	Screw 1/4-20 x 2-1/4
43	792075	Locknut 5/16-24
44	790025	Holder, Brake Pad
45	786066	Spacer
46	786086	Bracket, Brake Lever
47	774690	Axle 11-5/16" long
48	774691	Axle 16-1/2" long
49	778215	Gear, Spur, 37 Teeth, Steel (1st)
50	778124A	Gear, Spur, 30 Teeth (2nd)
51	778123A	Gear, Spur, 25 Teeth (3rd)
52	778122A	Gear, Spur, 22 Teeth (4th)
53	778273	Gear, Spur, 19 Teeth, Steel (5th)
56	778230	Gear, Spur, 12 Teeth (1st)
57	778126A	Gear, Spur, 20 Teeth (2nd)
58	778127A	Gear, Spur, 25 Teeth (3rd)
59	778128A	Gear, Spur, 28 Teeth (4th)
60	778163	Gear, Spur, 31 Teeth (5th)
63	786071	Spacer
64	786072	Spacer
65	780109	Washer, Thrust
66	776135	Shaft, Input
67	776315A	Shaft, Brake, 4 Keyed
68	786116A	Plug
69	780051	Washer, Thrust
70	786118	Spacer
71	788069	Seal, Square Cut
72	792165	Plug, Threaded 9/16-18
72A	788091	"O" Ring
76	780090	Washer, Thrust
77	788078A	Ring, Retaining, Inverted (Package of 2)
79	792144	Spring, Brake
81	786081	Chain, Roller (Number 41 Chain, 24 Links)
82	786082	Sprocket, 9 Teeth (Reverse)
83	786123	Sprocket, 18 Teeth (Reverse)
90	788067B	Grease, Bentonite, 32 Ounce Bottle
103	792166	Screw 1/4-20 x 2
104	792167	Locknut 1/4-20
150	510334	Gasket Eliminator (Loctite #515)
900	794528A	Replacement Transaxle

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Parts must be ordered from Tecumseh Products Co.