
Husqvarna

7

LT 120

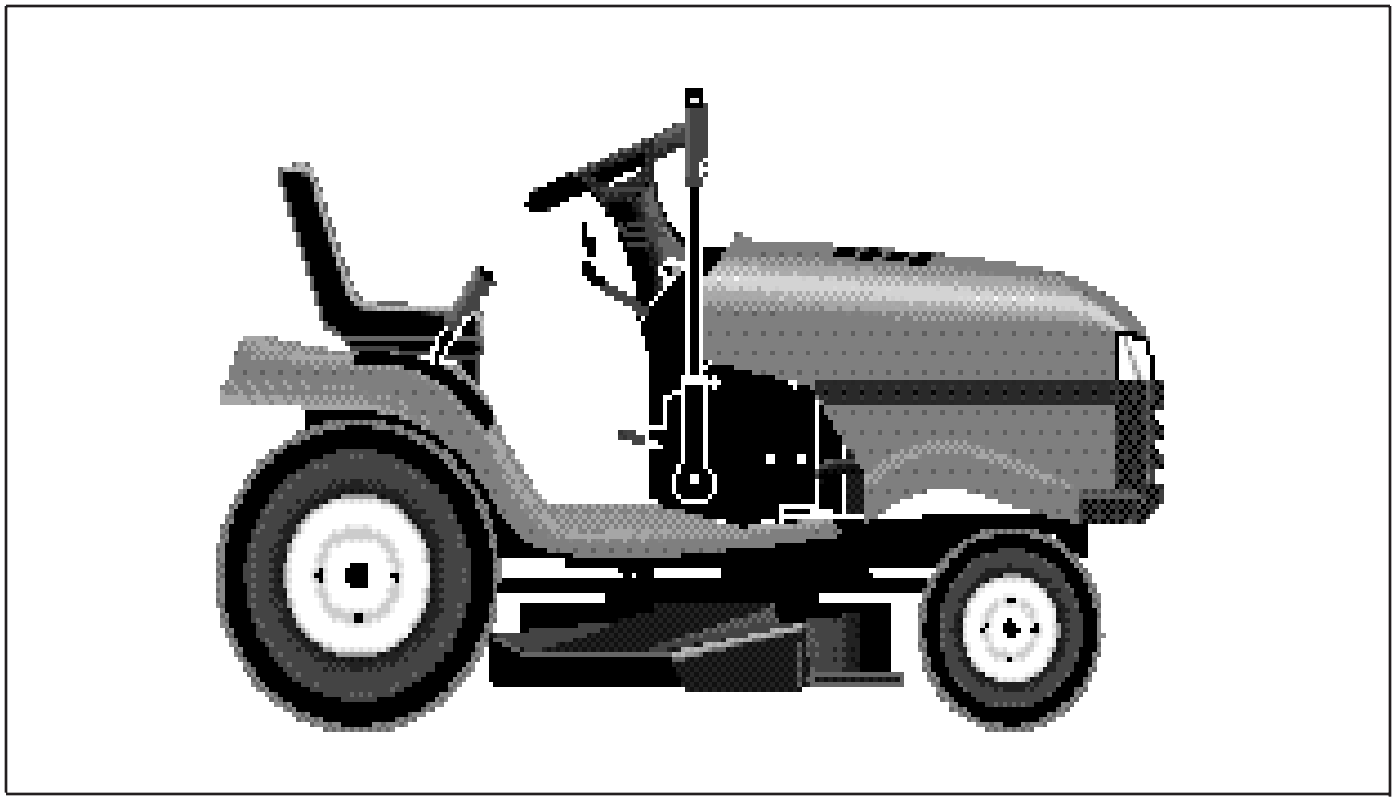


1.1997

Spare Parts

954 14 00-02A

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

SCHEMATIC

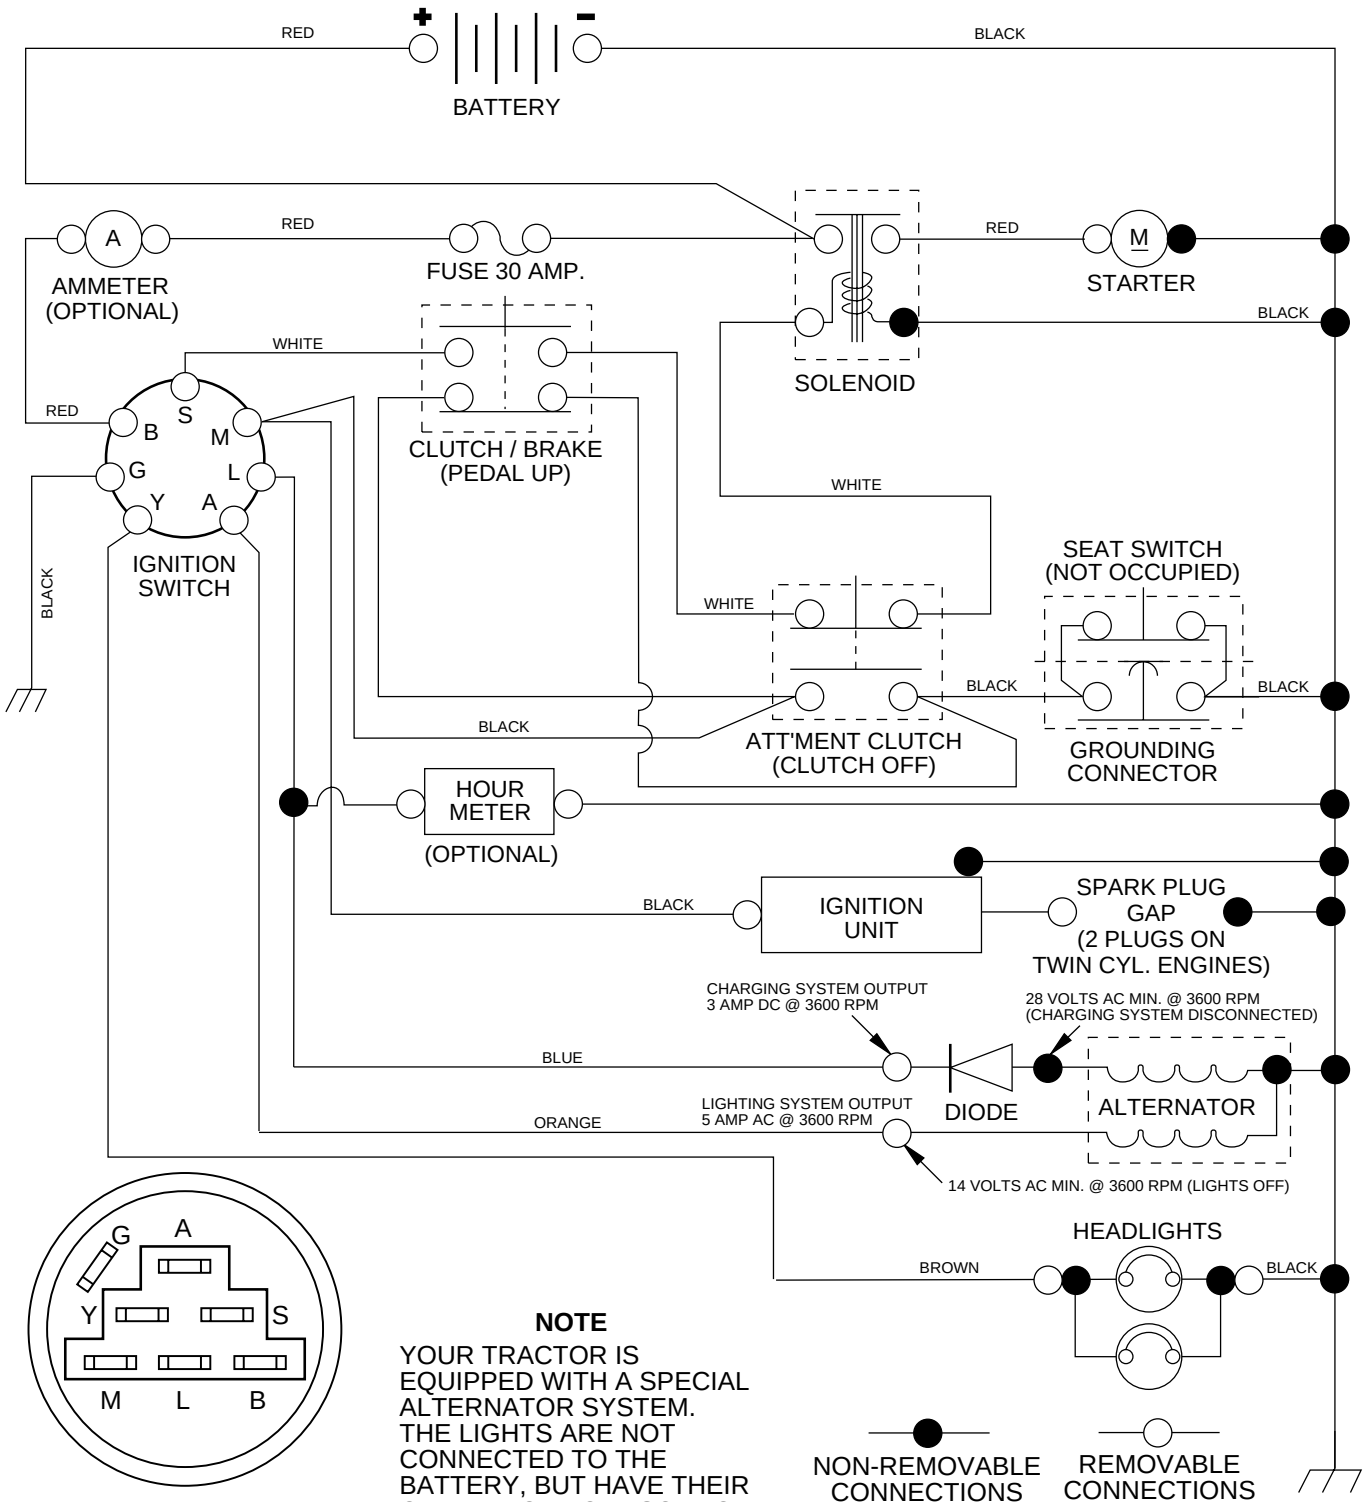

IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	G + M + L	NONE
RUN/LIGHT	B + L	A + Y
RUN	B + L	NONE
START	B + L + S	NONE

NOTE

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.


WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

ELECTRICAL

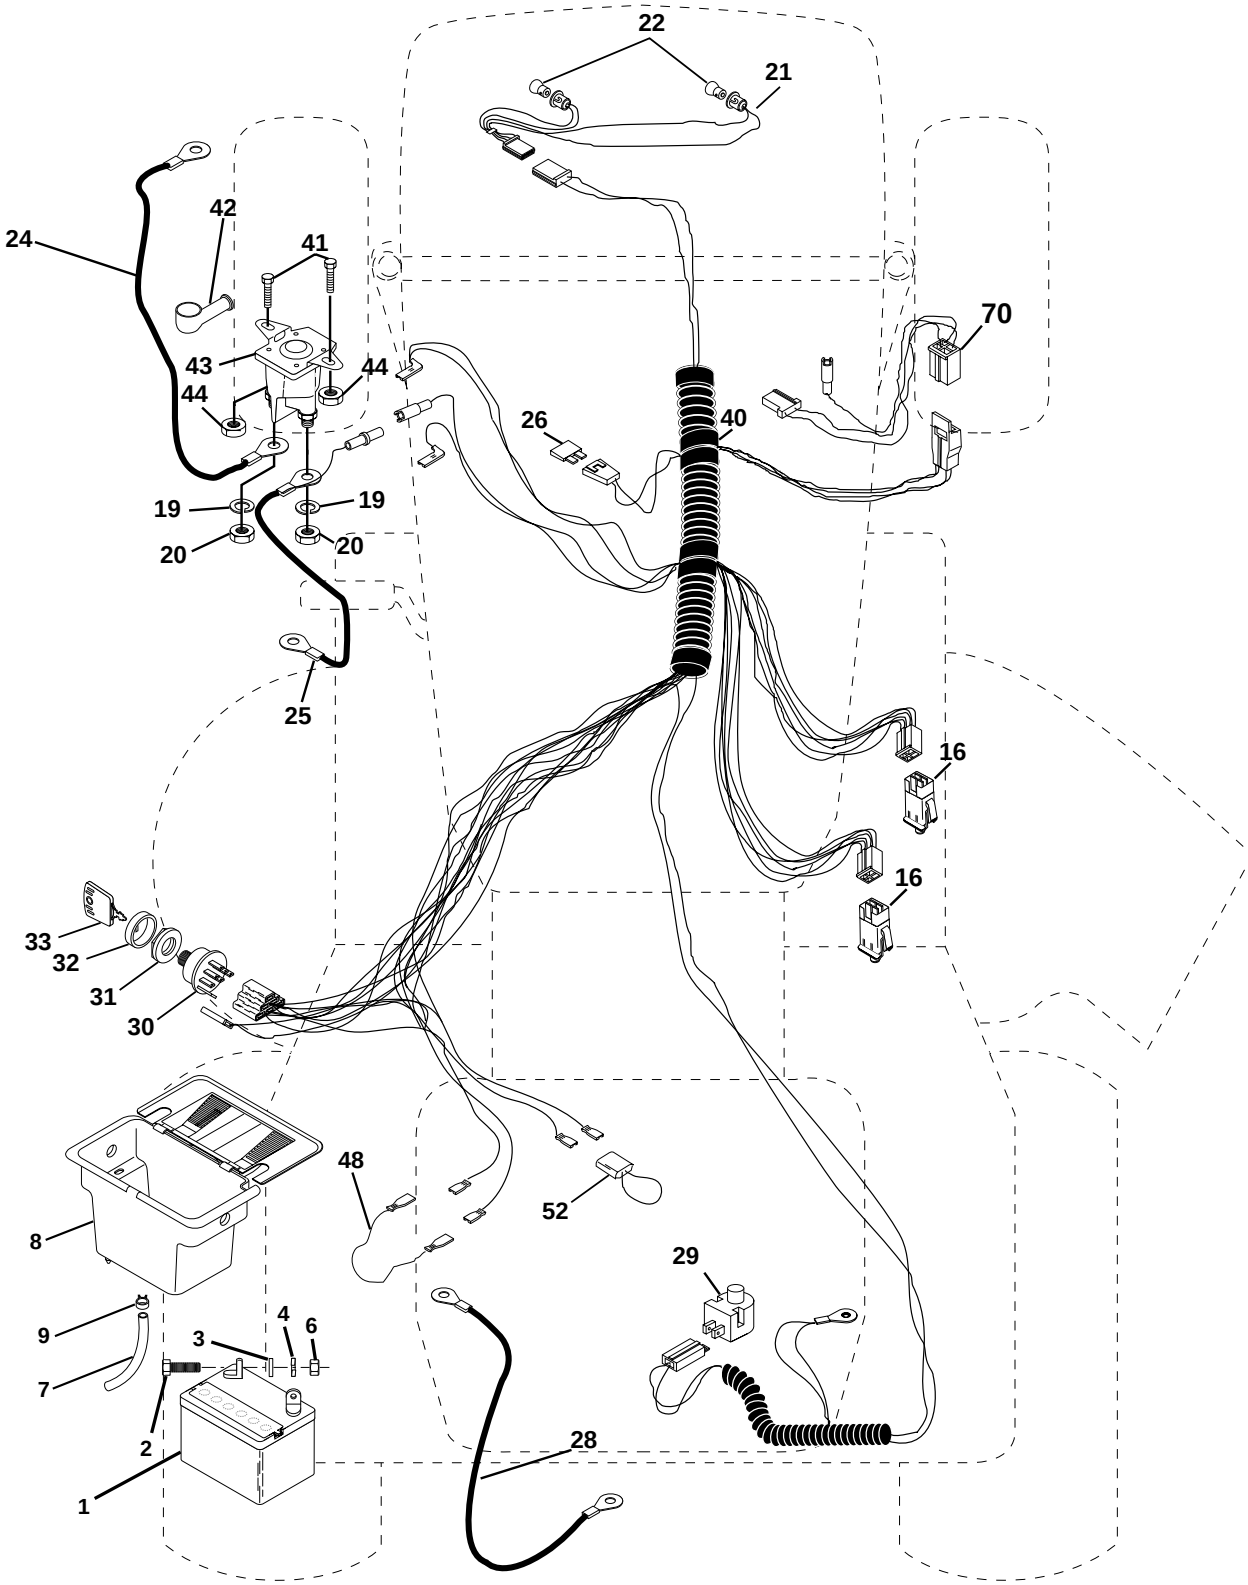

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

ELECTRICAL


KEY NO.	PART NO.	DESCRIPTION
1	532 14 61-39	Battery 12 Volt 25 AMP
2	874 76 04-12	Bolt Hex Hd 1/4-20unc X 3/4
3	819 09 10-16	Washer 9/32 X 5/8 X 16 Ga.
4	810 04 04-00	Washer Lock Hvy Helical 1/4
6	873 22 04-00	Nut Fin Hex 1/4-20 Unc
7	532 10 92-38	Tube Plastic 12"
8	532 15 64-17	Case Battery Mech Hinge
9	532 10 95-96	Clamp Hose Olive
16	532 15 36-64	Switch Interlock Push-In
19	810 09 04-00	Washer Lock 1/4
20	873 35 04-00	Nut Jam Hex 1/4-20 Unc
21	532 13 68-50	Harness Asm Light W/4152j
22	532 00 41-52	Bulb Light #1156
24	532 12 47-80	Cable Battery 6 Ga 11" red
25	532 14 61-47	Cable Battery 6 Ga 44" red w/16 wire
26	532 10 88-24	Fuse 30 AMP Auto Green
28	532 12 47-73	Cable Ground 6 Ga 12" black
29	532 12 13-05	Switch Plunger Nc Gray
30	532 14 03-01	Switch Ign 4 pos w/lights
31	532 12 42-11	Nut Ignition
32	532 14 12-26	Cover Sw Ignition
33	532 12 21-47	Key Ign Modelled Generic
40	532 15 64-42	Harness Ign.
41	871 11 04-08	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532 13 15-63	Cover Terminal Red
43	532 14 56-73	Solenoid
44	873 64 04-00	Nut Keps Hex 1/4-20 Unc
48	532 14 08-44	Adapter Ammeter Rectangular
52	532 14 19-40	Protection Wire Loop
70	532 14 04-13	Harness, Eng. B&S/Tec Dual

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

CHASSIS AND ENCLOSURES

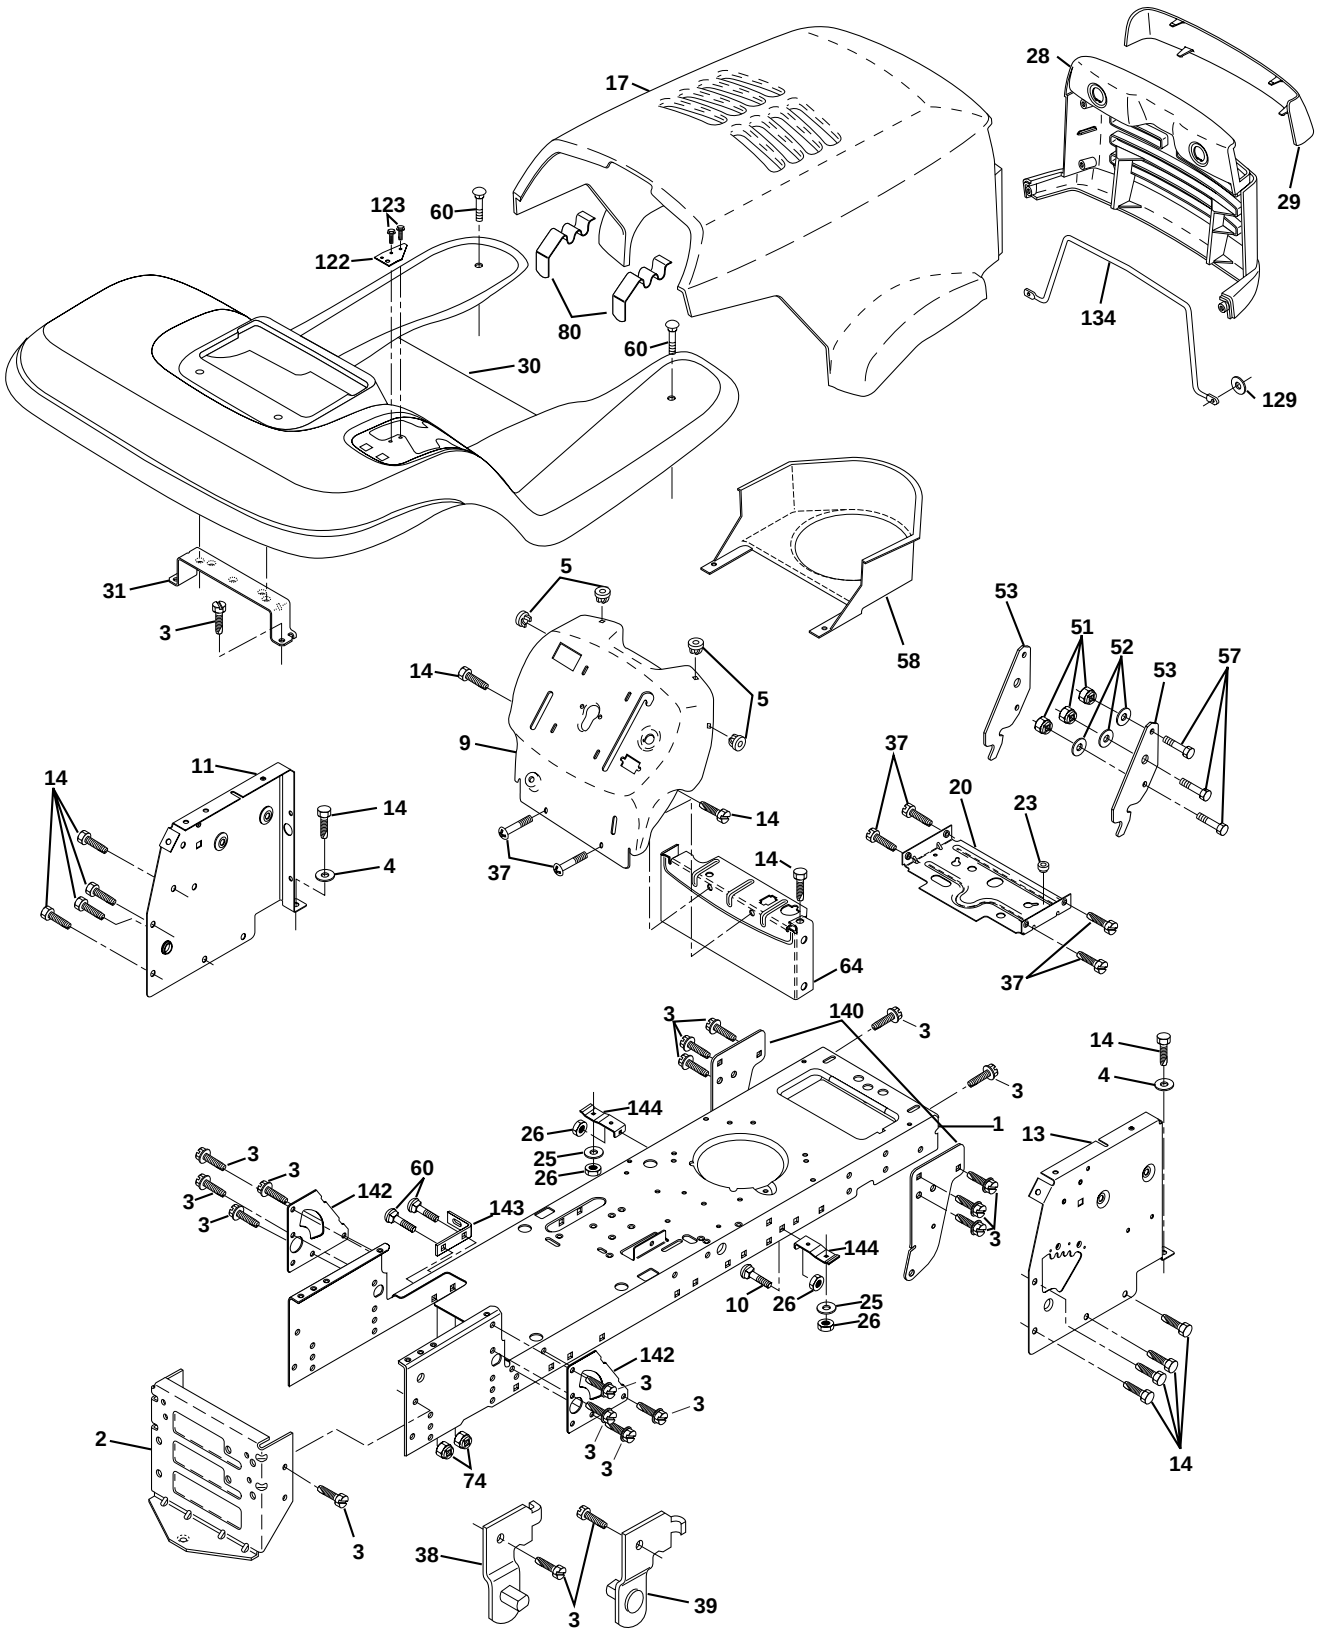

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

CHASSIS AND ENCLOSURES


KEY NO.	PART NO.	DESCRIPTION
1	532 15 38-71	Chassis Weldment
2	532 14 03-56	Drawbar, Stretch
3	817 49 06-12	Screw Thdrol 3/8-16x3/4 Ty-tt
4	819 13 12-16	Washer 13/32 x 3/4 x 16 Ga.
5	532 15 52-72	Bumper Hood/Dash
9	532 15 72-61	Dash P/L M, N/AMM N/HM Grey
10	872 14 06-08	Bolt Carriage 3/8-16 x 1
11	532 15 59-27	Panel Dash Lh
13	532 15 72-62	Panel Dash Rh
14	817 49 06-08	Screw Thdrol 3/8-16x1/2 Ty-tt
17	532 15 60-51	Hood LT/PL Husqvarna
20	532 15 64-37	Plate Mtg Battery Fuel Tank Fr
23	532 12 40-28	Bushing
25	819 13 13-12	Washer 13/32 X 13/16 X 12 Ga
26	873 80 06-00	Nut Lock Hex W/Ins 3/8-16 Unc
28	532 14 97-76	Grille LT/PL Husqvarna
29	532 14 97-77	Lens LT/PL Husqvarna
30	532 15 64-89	Fender Footrest STLT Pnt
31	532 13 99-76	Bracket Support Fender
37	817 49 05-08	Screw Thdrol 6/16-18 x 1/2 TYT
38	532 13 98-86	Bracket, Asm. Pivot, L.H., Mower Rear
39	532 13 98-87	Bracket, Asm. Pivot, R.H., Mower Rear
51	873 80 04-00	Nut Lock Hex W/Ins 1/4-20
52	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
53	532 15 00-67	Bracket Pnt. Pick off LT/PL Husqvarna
57	874 78 04-12	Bolt Hex 1/4-20 x 3/4
58	532 15 01-27	Air Duct Engine P/L
60	872 14 06-06	Bolt Rdhd Sqnk 3/8-16unc x 3/4
64	532 15 47-98	Dash Lower STLT
74	873 68 06-00	Nut Crownlock 3/8-16 UNC
80	532 15 58-54	Latch Hood Plm Husqvarna
129	819 09 10-16	Washer 9/32 x 5/8 x 16 Ga.
134	532 15 01-32	Rod Support Hood LT/PL Husq.
140	532 15 05-56	Bracket Chassis Front 7 Ga.
142	532 15 60-95	Plate Reinforcement STLT
143	532 15 49-66	Bracket Swaybar Chassis
144	532 15 42-07	Bracket Pnt Footrest STLT
146	532 15 43-34	Screw Torx Hd Thd 5/16-18 UN-2A
- -	532 00 54-79	Plug Button

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

DRIVE

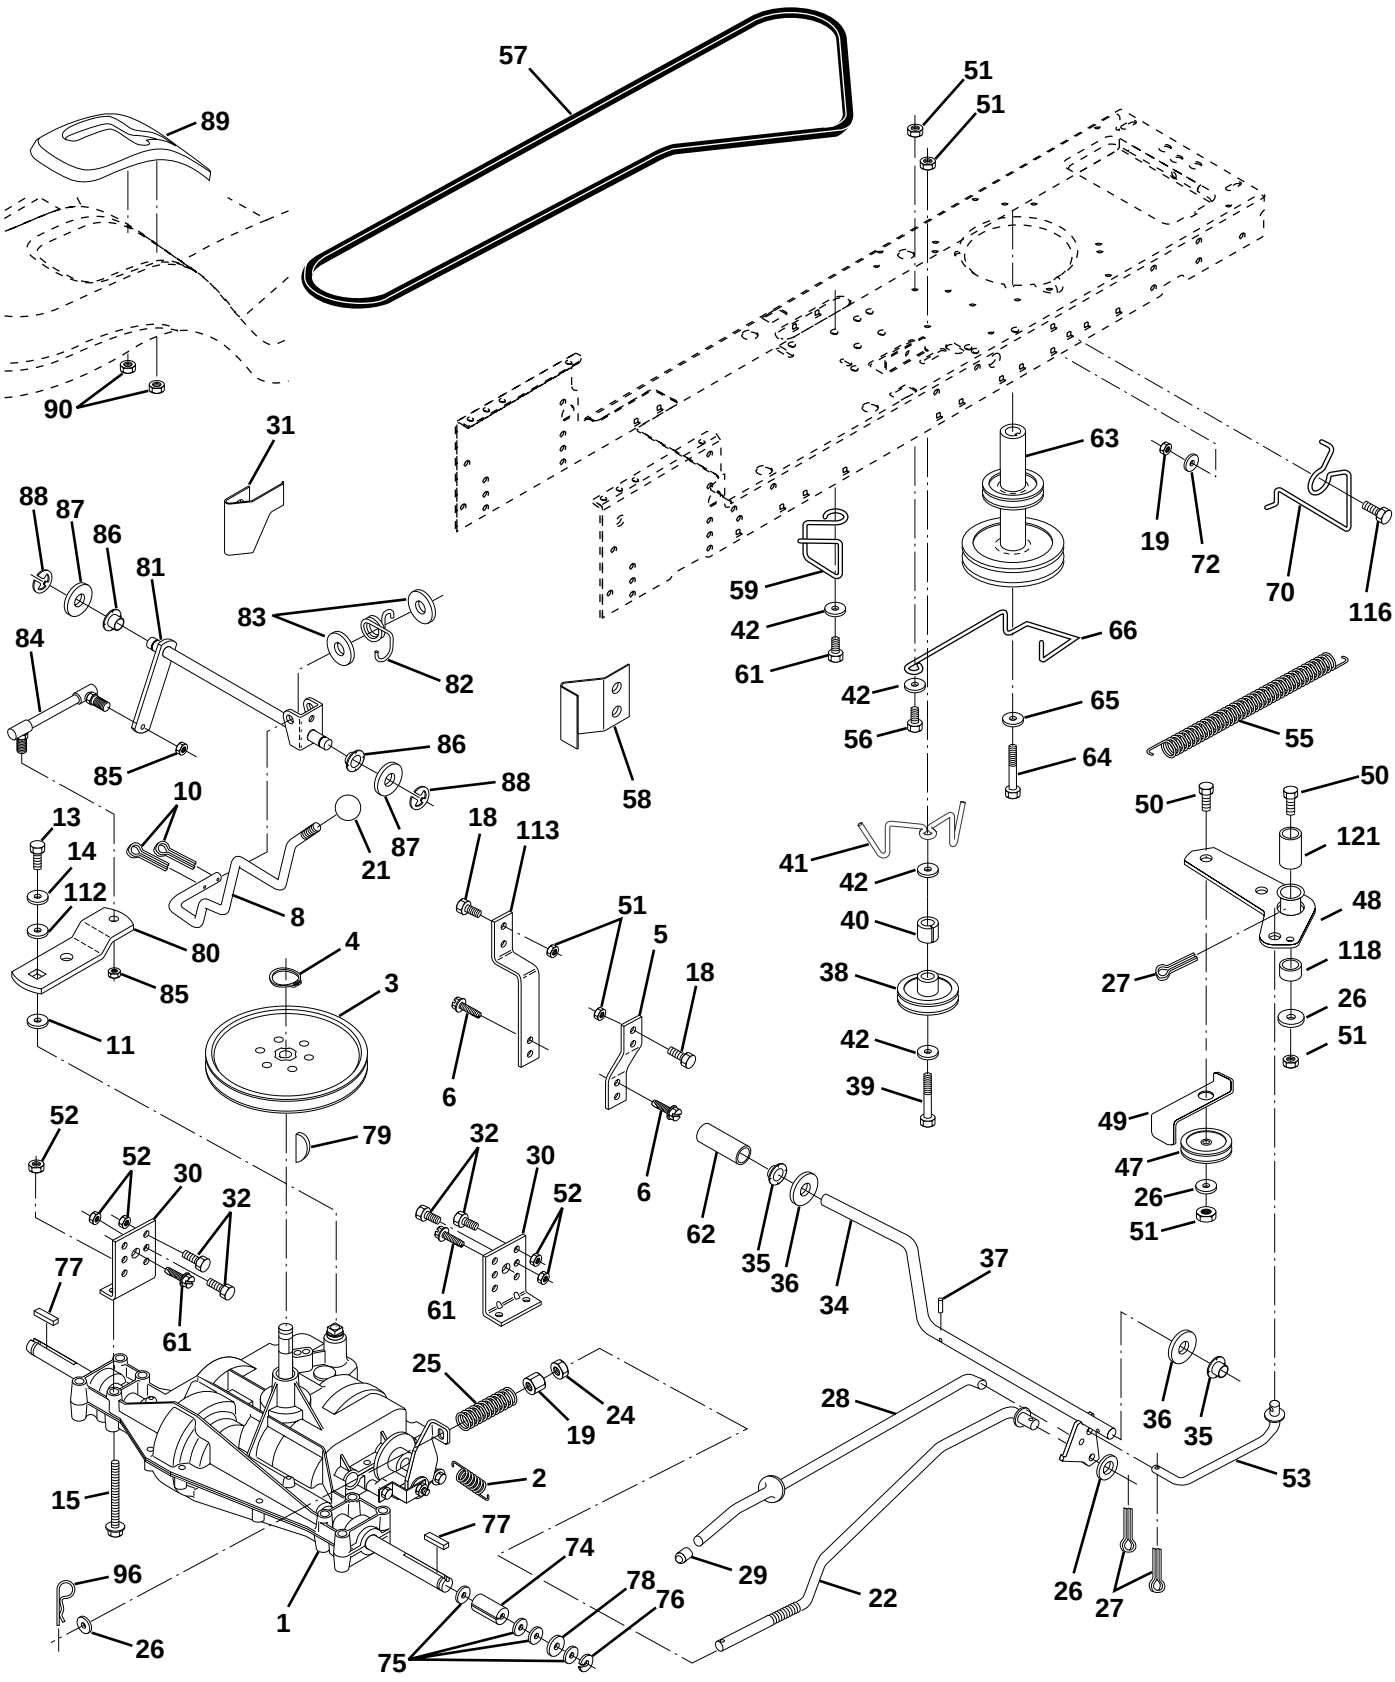

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

DRIVE


KEY NO.	PART NO.	DESCRIPTION
1	- - - - - - - - -	Transaxle (See Breakdown) Peerless 930-054A
2	532 14 66-82	Spring Return Brake T/a Zinc
3	532 12 36-66	Pulley Transaxle 18" tires
4	812 00 00-28	Ring Retainer # 5100-62
5	532 12 15-20	Strap Torque 30 Degrees
6	817 49 05-12	Screw Thdrol 5/16-18 X 3/4 TYT
8	532 15 47-92	Rod Shifter
10	876 02 04-16	Pin Cotter 1/8 X 1 Cad
11	532 10 57-01	Washer Plate Shf 388 Sq Hole
13	874 55 04-12	Bolt 1/4-28 Unf Gr 8 W/Patch
14	810 04 04-00	Washer Lock Hvy Helical 1/4
15	874 49 05-44	Bolt Hex 5/16-18 Gr. 5
18	874 78 06-16	Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5
19	873 80 06-00	Nut Lock 3/8-16 Unc
21	532 10 69-33	Knob
22	532 13 08-04	Rod Brake Blk Zinc 26 840
24	873 35 06-00	Nut Hex Jam 3/8-16 Unc
25	532 10 68-88	Spring Rod Brake 2 00 Zinc
26	819 13 13-16	Washer 13/32 X 13/16 X 16 Ga
27	876 02 04-12	Pin Cotter 1/8 X 3/4 Cad
28	532 14 52-04	Rod Brake Parking LT/YT
29	532 07 16-73	Cap Brake Parking Black
30	532 13 08-07	Bracket Mtg Transaxle
31	532 12 72-75	Keeper Belt LH LT 14 Ga
32	874 76 05-12	Bolt Hex Hd 5/16-18unc X 3/4
34	532 15 50-71	Shaft Asm Pedal Foot
35	532 12 01-83	Bearing Nylon Blk 629 Id
36	819 21 16-16	Washer 21/32 X 1 X 16 Ga
37	532 12 49-63	Pin Roll 3/16 X 1"
38	532 12 36-74	Pulley Idler Flat
39	874 76 06-44	Bolt Fin Hex 3/8-16unc X 2-3/4
40	532 12 49-65	Spacer Split 395 X 59 Bzp
41	532 15 47-77	Keeper Belt Retainer Idler Foolproof
42	819 13 13-12	Washer 13/32 X 13/16 X 12 Ga
47	532 12 77-83	Pulley Idler V Groove Plastic
48	532 15 46-04	Bellcrank Asm
49	532 12 32-05	Retainer Belt Style Spring
50	874 76 06-24	Bolt Hex Hd 3/8-16unc X 1-1/2
51	873 68 06-00	Nut Crownlock 3/8-16 Unc
52	873 68 05-00	Nut Crownlock 5/16-18 Unc
53	532 10 57-10	Link Clutch
55	532 10 57-09	Spring Return Clutch 6 75
56	874 76 06-20	Bolt Fin Hx 3/8-16 X 1/4
57	532 13 08-01	V-Belt Ground Drive 95 25
58	532 12 72-74	Keeper Belt RH LT Pnt/zinc 16g
59	532 14 03-12	Keeper Belt Span Ctr
61	817 49 06-12	Screw Thdrol 3/8-16x3/4 Ty-tt
62	532 12 48-72	Cover Pedal Blk Round
63	532 14 01-86	Engine Pulley LT/YT
64	871 17 07-64	Bolt Hex
65	810 04 07-00	Washer Lock Hvy Hlcl Spr 7/16
66	532 15 47-78	Keeper Belt Engine Foolproof
70	532 13 46-83	Guide Belt Mower Drive RH
72	819 13 20-12	Washer 13/32 X 1-1/4 X 12 Ga
74	532 13 70-57	Spacer Axle
75	532 12 17-49	Washer 25/32 X 1 1/4 X 16 Ga
76	812 00 00-01	E-ring #5133-75
77	532 12 35-83	Key Square 2 0 X 1845/ 1865
78	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
79	532 12 50-96	Key Woodruff #9 3/16 x 3/4
80	532 13 14-86	Arm Shift
81	532 15 60-43	Shaft Asm Cross 20"t
82	532 12 37-82	Spring Torsion T/a
83	819 17 12-16	Washer 17/32 X 3/4 X 16 Ga
84	532 12 37-93	Rod Shift
85	532 15 03-60	Nut Lock Center 1/4 - 28 FNTHD
86	532 07 12-08	Bushing Rod Strg 629/632 Id
87	819 21 20-16	Washer 21/32 X 1-1/4 X 16 Ga
88	812 00 00-08	Ring Klip #5304-62
89	532 15 48-85	Console Shift STLT
90	532 12 43-46	Nut Self-thd Wsh-hd 1/4 Zinc
112	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.
113	532 12 72-85	Strap Torque LT
116	872 11 06-10	Bolt Rdhd Sq Neck 3/8-16 x 1.25
118	532 15 47-74	Spacer Bellcrank
121	532 15 44-19	Nyliner Clutching STL

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

STEERING ASSEMBLY

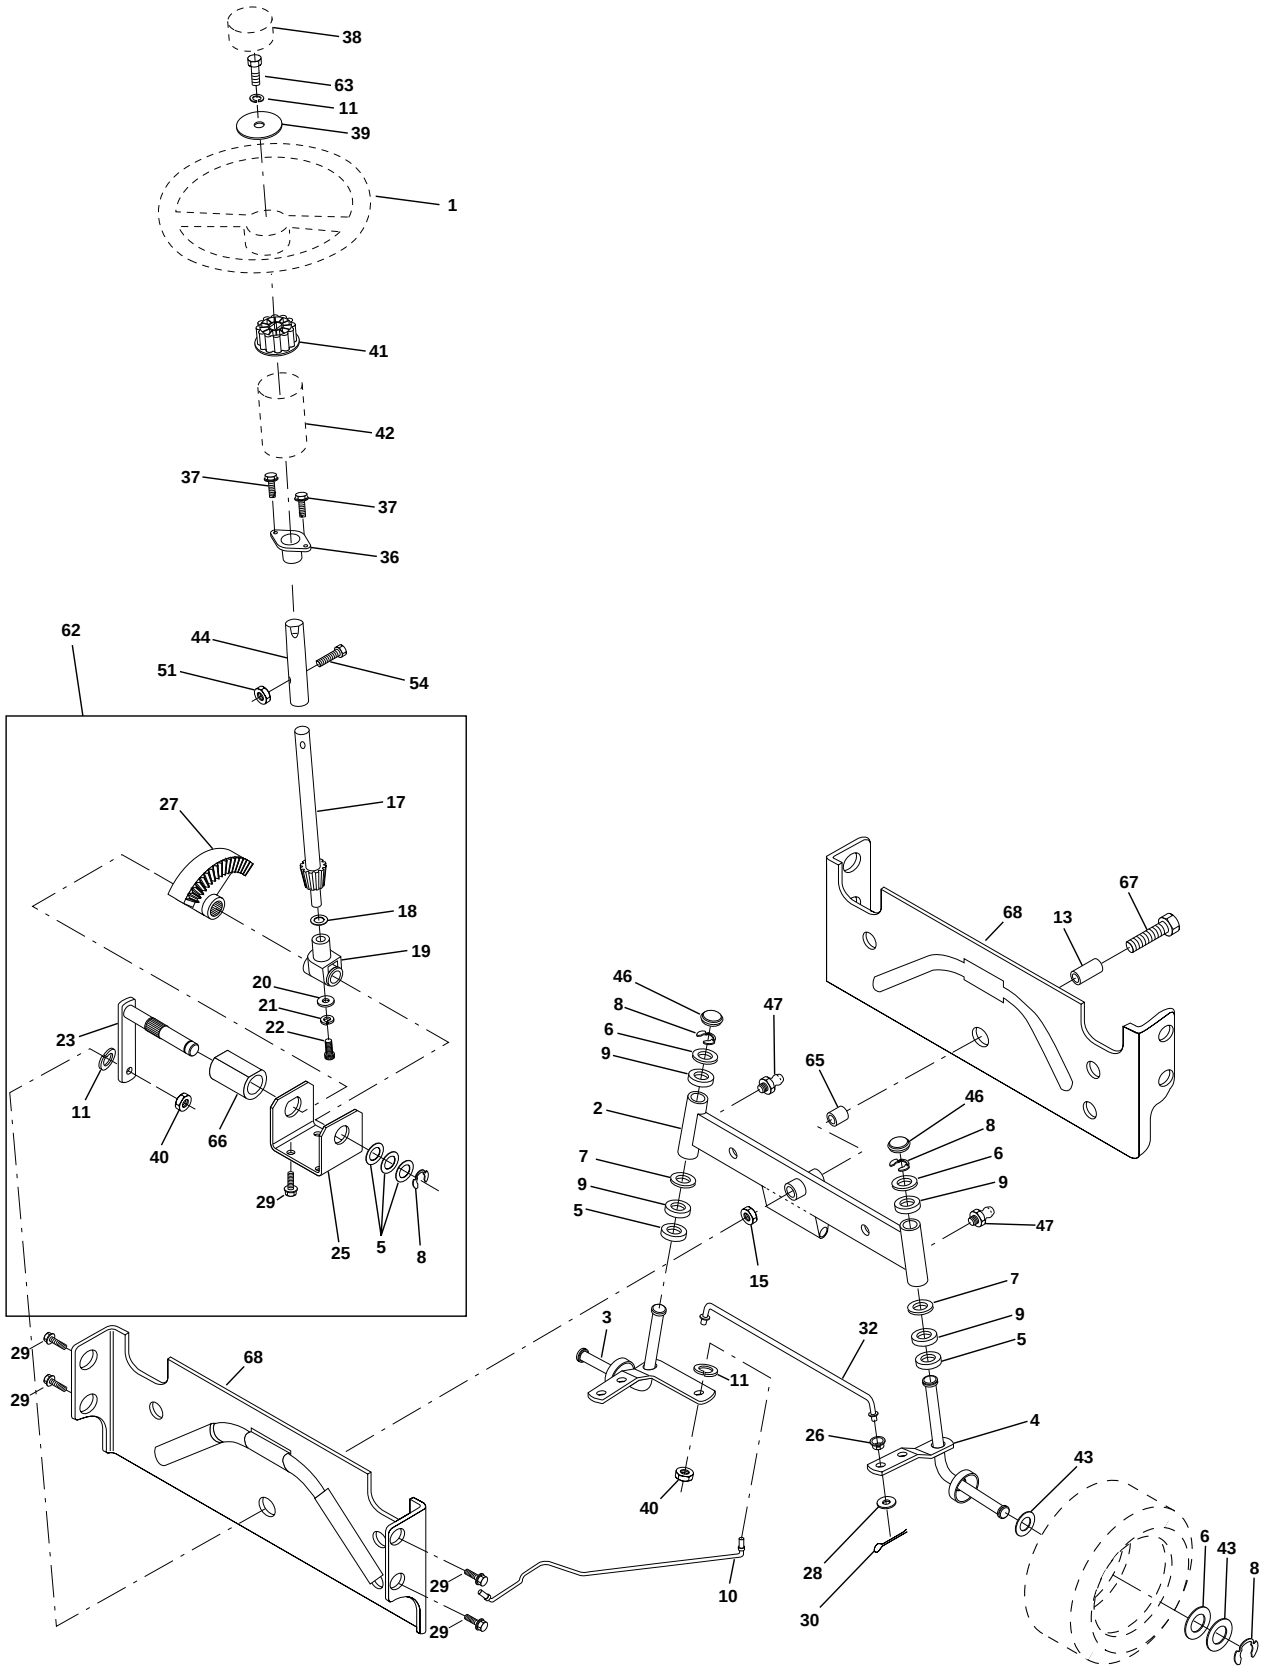

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

STEERING ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
1	532 12 44-15	Wheel Steering
2	532 15 44-27	Axle Asm STMP Dropped STL
3	532 15 44-22	Spindle Asm LH
4	532 15 44-23	Spindle Asm RH
5	532 12 49-31	Bearing Race Thrust Harden
6	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
7	819 27 20-16	Washer 27/32 X 1-1/4 X 16 Ga
8	812 00 00-29	Ring Klip #t5304-75
9	532 12 49-37	Bearing Col Strg Blk
10	532 15 64-38	Link Drag Extended Stamp
11	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
13	532 15 47-79	Bearing Axle STLT/GT
15	873 90 10-00	Nut Lock Flange 5/8-11 Unc
17	532 15 65-46	Shaft Asm Strg
18	532 05 70-79	Washer Thrust 515x 750x 033
19	532 12 40-35	Support Shaft
20	532 12 66-84	Washer Shim 1/4 X 5/8 X 062
21	810 04 04-00	Washer Lock Hvy Helical 1/4
22	871 10 04-10	Screw Cap Sckt Hd Phos & Oil
23	532 12 75-01	Shaft Asm Pittman
25	532 15 44-06	Bracket Steering
26	543 12 68-47	Bushing Link Drag Blk LR
27	532 13 68-74	Gear Sector
28	819 13 14-16	Washer 13/32 X 7/8 X 16 Ga
29	817 49 06-12	Screw Thdrol 3/8-16x3/4 Ty-tt
30	876 02 04-12	Pin Cotter 1/8 X 3/4 Cad
32	532 13 04-65	Rod Tie Wire Form 19 75 Mech
36	532 15 50-99	Bushing Strg
37	532 15 29-27	Screw
38	532 12 44-16	Insert Cap Strg Wh Au
39	819 13 38-08	Washer 13/32 X 2-3/8 X 8 Ga
40	532 12 47-01	Lock nut
41	532 10 07-11	Adaptor Wheel Strg
42	532 15 50-92	Boot Steering Shaft
43	532 12 17-49	Washer 25/32 X 1 1/4 X 16 Ga
44	532 15 37-20	Extension Steering Shaft LR/LT
46	532 12 12-32	Cap Spindle Fr Top Blk
47	532 12 48-36	Fitting Grease
51	873 80 05-00	Nut Lock Hex w/Ins 5/16-18
54	874 78 05-20	Bolt Fin Hex 5/16-18 Unc x 1-1/4
62	532 15 65-94	Kit, Steering Assembly Svc
63	874 78 06-16	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65	532 15 47-80	Spacer Axle
66	532 15 44-04	Bearing Arm Pittman
67	874 78 10-44	Bolt, Fin Hex 5/8-11 UNC x 2-3/4
68	532 15 44-29	Axle, Brace

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

SEAT ASSEMBLY

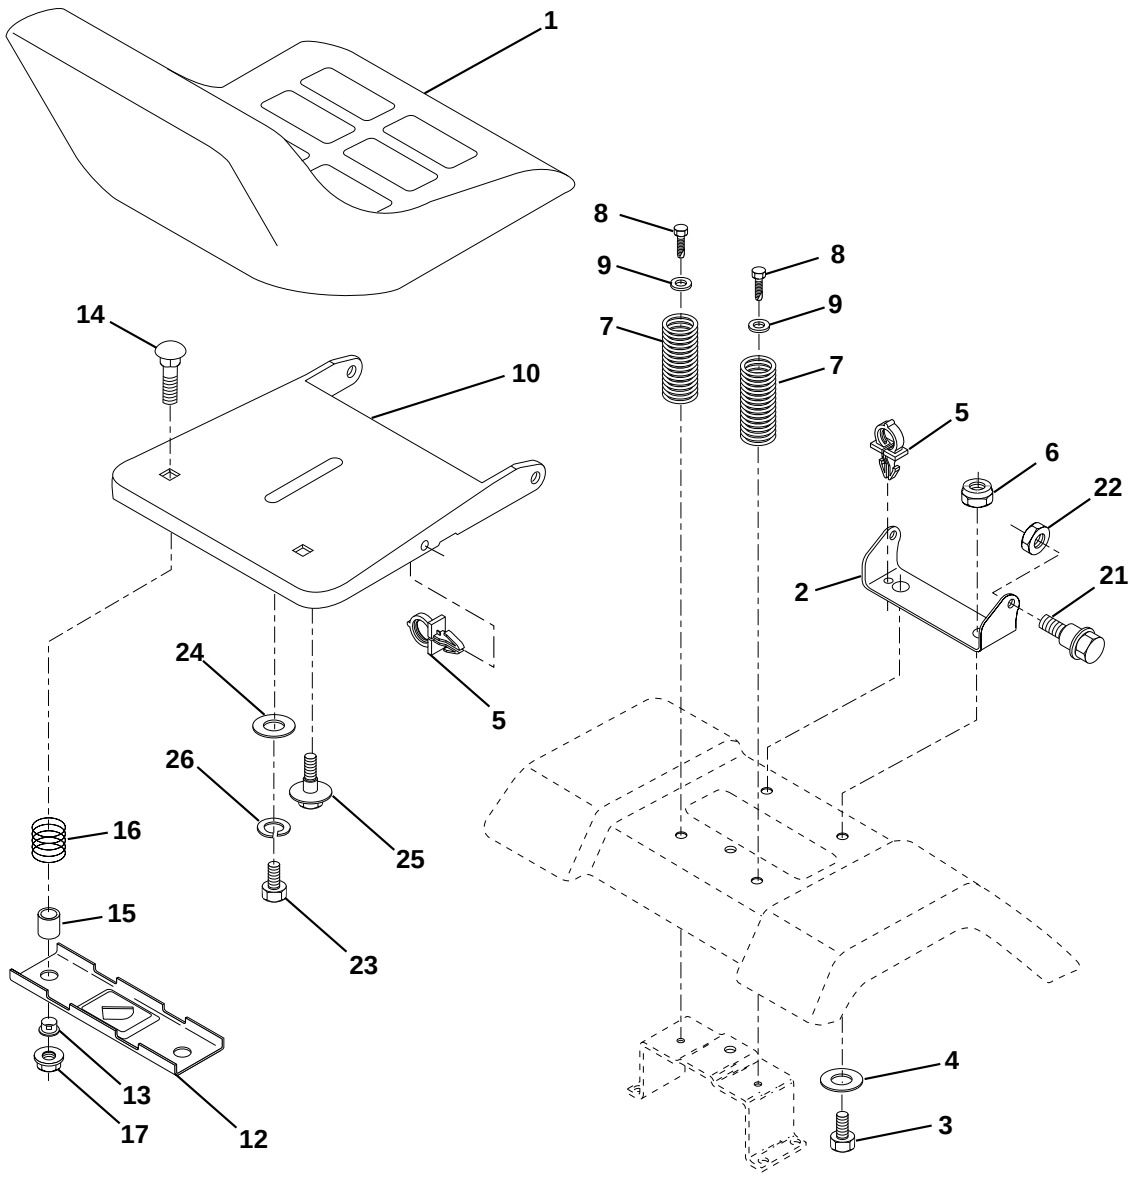

KEY NO.	PART NO.	DESCRIPTION
1	532 14 08-38	Seat
2	532 14 05-51	Bracket Pivot Seat 8 720
3	874 76 06-16	Bolt Fin Hex 3/8-16unc X 1
4	819 13 16-10	Washer 13/32 X 1 X 10 Ga
5	532 14 50-06	Clip Push-In
6	873 80 06-00	Nut Hex w/Ins. 3/8-16 Unc
7	532 12 41-81	Spring Seat Cprsn 2 250 Blk Zi
8	817 49 06-16	Screw Thdrol 3/8-16 X 1 Ty-tt
9	819 13 16-14	Washer 13/32 X 1 X 14 Ga.
10	532 15 59-25	Pan Seat
12	532 12 12-46	Bracket Mounting Switch
13	532 12 12-48	Bushing Snap Blk Nyl 50 Id


KEY NO.	PART NO.	DESCRIPTION
14	872 05 04-11	Bolt Rdhd Sqnk 1/4-20x1-3/8
15	532 13 43-00	Spacer Split 28x 96 Yel Zinc
16	532 12 12-50	Spring Cprsn 1 27 Blk Pnt
17	532 12 39-76	Nut Lock 1/4 Lge Flg Gr 5 Zinc
21	532 15 32-36	Bolt Shoulder 5/16-18 Unc
22	873 80 05-00	Nut Hex Lock W/Ins 5/16-18
23	874 78 08-14	Bolt, Hex Head, Fin 1/2-13 x 7/8 Grade 5
24	819 17 19-12	Washer 17/32 X 1-3/16 X 12 Ga.
25	532 12 70-18	Bolt Shoulder 5/16-18 X 62
26	810 04 08-00	Washer Lock

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

DECALS

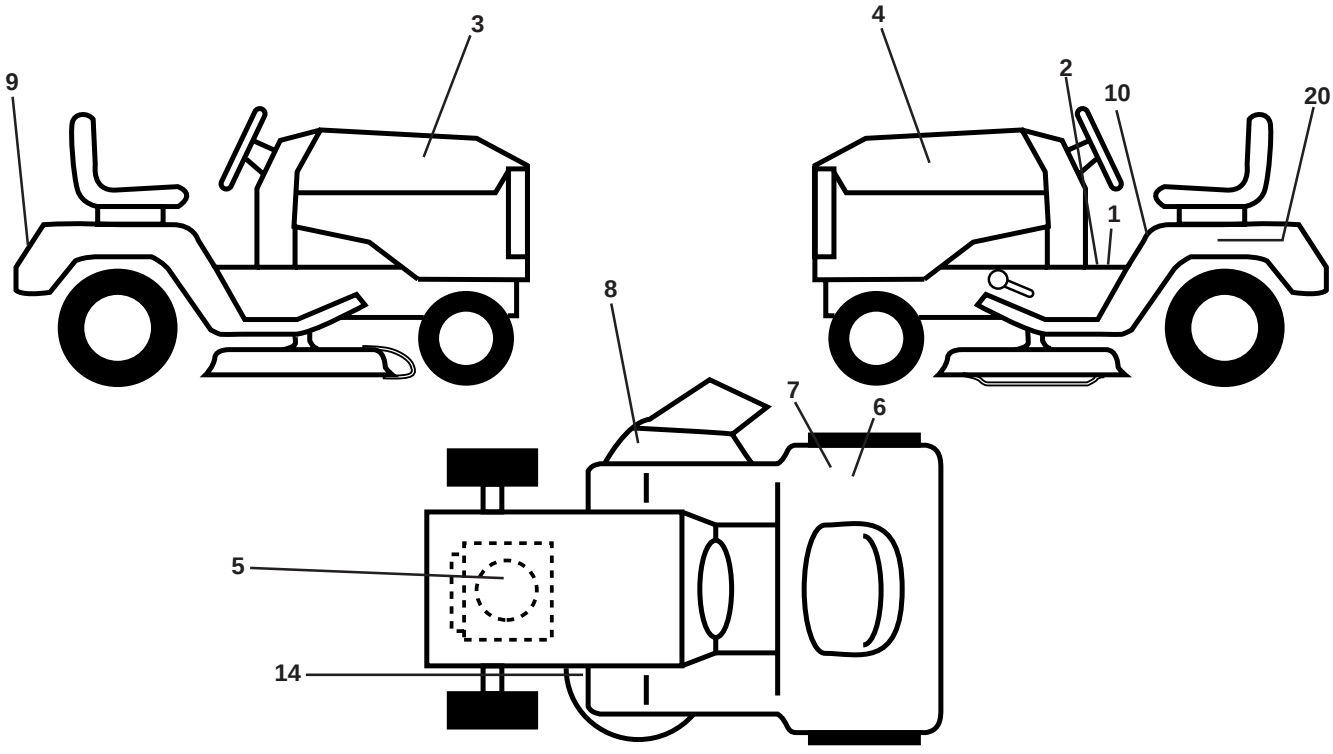


KEY NO.	PART NO.	DESCRIPTION
1	532 14 08-37	Decal Saddle Parking
2	532 15 63-69	Decal Fender STLT Oper. Inst. English/French
3	532 15 13-20	Decal Hood LH
4	532 15 13-21	Decal Hood RH
5	532 27 24-40	Decal HP Engine
6	532 12 56-90	Decal 100 DBA
7	532 14 54-37	Decal Europe Stand CE
8	532 14 54-94	Decal Mower Cut/Finger
9	532 15 06-17	Decal Fender Husq
10	532 14 54-98	Decal Read Owner's Man Syms
14	532 13 68-32	Decal V-Belt Schematic
20	532 14 64-51	Decal Bat Dan/Psn
- -	532 15 45-15	Pad Footrest LH STLT
- -	532 15 45-16	Pad Footrest RH STLT
- -	532 13 83-11	Decal Handle Lft Height Adjust
- -	532 15 71-64	Manual Owner's (English)
- -	532 15 71-65	Manual Owner's (French)

Available accessories not included with tractor:

- -	MK380	Mulcher Kit with Blades
- -	C38	Grass Catcher

WHEELS & TIRES

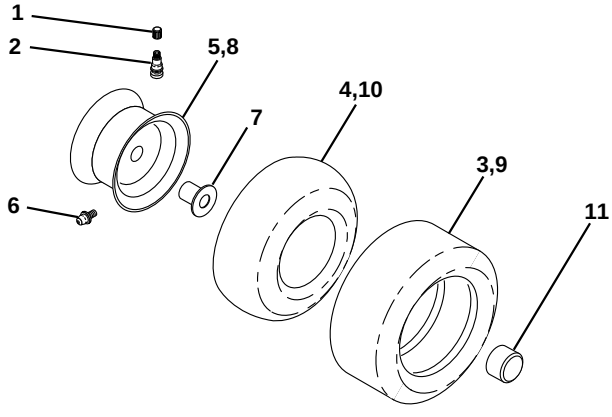


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 10 62-22	Tire F Ts 15 X 6 0 - 6 Service
4	532 05 99-04	Tube Front (Service Item Only)
5	532 13 83-36	Rim Asm 6"front Silver Service
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 13 83-37	Rim Asm 8"rear Silver Service
9	532 12 46-35	Tire R Ts 18x8 5-8 C Service
10	532 12 49-26	Tube Rear (Service Item Only)
11	532 10 47-57	Cap Axle Blk 1 50 X 1 00
- -	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

ENGINE

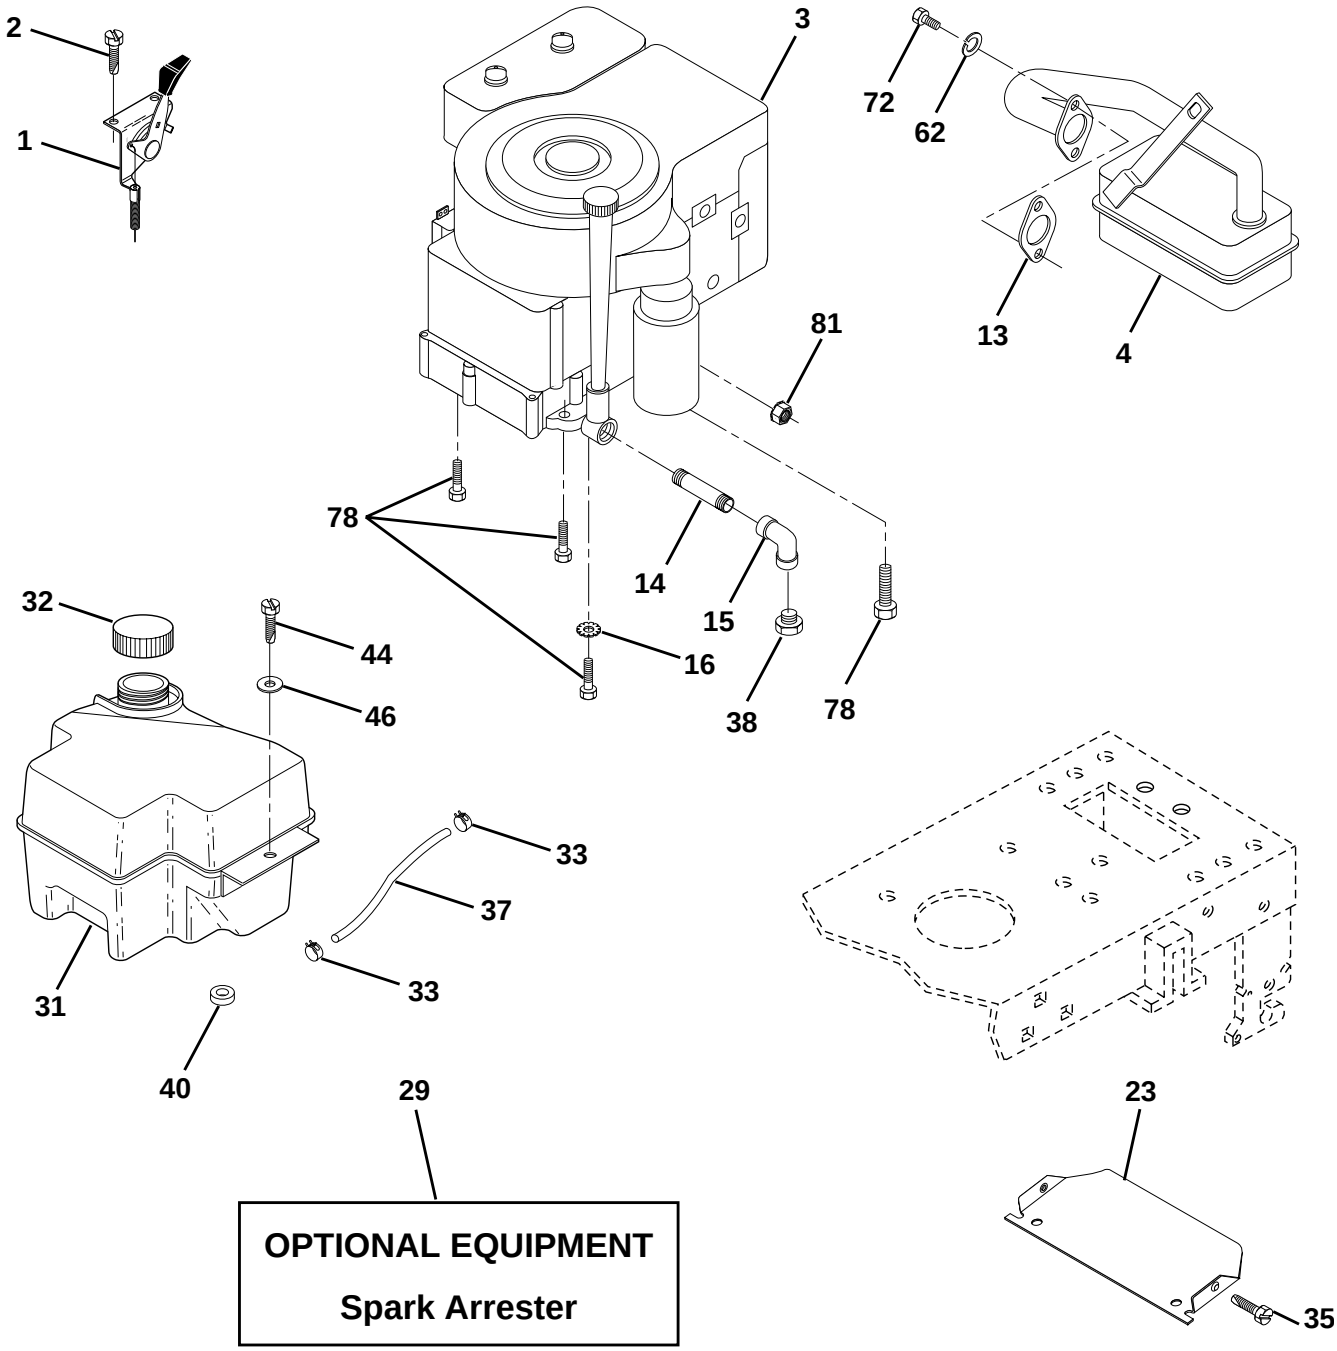

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

ENGINE


KEY NO.	PART NO.	DESCRIPTION
1	532 14 03-10	Control Th/ch 23 5 LH Flag
2	817 72 04-10	Screw Hex Thd Cut 1/4-20x5/8 T
3	- - - - - - - -	Engine B&S Model No. 285707
4	532 13 73-48	Muffler LT B&S 12/12.5/13HP
13	532 27 22-93	Gasket Eng 1 313 Id Tin Plated
14	813 28 03-24	Nipple Pipe 3/8 Npt X 3"
15	813 20 03-00	Elbow Std 90 Degree 3/8-18 Npt
16	811 05 06-00	Washer Lock Ext Tooth 3/8
23	532 15 61-23	Shield Heat
29	532 13 71-80	Kit Spark Arrestor (Flat Scrn)
31	532 14 02-80	Tank Fuel Front 2 00
32	532 14 05-27	Cap Asm Fuel W/sym Vented
33	532 12 34-87	Clamp Hose Black
35	817 49 05-12	Screw
37	532 13 70-40	Line Fuel 20"
38	- - - - - - - --	Plug Oil Drain (Order From Engine Manufacturer)
40	532 12 40-28	Bushing Snap Nyl Blk Fuel Line
44	817 49 04-12	Screw Hexwsh Thdrol 1/4-20x3/4
46	819 09 14-16	Washer 9/32 X 7/8 X 16 Ga
62	810 04 05-00	Washer Lock Hvy Hlcl Spr 5/16
72	871 07 05-12	Screw Hexhd Cap 5/16-18x 3/4
78	817 49 06-20	Screw Thdrol 3/8-16x1-1/4 TYTT
81	532 12 88-61	Nut Flange 1/4-20 Starter Nut

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

MOWER DECK

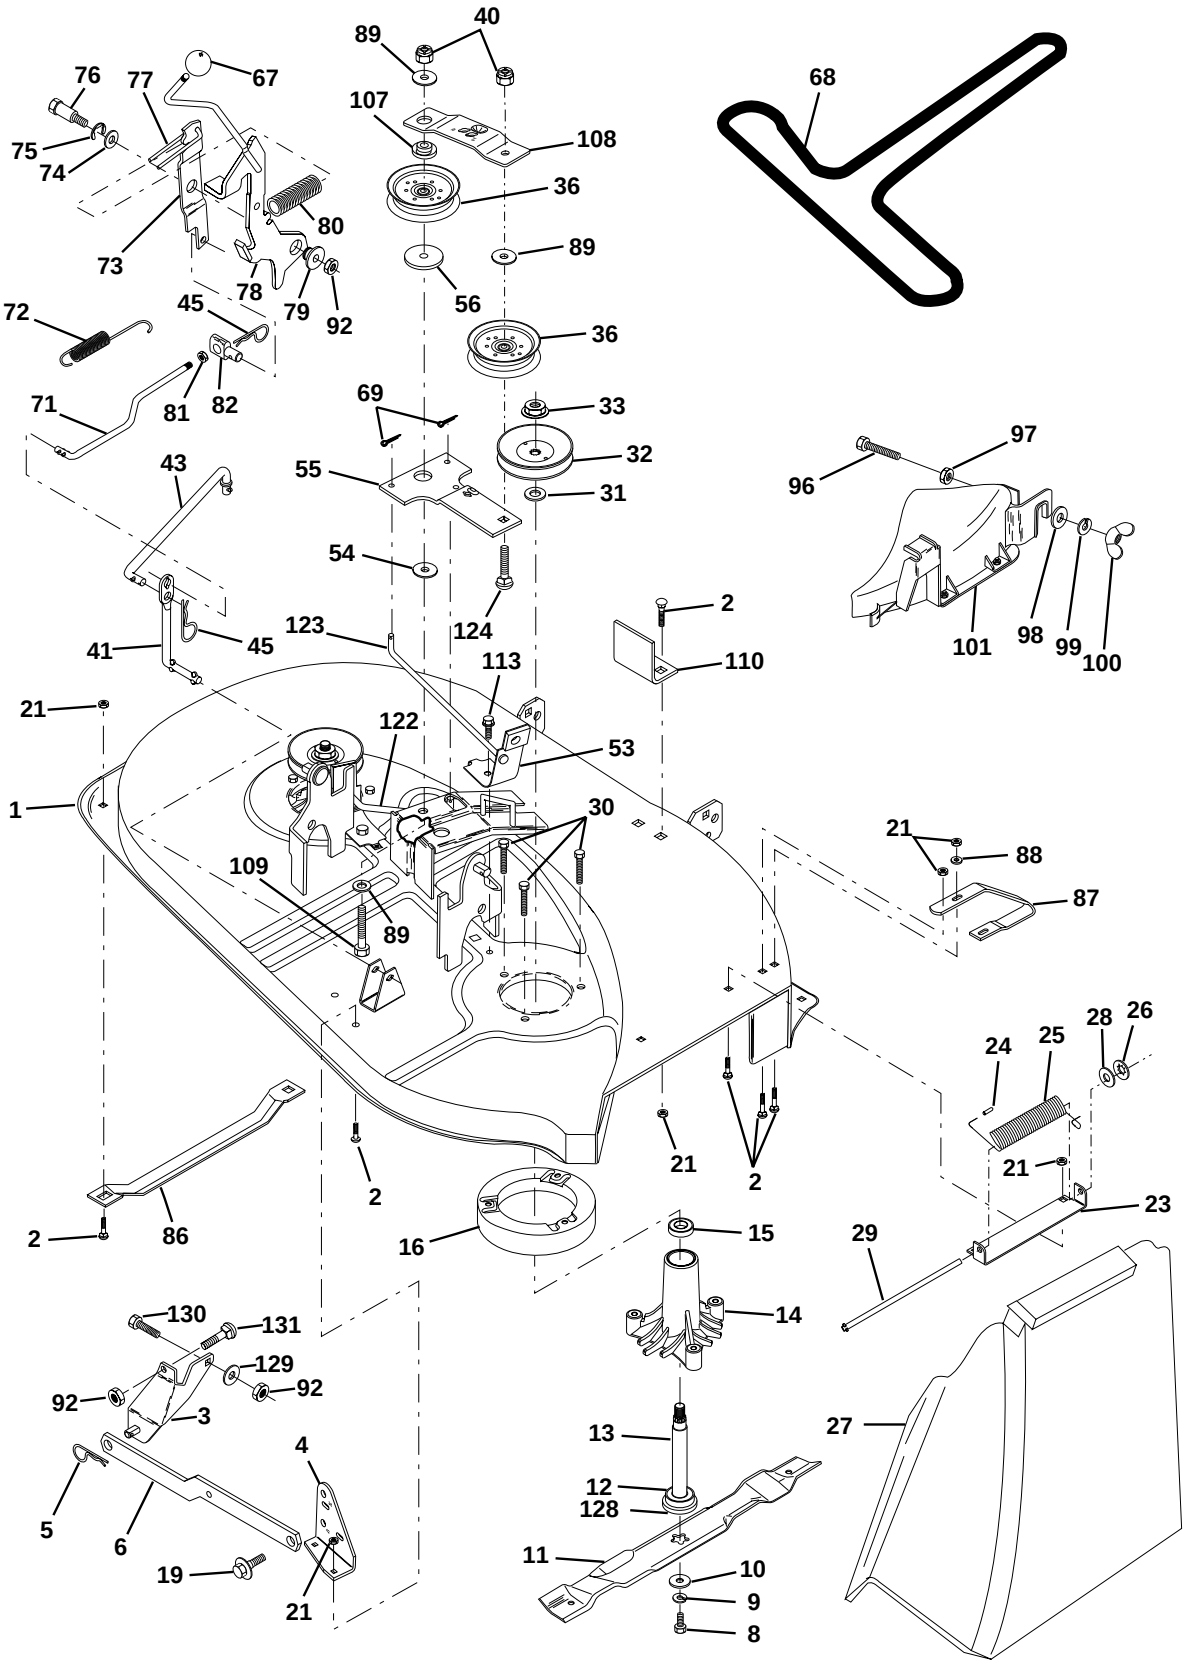

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

MOWER DECK


KEY NO.	PART NO.	DESCRIPTION
1	532 14 28-29	Asm Mower Housing
2	872 14 05-06	Bolt Rdhd Sqnk 5/16-18unc X3/4
3	532 13 80-17	Bracket Asm Fr Sway Bar 38/42
4	532 13 84-40	Bracket Asm Deck Sway Bar
5	532 12 46-70	Retainer Spring
6	532 13 08-32	Arm Suspension Rear
8	532 85 08-57	Bolt 3/8 - 24 X 1.25 Gr 8
9	810 03 06-00	Washer Lock Hvy 3/8
10	532 14 02-96	Washer Hard Blade Mower Vented
11	532 13 41-48	Blade Mower Mulching 38"
12	532 12 98-95	Bearing Ball #6024 (Mandrel)
13	532 13 76-45	Shaft Asm W/lower Bearing
14	532 12 87-74	Housing Mandrel Vented
15	532 11 04-85	Bearing Ball Mandrel
16	532 14 03-29	Stripper Mower Vented
19	532 13 28-27	Bolt Shoulder
21	873 68 05-00	Nut Crownlock 5/16-18 UNC
23	532 13 76-07	Bracket Deflector Mower
24	532 10 53-04	Cap Sleeve 80x 112 Blk Mower
25	532 12 37-13	Spring Torsion Deflector 2 52
26	532 11 04-52	Nut Push Phos & Oil
27	532 10 67-36	Shield Deflector
28	819 11 10-16	Washer 11/32 X 5/8 X 16 Ga
29	532 10 67-35	Rod Hinge
30	532 13 87-76	Screw Thdrol Hex Head Zinc Mwr
31	532 12 99-63	Washer Spacer Mower Vented
32	532 15 35-35	Pulley Mandrel
33	532 13 72-66	Nut 9/16 Toplock Flng Oil Dip
36	532 13 14-94	Pulley Idler Flat 3 060
40	873 68 06-00	Nut Crownlock 3/8-16 UNC
41	532 13 35-51	Rod Pivot W/nibs
43	532 13 35-04	Rod Clutch Secondary
45	532 12 47-88	Spring Retainer 1" Zinc/cad
53	532 13 08-40	Asm Brake
54	532 13 39-43	Washer Hardened
55	532 13 38-40	Arm Idler
56	532 12 20-52	Spacer Retainer Pm Mower
67	532 10 69-32	Knob Rd 1/2-13 Plstc Thds Blk
68	532 14 42-00	V-Belt Mower
69	876 02 03-12	Pin, Cotter 3/32 x 3/4
71	532 14 24-27	Rod Clutch Primary 38/42
72	532 13 18-70	Spring Return
73	532 12 78-47	Arm Clutch Secondary
74	532 12 17-48	Washer 25/32 X 1-5/8 X 16 Ga
75	812 00 00-29	Ring Klip #t5304-75
76	532 12 89-03	Bolt Shoulder 3/8-16 Unc 1 44
77	532 12 78-45	Keeper Spring 4 000
78	532 15 48-09	Arm Asm Clutch Primary
79	532 12 74-98	Bushing 747 Od X 794 Lg Brass
80	532 15 37-01	Spring Clutch Mower
81	873 35 06-00	Nut Hex Jam 3/8-16
82	532 14 20-28	Trunnion Adj 94
86	532 12 50-74	Runner, LH
87	532 12 87-72	Runner, RH
88	819 11 12-16	Washer 11/32 x 3/4 x 16 Ga.
89	819 13 16-12	Washer 13/32 x 1 x 12 Ga.
92	873 80 06-00	Nut Lock Hex W/Ins 3/8-16 Unc
96	874 93 06-20	Bolt 3/8-16 x 1-1/4 Mulcher
97	873 93 06-00	Nut Crownlock 3/8-16 UNC
98	819 13 20-16	Washer 13/32 x 1-1/4 x 16 Ga.
99	810 04 06-00	Washer Lock Hvy Hlcl Spr 3/8
100	532 13 56-51	Nut Wing
101	532 13 28-03	Cover Asm Mulching 38"
107	532 13 35-02	Spacer, Retainer
108	532 13 35-03	Stiffener, Idler Arm
109	874 76 06-40	Bolt, Hex Head 3/8-16 x 2-1/2
110	532 14 25-87	Upstop Deck Front 38"
113	817 49 05-12	Screw Thdrol 5/16-18 X 3/4
122	532 13 12-89	Rod, Brake, LH
123	532 13 12-88	Rod, Brake, RH
124	872 11 06-14	Bolt, Carriage 3/8-16 x 1-3/4
128	532 15 33-90	Washer Felt
129	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.
130	874 78 06-16	Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5
131	872 14 06-08	Bolt, Rdhd Sqnk 3/8-16 x 1
- -	532 13 07-94	Mandrel Asm Service (Includes Key Nos. 8-10, 12-15, 31 and 33)
- -	532 14 28-20	Mower Deck Complete

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

MOWER LIFT

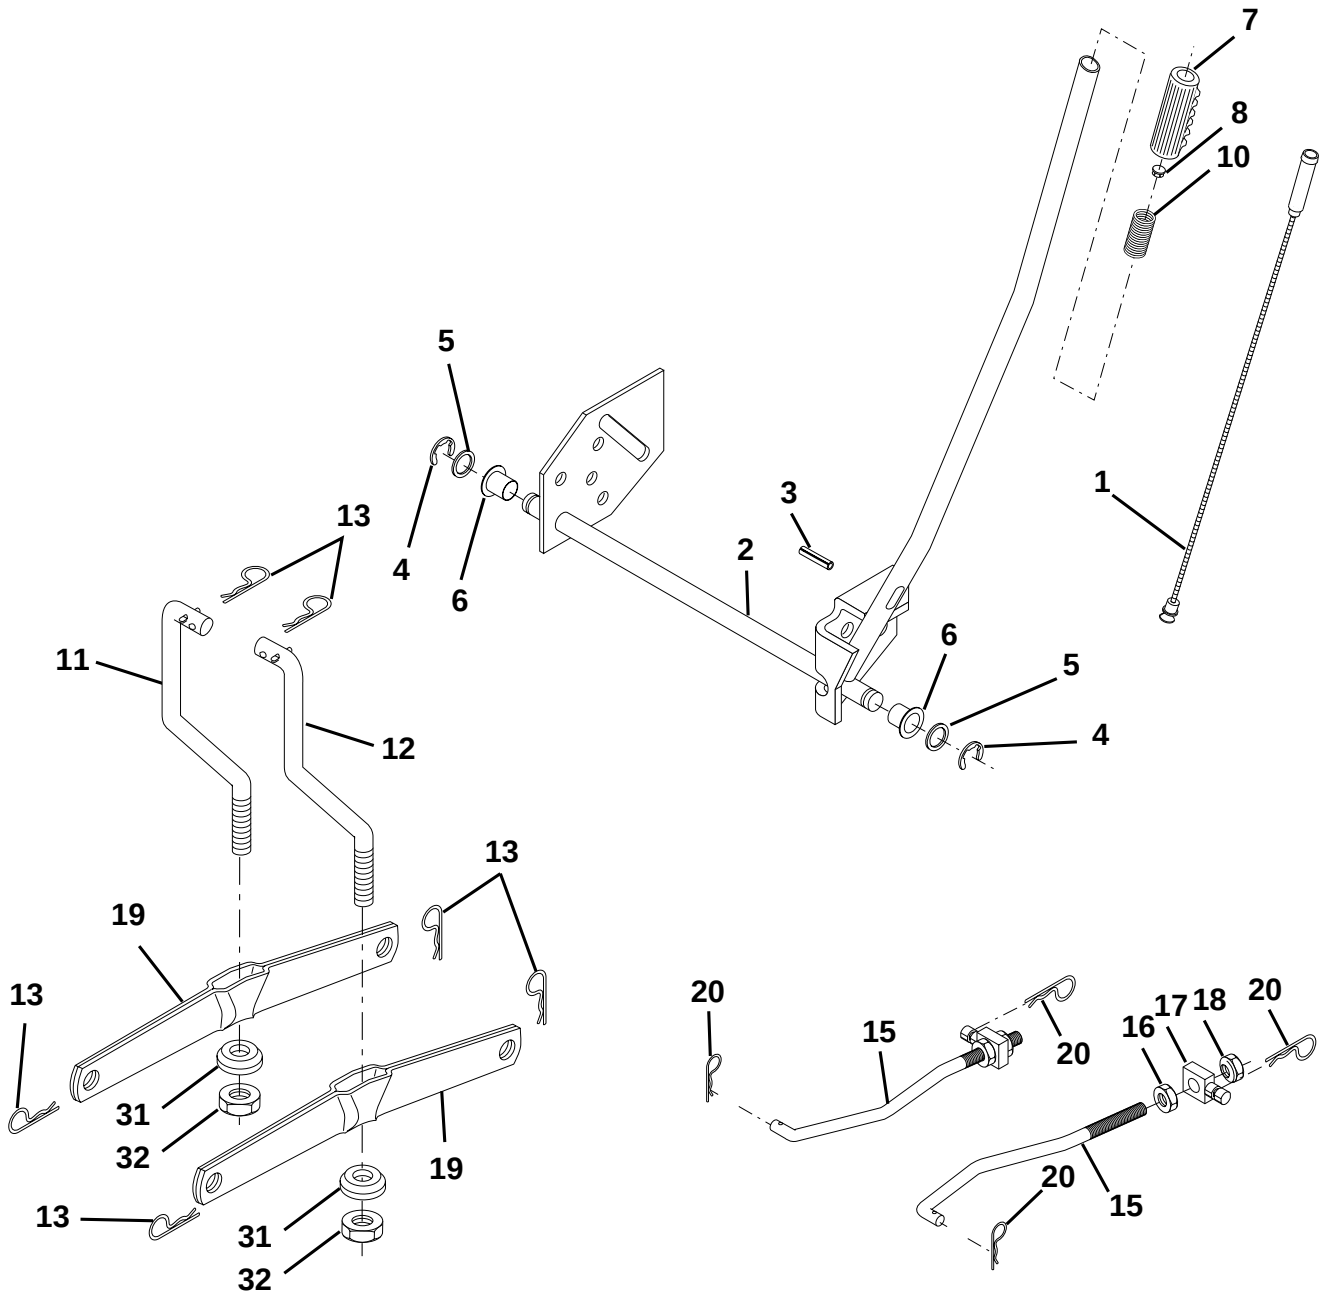

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

MOWER LIFT


KEY NO.	PART NO.	DESCRIPTION
1	532 13 69-73	Wire Asm Inner W/plunger 17 32
2	532 14 51-17	Shaft Asm Lift
3	532 10 57-67	Pin Groove
4	812 00 00-02	E Ring #5133-62
5	819 21 16-21	Washer PLTD 21/32 X 1 X 21ga
6	532 12 01-83	Bearing Nylon Blk 629 Id
7	532 10 94-13	Grip Handle Bicycle
8	532 12 45-26	Button Plunger Black
10	532 12 25-12	Spring Cprsn 3 750 Oiled
11	532 13 98-65	Link Lift LH
12	532 13 98-66	Link Lift RH
13	532 12 46-70	Retainer Spring
15	532 12 72-18	Link Front
16	873 35 08-00	Nut Jam Hex 1/2-13 Unc
17	532 13 01-71	Trunnion Blk Zinc
18	873 80 08-00	Nut Lock W/wsh 1/2-13unc
19	532 13 98-68	Arm Suspension Rear
20	532 12 46-60	Spring, Retainer
31	532 14 03-02	Bearing Pvt. Lift Spherical
32	873 54 06-00	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

RACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

PEERLESS TRANSAXLE - MODEL NUMBER 930-054A

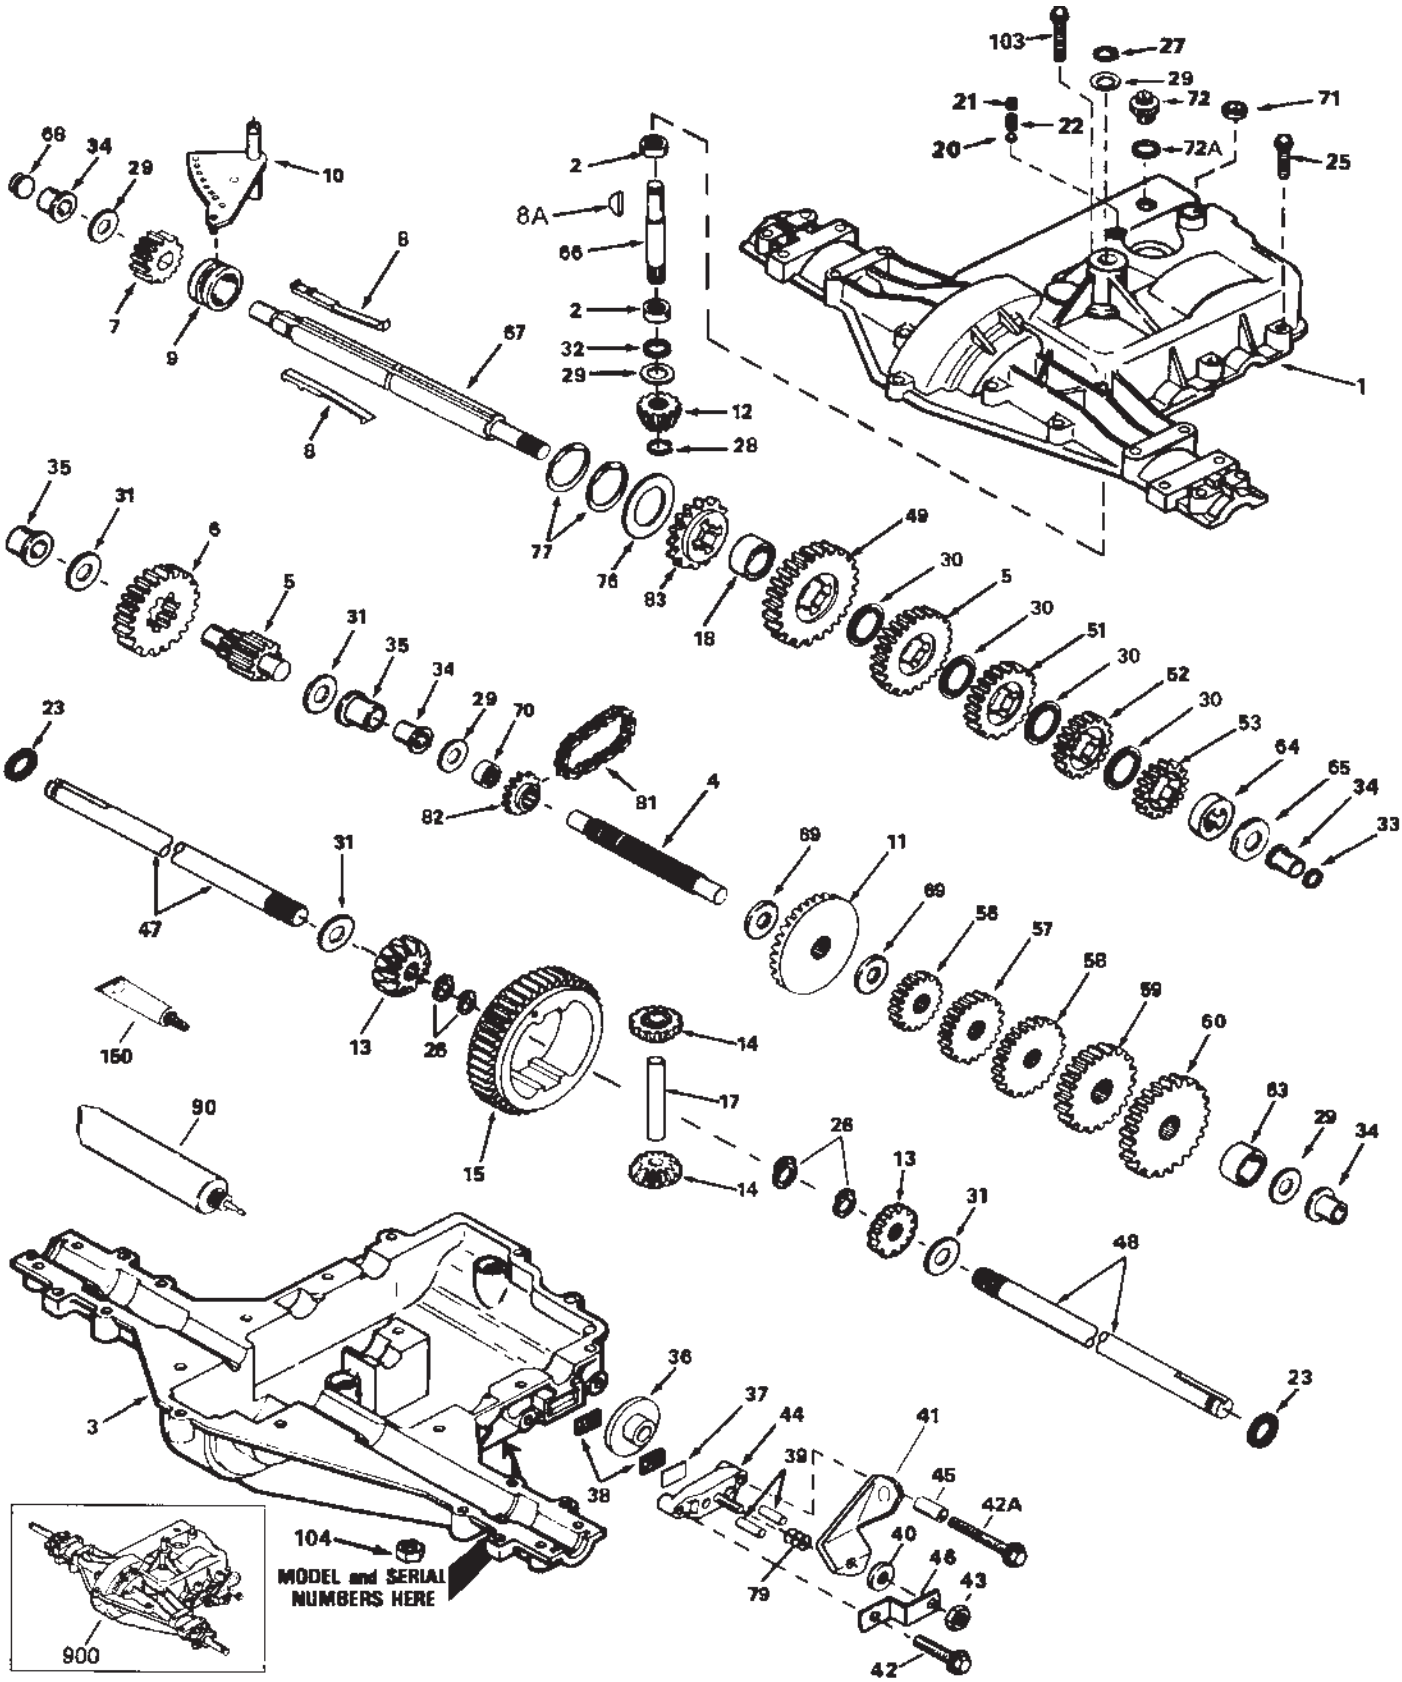

REPAIR PARTS

TRACTOR - MODEL NO. LT120 (954140002A), PRODUCT NO. 954 1400-02

PEERLESS TRANSAXLE - MODEL NUMBER 930-054A

REF NO.	PART NO.	DESCRIPTION
1	772108A	Cover, Transaxle
2	780086	Bearing, Needle
3	770102A	Case, Transaxle
4	776260	Shaft, Counter
5	776219B	Shaft and Pinion Assembly, Output
6	778139	Gear, Output
7	778136	Gear, Spur, 15 Teeth
8	792136A	Key, Shift
8A	792047	Key, Woodruff
9	784352	Collar, Shifter
10	784355	Rod and Fork Assembly, Shift
11	778229	Gear, Bevel, 42 Teeth
12	778113A	Bevel Pinion, Input
13	778221	Gear, Bevel
14	778068	Gear, Bevel Pinion
15	778260	Gear, Ring
17	786139	Pin, Drive
18	786102	Spacer, Neutral
20	792077	Ball, Steel 5/16" diameter
21	792078	Set Screw 3/8-16 x 3/8
22	792079	Spring
23	788061	Ring, Seal
25	792073	Screw, Flanged Hex Head, Thread Forming 1/4-20 x 1-1/4
26	792125	Ring, Retainer (4 Required, Package of 2)
27	792035	Ring, Retainer
28	788040	Ring, Retainer
29	780072	Washer, Thrust
30	780108	Washer, Thrust
31	780001	Washer
32	792001	“O” Ring
33	788095	Seal, Square Cut
34	780105A	Bushing, Flanged
35	780118A	Bushing, Flanged
36	790003	Disk, Brake
37	790007	Plate, Brake Pad
38	799021	Pad, Brake
39	786026	Pin, Dowel
40	792076A	Washer, Flat
41	790079	Lever, Brake
42	792073	Screw, Flanged Hex Head, Thread Forming 1/4-20 x 1-1/4
42A	792085A	Screw 1/4-20 x 2-1/4
43	792075	Locknut 5/16-24
44	790025	Holder, Brake Pad
45	786066	Spacer
46	786086	Bracket, Brake Lever
47	774690	Axle 11-5/16" long
48	774691	Axle 16-1/2" long
49	778215	Gear, Spur, 37 Teeth, Steel (1 in.)
50	778124A	Gear, Spur, 30 Teeth (2 in.)
51	778123A	Gear, Spur, 25 Teeth (3 in.)
52	778122A	Gear, Spur, 22 Teeth (4 in.)
53	778273	Gear, Spur, 19 Teeth, Steel (5 in.)
56	778230	Gear, Spur, 12 Teeth (1 in.)
57	778126A	Gear, Spur, 20 Teeth (2 in.)
58	778127A	Gear, Spur, 25 Teeth (3 in.)
59	778128A	Gear, Spur, 28 Teeth (4 in.)
60	778163	Gear, Spur, 31 Teeth (5 in.)
63	786071	Spacer
64	786072	Spacer
65	780109	Washer, Thrust
66	776135	Shaft, Input
67	776315A	Shaft, Brake, 4 Keyed
68	786116A	Plug
69	780051	Washer, Thrust
70	786118	Spacer
71	788069	Seal, Square Cut
72	792165	Plug, Threaded 9/16-18
72A	788091	“O” Ring
76	780090	Washer, Thrust
77	788078A	Ring, Retaining, Inverted (Package of 2)
79	792144	Spring, Brake
81	786081	Chain, Roller (Number 41 Chain, 24 Links)
82	786082	Sprocket, 9 Teeth (Reverse)
83	786123	Sprocket, 18 Teeth (Reverse)
90	788067B	Grease, Bentonite, 32 Ounce Bottle
103	792166	Screw 1/4-20 x 2
104	792167	Locknut 1/4-20
150	510334	Gasket Eliminator (Loctite #515)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

Parts must be ordered from Tecumseh Products Co.