Husqvarna

IPL, LT131, 96011026403, 2010-01


# LT131

**Spare parts**
**Ersatzteile**
**Pièces détachées**
**Reserve onderdelen**
**Repuestos**
**Reservdelar**

# ILLUSTRATED PARTS LIST


## MFG. ID NO. 96011026403
## CUSTOMER CATALOG NO. LT131
## PRODUCT NO. 960 11 02-64

47

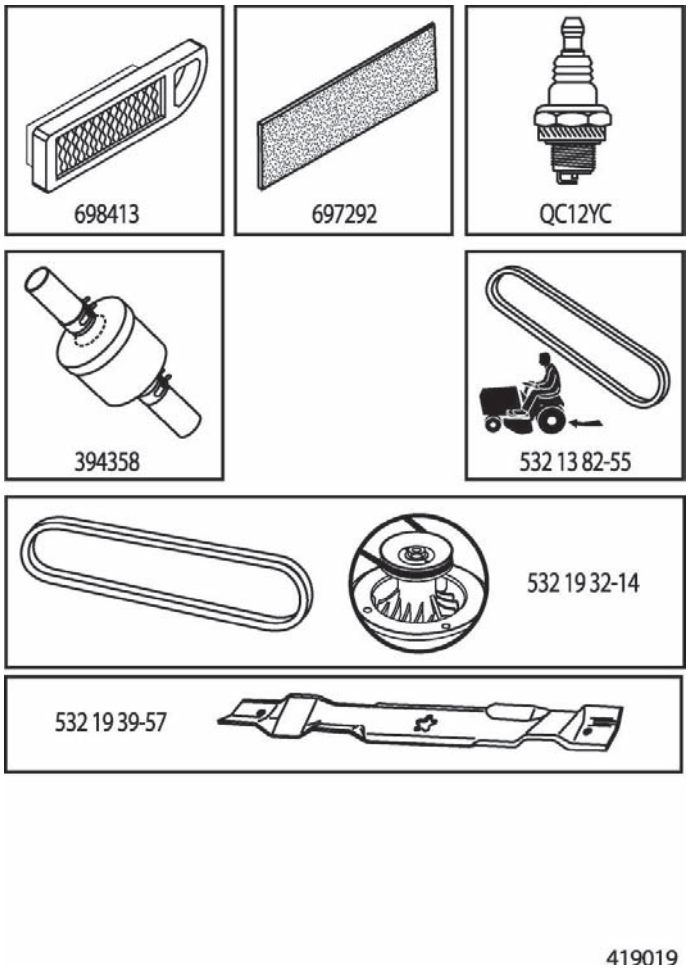


## TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

**DECALS** 27

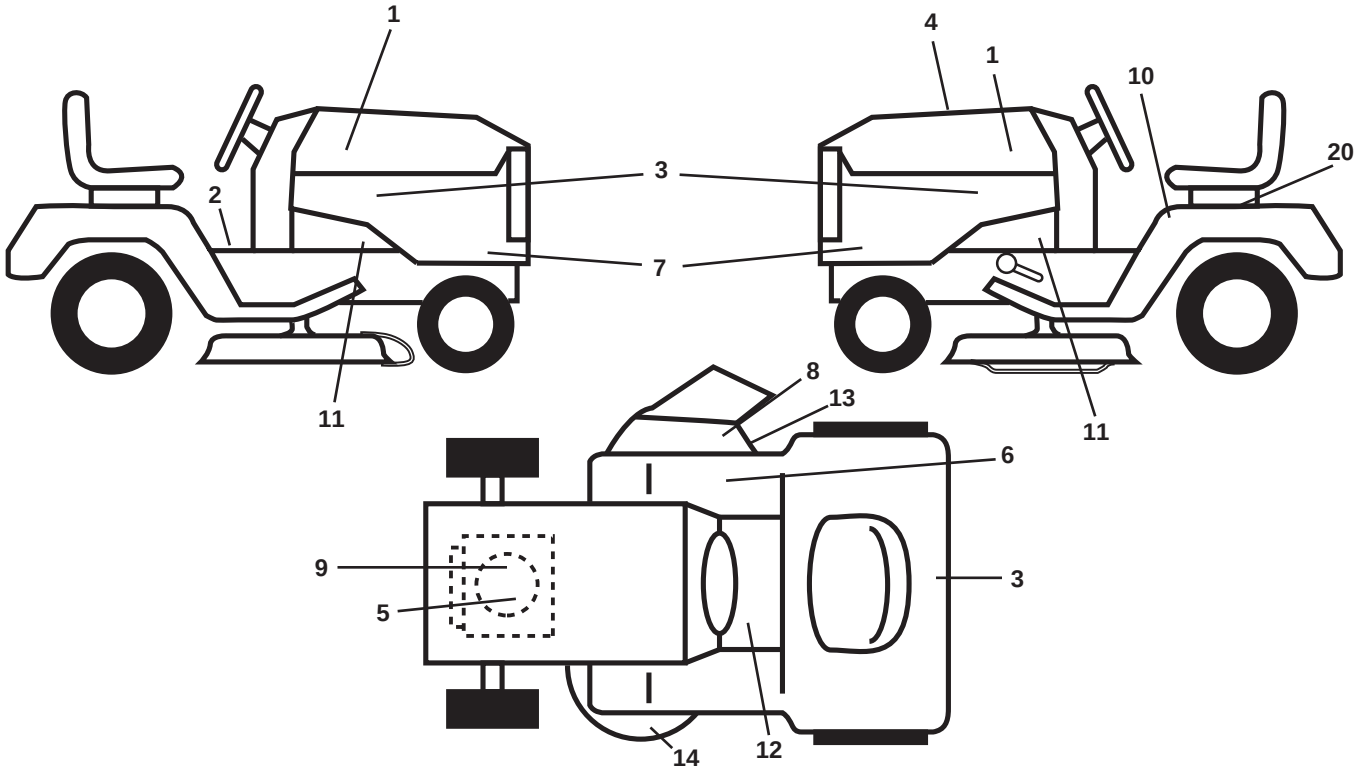


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 41 55-58 | Decal Vent |
| 2 | 532 14 08-37 | Decal Saddle Brake Parking |
| 3 | 532 42 20-12 | Decal Hood |
| 4 | 532 41 90-19 | Decal Replacement |
| 5 | 532 19 68-41 | Decal Warning Engine |
| 6 | 532 18 04-32 | Decal Fender |
| 7 | 532 41 55-50 | Decal Pnl Side |
| 8 | 532 18 21-66 | Decal Mower Cutfinger |
| 9 | 532 41 79-26 | Decal Engine HP |
| 10 | 532 40 03-89 | Decal Read Owner's Manual Syms. |
| 11 | 532 15 97-36 | Decal Chassis Hot Muffler |
| 12 | 532 15 97-37 | Decal Brake/ Clutch Symbol Lt |
| 13 | 532 19 63-57 | Decal Warning |
| 14 | 532 19 43-02 | Decal V-Belt Schematic |
| 20 | 532 14 50-05 | Decal Bat Dan/Psn |
| - - | 532 16 25-98 | Decal Drawbar |
| - - | 532 13 83-11 | Decal Handle Lift Height Adjust |
| - - | 532 43 20-33 | Manual Operator's (Euro) |
| - - | 532 43 21-95 | Manual Operator's (Scan) |
| - - | 532 43 20-36 | Manual Operator's (Ebloc) |
| - - | 532 43 20-37 | Manual Operator's (Baltic) |

## WHEELS & TIRES

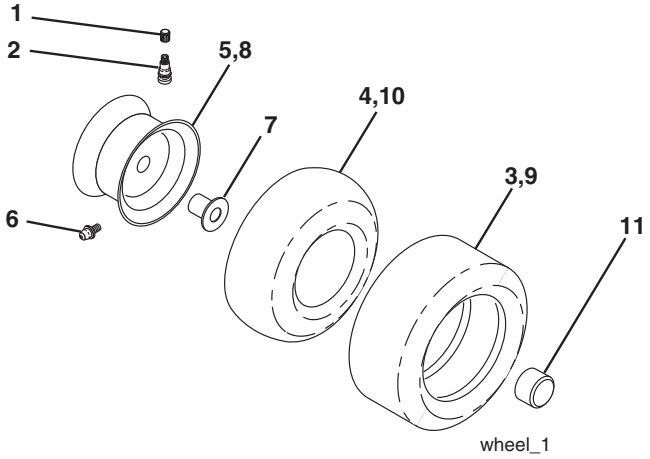


wheel_1


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 05 91-92 | Cap Valve Tire |
| 2 | 532 06 51-39 | Stem Valve |
| 3 | 532 12 41-57 | Tire F Ts 15 x 6 0 - 6 Service |
| 4 | 532 05 99-04 | Tube Front (Service Item Only) |
| 5 | 532 13 83-36 | Rim Asm 6" front Silver Service |
| 6 | 532 12 49-57 | Fitting Grease (Front Wheel Only) |
| 7 | 532 12 49-59 | Bearing Flange (Front Wheel Only) |
| 8 | 532 13 83-37 | Rim Asm 8"rear Silver Service |
| 9 | 532 12 39-69 | Tire R Ts 18 x 9 5-8 C Service |
| 10 | 532 12 49-26 | Tube Rear (Service Item Only) |
| 11 | 532 17 50-39 | Cap Axle Blk 1 50 x 1 00 |
| - - | 532 14 43-34 | Sealant, Tire ( 10 oz. Tube) |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

## SCHEMATIC 38

SCH03

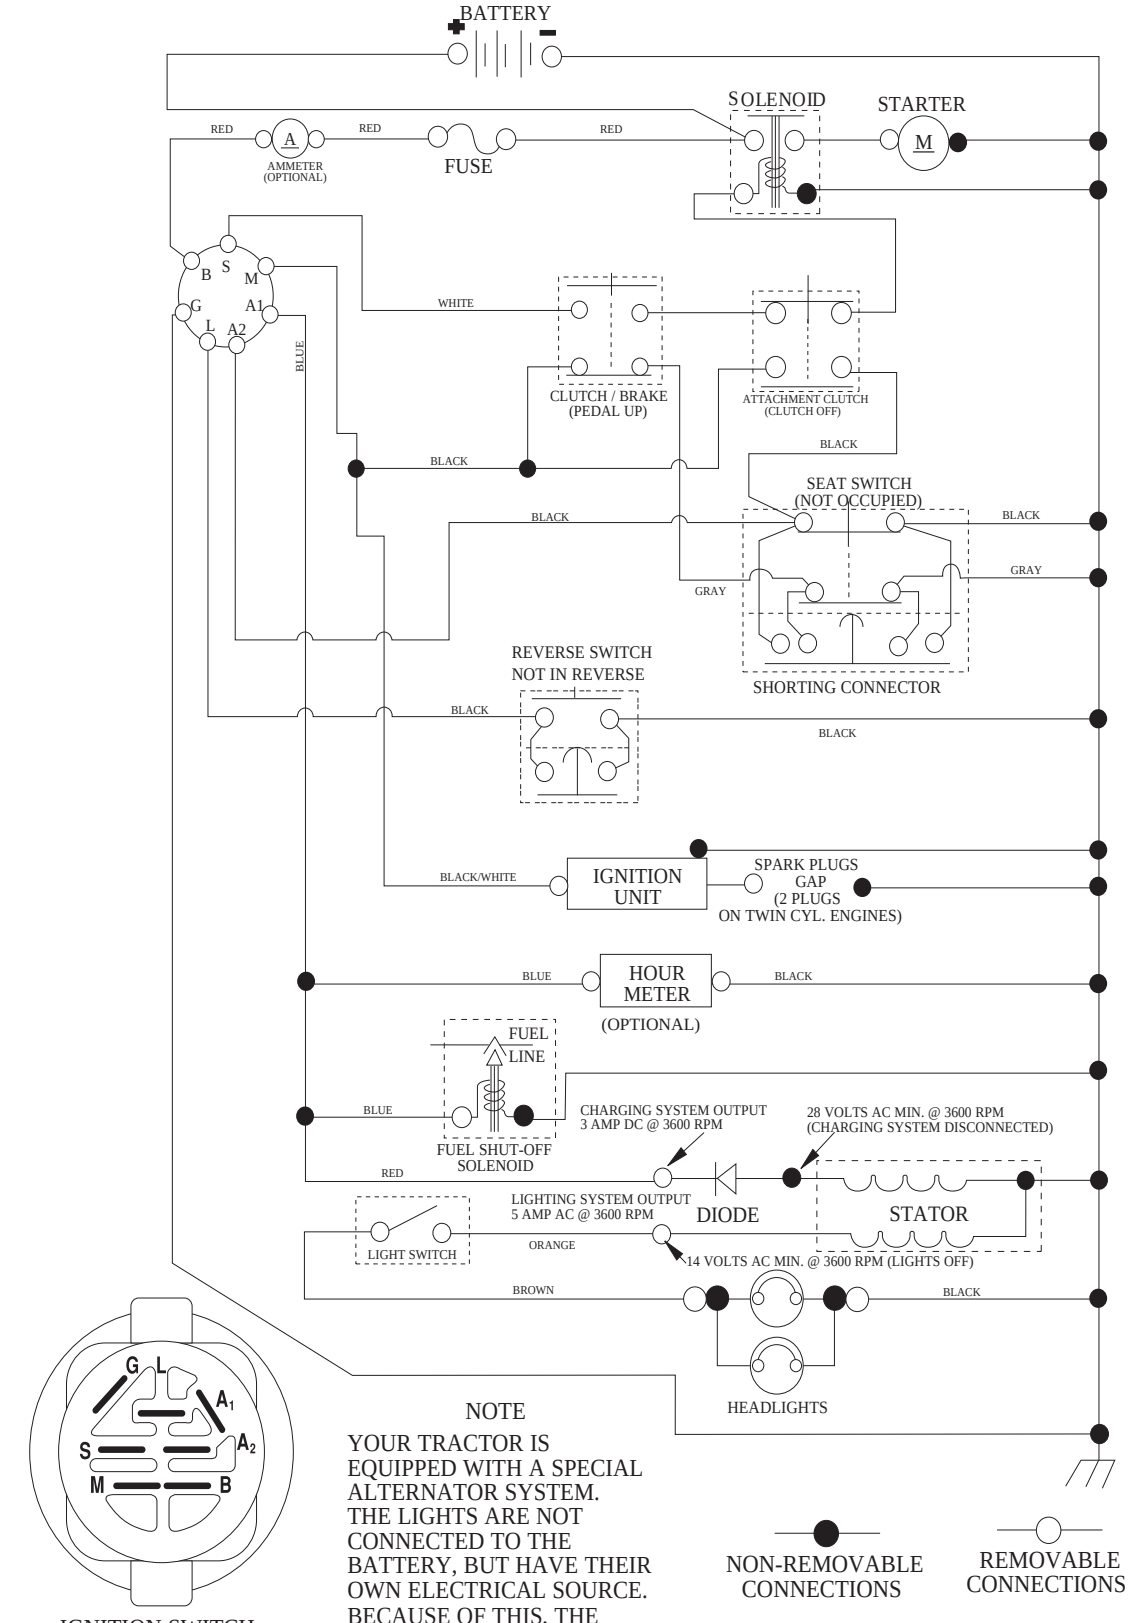





IGNITION SWITCH

| POSITION | CIRCUIT "MAKE" |
|---|---|
| OFF | M+G+A1 |
| RUN/OVERRIDE | B+A1 |
| RUN | B+A1 L+A2 |
| START | B + S + A1 |

NOTE

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

NON-REMOVABLE CONNECTIONS


REMOVABLE CONNECTIONS

WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

## ELECTRICAL 32

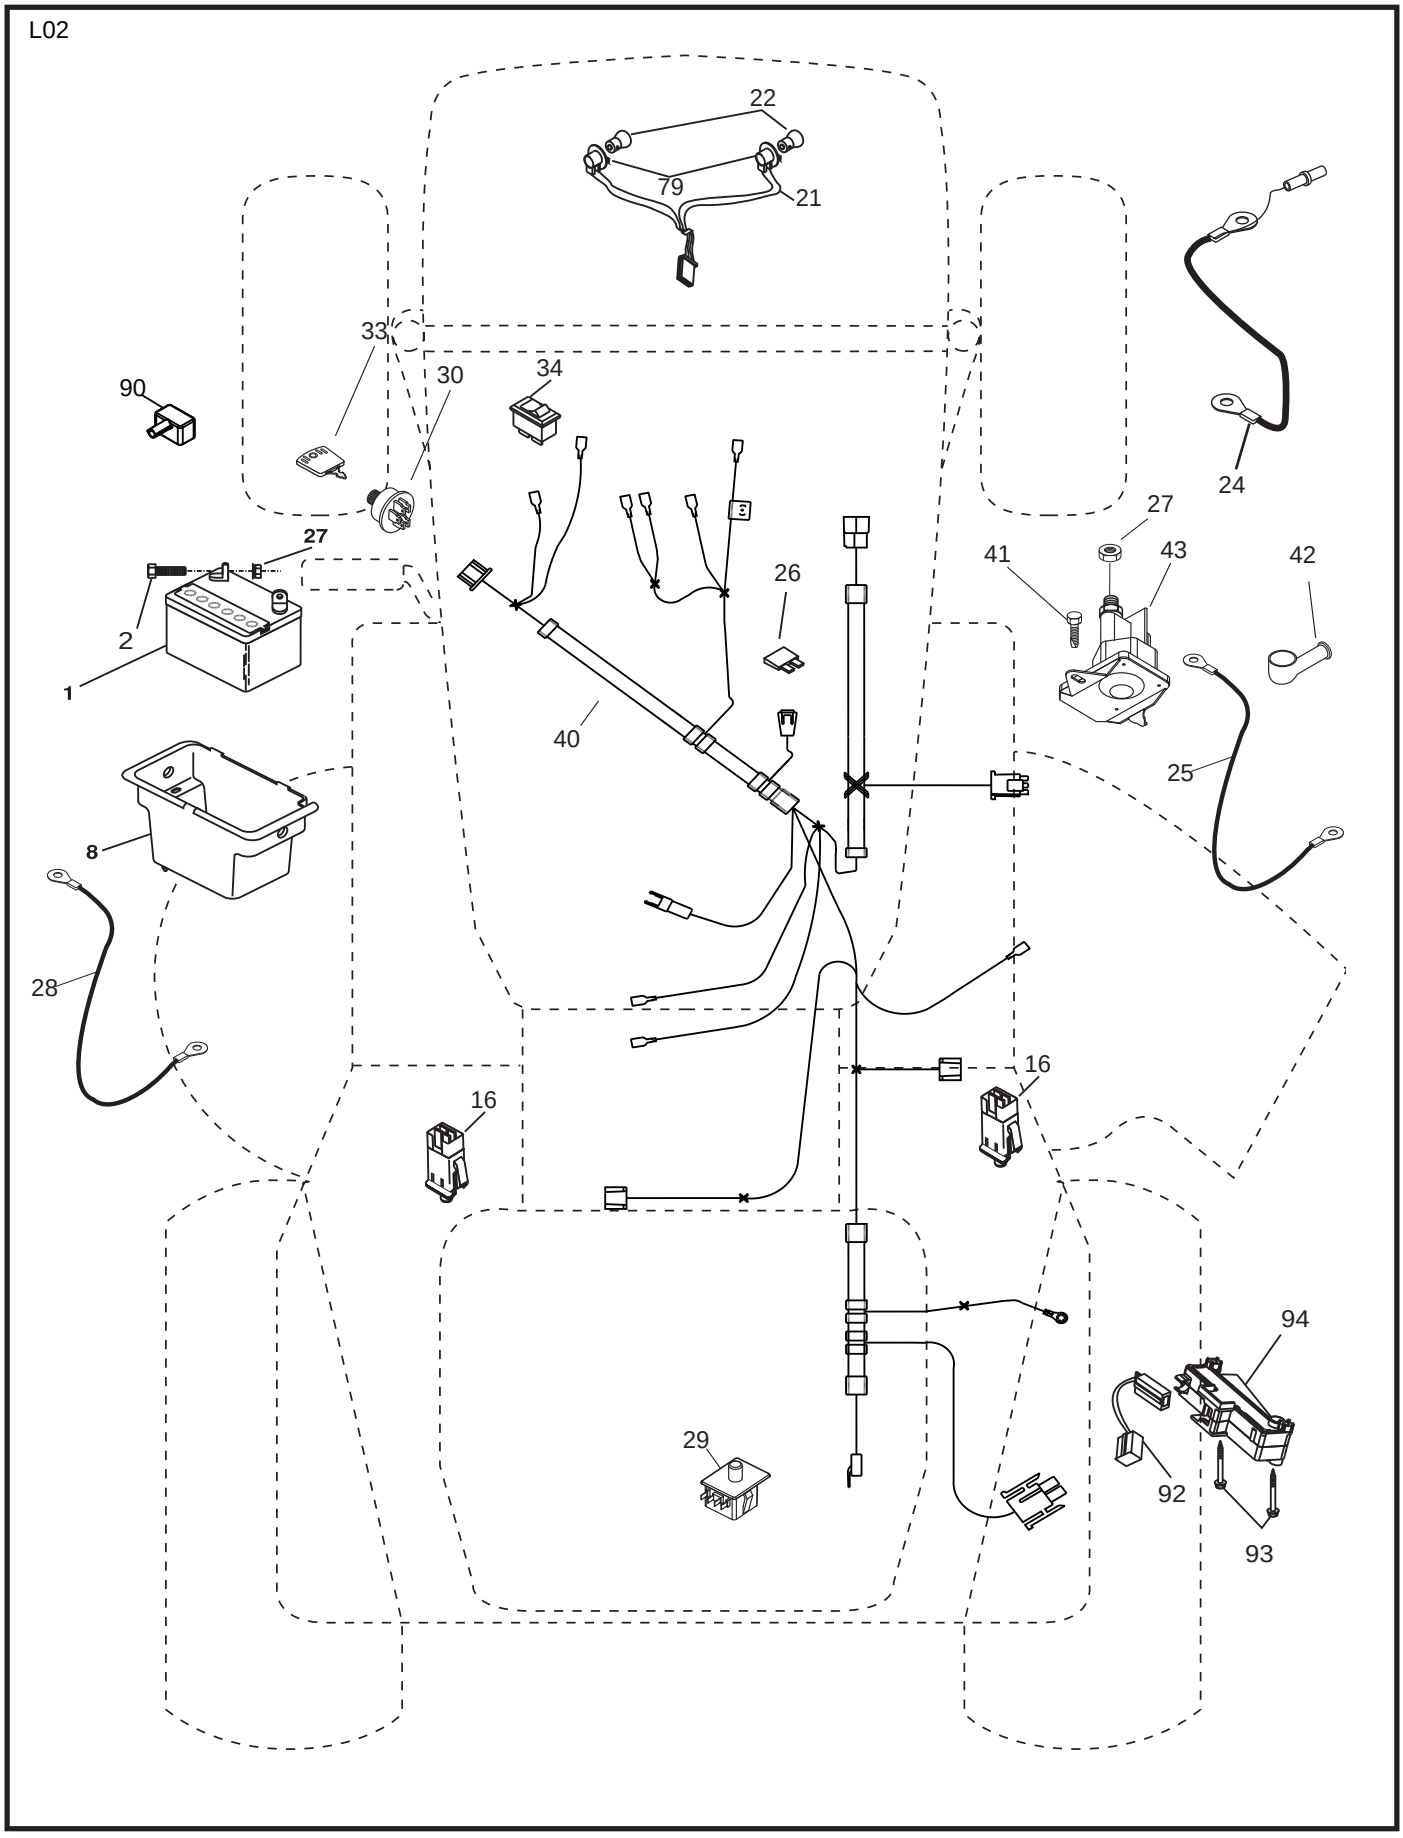


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 16 34-65 | Battery |
| 2 | 874 76 04-12 | Bolt Hex Hd 1/4-20 unc x 3/4 |
| 8 | 532 17 66-89 | Case Battery Mech Hinge |
| 16 | 532 17 61-38 | Switch Interlock |
| 21 | 532 17 56-88 | Harness Asm Light W/4152j |
| 22 | 532 00 41-52 | Bulb Light #1156 |
| 24 | 532 42 12-99 | Cable Battery |
| 25 | 532 42 12-97 | Cable Starter |
| 26 | 532 17 51-58 | Fuse 20 AMP |
| 27 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 28 | 532 42 12-98 | Cable Ground 6 Ga. 12" black |
| 29 | 532 19 27-49 | Switch Seat |
| 30 | 532 19 33-50 | Switch Ign |
| 33 | 532 41 19-35 | Key/Chain |
| 34 | 532 11 07-12 | Switch Light |
| 40 | 532 19 74-28 | Harness Ign. |
| 41 | 871 11 04-08 | Bolt Blk Fin Hex 1/4 - 20 x 1/2 |
| 42 | 532 13 15-63 | Cover Terminal Red |
| 43 | 532 19 25-07 | Solenoid |
| 79 | 532 17 52-42 | Socket Asm. Bulb Twistlock |
| 90 | 532 18 04-49 | Cover Terminal Battery |
| 92 | 532 19 66-15 | Harness Pigtail |
| 93 | 532 19 25-40 | Screw Plastite 10-24-24 x 2.0 |
| 94 | 532 19 18-34 | Module Reverse |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

## TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

### CHASSIS AND ENCLOSURES 39

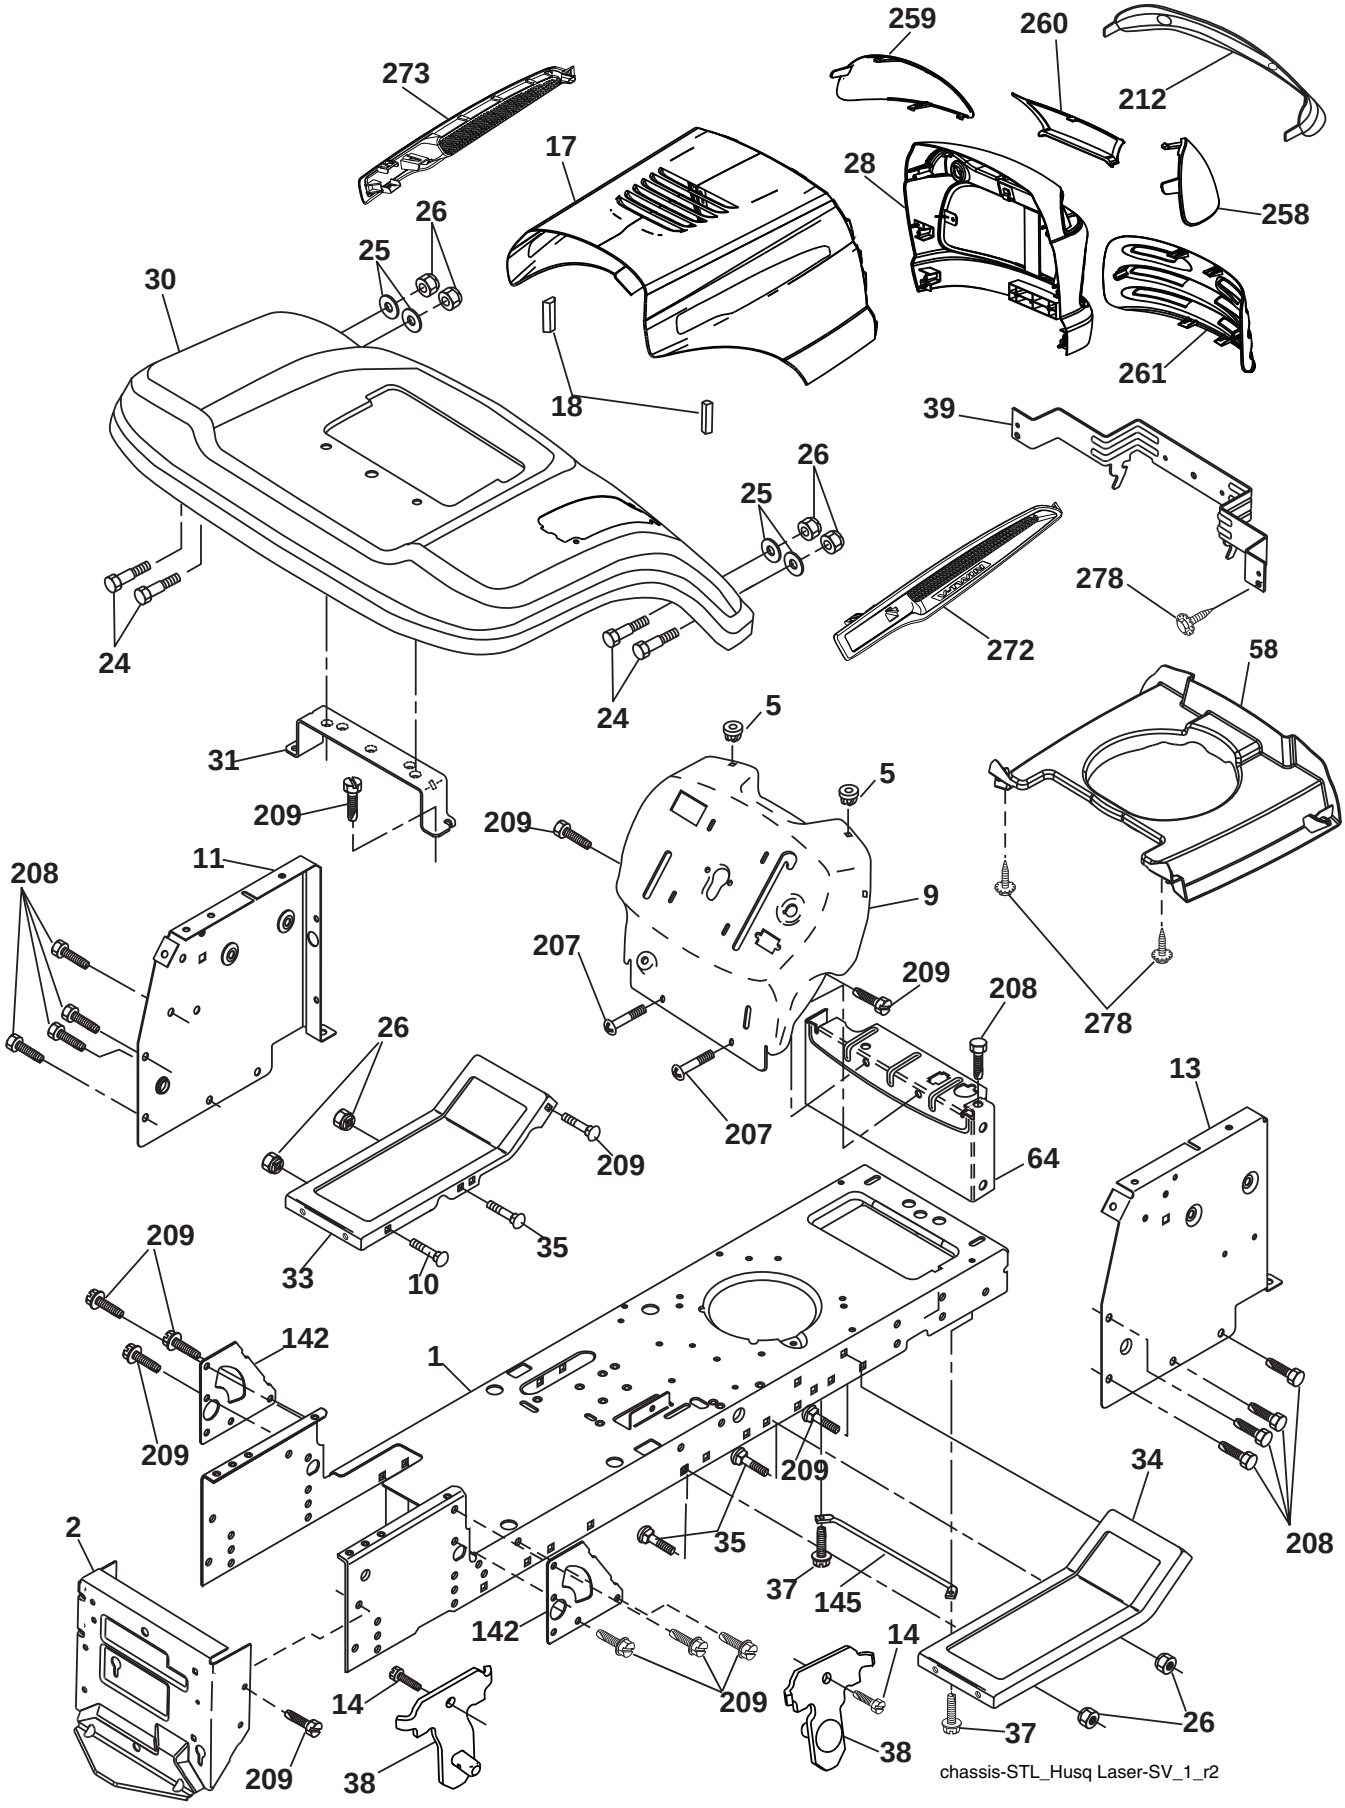


## CHASSIS AND ENCLOSURES 39

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 17 46-19 | Chassis |
| 2 | 532 17 65-54 | Drawbar |
| 5 | 532 15 52-72 | BumperHood/Dash |
| 9 | 532 41 59-43 | Dash STL |
| 10 | 872 14 06-08 | Bolt, Carriage 3/8-16 x 1 |
| 11 | 532 17 49-96 | Dashboard, Panel LH |
| 13 | 532 18 17-19 | Dashboard, Panel RH |
| 14 | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2 |
| 17 | 532 18 88-93 | Hood |
| 18 | 532 18 49-21 | BumperHood |
| 24 | 874 78 06-16 | Bolt, Hex Head, Fin. 3/8-16 x 1 Gr. 5 |
| 25 | 819 13 13-12 | Washer 13/32 x 13/16 x12 Ga. |
| 26 | 873 80 06-00 | Nut Lock Hex w/Ins. 3/8-16 unc |
| 28 | 532 18 35-38 | Grille<br>(Includes Key Nos. 212, 258, 259, 260, 261) |
| 30 | 532 44 12-86 | Fender |
| 31 | 532 13 66-19 | Fender Bracket |
| 33 | 532 17 97-16 | Footrest, LH |
| 34 | 532 17 97-17 | Footrest, RH |
| 35 | 872 11 06-06 | Bolt 3/8-16 X 3/4 |
| 37 | 817 49 05-08 | Screw Thdrol 5/16-18 x 1/2 |
| 38 | 532 17 57-10 | Bracket Asm. Pivot Mower Rear |
| 39 | 532 40 78-07 | Bracket Pivot Laser |
| 58 | 532 18 42-70 | Duct Air |
| 64 | 532 15 47-98 | Dash Lower |
| 142 | 532 17 57-02 | Plate Reinforcement |
| 145 | 532 40 91-67 | Rod Pivot Chassis/Hood |
| 207 | 817 67 05-08 | Screw Thdrol 5/16-18 x 1/2 |
| 208 | 817 67 06-08 | Screw Thdrol 3/8-16 x 1/2 |
| 209 | 817 00 06-12 | Screw Hexwsh Thdr 3/8-16 x 3/4 |
| 212 | 532 18 35-48 | Insert Lens Reflect |
| 258 | 532 18 52-14 | Lens RH |
| 259 | 532 18 52-13 | Lens LH |
| 260 | 532 18 52-16 | Cover Lens |
| 261 | 532 18 52-12 | Insert Grille |
| 272 | 532 18 88-96 | Vent Hood RH |
| 273 | 532 18 88-95 | Vent Hood LH |
| 278 | 532 41 63-58 | Screw #10 x 0.750 BOS Thread |
| - - | 532 00 54-79 | Button Plug |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

## DRIVE 40

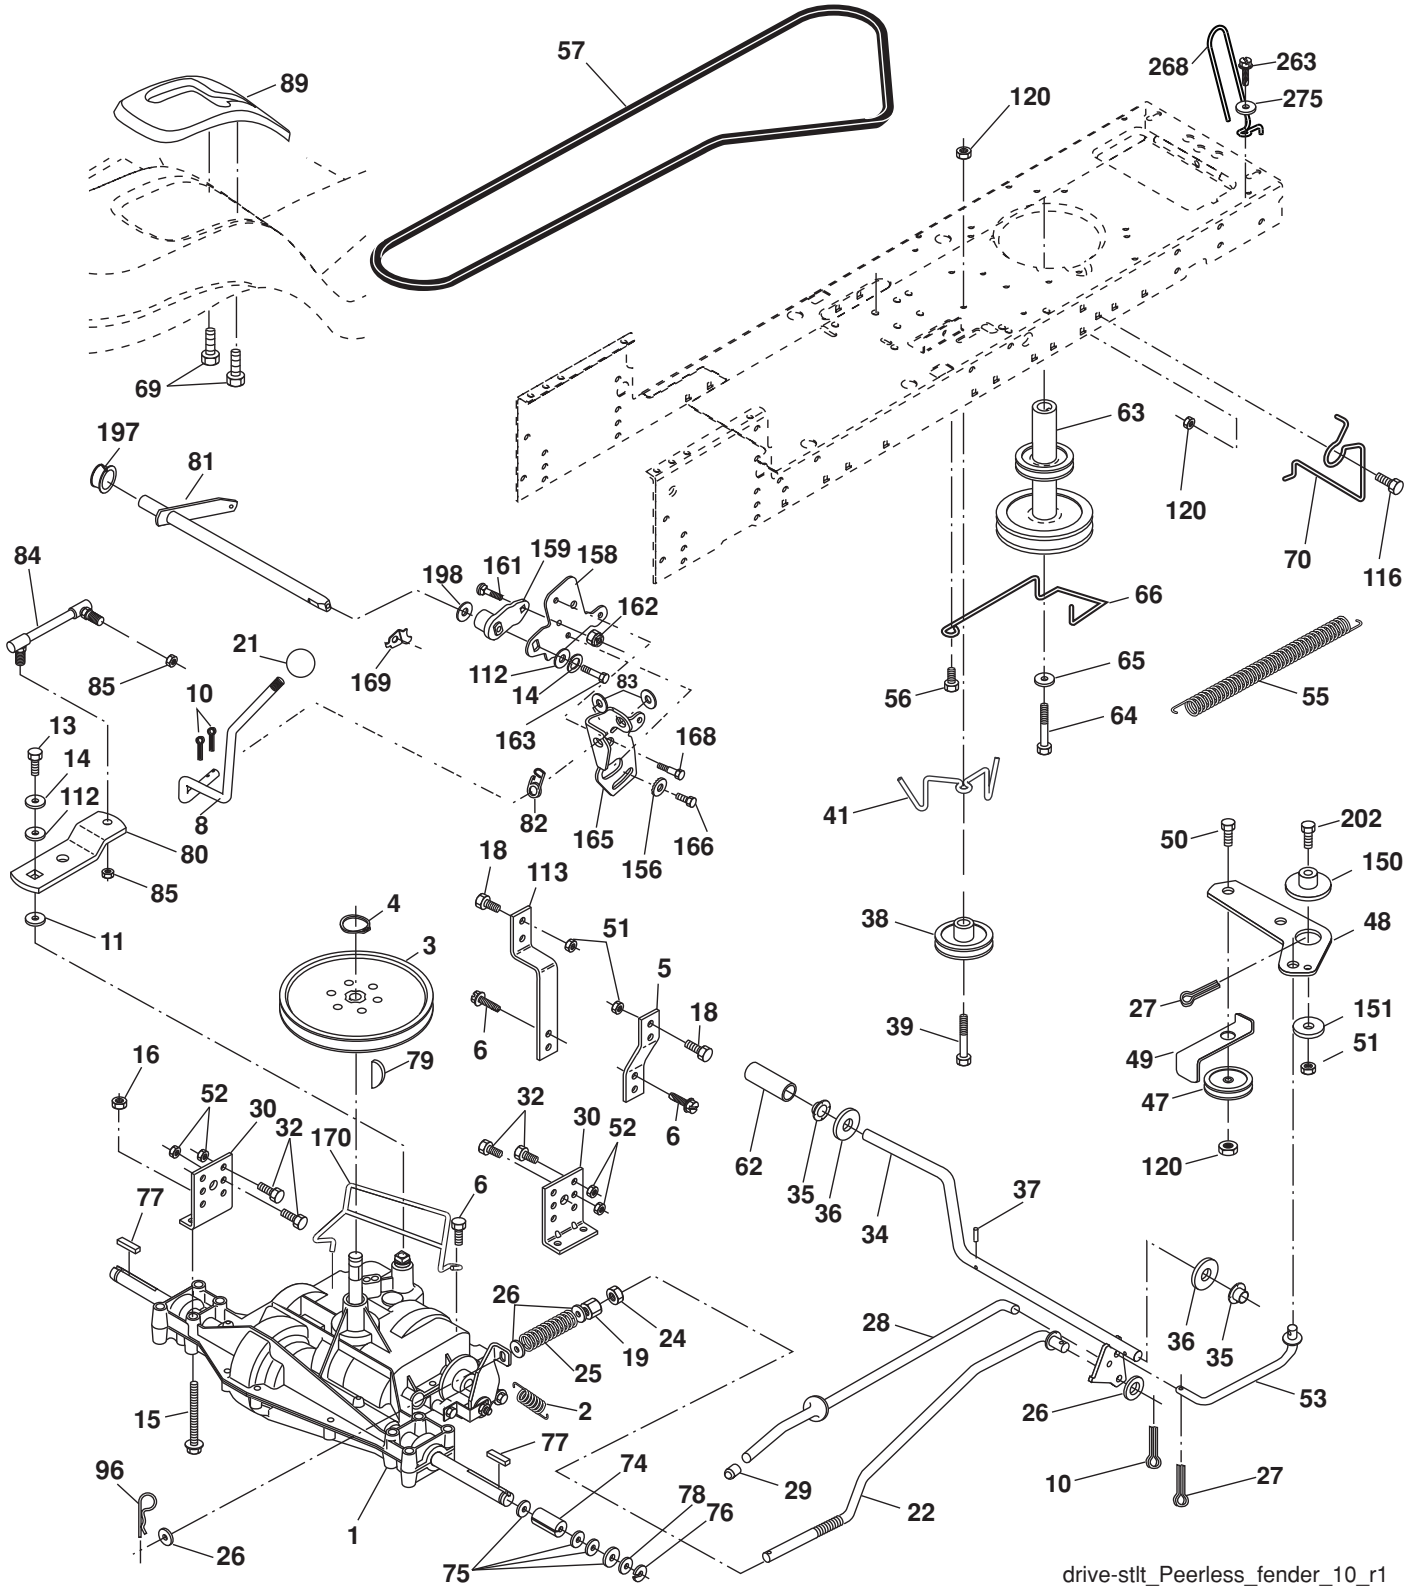

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64


## DRIVE 40

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | - - - - - - - - - | Transaxle Peerless 205-545C |
| 2 | 532 14 66-82 | Spring Return Brake T/a Zinc |
| 3 | 532 12 36-66 | Pulley Transaxle 18" tires |
| 4 | 812 00 00-28 | Ring Retainer # 5100-62 |
| 5 | 532 12 15-20 | Strap Torque 30 Degrees |
| 6 | 817 06 05-12 | Screw Thdrol 5/16-18 x 3/4 |
| 8 | 532 19 27-06 | Rod Shift Fender Adjust Lt |
| 10 | 876 02 04-16 | Pin Cotter 1/8 x 1 Cad |
| 11 | 532 10 57-01 | Washer Plate Shf 388 Sq Hole |
| 13 | 874 55 04-12 | Bolt 1/4-28 unf Gr. 8 W/Patch |
| 14 | 810 04 04-00 | Washer Lock Hvy Helical |
| 15 | 874 49 05-44 | Bolt Hex 5/16-18 Gr. 5 |
| 16 | 873 80 05-00 | Nut Lock Hex w/Ins 5/16-18 |
| 18 | 874 78 06-16 | Bolt, Fin Hex 3/8-16 unc x 1 Gr. 5 |
| 19 | 873 80 06-00 | Nut Lock 3/8-16 unc |
| 21 | 532 10 69-32 | Knob |
| 22 | 532 13 08-04 | Rod Brake Blk Zinc 26 840 |
| 24 | 873 35 06-00 | Nut Hex Jam 3/8-16 unc |
| 25 | 532 10 68-88 | Spring Rod Brake 2 00 Zinc |
| 26 | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga. |
| 27 | 876 02 04-12 | Pin Cotter 1/8 x 3/4 Cad |
| 28 | 532 17 57-65 | Rod Brake Parking LT/YT |
| 29 | 532 07 16-73 | Cap Brake Parking Black |
| 30 | 532 17 49-73 | Bracket Mtg Transaxle |
| 32 | 874 76 05-12 | Bolt Hex Hd 5/16-18 unc x 3/4 |
| 34 | 532 17 55-78 | Shaft Asm Pedal Foot |
| 35 | 532 12 01-83 | Bearing Nylon Blk 629 Id |
| 36 | 819 21 16-16 | Washer 21/32 x 1 x 16 Ga. |
| 37 | 532 12 49-63 | Pin Roll 3/16 x 1" |
| 38 | 532 17 91-14 | Pulley Idler Composite |
| 39 | 872 11 06-22 | Bolt Fin Hex 3/8-16 unc x 2-3/4 Gr. 5 |
| 41 | 532 17 55-56 | Keeper Belt Idler Flat |
| 47 | 532 12 77-83 | Pulley Idler V Groove Plastic |
| 48 | 532 15 44-07 | Bellcrank Clutch Grnd Driv |
| 49 | 532 12 32-05 | Retainer Belt Style Spring |
| 50 | 872 11 06-12 | Bolt 3/8-16 x 1-1/2 Gr. 5 |
| 51 | 873 68 06-00 | Nut Crownlock 3/8-16 unc |
| 52 | 873 68 05-00 | Nut Crownlock 5/16-18 unc |
| 53 | 532 19 96-52 | Link Clutch |
| 55 | 532 10 57-09 | Spring Return Clutch 6 75 |
| 56 | 817 06 06-20 | Screw 3/8-16 x 3/4 |
| 57 | 532 13 82-55 | V-Belt Ground Drive 95 .25 |
| 62 | 532 12 48-72 | Cover Pedal Round |
| 63 | 532 17 54-10 | Engine Pulley |
| 64 | 532 17 39-37 | Bolt Hex |
| 65 | 810 04 07-00 | Washer Lock Hvy Hlcl Spr 7/16 |
| 66 | 532 15 47-78 | Keeper Belt Engine Foolproof |
| 69 | 532 14 24-32 | Screw Hex 1/4-1/2 unc |
| 70 | 532 13 46-83 | Guide Belt Mower Drive RH |
| 74 | 532 13 70-57 | Spacer Axle |
| 75 | 532 12 17-49 | Washer 25/32 x 1 1/4 x 16 Ga. |
| 76 | 812 00 00-01 | E-ring #5133-75 |
| 77 | 532 12 35-83 | Key Square 2 0 x 1845/ 1865 |
| 78 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 79 | 532 12 50-96 | Key Woodruff #9 3/16 x 3/4 |
| 80 | 532 13 14-86 | Arm Shift |
| 81 | 532 16 55-94 | Shaft Asm Cross 18"t |
| 82 | 532 16 57-11 | Spring Torsion T/a |
| 83 | 819 17 12-16 | Washer 17/32 x 3/4 x 16 Ga. |
| 84 | 532 16 62-28 | Link Transaxle |
| 85 | 532 15 03-60 | Nut Lock Center 1/4 - 28 FNTHD |
| 89 | 532 19 49-71 | Console Shift STLT |
| 96 | 532 12 47-88 | Retainer Spring 1" |
| 112 | 819 09 12-10 | Washer 9/32 x 3/4 x 10 Ga. |
| 113 | 532 12 72-85 | Strap Torque LT |
| 116 | 872 14 06-08 | Bolt Rdhd Sq Neck 3/8-16 x 1.0 |
| 120 | 873 90 06-00 | Nut Lock Flg. 3/8-16 unc |
| 150 | 532 17 54-56 | Spacer |
| 151 | 819 13 32-10 | Washer 13/32 x 2 x 10 Ga. |
| 156 | 532 16 60-02 | Washer Srrted 5/16 ID x 1.125 |
| 158 | 532 16 55-89 | Bracket Shift Mount |
| 159 | 532 18 39-00 | Hub Shift |
| 161 | 872 14 04-06 | Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr. 5 |
| 162 | 873 68 04-00 | Nut Crownlock 1/4-20 unc |
| 163 | 874 78 04-16 | Bolt Hex Fin 1/4-20 unc x 1 Gr. 5 |
| 165 | 532 16 56-23 | Bracket Pivot Lever |
| 166 | 817 49 05-10 | Screw 5/16-18 x 5/8 |
| 168 | 532 16 54-92 | Bolt Shoulder 5/16-18 x .561 |
| 169 | 532 16 55-80 | Plate Fastening Lt |
| 170 | 532 18 74-14 | Keeper, Belt T/A |
| 197 | 532 16 96-13 | Nyliner Snap-In |
| 198 | 532 16 95-93 | Washer Nyl |
| 202 | 872 11 06-14 | Bolt Carr. SH 3/8-16 x 1-3/4 Gr. 5 |
| 263 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 268 | 532 18 24-02 | Guard Muffler |
| 275 | 819 13 16-14 | Washer 13/32 x 1 x 14 Ga. |

**NOTE**: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

## TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

**ENGINE 24**

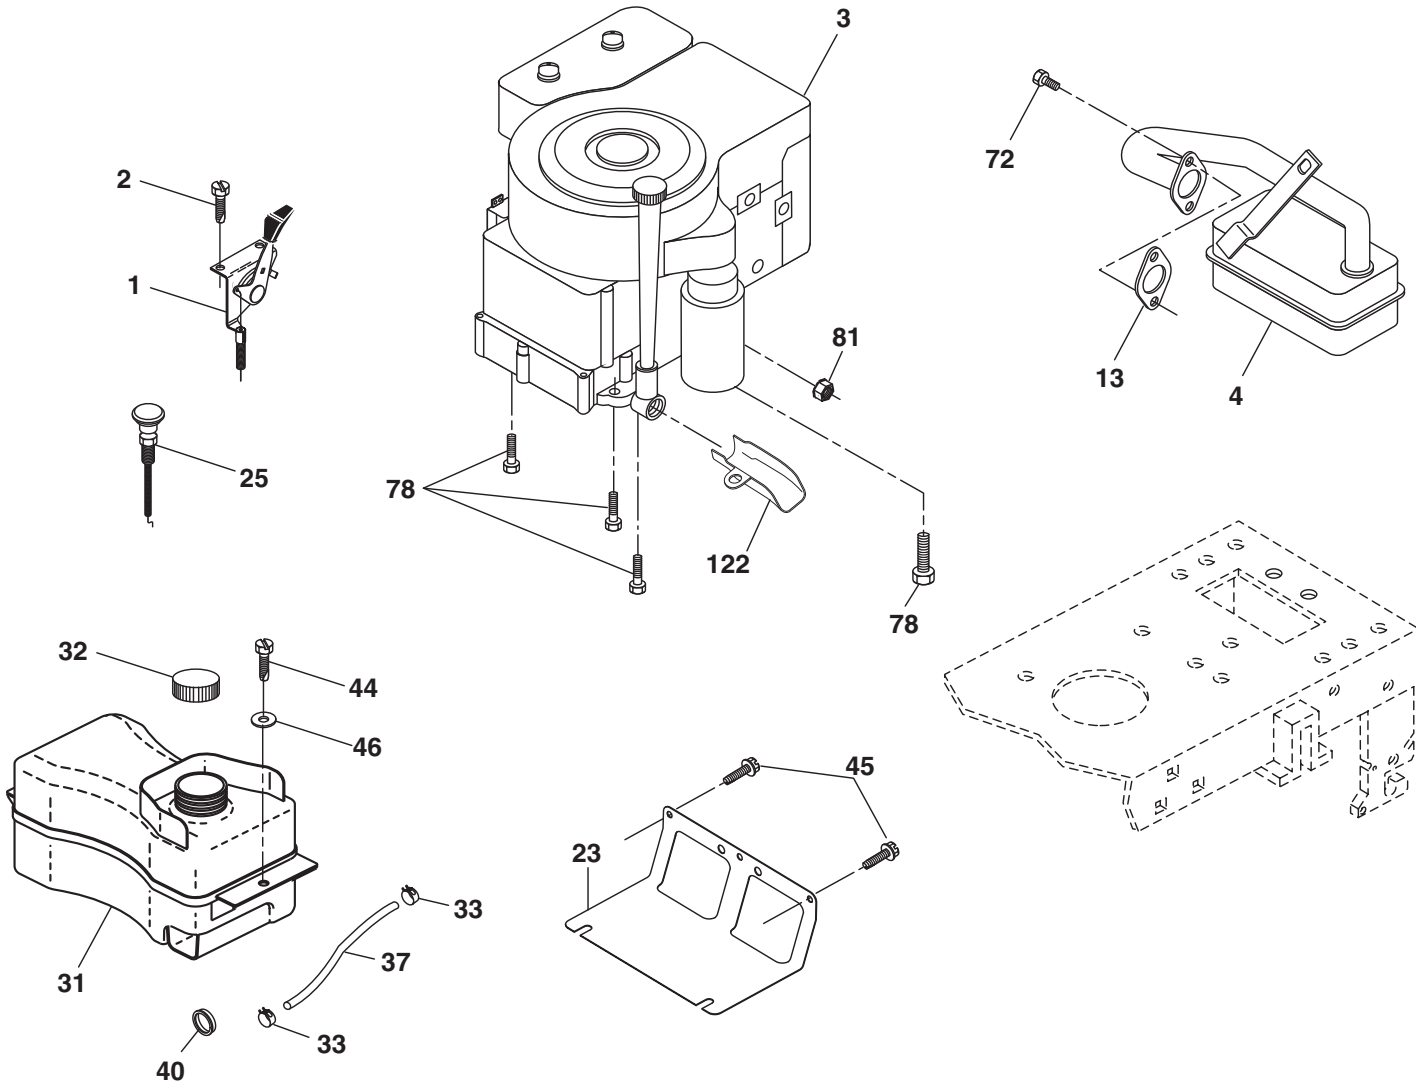


**OPTIONAL EQUIPMENT**

**Spark Arrester**

engine-LT_bs_10

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 17 05-51 | Control Th/ch Flag |
| 2 | 817 72 04-08 | Screw Hex Thd Cut 1/4-20 x 1/2 |
| 3 | - - - - - - - - - | Engine B&S Model No. 219807-1168-B1 |
| 4 | 532 17 97-58 | Muffler |
| 13 | 532 16 52-91 | Gasket Eng |
| 23 | 532 16 98-37 | Shield Brn/Dbr Guard |
| 25 | 532 19 06-95 | Control Choke |
| 29 | 532 13 71-80 | Kit Spark Arrester |
| 31 | 532 40 75-16 | Tank Fuel Front 1.25 |
| 32 | 532 42 51-62 | Cap Fuel |
| 33 | 532 12 34-87 | Clamp Hose Blk |
| 37 | 532 13 70-40 | Line Fuel 20" |
| 40 | 532 12 40-28 | Bushing Snap Nyl Blk Fuel Line |
| 44 | 817 67 04-12 | Screw Hexwsh Thdrol 1/4-20 x 3/4 |
| 45 | 817 00 06-12 | Screw Hexwsh Thdrol 3/8-16 x 3/4 |
| 46 | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga. |
| 72 | 532 19 23-34 | Screw Socket HD 5/16-18 x .75 |
| 78 | 817 06 06-20 | Screw 3/8-16 x 1-1/4 |
| 81 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 122 | 532 42 19-22 | Extension Drain Oil |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**Engine Power Rating Information**

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual “on-site” or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

## STEERING ASSEMBLY 41

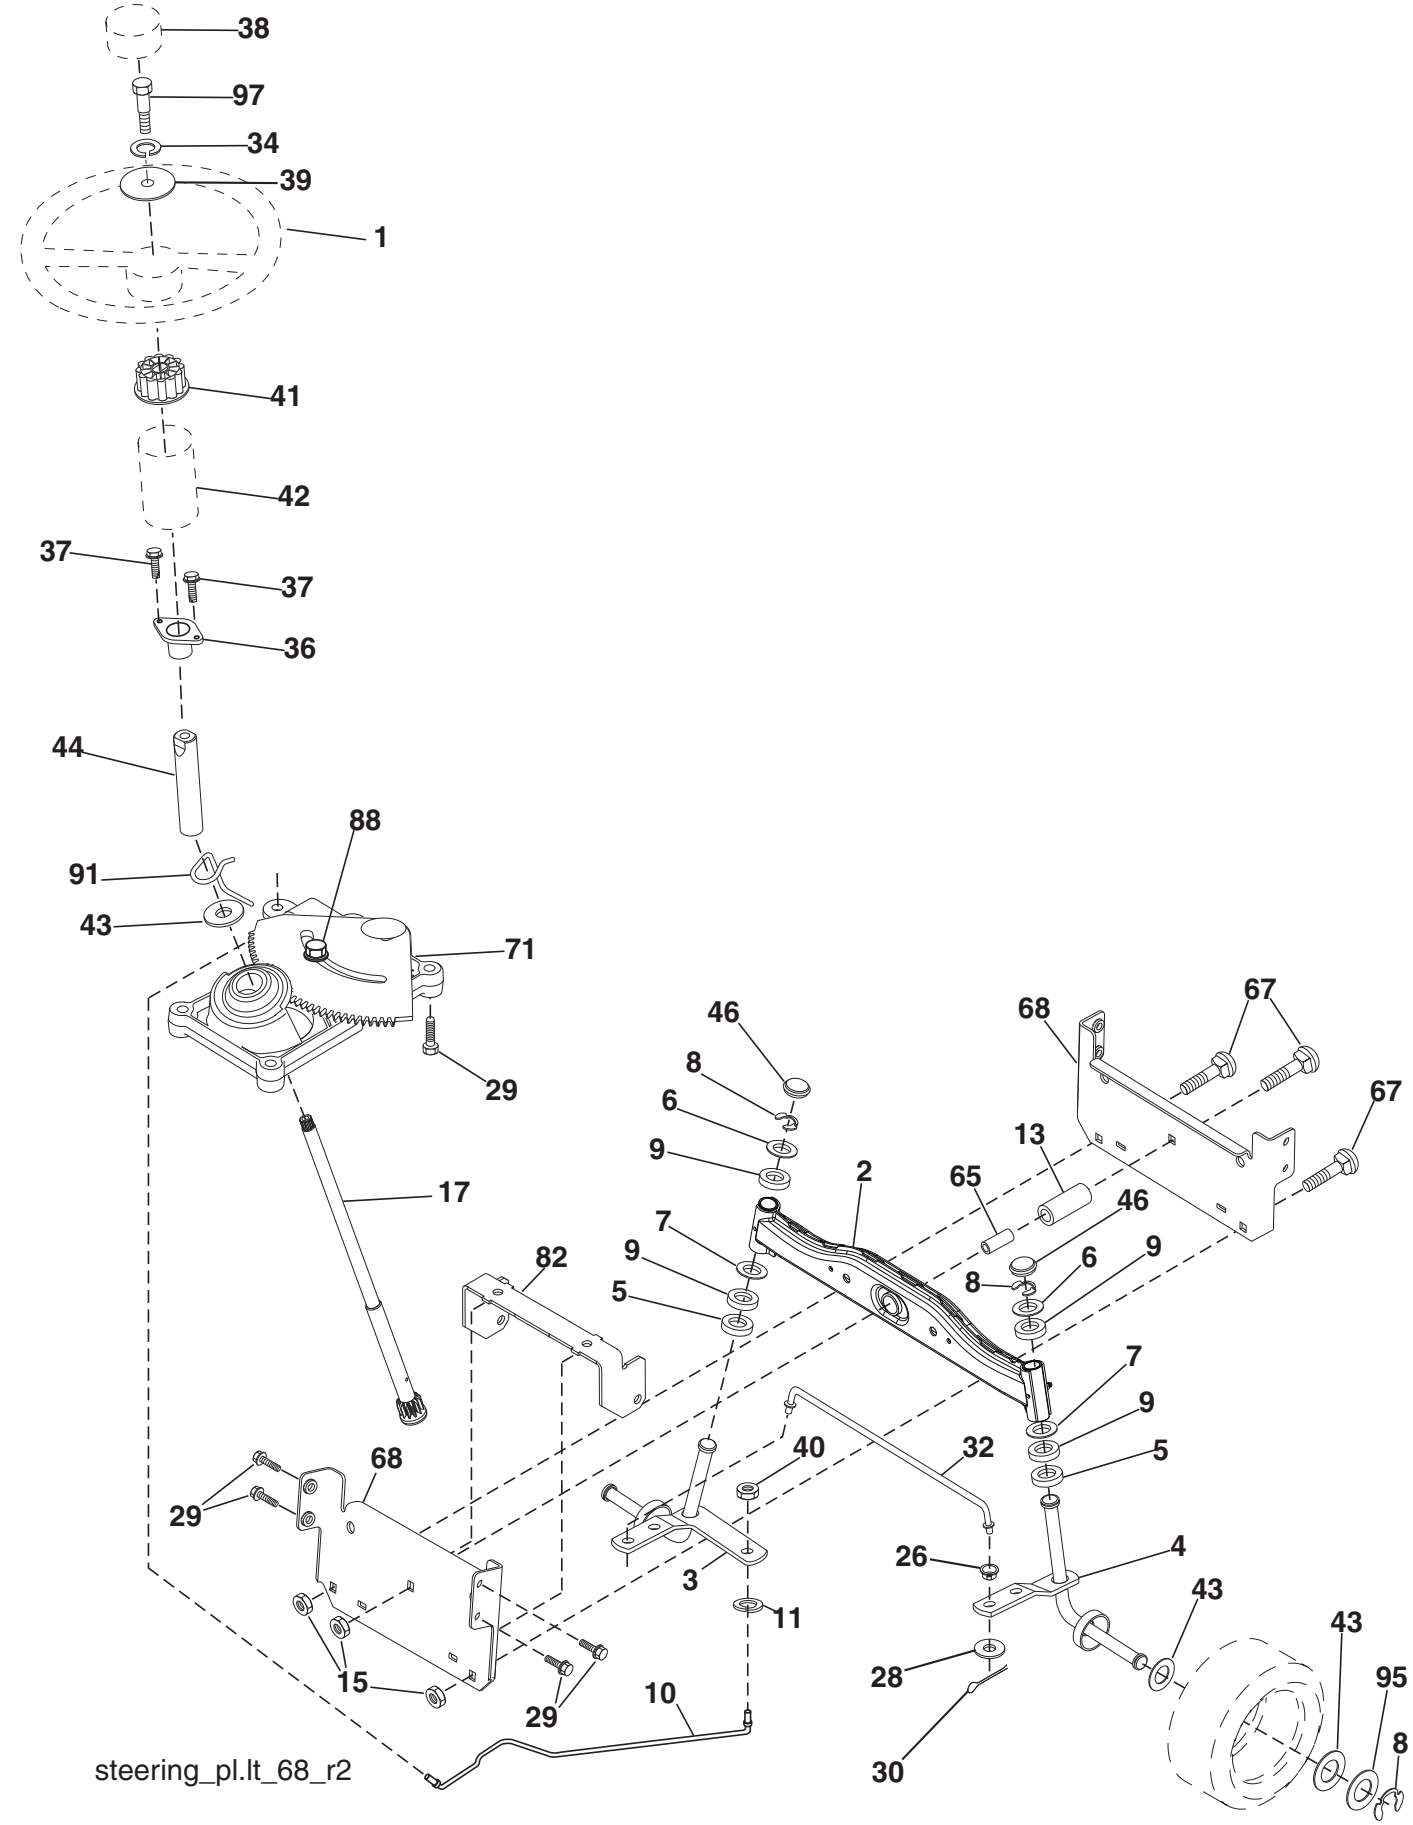

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64


## STEERING ASSEMBLY 41

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 18 67-80 | Wheel Steering Opp. Sears Blk |
| 2 | 532 41 81-68 | Axle Asm |
| 3 | 532 16 98-40 | Spindle Asm LH |
| 4 | 532 16 98-39 | Spindle Asm RH |
| 5 | 532 12 49-31 | Bearing Race Thrust Hardened |
| 6 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 7 | 819 27 20-16 | Washer 27/32 x 1-1/4 x 16 Ga. |
| 8 | 812 00 00-29 | Ring Klip #t5304-75 |
| 9 | 532 12 49-37 | Bearing Col Strg Blk |
| 10 | 532 17 51-21 | Link Drag |
| 11 | 810 04 06-00 | Washer Lock Hvy Hlcl Spr 3/8 |
| 13 | 532 13 65-18 | Spacer Brace Axle |
| 15 | 873 90 06-00 | Nut Lock Flg. 3/8-16 unc |
| 17 | 532 19 07-53 | Shaft Asm Strg |
| 26 | 532 12 68-47 | Bushing Link Drag Blk LR |
| 28 | 819 13 14-16 | Washer 13/32 x 7/8 x 16 Ga. |
| 29 | 817 00 06-12 | Screw 3/8-16 x .75 |
| 30 | 876 02 04-12 | Pin Cotter 1/8 x 3/4 Cad |
| 32 | 532 19 27-57 | Rod Tie Wire Form 19 75 Mech |
| 34 | 810 04 05-00 | Washer Lock Hvy Hlcl Spr. 5/16 |
| 36 | 532 15 50-99 | Bushing Strg Nat .623/.618Id |
| 37 | 532 15 29-27 | Screw TT #10-32 x 5 x 3/8 Flange |
| 38 | 532 19 29-16 | Cap Wheel Steer P/L |
| 39 | 819 11 38-12 | Washer 11/32 x 2-3/8 |
| 40 | 873 54 06-00 | Nut Crownlock 3/8-24 |
| 41 | 532 18 67-37 | Adaptor Wheel Strg |
| 42 | 532 16 96-33 | Boot Shaft Steering |
| 43 | 532 12 17-49 | Washer 25/32 x 1 1/4 x 16 Ga. |
| 44 | 532 19 07-52 | Extension Steering |
| 46 | 532 12 12-32 | Cap Spindle Fr Top Blk |
| 65 | 532 41 47-36 | Spacer Brace Axle |
| 67 | 872 11 06-18 | Bolt RDHD SQ 3/8-16 unc x 2-1/4 |
| 68 | 532 16 98-27 | Brace Axle |
| 71 | 532 17 51-46 | Steering Asm |
| 82 | 532 19 99-78 | Bracket Susp. Chassis Front |
| 88 | 532 17 51-18 | Bolt Shoulder 7/16-20 |
| 91 | 532 17 55-53 | Cup Steering |
| 95 | 532 18 89-67 | Washer Hardened |
| 97 | 532 42 89-82 | Bolt Fin Hex 5/16-18 x 4 w/Patch |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

## MOWER DECK 44

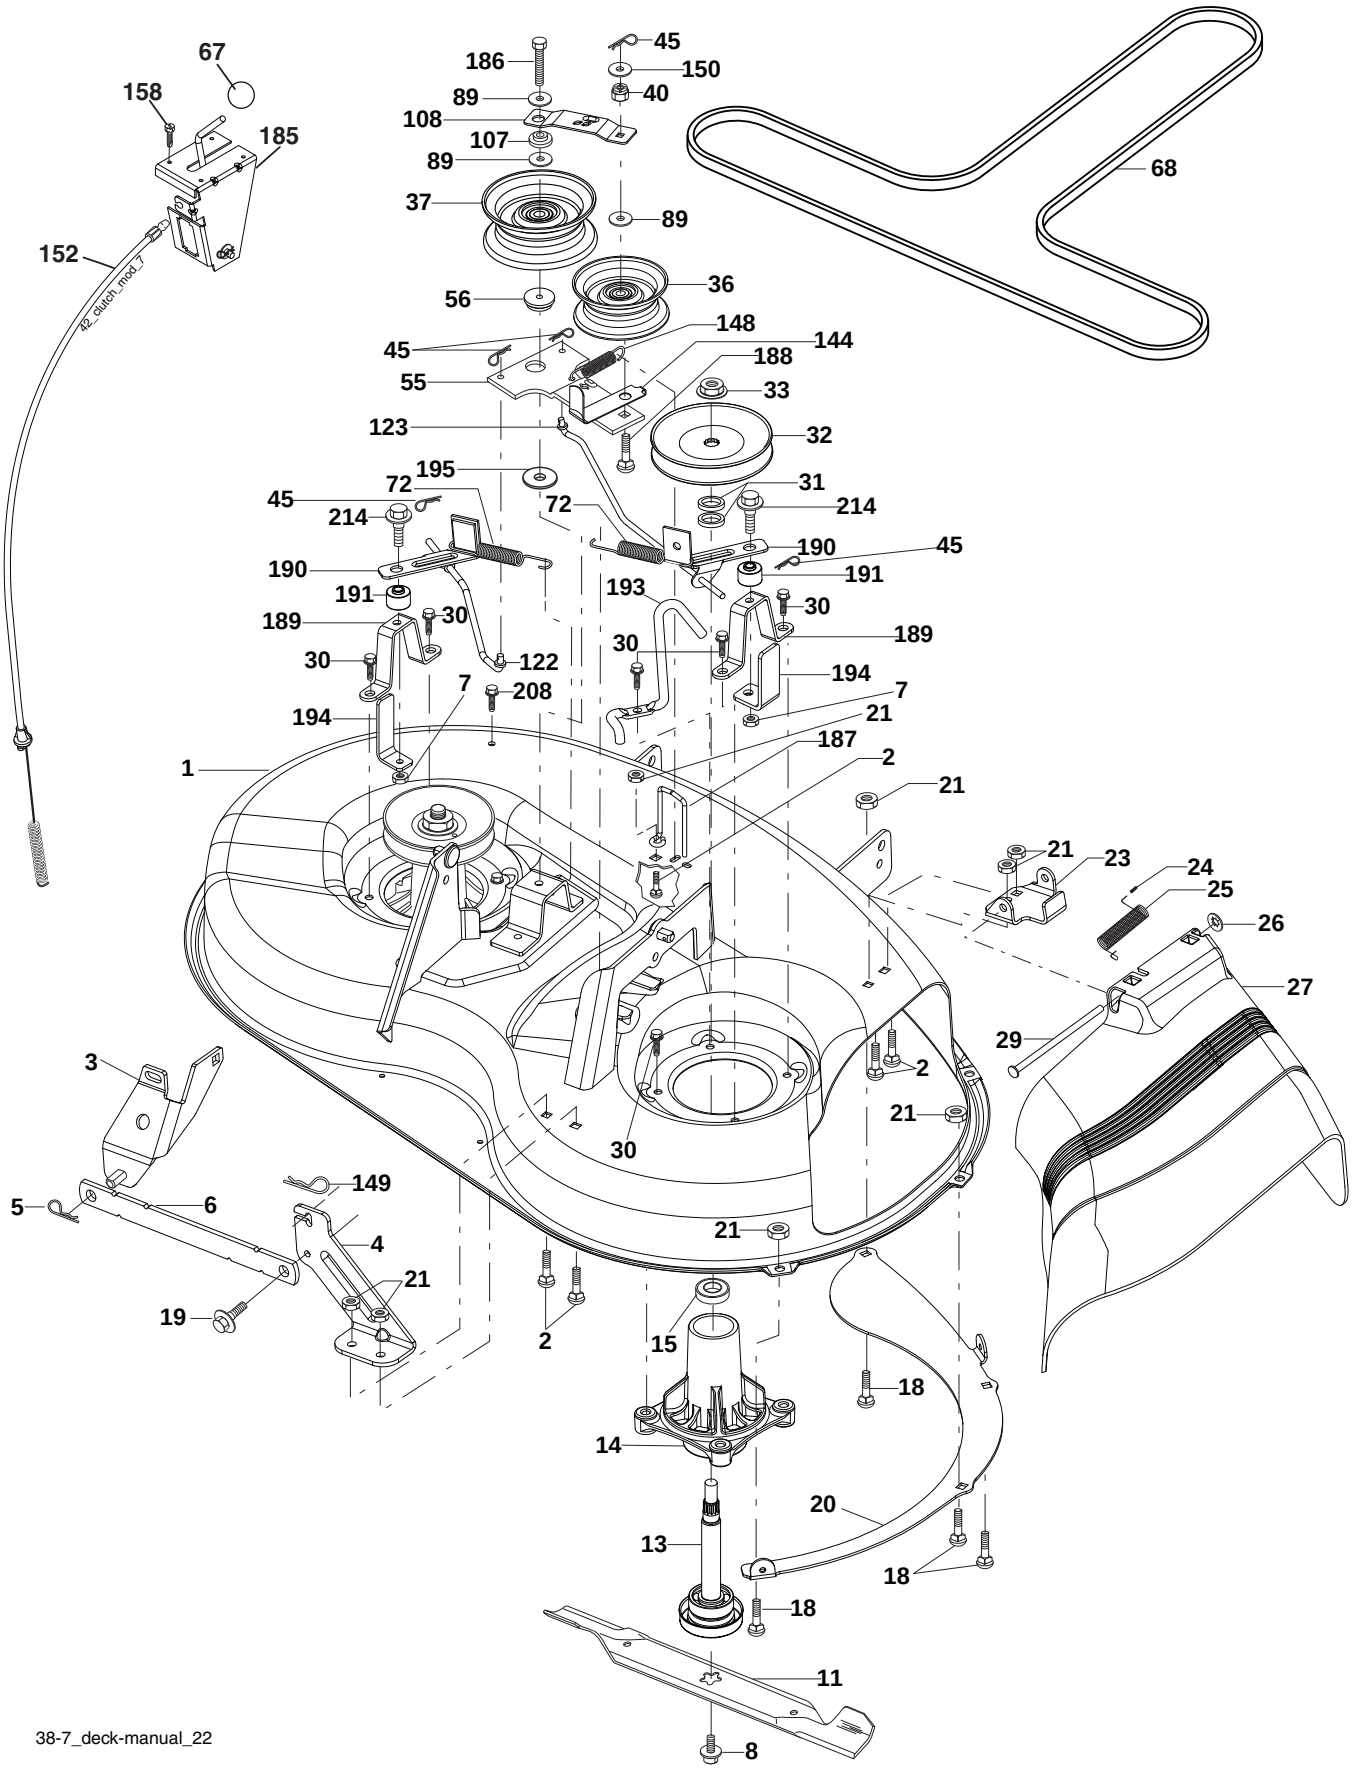


38-7_deck-manual_22

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64


## MOWER DECK 44

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 19 25-56 | Mower Housing Assembly |
| 2 | 872 14 05-06 | Bolt Carriage 5/16-18 x 3/4 |
| 3 | 532 13 80-17 | Bracket Asm Fr. Sway Bar |
| 4 | 532 19 25-68 | Bracket Deck Sway Bar 38"/42" |
| 5 | 532 12 46-70 | Retainer Spring |
| 6 | 532 17 80-24 | Bar Sway Deck |
| 7 | 873 80 05-00 | Nut Lock Hex w/Ins. 5/16-18 unc |
| 8 | 532 19 30-03 | Bolt 3/8-24 x 1.25 Gr. 8 |
| 11 | 532 19 39-57 | Blade Mower 38" 3 N 1 Premium |
| 13 | 532 19 28-72 | Shaft Assembly, Mandrel, Vented |
| 14 | 532 18 72-81 | Housing, Mandrel, Vented |
| 15 | 532 11 04-85 | Bearing, Ball, Mandrel |
| 18 | 872 14 05-05 | Bolt Rdhd Sqnk 5/16-18 x 5/8 |
| 19 | 532 13 28-27 | Bolt, Shoulder |
| 20 | 532 40 00-95 | Baffle Vortex Front |
| 21 | 873 68 05-00 | Nut |
| 23 | 532 19 25-57 | Bracket, Mower Deflector |
| 24 | 532 10 53-04 | Cap, Sleeve |
| 25 | 532 19 70-26 | Spring, Torsion, Deflector |
| 26 | 532 11 04-52 | Nut, Push |
| 27 | 532 40 14-72 | Shield, Deflector |
| 29 | 532 13 14-91 | Rod, Hinge |
| 30 | 532 17 39-84 | Screw Thdrol. |
| 31 | 532 18 76-90 | Washer, Spacer |
| 32 | 532 15 35-32 | Pulley, Mandrel |
| 33 | 532 40 02-34 | Nut, Flange Lock Top |
| 36 | 532 13 14-94 | Pulley, Idler, Flat |
| 37 | 532 19 31-98 | Pulley Idler Flat |
| 40 | 873 68 06-00 | Nut, Crownlock 3/8-16 unc |
| 45 | 532 12 47-88 | Retainer Spring |
| 55 | 532 13 38-40 | Idler Arm Assembly |
| 56 | 532 16 57-23 | Spacer, Retainer |
| 67 | 532 10 69-32 | Knob |
| 68 | 532 19 32-14 | V-Belt |
| 72 | 532 19 32-16 | Spring Brake Return |
| 89 | 819 13 13-11 | Washer 13/32 x 13/16 x 11 Ga. |
| 107 | 532 13 35-02 | Spacer Retainer |
| 108 | 532 13 35-03 | Stiffener, Idler Arm |
| 122 | 532 41 01-89 | Rod, Brake LH |
| 123 | 532 41 01-90 | Rod, Brake RH |
| 144 | 532 19 34-14 | Keeper Belt Idler Tension |
| 148 | 532 16 90-22 | Spring Return Idler |
| 149 | 532 16 58-98 | Retainer Spring Yellow |
| 150 | 819 09 12-10 | Washer 9/32 x 3/4 x 10 Ga. |
| 152 | 532 19 32-35 | Clutch Cable 38"/46" |
| 158 | 817 72 04-08 | Screw Hex Thd Cut 1/4-20 x 1/2 |
| 185 | 532 18 82-34 | Head Asm Cable Clutch |
| 186 | 817 49 06-44 | Screw Hex Wsh Thdrol 3/8-16 x 2-3/4 |
| 187 | 532 19 34-12 | Keeper Belt |
| 188 | 532 16 58-91 | Bolt Carriage Idler |
| 189 | 532 19 25-59 | Stand, Brake |
| 190 | 532 19 25-60 | Arm, Brake |
| 191 | 532 19 25-61 | Spacer, Brake |
| 193 | 532 19 34-13 | Keeper Belt Rh Mandrel |
| 194 | 532 19 41-05 | Guard Brake |
| 195 | 819 13 32-10 | Washer |
| 208 | 817 67 06-08 | Screw Thdrol. 3/8-16 x 1/2 |
| 214 | 532 19 37-82 | Bolt/Washer Asm 5/16-18 |
| - - | 532 19 25-58 | Brake Assembly (Includes Stand, Arm and Guard Components) |
| - - | 532 19 28-70 | Mandrel Assembly (Includes housing, shaft assembly, and bearing only - pulley/nut/washer and blade bolt/washers not included) |
| - - | 532 43 20-31 | Replacement Mower, Complete |

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

## TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

## SEAT ASSEMBLY 42

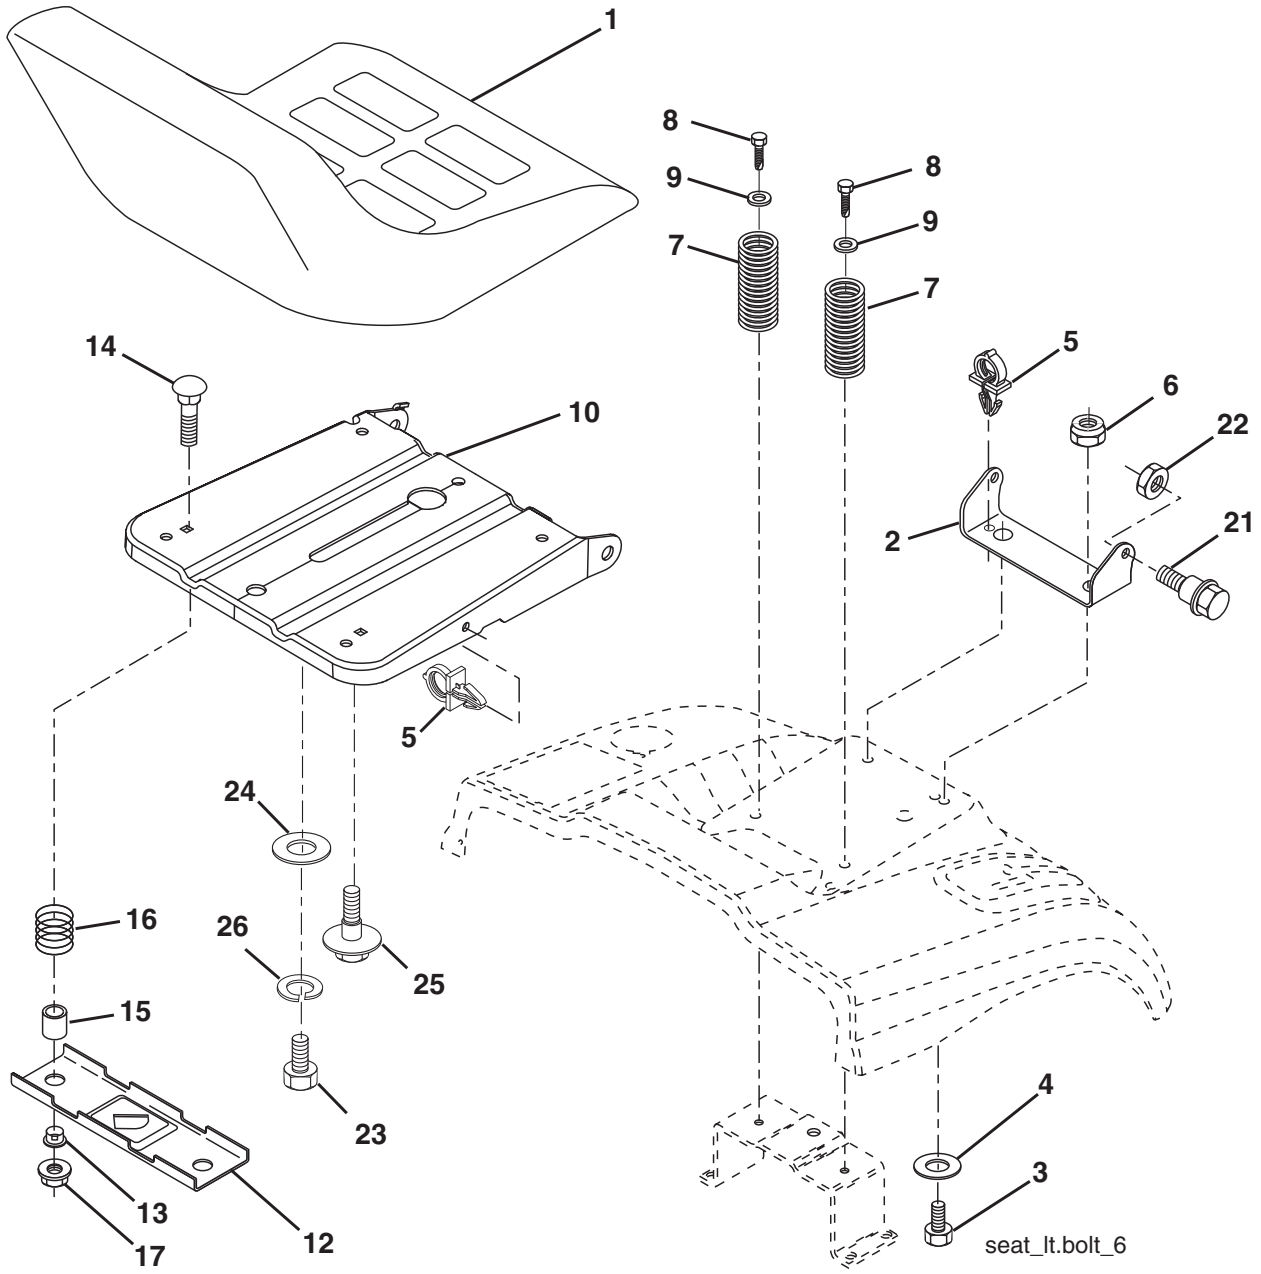



| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 40 10-42 | Seat |
| 2 | 532 14 05-51 | Bracket Pivot Seat 8 720 |
| 3 | 871 11 06-16 | Bolt Fin Hex 3/8-16 unc x 1 |
| 4 | 819 13 16-10 | Washer 13/32 x 1 x 10 Ga. |
| 5 | 532 14 50-06 | Clip Push-In |
| 6 | 873 80 06-00 | Nut Hex w/Ins. 3/8-16 unc |
| 7 | 532 12 41-81 | Spring Seat Cprsn 2 250 Blk Zi |
| 8 | 817 00 06-16 | Screw 3/8-16 x 1-1/2 |
| 9 | 819 13 16-14 | Washer 13/32 x 1 x 14 Ga. |
| 10 | 532 19 55-30 | Pan Seat |
| 12 | 532 17 46-48 | Bracket Mounting Switch |
| 13 | 532 12 12-48 | Bushing Snap Blk Nyl 50 Id |
| 14 | 872 05 04-12 | Bolt Rdhd Sqnk 1/4-20 x 1-1/2 |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 15 | 532 13 43-00 | Spacer Split 28 x 96 Yel Zinc |
| 16 | 532 12 12-50 | Spring Cprsn 1 27 Blk Pnt |
| 17 | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr. 5 Zinc |
| 21 | 532 17 18-52 | Bolt Shoulder 5/16-18 unc |
| 22 | 873 80 05-00 | Nut Hex Lock W/Ins 5/16-18 |
| 23 | 871 11 08-14 | Bolt Hex Black |
| 24 | 819 17 19-12 | Washer 17/32 x 1-3/16 x 12 Ga. |
| 25 | 532 12 70-18 | Bolt Shoulder 5/16-18 x 62 |
| 26 | 810 04 08-00 | Washer Lock HVY 1/2 |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

# TRACTOR - - MODEL NO. LT131 (96011026403), PRODUCT NO. 960 11 02-64

## MOWER LIFT 45

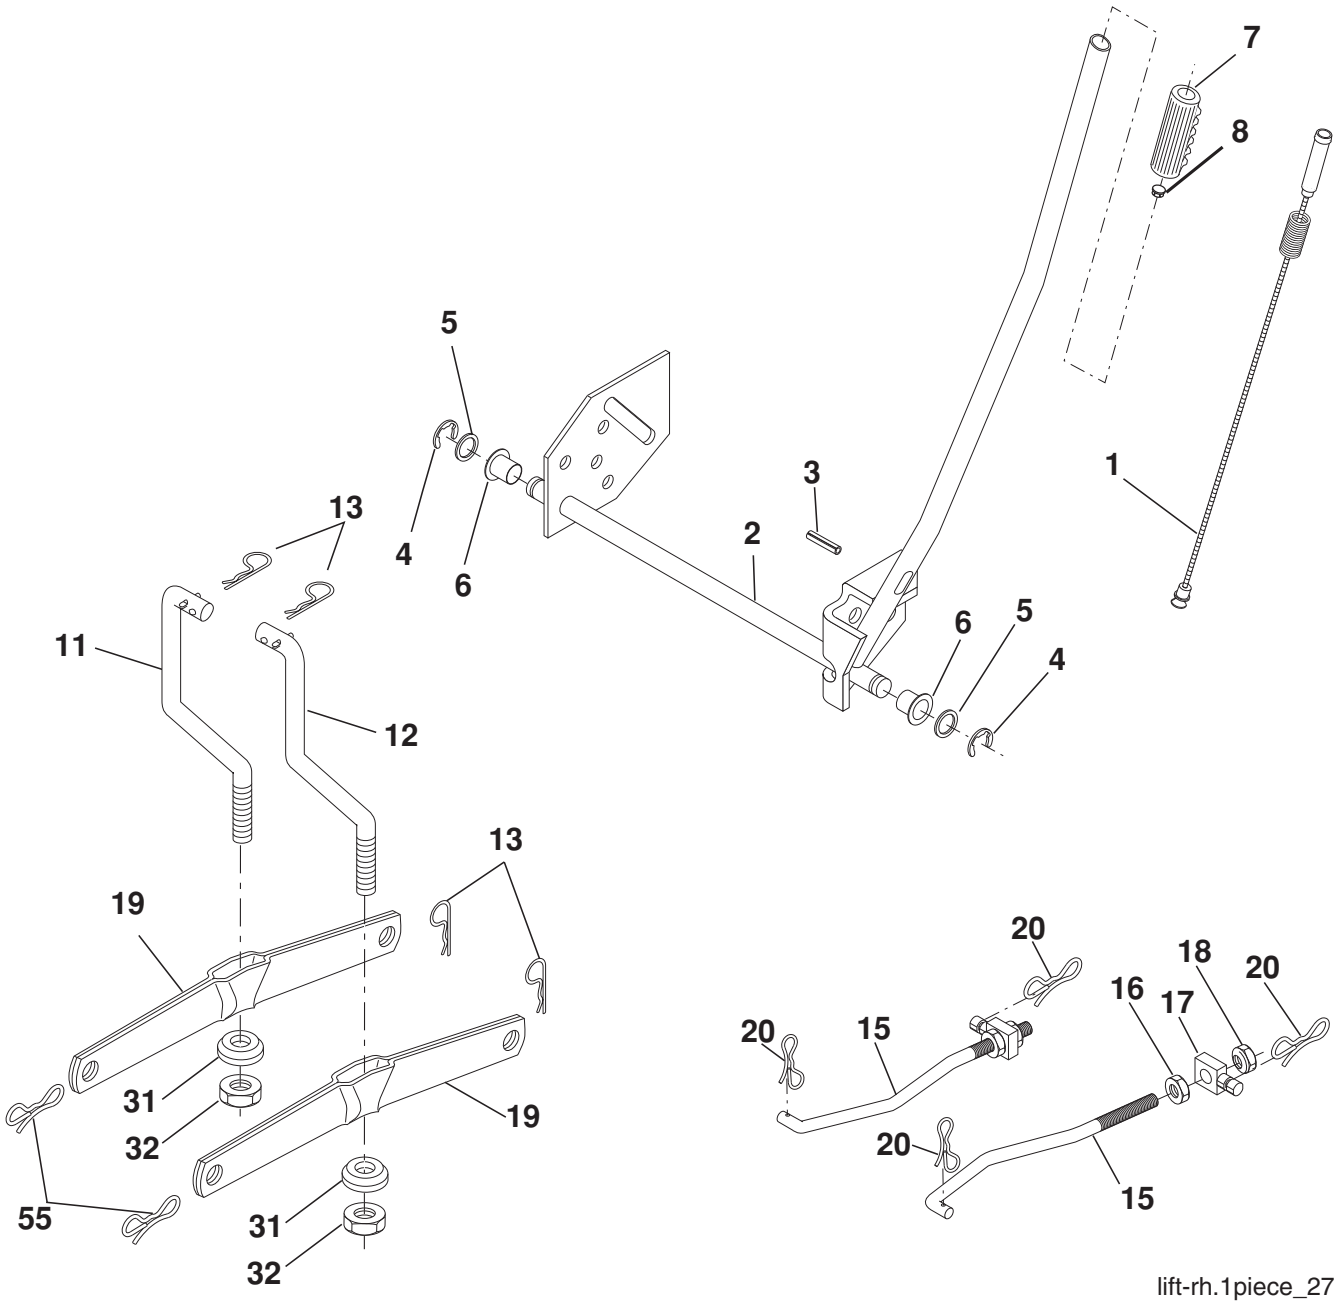


lift-rh.1piece_27

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 40 49-81 | Plunger Asm Lift |
| 2 | 532 15 94-71 | Shaft Asm Lift |
| 3 | 532 10 57-67 | Pin Groove |
| 4 | 812 00 00-02 | E Ring #5133-62 |
| 5 | 819 21 16-21 | Washer PLTD 21/32 x 1 x 21Ga |
| 6 | 532 12 01-83 | Bearing Nylon Blk 629 Id |
| 7 | 532 10 94-13 | Grip Handle Bicycle Matte Blk |
| 8 | 532 12 45-26 | Button Plunger Black |
| 11 | 532 13 98-65 | Link Lift LH |
| 12 | 532 13 98-66 | Link Lift RH |
| 13 | 532 12 46-70 | Retainer Spring |
| 15 | 532 17 32-88 | Link Front |
| 16 | 873 35 08-00 | Nut Jam Hex 1/2-13 unc |
| 17 | 532 17 56-89 | Trunnion |
| 18 | 873 80 08-00 | Nut Lock W/Wsh 1/2-13 unc |
| 19 | 532 13 98-68 | Arm Suspension Rear |
| 20 | 532 19 42-09 | Pin Cotter 7/16 Bow Tie Lock |
| 31 | 532 16 98-65 | Bearing Pvt Lift |
| 32 | 873 54 06-00 | Nut Crownlock 3/8-24 |
| 55 | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm