

# ILLUSTRATED PARTS LIST

## MFG. ID NO. 96011030102
## CUSTOMER CATALOG NO. LTH 141
## PRODUCT NO. 960 11 03-01

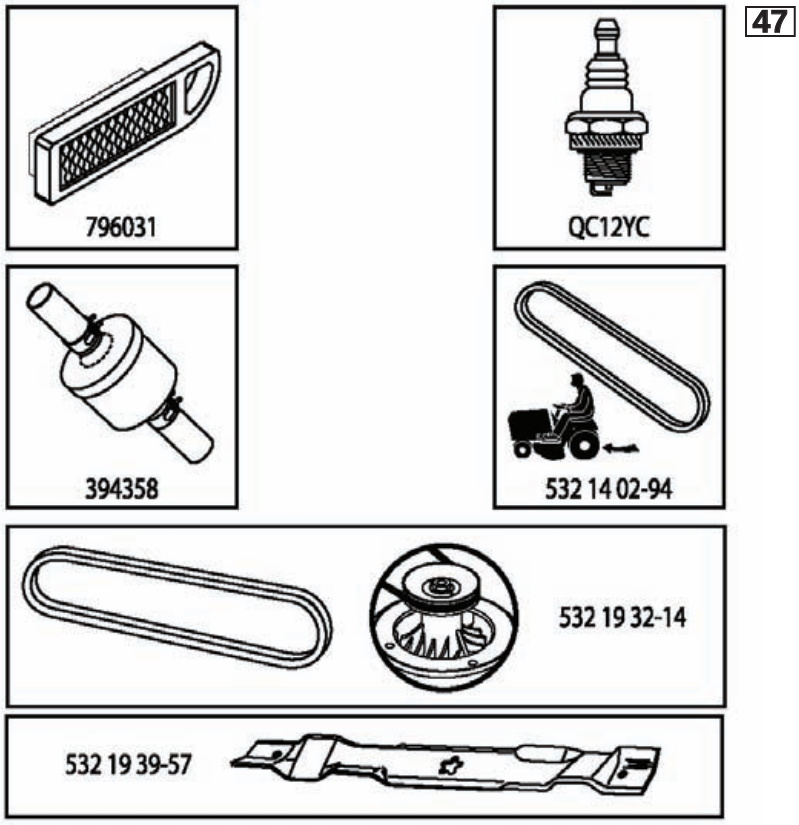


## TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01 DECALS 27

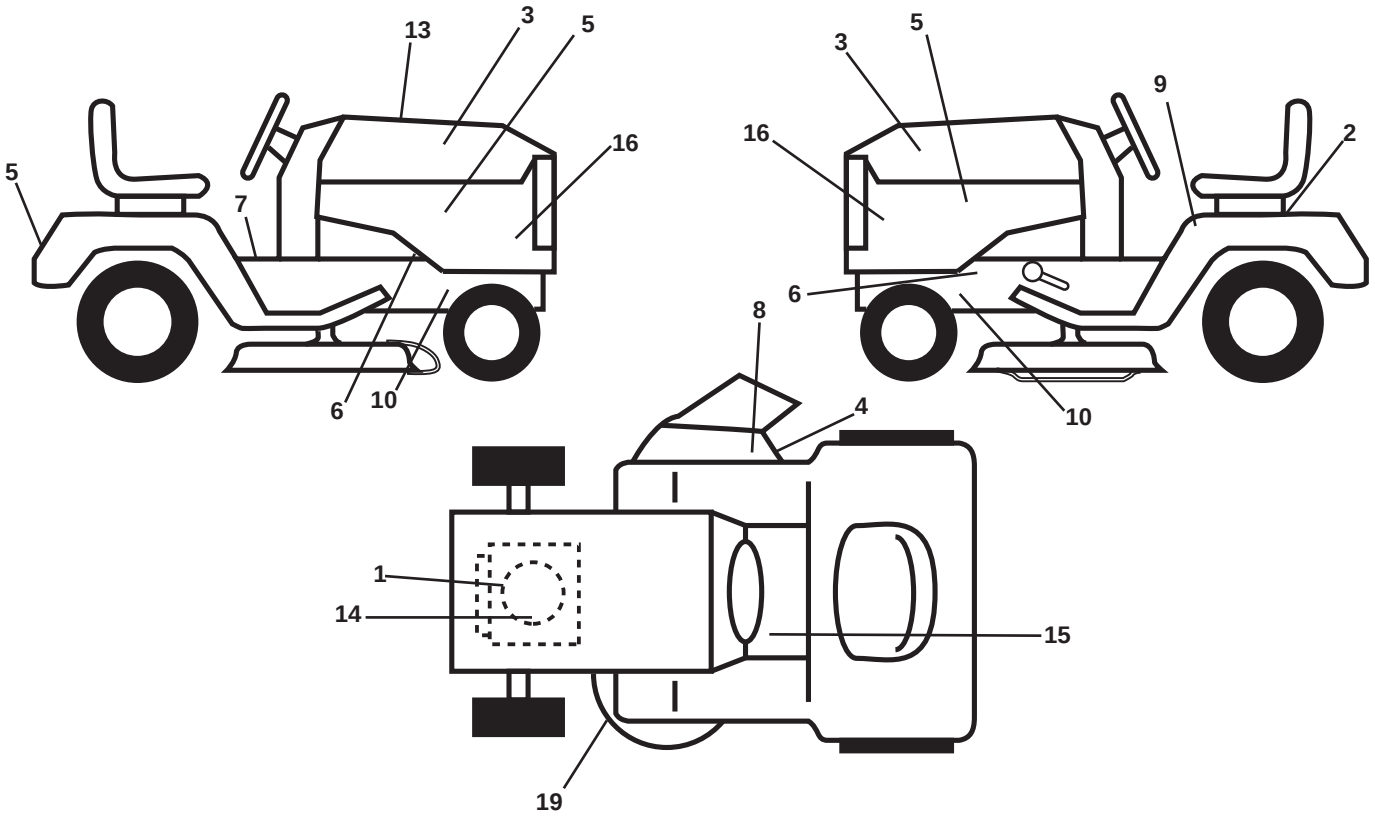


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 581 57 97-01 | Decal, Warning Engine Symbols |
| 2 | 532 14 50-05 | Decal, Bat Dan/Poi P/L Symbols |
| 3 | 532 41 55-58 | Decal, Hood |
| 4 | 581 57 92-01 | Decal, Deflector Warning |
| 5 | 585 16 06-01 | Decal, Side Panel Logo |
| 6 | 581 57 98-01 | Decal, Warning Service Fire |
| 7 | 581 57 80-01 | Decal, Saddle Brake Parking |
| 8 | 584 90 46-01 | Decal, Deflect. Warning |
| 9 | 581 57 81-01 | Decal, Warning |
| 10 | 581 57 96-01 | Decal, Chassis Hot Muffler |
| 13 | 532 44 61-22 | Decal, Hood RPL |
| 14 | 532 43 74-12 | Decal, Eng. HP |
| 15 | 581 72 40-01 | Decal, Brake/Clutch |
| 16 | 532 44 63-48 | Decal, Side Panel |
| 19 | 581 58 00-03 | Decal, V-Belt Sch |
| - - | 581 72 48-01 | Decal, Bypass |
| - - | 581 72 46-01 | Decal, Drawbar Load Limit |
| - - | 581 72 49-01 | Decal, Lift Handle (Lift Handle) |
| - - | 581 51 24-26 | Manual Operator's (Euro) |

## WHEELS & TIRES

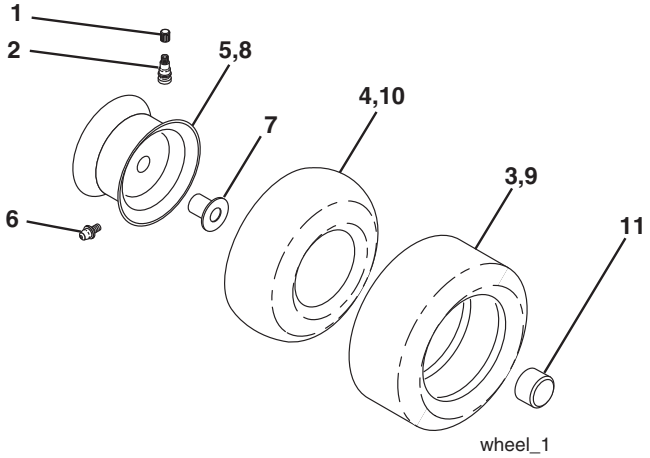



| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 05 91-92 | Cap Valve Tire |
| 2 | 532 06 51-39 | Stem Valve |
| 3 | 532 10 62-22 | Tire F Ts 15 x 6 0 - 6 Service |
| 4 | 532 05 99-04 | Tube Front (Service Item Only) |
| 5 | 532 13 83-36 | Rim Asm 6" Front Silver Service |
| 6 | 532 12 49-57 | Fitting Grease (Front Wheel Only) |
| 7 | 532 12 49-59 | Bearing Flange (Front Wheel Only) |
| 8 | 532 13 83-37 | Rim Asm 8" Rear Silver Service |
| 9 | 532 12 46-35 | Tire R Ts 18 x 8.5-8.0 |
| 10 | 532 12 49-26 | Tube Rear (Service Item Only) |
| 11 | 532 17 50-39 | Cap Axle Blk 1 50 x 1 00 |

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

# TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01
# SCHEMATIC 38

SCH01

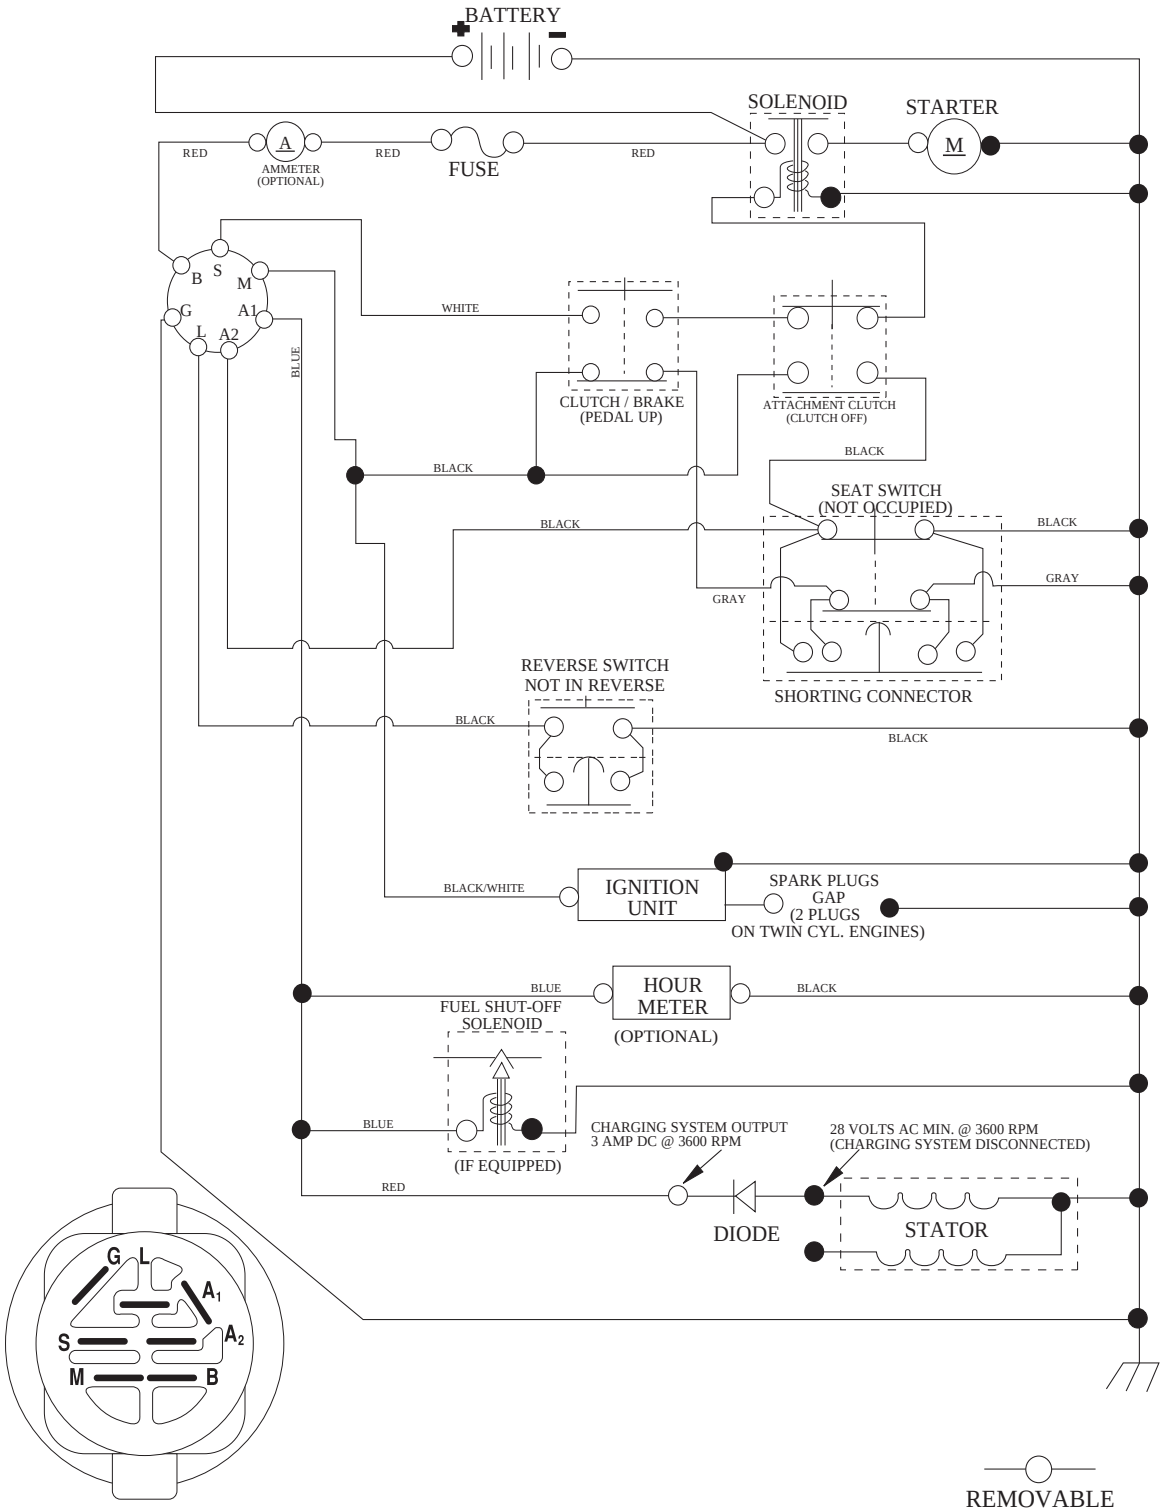


| POSITION | CIRCUIT "MAKE" |
|---|---|
| OFF | M+G+A1 |
| RUN/OVERRIDE | B+A1 |
| RUN | B+A1 L+A2 |
| START | B + S + A1 |


WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

REMOVABLE CONNECTIONS

NON-REMOVABLE CONNECTIONS


**TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01**
**ELECTRICAL 32**

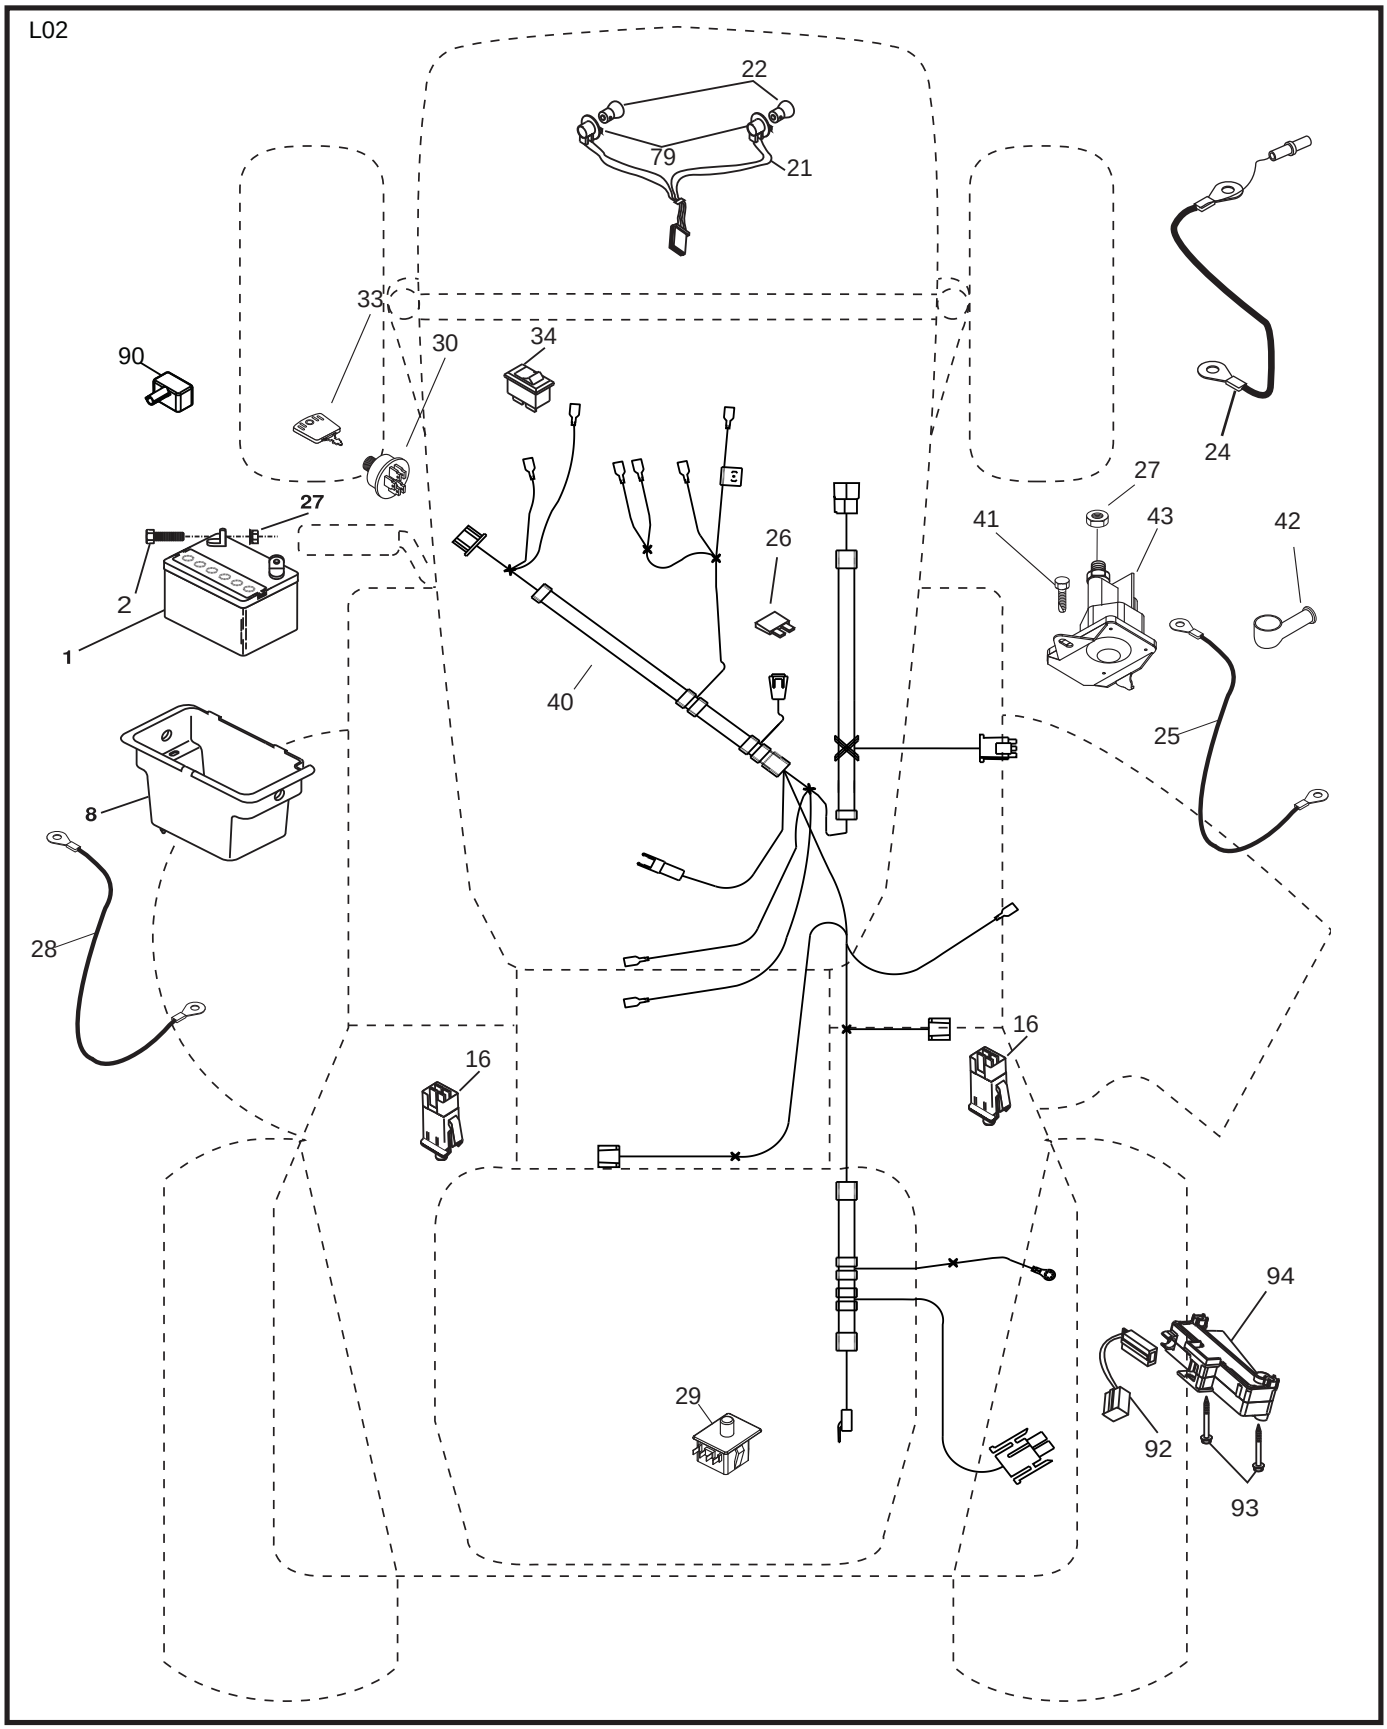

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 16 34-65 | Battery |
| 2 | 874 76 04-12 | Bolt Hex Hd 1/4-20 unc x 3/4 |
| 8 | 532 17 66-89 | Battery Box |
| 16 | 532 17 61-38 | Switch Interlock |
| 21 | 532 17 56-88 | Harness Asm Light w/4152j |
| 22 | 532 00 41-52 | Bulb Light #1156 |
| 24 | 532 42 12-97 | Cable Ground Battery 8 Ga. Red |
| 25 | 532 42 12-99 | Cable Battery 6 Ga. 11" Red Starter |
| 26 | 532 17 51-58 | Fuse 20 AMP |
| 27 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 28 | 532 42 12-98 | Cable Ground 6 Ga. 12" Black |
| 29 | 532 19 27-49 | Switch Seat |
| 30 | 532 19 33-50 | Switch Ign |
| 33 | 532 41 19-35 | Key/Chain |
| 34 | 532 11 07-12 | Switch Light |
| 40 | 532 19 74-28 | Harness Ign. |
| 41 | 871 11 04-08 | Bolt Blk Fin Hex 1/4-20 x 1/2 |
| 42 | 532 13 15-63 | Cover Terminal Red |
| 43 | 532 19 25-07 | Solenoid |
| 79 | 532 17 52-42 | Socket Asm. Bulb Twistlock |
| 90 | 532 43 53-95 | Cover Terminal Battery |
| 92 | 532 19 66-15 | Harness Pigtail |
| 93 | 532 19 25-40 | Screw Plastite 10-24-24 x 2.0 |
| 94 | 532 19 18-34 | Module Reverse |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

**TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01**
**CHASSIS AND ENCLOSURES 39**

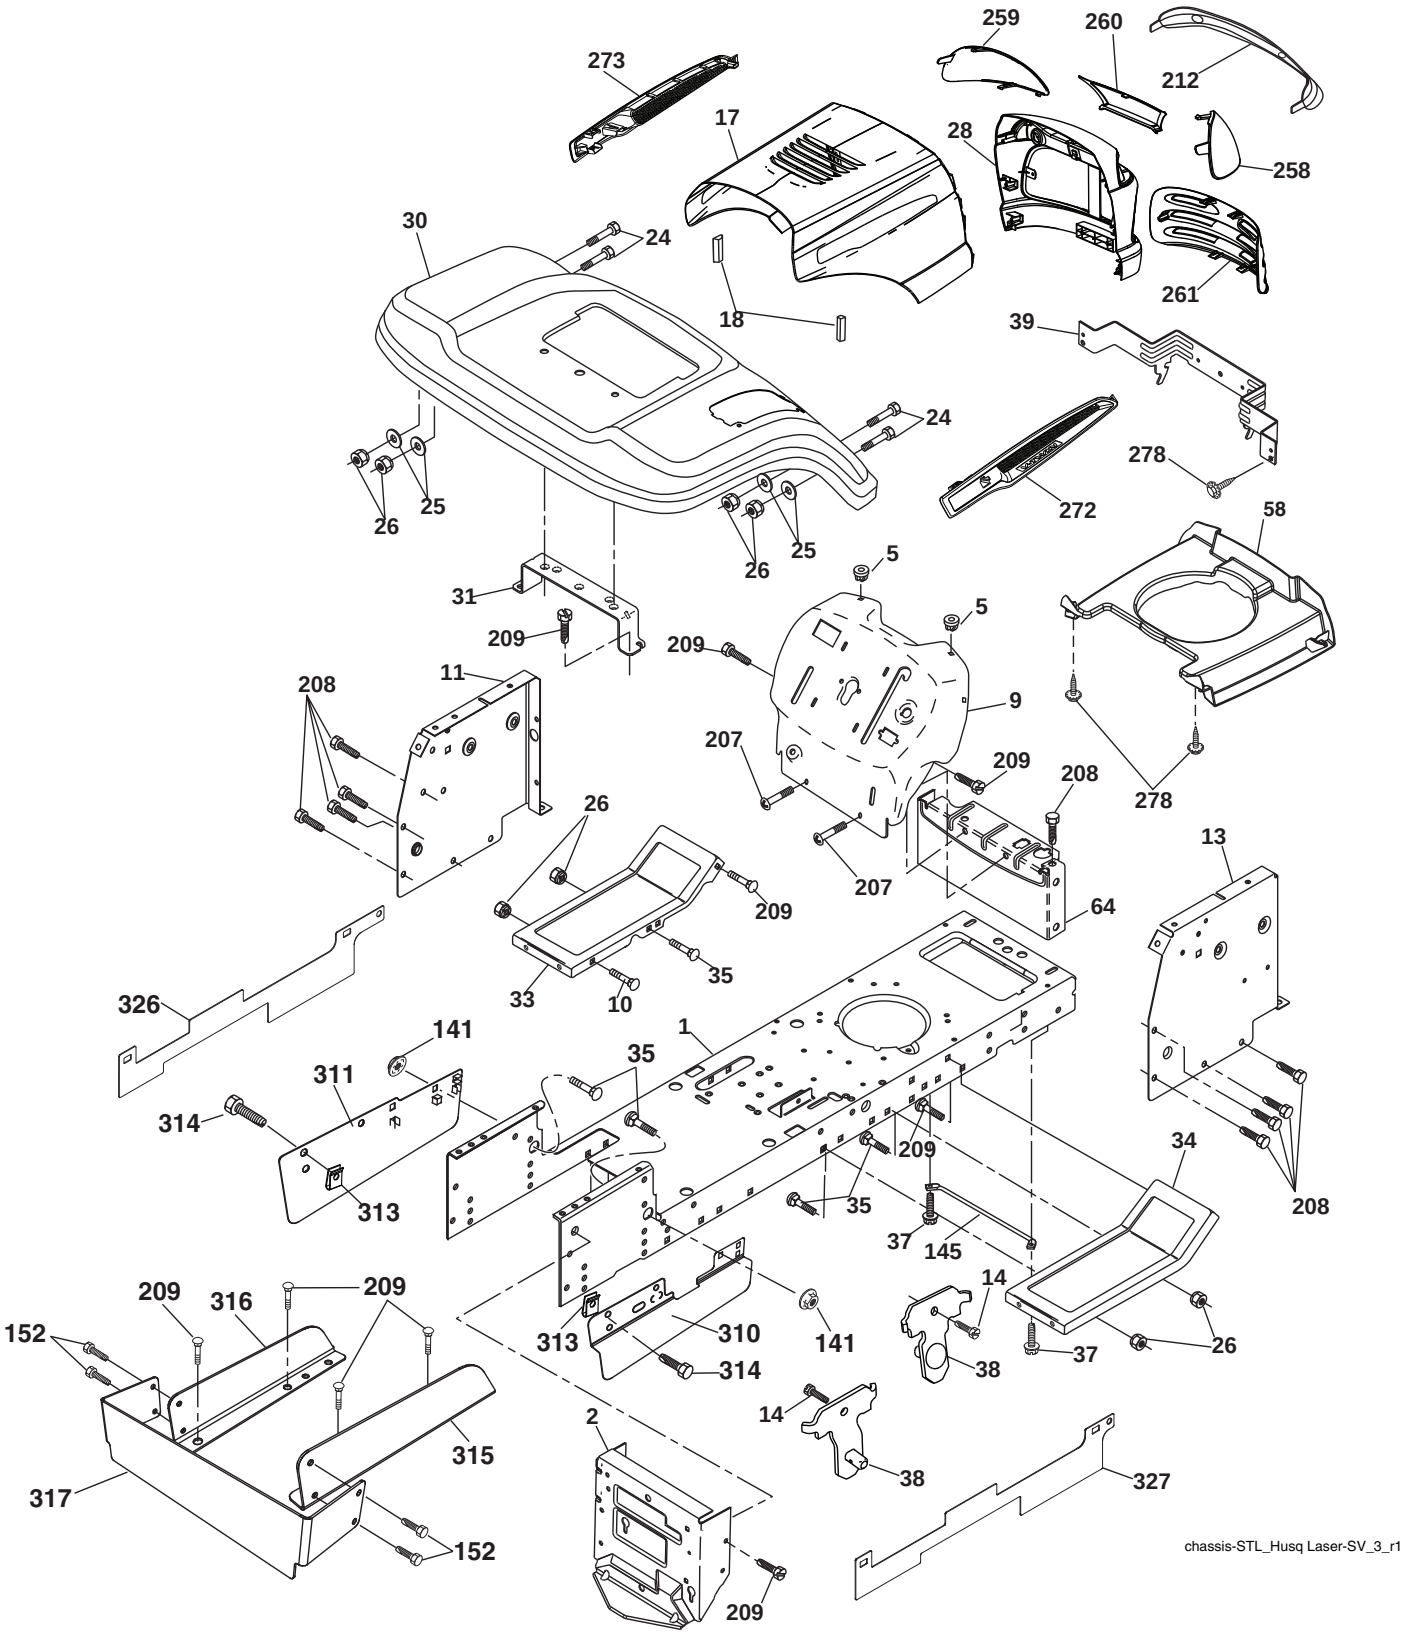


## TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01
## CHASSIS AND ENCLOSURES 39

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 17 46-19 | Chassis |
| 2 | 532 17 65-54 | Drawbar |
| 5 | 532 15 52-72 | Bumper Hood/Dash |
| 9 | 532 41 59-43 | Dash STL |
| 10 | 872 14 06-08 | Bolt, Carriage 3/8-16 x 1 |
| 11 | 532 17 49-96 | Dashboard, Panel LH |
| 13 | 532 18 17-19 | Dashboard, Panel RH |
| 14 | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2 |
| 17 | 532 44 29-23 | Hood |
| 18 | 532 18 49-21 | BumperHood |
| 24 | 874 78 06-16 | Bolt, Hex Head, Fin. 3/8-16 x 1 Gr. 5 |
| 25 | 819 13 13-12 | Washer 13/32 x 13/16 x12 Ga. |
| 26 | 873 80 06-00 | Nut Lock Hex w/Ins. 3/8-16 unc |
| 28 | 532 44 22-03 | Grille |
| 30 | 532 44 12-86 | Fender |
| 31 | 532 13 66-19 | Fender Bracket |
| 33 | 532 18 25-07 | Footrest, LH |
| 34 | 532 18 25-08 | Footrest, RH |
| 35 | 872 11 06-06 | Bolt 3/8-16 X 3/4 |
| 37 | 817 49 05-08 | Screw Thdrol 5/16-18 x 1/2 |
| 38 | 532 17 57-10 | Bracket Asm. Pivot Mower Rear |
| 39 | 532 40 78-07 | Bracket Pivot Laser/Elite |
| 58 | 532 18 42-70 | Duct Air |
| 64 | 532 15 47-98 | Dash Lower |
| 141 | 873 90 06-00 | Nut Lock Flg. 3/8-16unc |
| 145 | 532 40 91-67 | Rod Pivot Chassis/Hood |
| 152 | 817 72 04-08 | Screw Thrd Cut 1/4-20 x 1/2 |
| 207 | 817 67 05-08 | Screw Thdrol 5/16-18 x 1/2 |
| 208 | 817 67 06-08 | Screw Thdrol 3/8-16 x 1/2 |
| 209 | 817 00 06-12 | Screw Hexwsh Thdr 3/8-16 x 3/4 |
| 212 | 532 18 35-48 | Insert Lens Reflect |
| 258 | 532 18 52-14 | Lens RH |
| 259 | 532 18 52-13 | Lens LH |
| 260 | 532 44 22-02 | Cover Lens |
| 261 | 532 44 22-01 | Insert Grille |
| 272 | 532 44 22-00 | Vent Hood RH |
| 273 | 532 44 21-99 | Vent Hood LH |
| 278 | 532 41 63-58 | Screw #10 x 0.750 |
| 310 | 532 42 27-66 | Shield Lower RH |
| 311 | 532 42 27-67 | Shield Lower LH |
| 313 | 532 19 66-88 | Clips Threaded |
| 314 | 532 13 77-29 | Screw Thrd Roll 1/4-20 x 5/8 |
| 315 | 532 42 28-66 | Shield Upper RH |
| 316 | 532 42 28-68 | Shield Upper LH |
| 317 | 532 42 28-60 | Shield Rear |
| 326 | 532 43 02-27 | Shield Deck LH |
| 327 | 532 43 02-25 | Shield Deck RH |
| - - | 532 00 54-79 | Button Plug |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

**TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01**
**DRIVE 40**

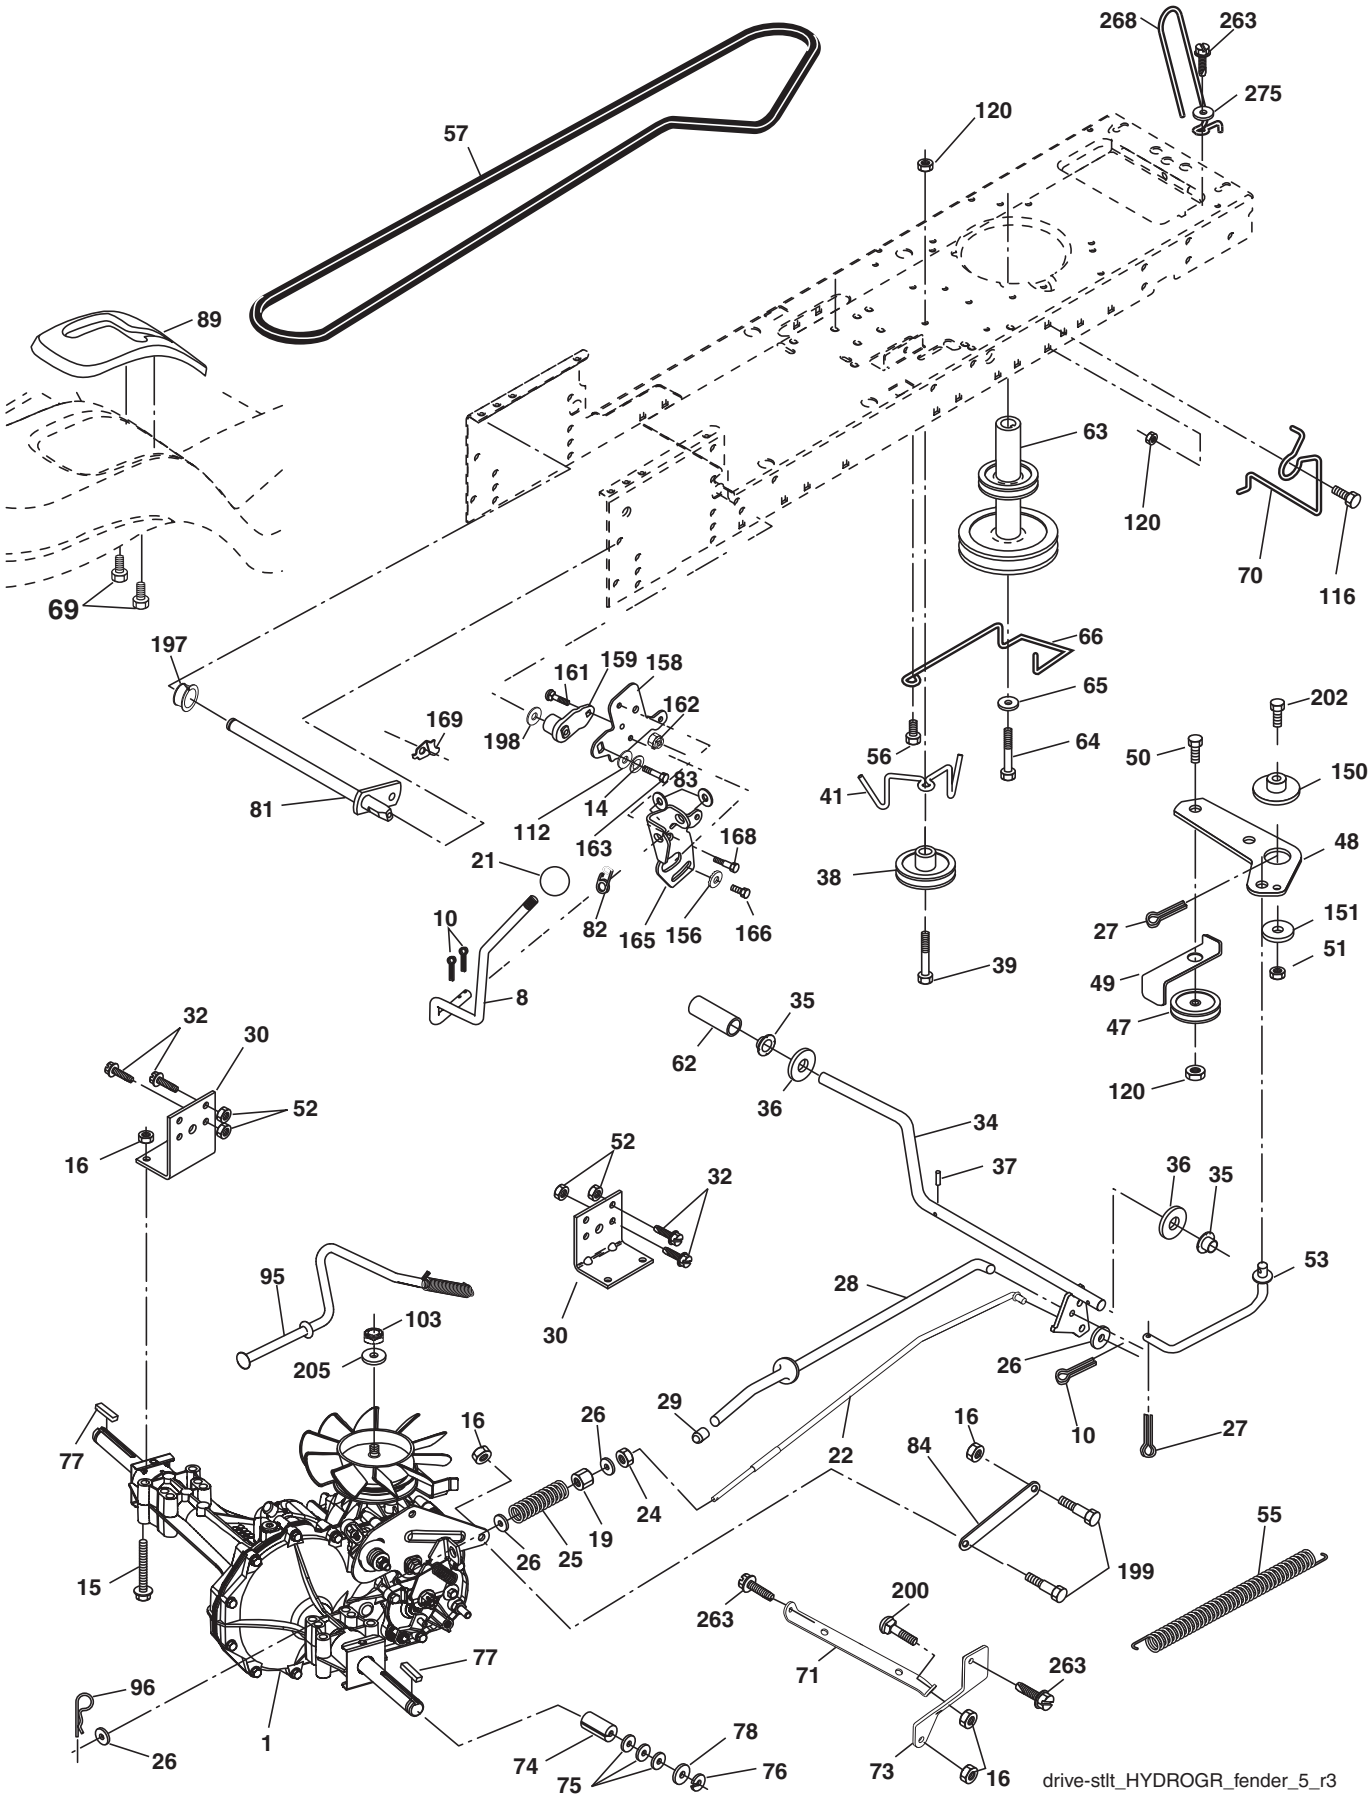


## TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01
## DRIVE 40

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | – – – – – – | Transaxle, Hydro Gear 322-0510 (171613) (Order parts from transaxle manufacturer.) |
| 8 | 532 19 27-06 | Rod Shift Fender |
| 10 | 876 02 04-16 | Pin Cotter 1/8 x 1 CAD |
| 14 | 810 04 04-00 | Washer Lock Hvy Helical |
| 15 | 874 49 05-44 | Bolt Hex Flghd 5/16-18 Gr. 5 |
| 16 | 873 80 05-00 | Nut Lock Hex w/Ins. 5/16-18 unc |
| 19 | 873 80 06-00 | Nut Lock Hex w/Wsh 3/8-16 unc |
| 21 | 532 10 69-33 | Knob |
| 22 | 532 16 94-98 | Rod, Brake Hydro |
| 24 | 873 35 06-00 | Locknut |
| 25 | 532 10 68-88 | Spring, Brake Rod |
| 26 | 819 13 13-16 | Washer |
| 27 | 876 02 04-12 | Pin Cotter 1/8 x 3/4 CAD. |
| 28 | 532 17 57-65 | Rod, Parking Brake |
| 29 | 532 07 16-73 | Cap, Parking Brake |
| 30 | 532 17 49-73 | Bracket, Transaxle |
| 32 | 874 76 05-12 | Bolt Hex Hd 5/16-18 unc x 3/4 |
| 34 | 532 17 55-78 | Shaft, Foot Pedal Nibbed |
| 35 | 532 12 01-83 | Bearing, Nylon |
| 36 | 819 21 16-16 | Washer |
| 37 | 532 12 49-63 | Pin, Roll |
| 38 | 532 17 91-14 | Pulley, Idler, Flat Composite |
| 39 | 872 11 06-22 | Bolt RDHD 3/8-16 unc x 2-3/4 Gr. 5 |
| 41 | 532 17 55-56 | Keeper, Belt Idler Fool-Proof |
| 47 | 532 12 77-83 | Pulley, Idler, V-Groove |
| 48 | 532 15 44-07 | Bellcrank Clutch Grnd Drv Stl |
| 49 | 532 12 32-05 | Retainer, Belt |
| 50 | 872 11 06-12 | Bolt Carr Sh 3/8-16 x 1-1/2 |
| 51 | 873 68 06-00 | Nut |
| 52 | 873 68 05-00 | Nut Crown Lock 5/16-18 |
| 53 | 532 19 96-52 | Link, Clutch |
| 55 | 532 10 57-09 | Spring, Return, Clutch |
| 56 | 817 06 06-20 | Screw 3/8-16 x 1-1/4 |
| 57 | 532 14 02-94 | V-Belt, Ground Drive |
| 62 | 532 12 48-72 | Cover, Pedal |
| 63 | 532 17 54-10 | Pulley, Engine |
| 64 | 532 17 39-37 | Bolt Hex 7/16 -20 x 4 x Gr. 5 1.5 Thr |
| 65 | 810 04 07-00 | Washer |
| 66 | 532 15 47-78 | Keeper Belt Engine Hydro |
| 69 | 532 14 24-32 | Screw Hex Wsh Hi-Lo 1/4-1/2 |
| 70 | 532 13 46-83 | Guide Belt Mower Drive |
| 71 | 532 16 91-83 | Strap Torque LH Hydro |
| 73 | 532 16 91-82 | Strap Torque RH Hydro |
| 74 | 532 13 70-57 | Spacer, Axle |
| 75 | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga. |
| 76 | 812 00 00-01 | E-Ring |
| 77 | 532 12 35-83 | Key, Square |
| 78 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 81 | 532 16 55-96 | Shaft Asm. Cross Hydro |
| 82 | 532 16 57-11 | Spring Torsion T/A |
| 83 | 819 17 12-16 | Washer 17/32 x 3/4 x 16 Ga. |
| 84 | 532 16 98-43 | Link Transaxle |
| 89 | 532 19 49-72 | Console, Shift |
| 95 | 532 17 02-01 | Control Asm. Bypass Hydro |
| 96 | 532 12 47-88 | Retainer Spring 1" Zinc/Cad |
| 103 | 873 94 08-00 | Nut Hex Jam Toplock |
| 112 | 819 09 12-10 | Washer 9/32 x 3/4 x 10 Ga. |
| 116 | 872 14 06-08 | Bolt Rdhd Sqnk 3/8-16 unc x1 |
| 120 | 873 90 06-00 | Nut Lock 3/8-16 |
| 150 | 532 17 54-56 | Spacer Retainer |
| 151 | 819 13 32-10 | Washer 13/32 x 2 x 10 Ga. |
| 156 | 532 16 60-02 | Washer Srrted 5/16 ID x 1.125 |
| 158 | 532 43 74-58 | Bracket Shift Mount |
| 159 | 532 44 43-04 | Hub Tapered Flange Shift Lt |
| 161 | 872 14 04-06 | Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr. 5 |
| 162 | 873 68 04-00 | Nut Crownlock 1/4-20 unc |
| 163 | 874 78 04-16 | Bolt Hex Fin 1/4-20 unc x 1 Gr. 5 |
| 165 | 532 43 82-50 | Bracket Pivot Lever |
| 166 | 817 49 05-10 | Screw 5/16-18 x 5/8 |
| 168 | 532 16 54-92 | Bolt Shoulder 5/16-18 x .561 |
| 169 | 532 16 55-80 | Plate Fastening Lt |
| 197 | 532 16 96-13 | Nyliner Snap-In 5/8 ID |
| 198 | 532 16 95-93 | Washer Nyliner 7/8 ID x .105 |
| 199 | 532 16 96-12 | Bolt Shoulder 5/16-18 unc |
| 200 | 872 14 05-08 | Bolt Rdhd Sq Neck 5/16-18 unc x 1 |
| 202 | 872 11 06-14 | Bolt RDHD 3/8-16 unc x 1-3/4 Gr. 5 |
| 205 | 819 17 16-16 | Washer 17/32 x 1 x16 Ga. |
| 263 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 268 | 532 18 24-02 | Guard Muffler |
| 275 | 819 13 16-14 | Washer 13/32 x 1 x 14 Ga. |

**NOTE**: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

**TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01**
**ENGINE 24**

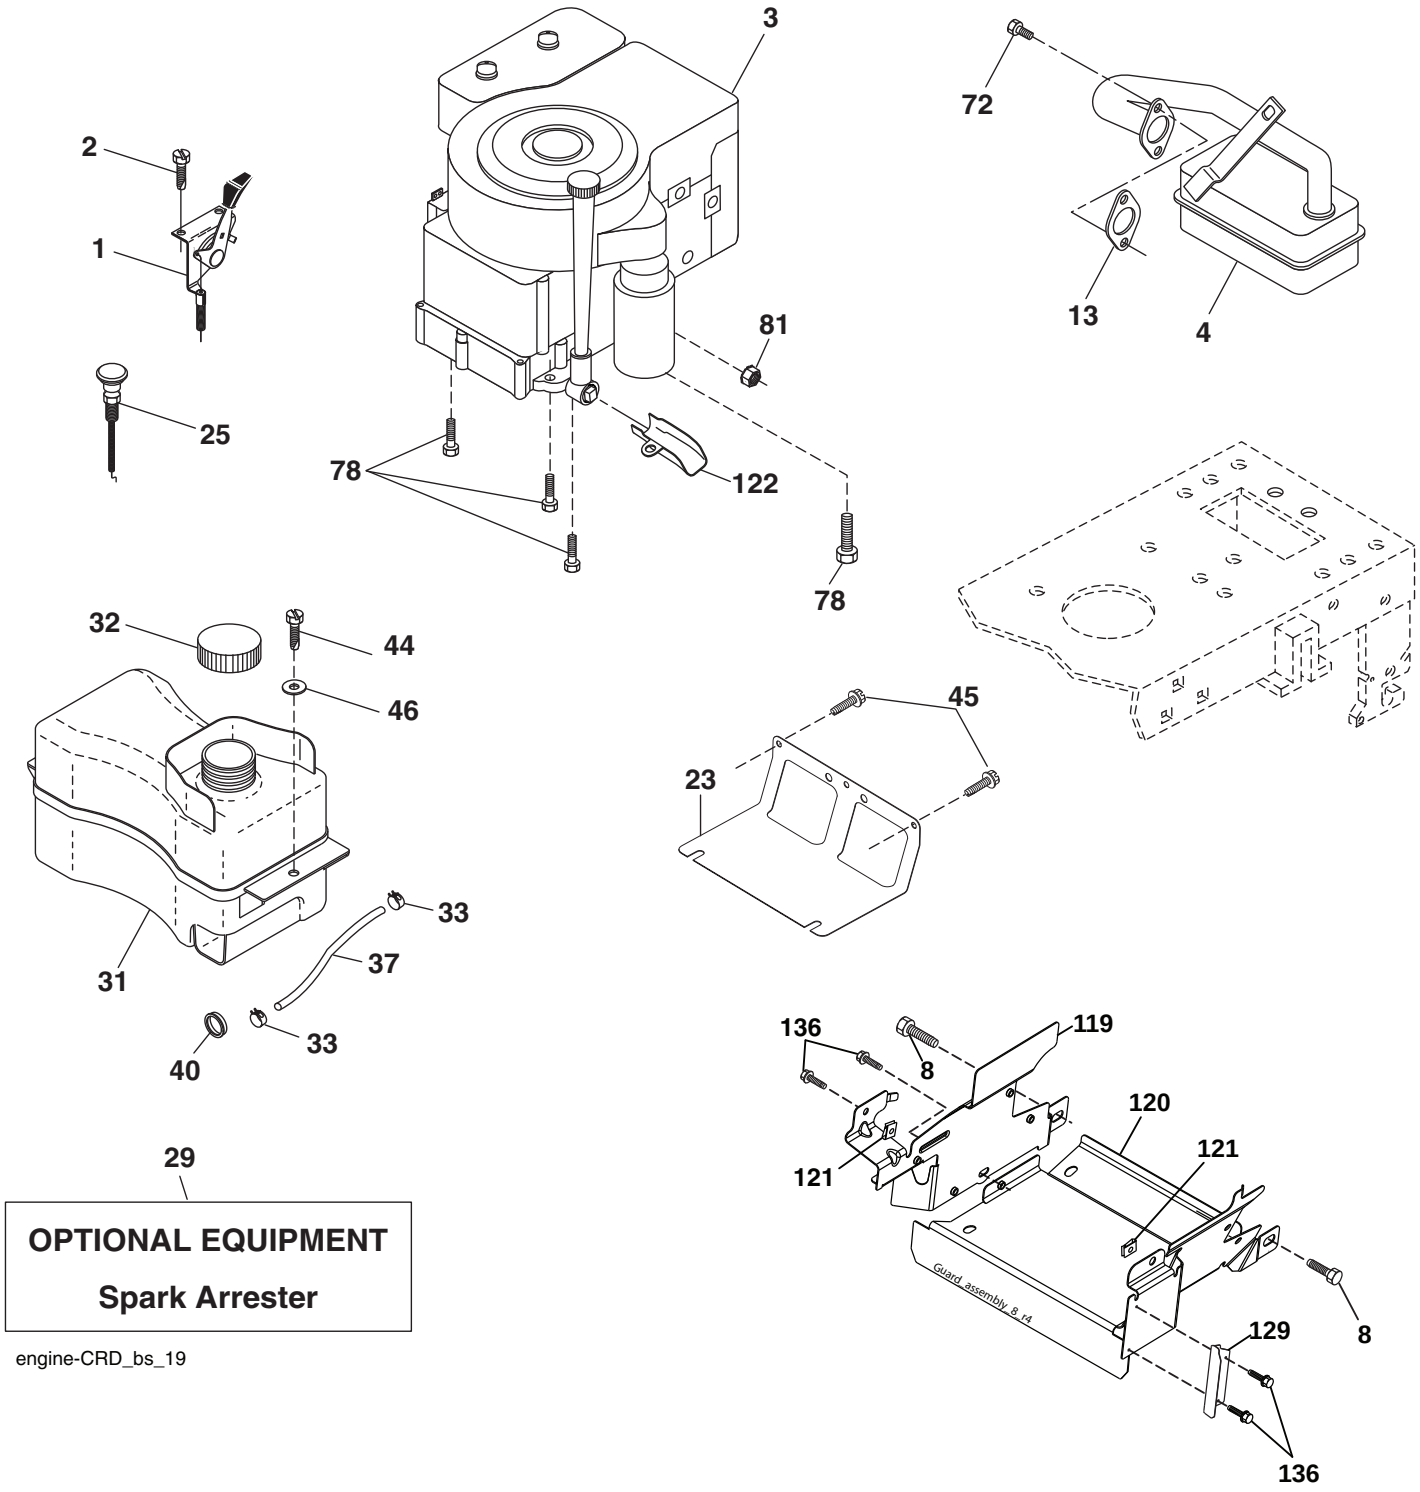


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 17 05-51 | Control Th/ch Flag |
| 2 | 817 72 04-08 | Screw Hex Thd Cut 1/4-20 x 1/2 |
| 3 | – – – – – – | Engine B&S Model No. 31Q507-0002-H1 (585579801) (Order parts from engine manufacturer.) |
| 4 | 532 13 73-52 | Muffler |
| 8 | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 |
| 13 | 532 16 52-91 | Gasket Eng |
| 23 | 532 16 98-37 | Shield Brn/Dbr Guard |
| 25 | 532 19 06-95 | Control Choke |
| 29 | 532 13 71-80 | Kit Spark Arrester |
| 31 | 532 40 75-16 | Tank Fuel Front 1.25 |
| 32 | 532 43 02-20 | Cap Asm Fuel Top |
| 33 | 532 12 34-87 | Clamp Hose Blk |
| 37 | 532 13 70-40 | Line Fuel 20" |
| 40 | 532 12 40-28 | Bushing Snap Nyl Blk Fuel Line |
| 44 | 817 67 04-12 | Screw Hexwsh Thdrol 1/4-20 x 3/4 |
| 45 | 817 00 06-12 | Screw Hexwsh Thdrol 3/8-16 x 3/4 |
| 46 | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga. |
| 72 | 532 19 23-34 | Screw Socket HD 5/16-18 x .75 |
| 78 | 817 06 06-20 | Screw 3/8-16 x 1-1/4 |
| 81 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 119 | 532 19 79-49 | Guard Pulley Eng. LH |
| 120 | 532 19 79-48 | Guard Pulley Eng. RH |
| 121 | 532 19 66-88 | Clips Threaded |
| 122 | 532 42 19-22 | Extension Drain Oil |
| 129 | 532 40 03-28 | Guard Pulley Eng. Adapter |
| 136 | 532 13 77-29 | Screw 1/4-20 x 5/8 |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**Engine Power Rating Information**

The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-05). Torque values are derived at 3060 RPM; horsepower values are derived at 3600 RPM. Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual “on-site” or net power). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

**TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01**
**STEERING ASSEMBLY 41**

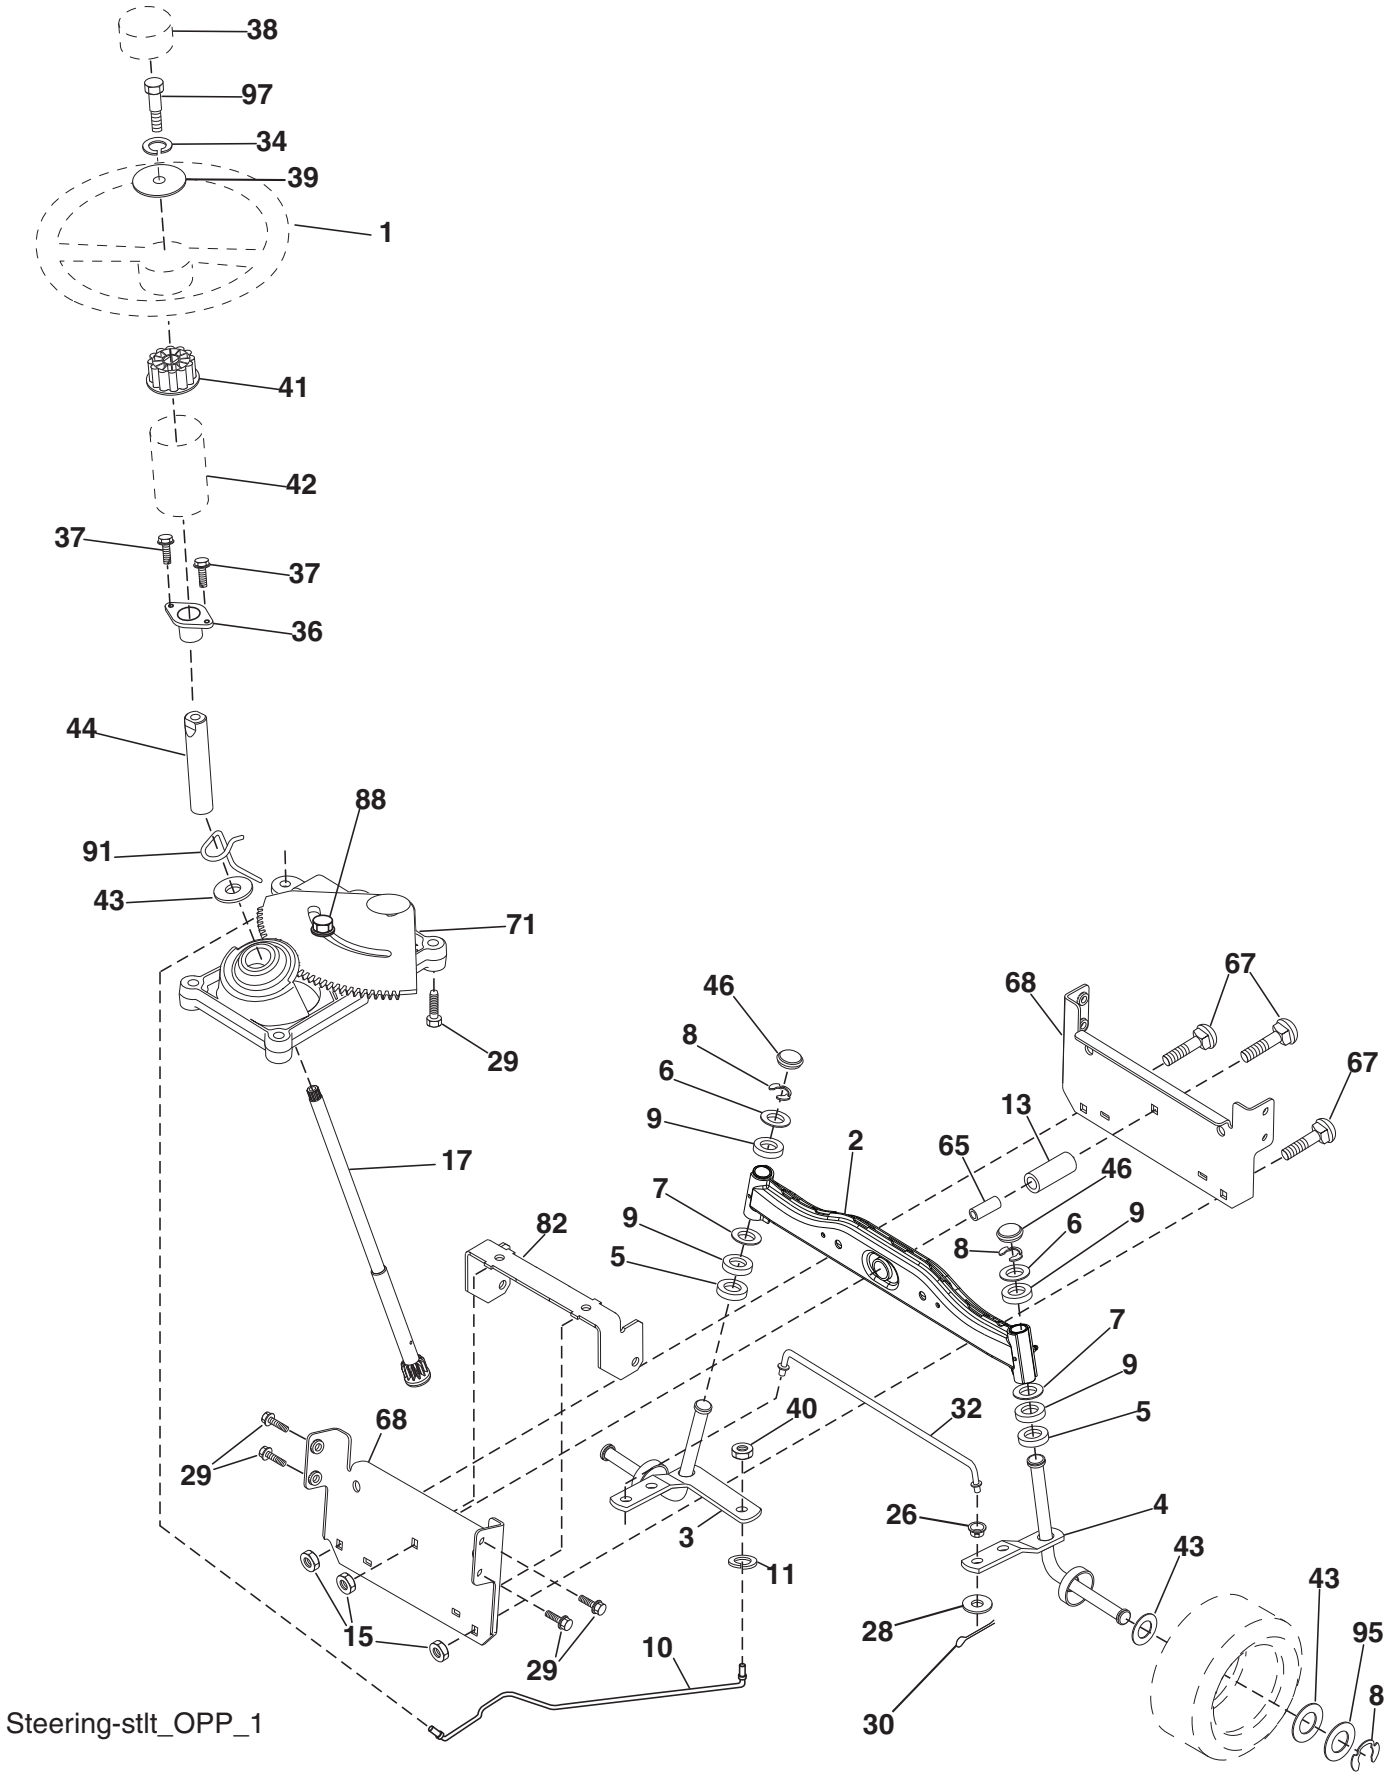


## TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01
## STEERING ASSEMBLY 41

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 18 67-80 | Wheel Steering |
| 2 | 532 41 81-68 | Axle Asm |
| 3 | 532 16 98-40 | Spindle Asm LH |
| 4 | 532 16 98-39 | Spindle Asm RH |
| 5 | 532 12 49-31 | Washer Thrust .75 x 1.230 |
| 6 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 7 | 819 27 20-16 | Washer 27/32 x 1-1/4 x 16 Ga. |
| 8 | 812 00 00-29 | Ring Clip #t5304-75 |
| 9 | 532 12 49-37 | Bearing Col Strg Blk |
| 10 | 532 17 51-21 | Link Drag |
| 11 | 810 04 06-00 | Washer Lock Hvy Hlcl Spr 3/8 |
| 13 | 532 13 65-18 | Spacer Brace Axle |
| 15 | 873 90 06-00 | Nut Hex Flange Lock |
| 17 | 532 19 07-53 | Shaft Asm Strg |
| 26 | 532 12 68-47 | Bushing Link Drag Blk LR |
| 28 | 819 13 14-16 | Washer 13/32 x 7/8 x 16 Ga. |
| 29 | 817 00 06-12 | Screw 3/8-16 x .75 |
| 30 | 876 02 04-12 | Pin Cotter 1/8 x 3/4 Cad |
| 32 | 532 19 27-57 | Rod Tie Wire Form 19 75 Mech |
| 34 | 810 04 05-00 | Washer Lock Hvy Hlcl Spr. 5/16 |
| 36 | 532 15 50-99 | Bushing Strg Nat .623/.618Id |
| 37 | 532 15 29-27 | Screw TT #10-32 x 5 x 3/8 Flange |
| 38 | 532 19 29-16 | Cap Wheel Steer P/L |
| 39 | 819 11 38-12 | Washer 11/32 x 2-3/8 |
| 40 | 873 54 06-00 | Nut Crownlock 3/8-24 |
| 41 | 532 18 67-37 | Adaptor Wheel Strg |
| 42 | 532 16 96-33 | Boot Shaft Steering |
| 43 | 532 12 17-49 | Washer 25/32 x 1 1/4 x 16 Ga. |
| 44 | 532 19 07-52 | Extension Steering |
| 46 | 532 12 12-32 | Cap Spindle Fr Top Blk |
| 65 | 532 41 47-36 | Spacer Brace Axle |
| 67 | 872 11 06-18 | Bolt RDHD SQ 3/8-16 unc x 2-1/4 |
| 68 | 532 16 98-27 | Brace Axle |
| 71 | 532 17 51-46 | Steering Asm |
| 82 | 532 19 99-78 | Bracket Susp. Chassis Front |
| 88 | 532 17 51-18 | Bolt Shoulder 7/16-20 |
| 91 | 532 17 55-53 | Cup Steering |
| 95 | 532 18 89-67 | Washer Hardened |
| 97 | 532 42 89-82 | Bolt Fin Hx 5/16-18 x 4 |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

**TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01**
**MOWER DECK 44**

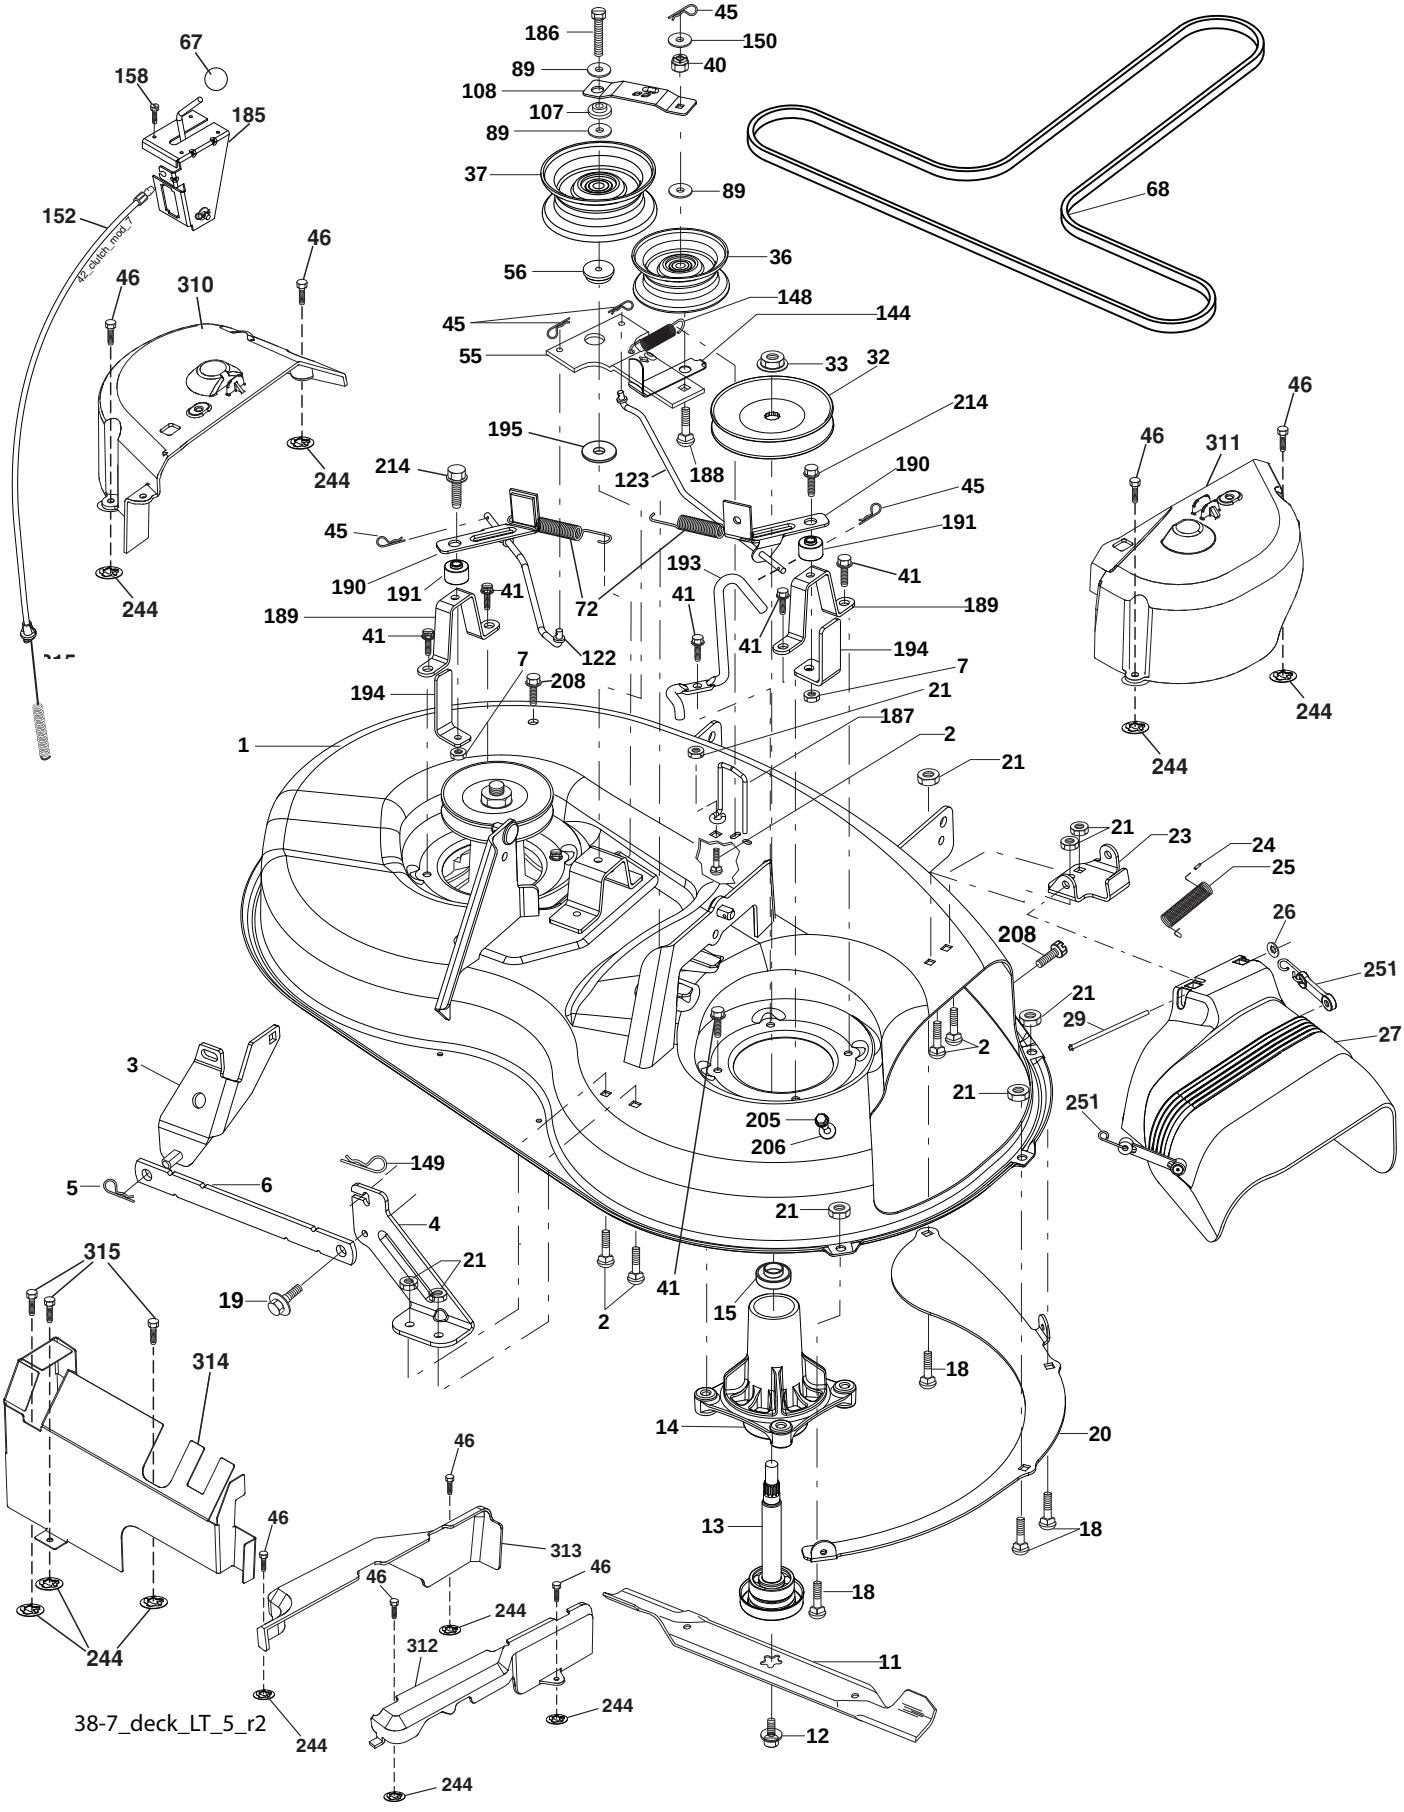


## TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01 MOWER DECK 44

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 19 25-56 | Mower Housing Assembly |
| 2 | 872 14 05-06 | Bolt Carriage 5/16-18 x 3/4 |
| 3 | 532 13 80-17 | Bracket Asm Fr. Sway Bar |
| 4 | 532 19 25-68 | Bracket Deck Sway Bar 38"/42" |
| 5 | 532 12 46-70 | Retainer Spring |
| 6 | 532 17 80-24 | Bar Sway Deck |
| 7 | 873 80 05-00 | Nut Lock Hx w/Ins. 5/16-18 unc |
| 11 | 532 19 39-57 | Blade Mower |
| 12 | 584 30 93-01 | Screw 7/16-20 x 1 Hx |
| 13 | 587 25 65-01 | Shaft Assembly, Mandrel |
| 14 | 532 18 72-81 | Housing, Mandrel, Vented |
| 15 | 585 32 39-01 | Bearing, Mandrel |
| 18 | 872 14 05-05 | Bolt Rdhd Sqnk 5/16-18 x 5/8 |
| 19 | 532 13 28-27 | Bolt, Shoulder |
| 20 | 532 40 00-95 | Baffle Vortex Front |
| 21 | 873 68 05-00 | Nut |
| 23 | 532 19 25-57 | Bracket, Mower Deflector |
| 24 | 532 10 53-04 | Cap, Sleeve |
| 25 | 532 19 70-26 | Spring, Torsion, Deflector |
| 26 | 532 11 04-52 | Nut, Push |
| 27 | 532 40 16-18 | Shield, Deflector |
| 29 | 532 13 14-91 | Rod, Hinge |
| 32 | 532 15 35-32 | Pulley, Mandrel |
| 33 | 532 40 02-34 | Nut, Toplock |
| 36 | 532 13 14-94 | Pulley, Idler, Flat |
| 37 | 532 19 31-98 | Pulley Idler Flat |
| 40 | 873 68 06-00 | Nut, Crownlock 3/8-16 unc |
| 41 | 584 95 39-01 | Bolt Hex Wshr Hd .313 |
| 45 | 532 12 47-88 | Retainer |
| 46 | 532 13 77-29 | Screw Thd. Roll 1/4-20 x 5/8 |
| 55 | 532 13 38-40 | Idler Arm Assembly |
| 56 | 532 16 57-23 | Spacer, Retainer |
| 67 | 532 10 69-32 | Knob |
| 68 | 532 19 32-14 | V-Belt |
| 72 | 532 19 32-16 | Spring Brake Return |
| 89 | 819 13 13-11 | Washer 13/32 x 13/16 x 11 Ga. |
| 107 | 532 13 35-02 | Spacer Retainer |
| 108 | 532 13 35-03 | Stiffener, Idler Arm |
| 122 | 532 41 01-89 | Rod, Brake LH |
| 123 | 532 41 01-90 | Rod, Brake RH |
| 144 | 532 19 34-14 | Keeper Belt Idler Tension |
| 148 | 532 16 90-22 | Spring Return Idler |
| 149 | 532 16 58-98 | Retainer Spring Yellow |
| 150 | 819 09 12-10 | Washer 9/32 x 3/4 x 10 Ga. |
| 152 | 532 19 32-35 | Clutch Cable 38"/46" |
| 158 | 817 72 04-08 | Screw Hex Thd Cut 1/4-20 x 1/2 |
| 185 | 532 18 82-34 | Head Asm Cable Clutch |
| 186 | 817 49 06-44 | Screw Hex Wsh Thdrol 3/8-16 x 2-3/4 |
| 187 | 532 19 34-12 | Keeper Belt |
| 188 | 532 16 58-91 | Bolt Carriage Idler |
| 189 | 532 19 25-59 | Stand, Brake |
| 190 | 532 19 25-60 | Arm, Brake |
| 191 | 532 19 25-61 | Spacer, Brake |
| 193 | 532 19 34-13 | Keeper Belt RH Mandrel |
| 194 | 532 19 41-05 | Guard Brake |
| 195 | 819 13 32-10 | Washer |
| 205 | 817 49 04-16 | Screw 1/4-20 x 1.00 77 |
| 206 | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga. |
| 208 | 817 67 06-08 | Screw 3/8-16 x 1/2 |
| 214 | 532 19 37-82 | Bolt/Washer Asm 5/16-18 |
| 244 | 532 42 30-62 | Palnut 1/4 |
| 251 | 532 43 60-87 | Kit Bungee (Includes Phillips head screw, weld nut, screw, bungee latch, and bungee strap) |
| 310 | 532 43 02-51 | Cover Deck Asm. LH |
| 311 | 532 43 02-52 | Cover Deck Asm. RH |
| 312 | 532 42 17-90 | Shield Deck 42" RH |
| 313 | 532 42 17-89 | Shield Deck 42" LH |
| 314 | 532 43 02-50 | Shield Rear |
| 315 | 817 60 04-06 | Screw Hex Washead 1/4-20 x 3/8 |
| - - | 532 19 25-58 | Brake Assembly (Includes Stand, Arm and Guard Components) |
| - - | 587 25 33-01 | Mandrel Assembly (Includes housing (key #14), shaft assembly (key #13), and bearing (key #15) only - pulley/nut/washer and blade bolt/ washers not included) |
| - - | 532 43 18-41 | Replacement Mower, Complete |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01**
**MOWER LIFT 45**

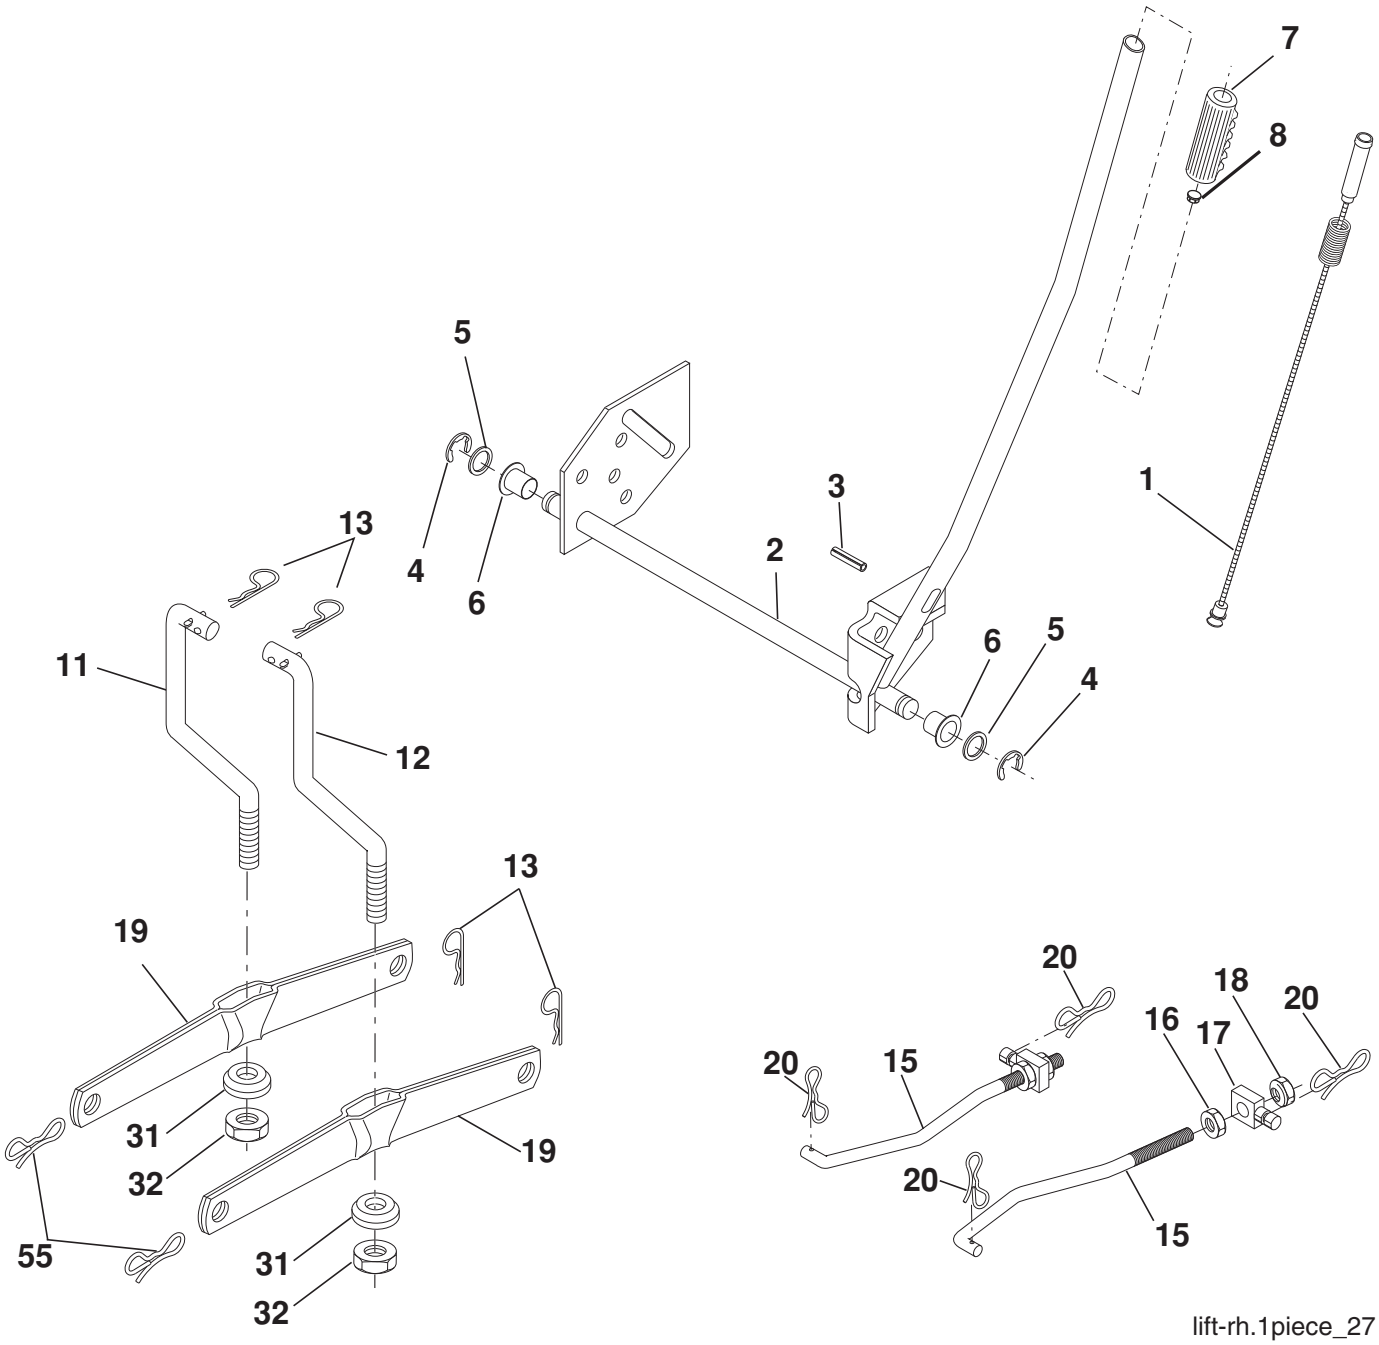



lift-rh.1piece_27

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 40 49-81 | Plunger Asm. Lift Lever |
| 2 | 532 15 94-71 | Shaft Asm Lift |
| 3 | 532 10 57-67 | Pin Groove |
| 4 | 812 00 00-02 | E Ring #5133-62 |
| 5 | 819 21 16-21 | Washer PLTD 21/32 x 1 x 21 Ga. |
| 6 | 532 12 01-83 | Bearing Nylon Blk 629 Id |
| 7 | 532 10 94-13 | Grip Handle Bicycle Matte Blk |
| 8 | 532 12 45-26 | Button Plunger Black |
| 11 | 532 13 98-65 | Link Lift LH |
| 12 | 532 13 98-66 | Link Lift RH |
| 13 | 532 12 46-70 | Retainer Spring |
| 15 | 532 17 32-88 | Link Front |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 16 | 873 35 08-00 | Nut Jam Hex 1/2-13 unc |
| 17 | 532 17 56-89 | Trunnion |
| 18 | 873 80 08-00 | Nut Lock w/Wsh 1/2-13 unc |
| 19 | 532 13 98-68 | Arm Suspension Rear |
| 20 | 532 19 42-09 | Pin Cotter 7/16 Bow Tie Lock |
| 31 | 532 16 98-65 | Bearing Pvt Lift |
| 32 | 873 54 06-00 | Nut Crownlock 3/8-24 |
| 55 | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

## TRACTOR - - MODEL NO. LTH 141 (96011030102), PRODUCT NO. 960 11 03-01
## SEAT ASSEMBLY 42

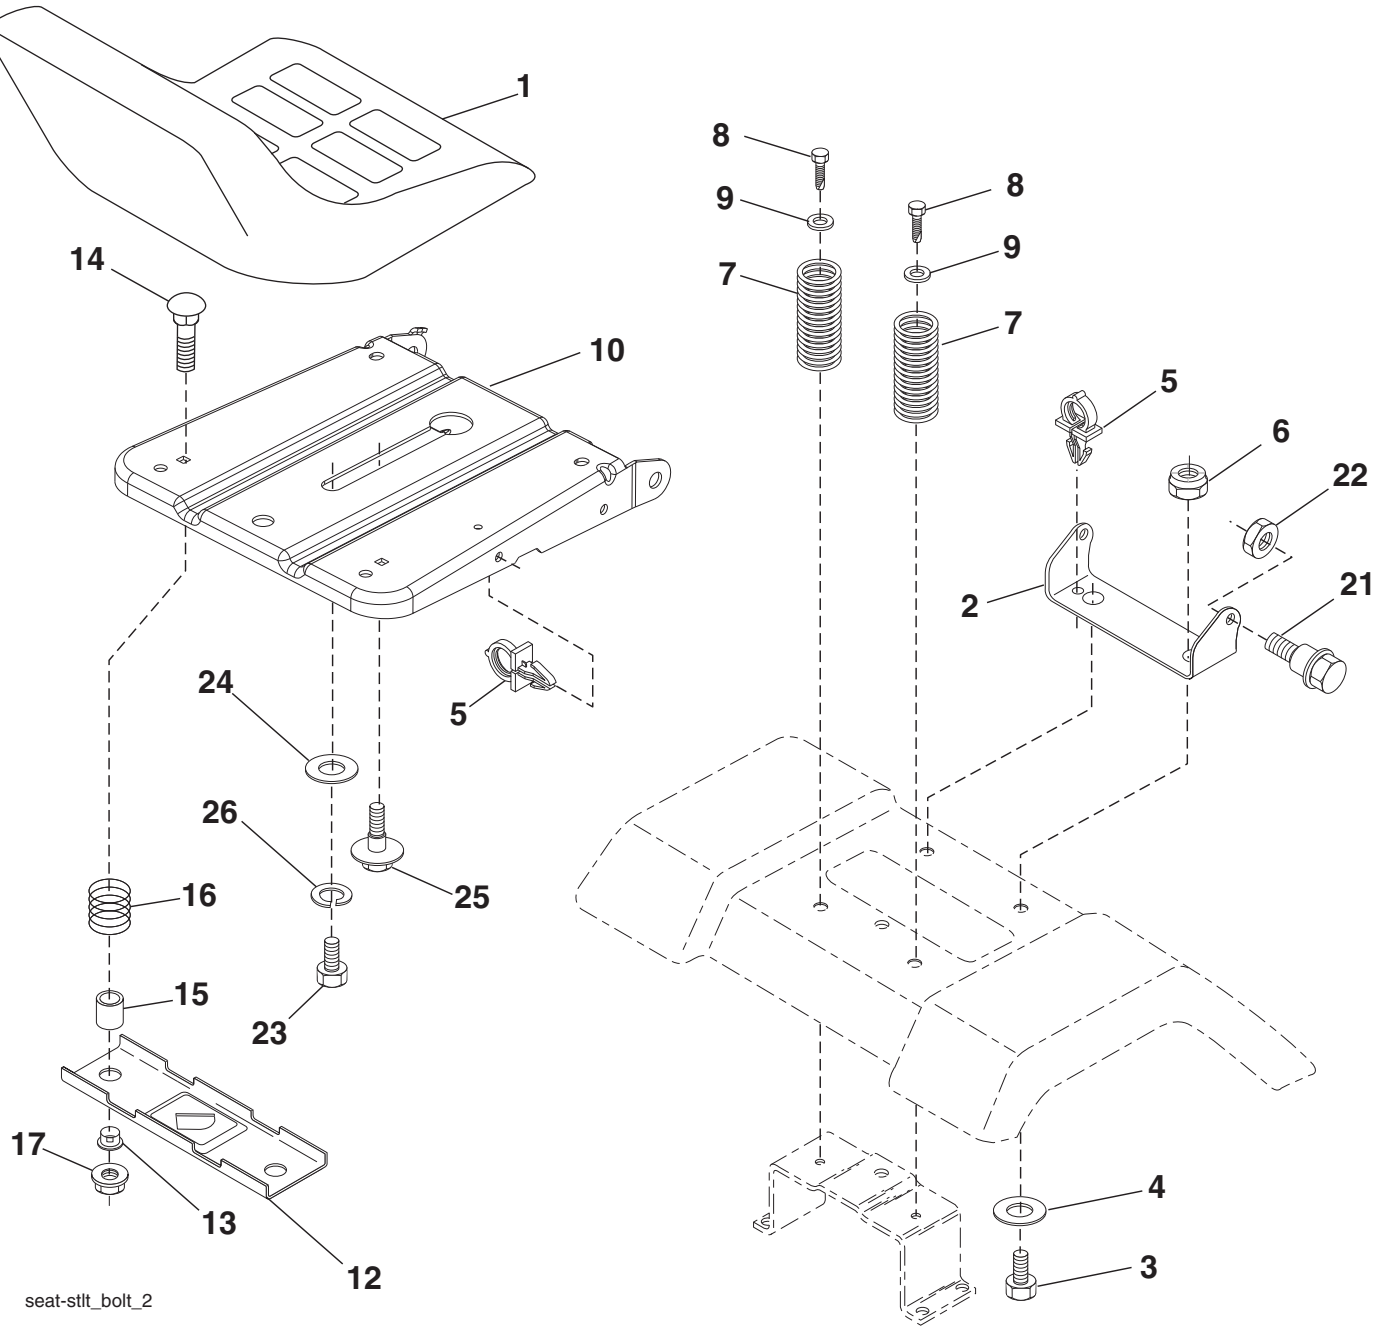


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 40 10-42 | Seat |
| 2 | 532 14 05-51 | Bracket Pivot Seat 8 720 |
| 3 | 871 11 06-16 | Bolt Fin Hex 3/8-16 unc x 1 |
| 4 | 819 13 16-10 | Washer 13/32 x 1 x 10 Ga. |
| 5 | 532 14 50-06 | Clip Push-In |
| 6 | 873 80 06-00 | Nut Lock Hex w/Wsh 3/8-16 unc |
| 7 | 532 12 41-81 | Spring Seat Cprsn 2 250 Blk Zi |
| 8 | 817 00 06-16 | Screw 3/8-16 x 1.5 |
| 9 | 819 13 16-14 | Washer 13/32 x 1 x 14 Ga. |
| 10 | 532 19 55-30 | Pan Seat |
| 12 | 532 17 46-48 | Bracket Mounting Switch |
| 13 | 532 12 12-48 | Bushing Snap Blk Nyl 50 Id |
| 14 | 872 05 04-12 | Bolt Rdhd Sht Nk 1/4-20 x 1-1/2 |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 15 | 532 13 43-00 | Spacer Split 28 x 96 Yel Zinc |
| 16 | 532 12 12-50 | Spring Cprsn 1 27 Blk Pnt |
| 17 | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr. 5 Zinc |
| 21 | 532 17 18-52 | Bolt Shoulder 5/16-18 unc -2A |
| 22 | 873 80 05-00 | Nut Lock Hex w/Insert 5/16-18 unc |
| 23 | 871 11 08-14 | Bolt Hex |
| 24 | 819 17 19-12 | Washer 17/32 x 1-3/16 x 12 Ga. |
| 25 | 532 12 70-18 | Bolt Shoulder 5/16-18 x 62 |
| 26 | 810 04 08-00 | Washer Lock Hvy HLCLSPR 1/2 |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm