
ILLUSTRATED PARTS LIST


MODEL NO. 96051002600
CUSTOMER CATALOG NO. CT154
PRODUCT NO. 960 51 00-26

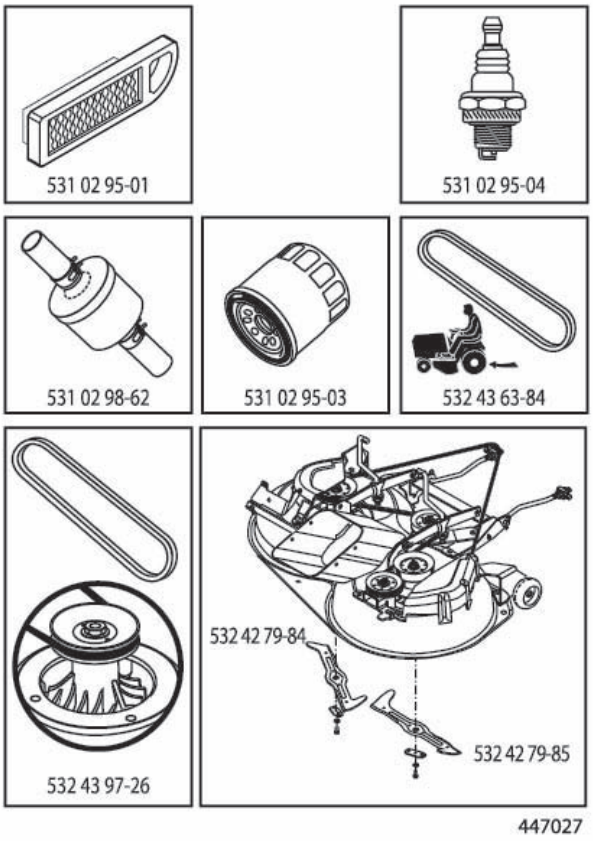

47


TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

DECALS 27

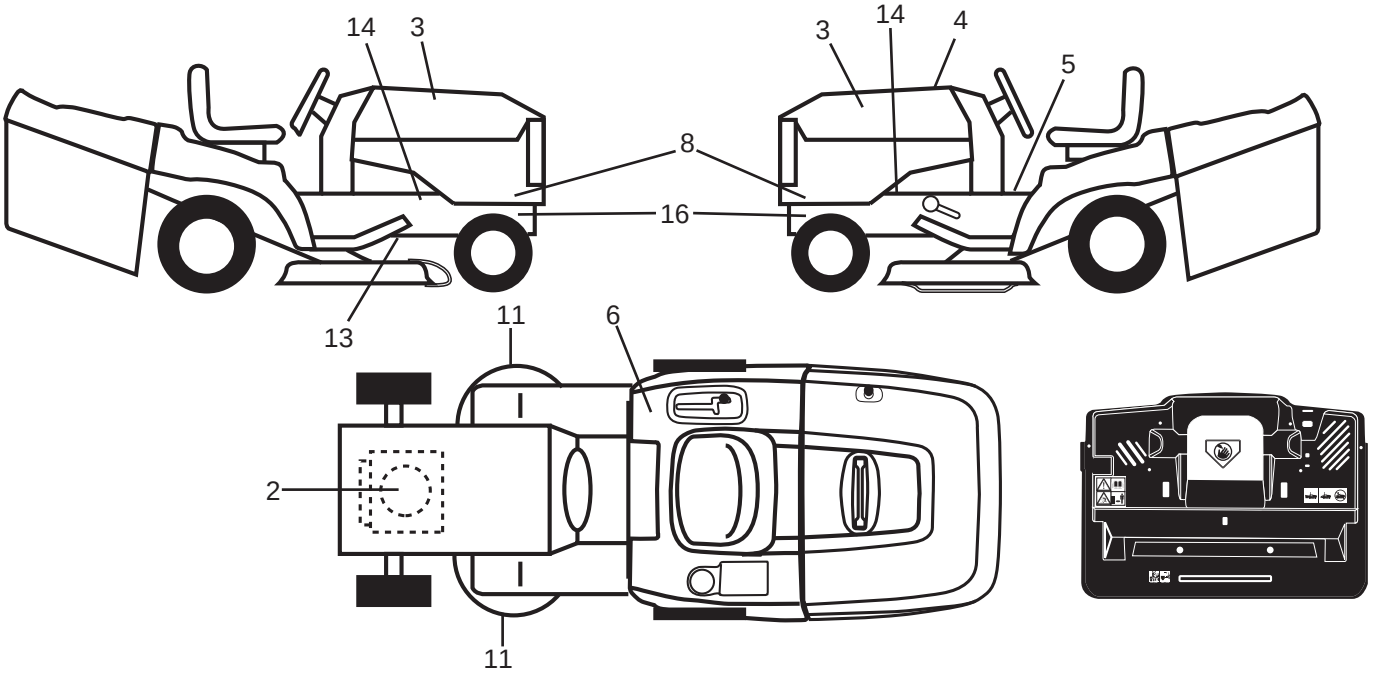

KEY NO.	PART NO.	DESCRIPTION
2	532 19 68-41	Decal, Warning Eng. Sym.
3	581 62 73-01	Decal, Hood Emblem
4	532 44 70-27	Decal, Replacement
5	532 44 55-03	Decal, Warning Symbols
6	532 18 04-32	Decal, Fender 100DB/CE
8	532 44 77-60	Decal, Side Panel
11	532 18 21-66	Decal, Mower Cut Finger Symbol
13	532 44 11-89	Decal, V-Belt
14	532 15 97-36	Decal, Chassis Hot Muffler
16	532 40 11-46	Decal, Warning Service Fire
- -	532 44 27-44	Decal, Battery Door
- -	532 44 79-48	Decal, Inst. Mulch Plug
- -	532 44 14-09	Pad Footrest LH
- -	532 44 18-02	Pad Footrest RH
- -	532 44 78-71	Manual Operator's (Euro)

WHEELS AND TIRES

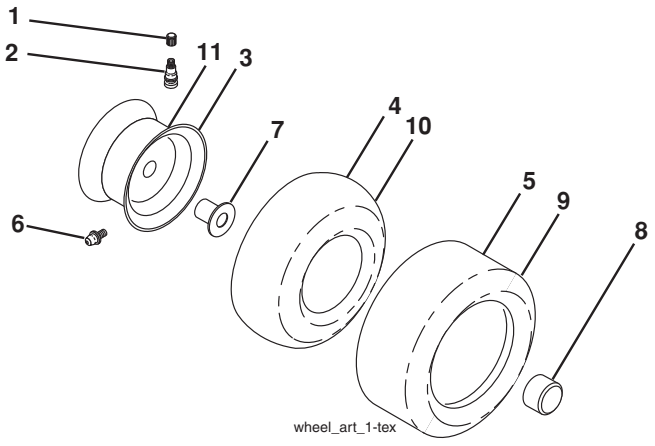


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 13 83-36	Rim Asm. 6" Front
4	532 05 99-04	Tube Front (Service Item Only)
5	532 10 62-22	Tire F T 15 x 6 0 - 6
6	532 12 49-57	Fitting Grease (Front Wheel Only)
7	532 12 49-59	Bearing Flange (Front Wheel Only)
8	532 17 50-39	Cap Axle Blk. 1 50 x 1 00
9	532 42 05-31	Tire R 18 x 9.5-8 Turf Saver LT
10	532 12 49-26	Tube Rear (Service Item Only)
11	532 13 83-37	Rim Asm. 8" Rear
- -	532 14 43-34	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26


SCHEMATIC 38

SCH17

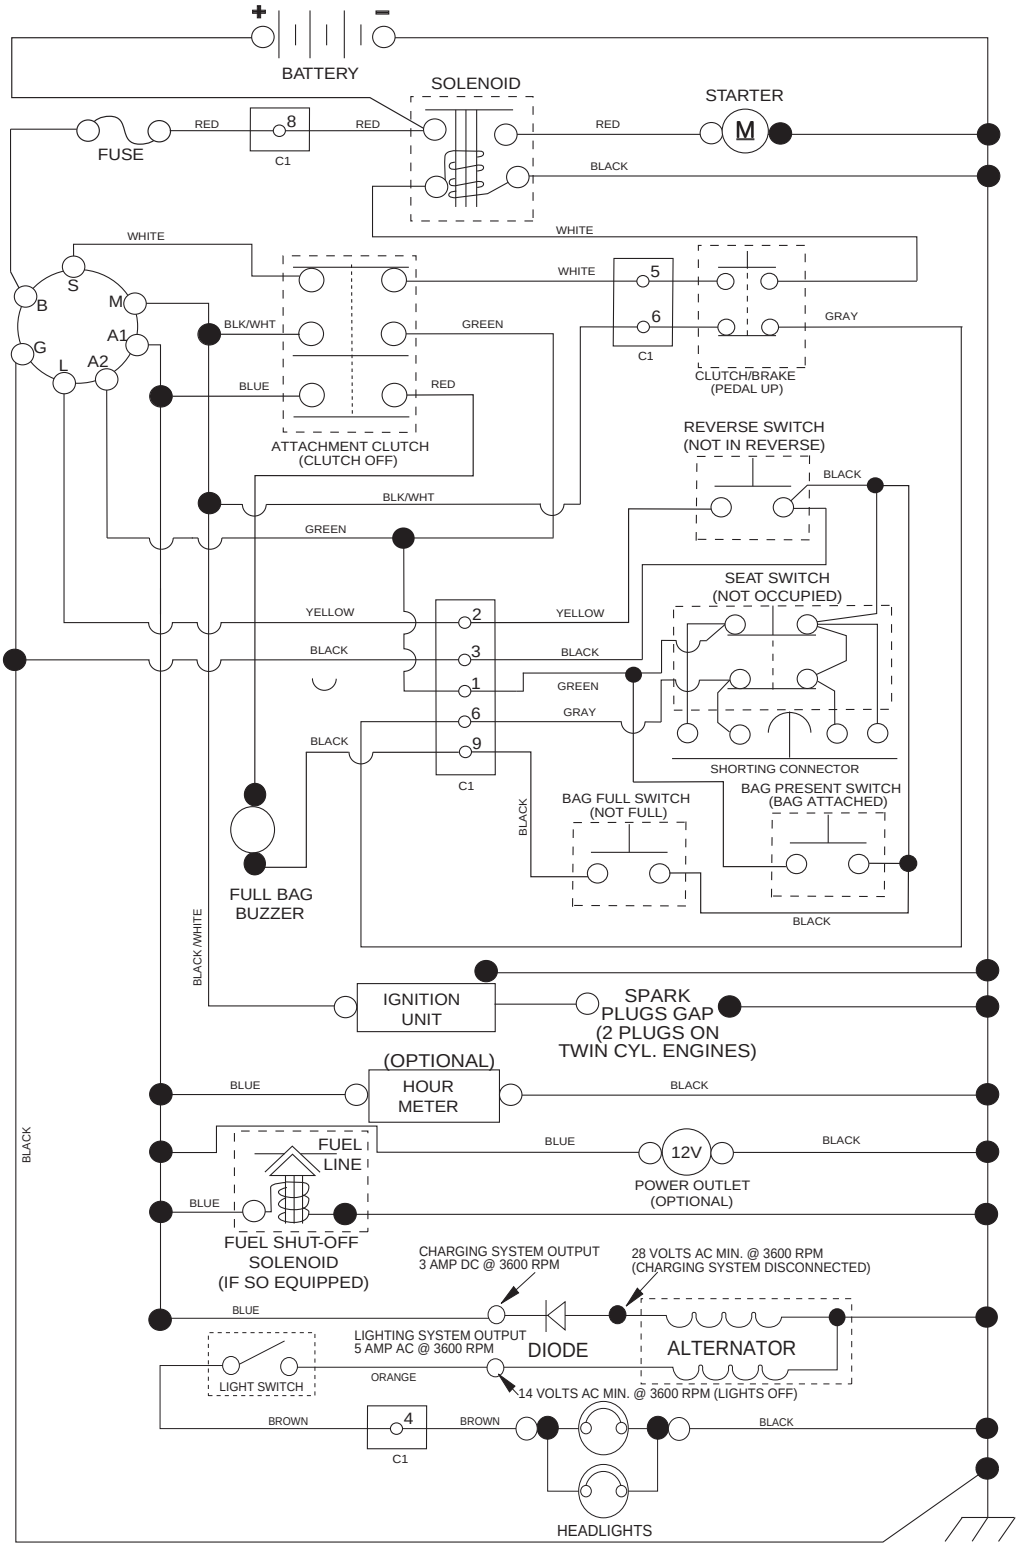


NOTE

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE SPEED IS INCREASED, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

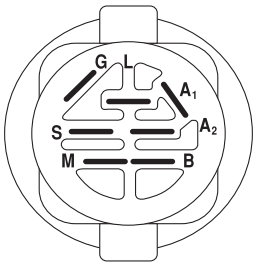


IGNITION SWITCH

POSITION	CIRCUIT "MAKE"
OFF	M+G+A1
RUN/OVERRIDE	B+A1
RUN	B+A1 L+A2
START	B + S + A1

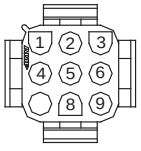

CHASSIS HARNESS CONNECTOR (C1) (MATING SIDE)

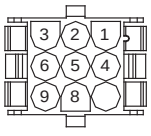


DASH HARNESS CONNECTOR (C1) (MATING SIDE)

WIRING INSULATED CLIPS NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS

ELECTRICAL 32

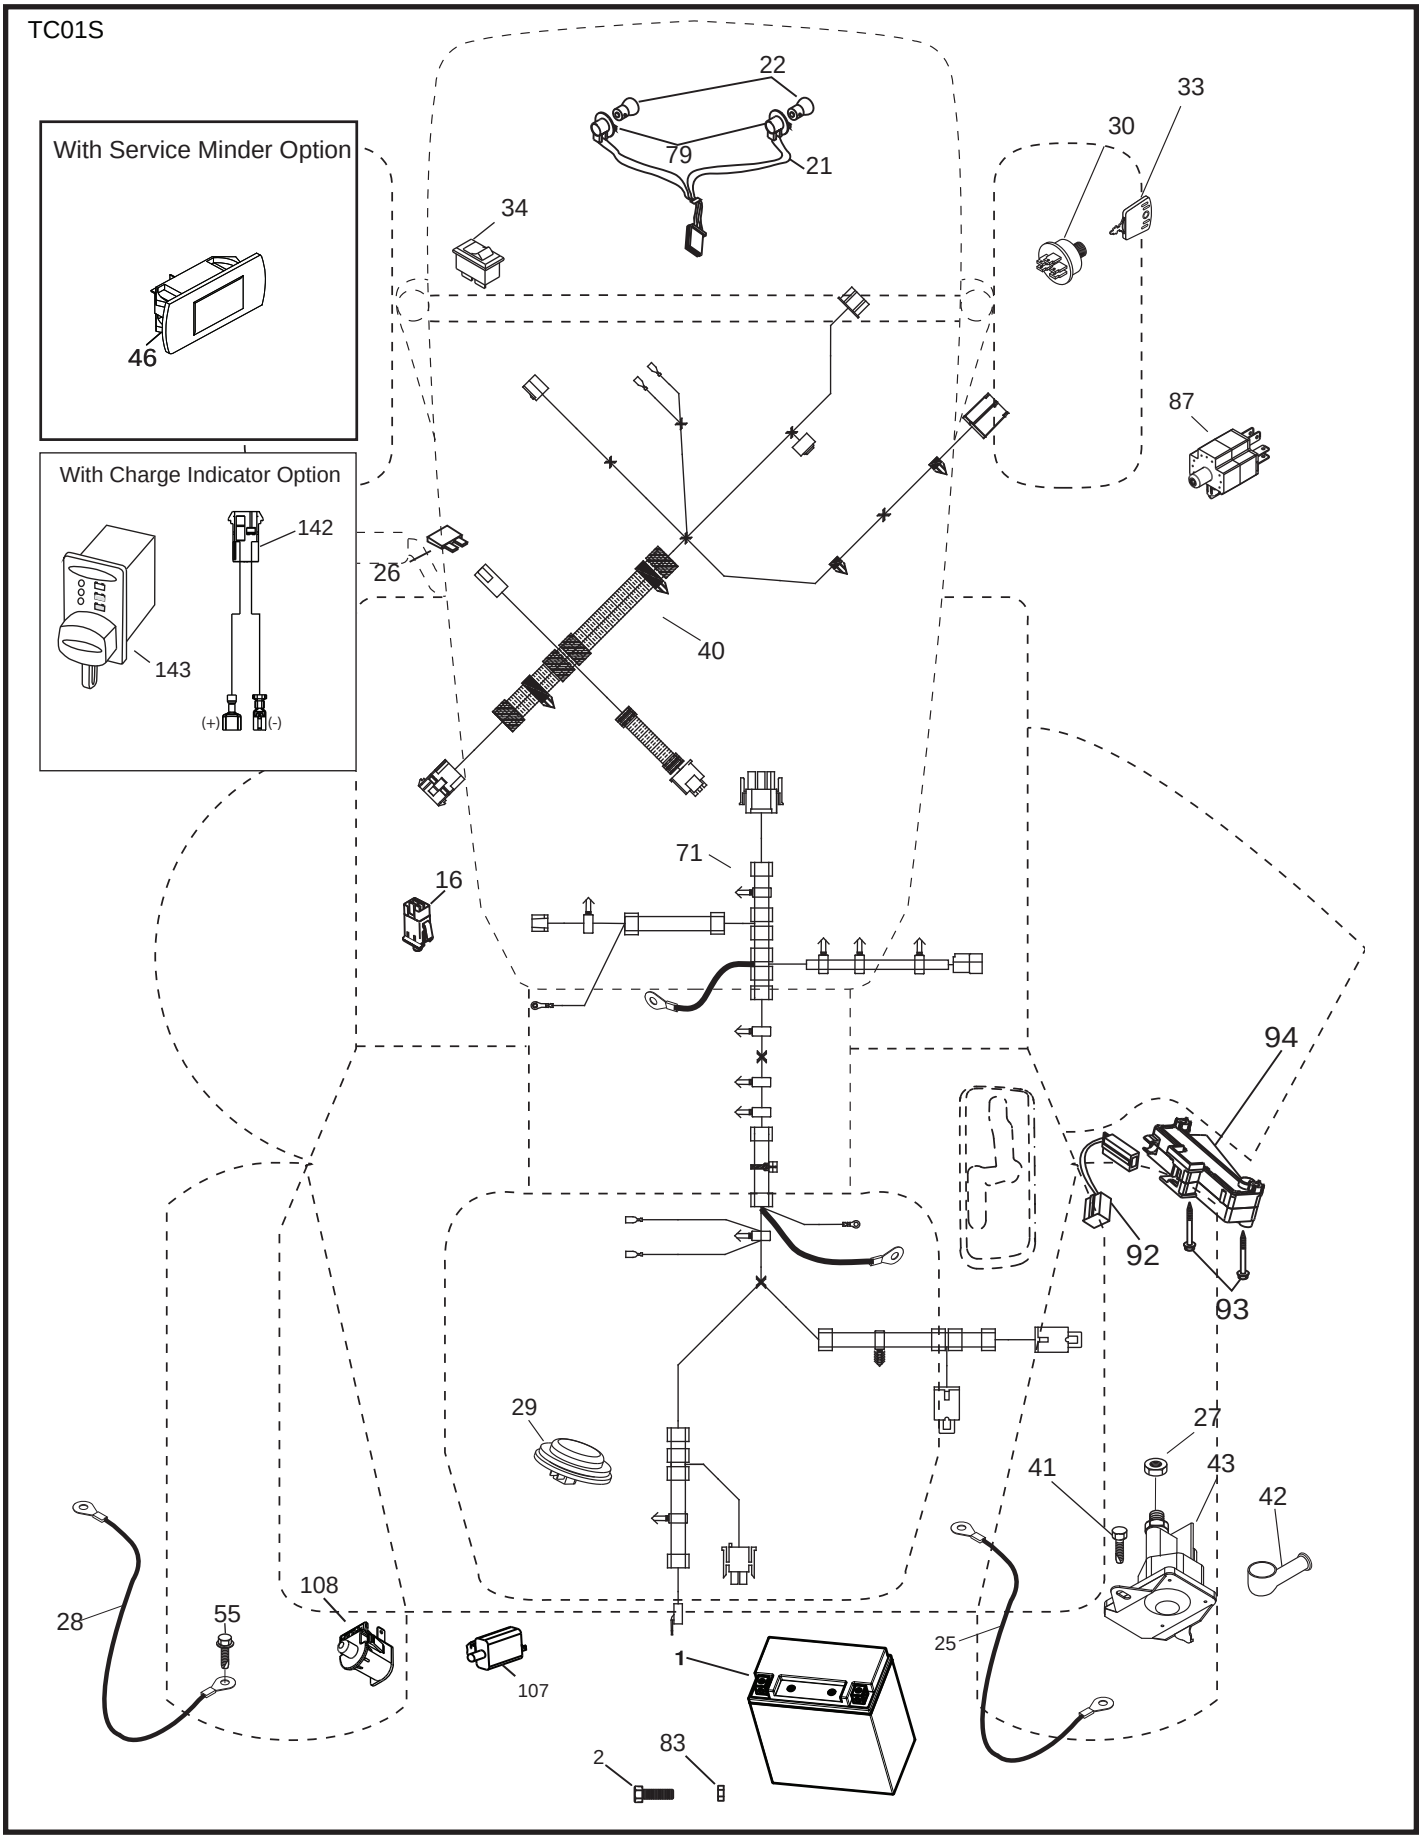


KEY NO.	PART NO.	DESCRIPTION
1	532 43 71-57	Battery
2	532 44 09-23	Screw Hex Head Cap M6 x 1.12 mm
16	532 17 61-38	Switch Interlock Push-In
21	532 40 02-52	Harness Socket Light w/4152J
22	532 00 41-52	Bulb Light
25	532 43 71-62	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 43 71-63	Cable, Ground
29	532 40 15-45	Switch, Seat
30	532 19 33-50	Switch, Ign.
33	532 41 19-35	Key/Chain
34	532 11 07-12	Switch Light/Reset
40	532 42 10-02	Harness Ign. Dash/Lift
41	817 72 04-08	Screw Thd. Cut 1/4-20 x 1/2
43	532 19 25-07	Solenoid
55	817 06 05-12	Screw Thdrol. 5/16-18 x 3/4 TYTT
71	532 43 71-60	Harness Chassis/Lift
79	532 17 52-42	Socket Asm. Bulb Twistlock
83	532 43 67-74	Nut Square M6 x 1.8.5 x 11 mm
87	532 42 10-60	Switch Railmount No-Nc-Nc
92	532 19 66-15	Harness Pigtail Reverse Switch
93	532 19 25-40	Screw Plastite 10-14 x 2.0
94	532 19 18-34	Module Reverse ROS
107	532 18 03-79	Switch Full Bagger Indicator
108	532 42 10-62	Switch Snapmount

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

CHASSIS AND ENCLOSURES 39

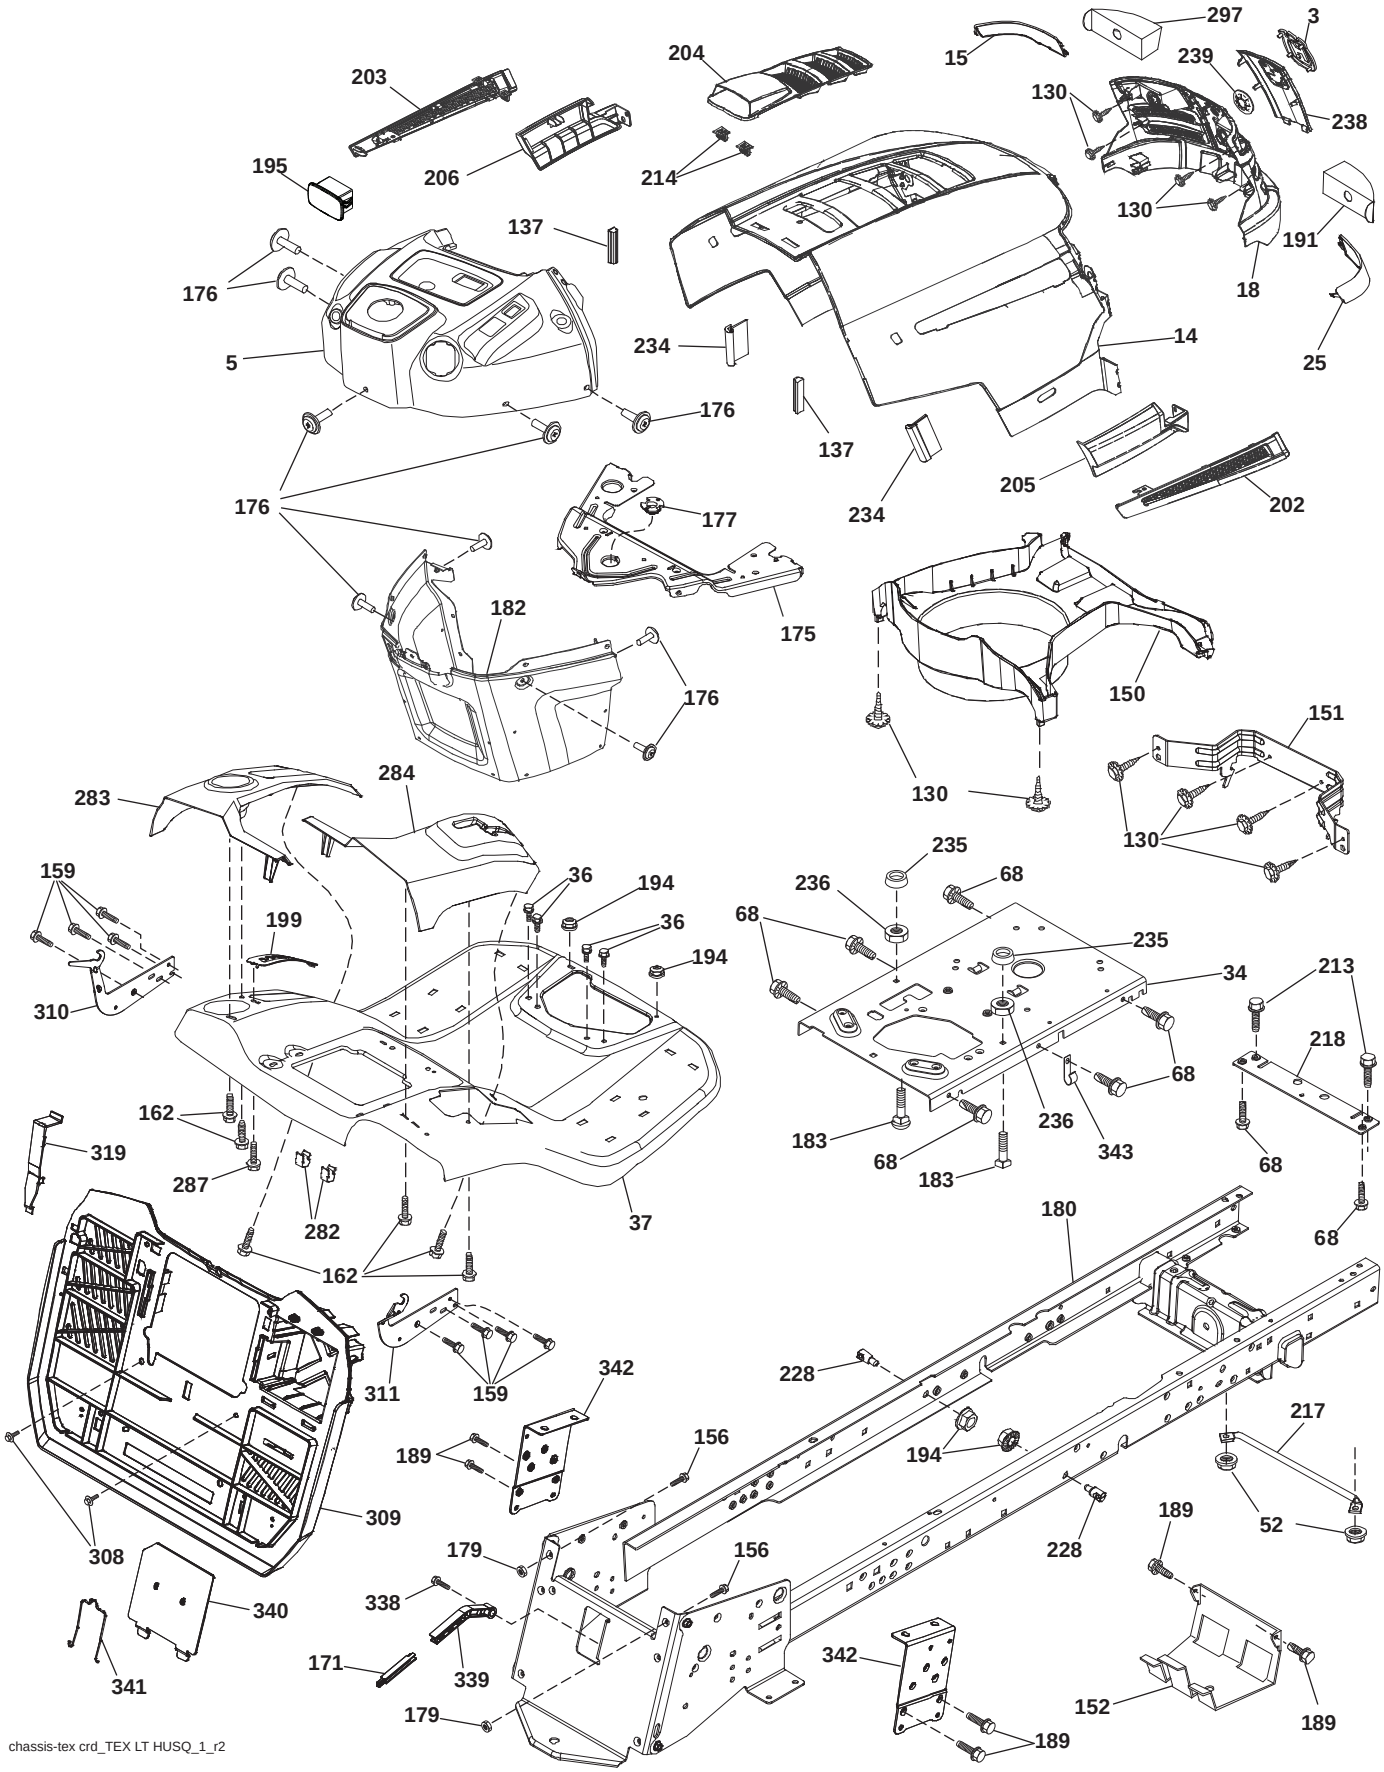

chassis-tex crd_TEX LT HUSQ_1_r2


TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26
CHASSIS AND ENCLOSURES 39

KEY NO.	PART NO.	DESCRIPTION
3	532 40 50-12	Logo
5	532 43 89-64	Dash
14	532 44 12-67	Hood
15	532 44 14-28	Lens LH
18	532 44 13-68	Grille
25	532 44 14-27	Lens RH
34	532 44 72-53	Plate Engine
36	817 06 05-12	Screw 5/16-18 x 3/4
37	532 44 13-69	Fender
52	873 68 05-00	Nut Crownlock 5/16-18
68	817 49 05-08	Screw Thdrol. 5/16-18 x 1/2
130	532 41 63-58	Screw #10 x .750 BOS Thread
137	532 40 75-90	Bumper Dash
150	532 40 75-37	Air Duct
151	532 40 78-07	Bracket Pivot
152	532 19 95-35	Shield Browning
156	872 14 06-14	Bolt 3/8-16 unc x 1-3/4
159	817 00 06-12	Screw 3/8-16 x 3/4
162	532 14 24-32	Screw Hex Wsh. Hi-Lo 1/4 x 1/2 unc
171	532 44 12-89	Extension Bagger Full
175	532 19 94-72	Crossmember
176	532 40 07-76	Screw 10-24 x 5/8
177	532 19 52-28	Bushing Steering
179	532 16 89-37	Nut Push
180	532 43 54-72	Chassis
182	532 40 71-76	Dash Lower
183	874 52 05-20	Bolt 5/16-18 x 1-1/4
189	817 00 05-12	Screw 5/16-18 x 3/4
191	532 41 65-01	Insert Reflective RH
194	873 90 05-00	Nut Lock Hex Flange 5/16-18
195	532 43 99-76	Plug Dash
199	532 41 87-39	Plate Deck Lift
202	532 44 13-42	Vent Side Hood RH
203	532 44 13-43	Vent Side Hood LH
204	532 44 13-75	Vent Top Hood
205	532 44 13-44	Skirt Side RH
206	532 44 13-45	Skirt Side LH
213	874 76 05-12	Bolt Hex HD 5/16-18 unc 3/4
214	532 19 91-45	Clip Retainer
217	532 40 91-67	Rod Pivot Hood
218	532 19 63-95	X-Piece Hood Stop
228	532 19 51-61	Stud Fastener
234	532 40 47-42	Bumper Hood
235	532 40 61-29	Spacer Fender
236	873 93 05 00	Nut Center Lock 5/16-18 unc
238	532 44 13-74	Trim
239	532 40 48-83	Clip Tinnerman
282	532 41 41-10	Clip Retainer
283	532 44 05-31	Console Deck Lift
284	532 44 08-59	Console Shift RH
287	817 60 04-06	Screw Hex Washead. 1/4-20 x 3/8
297	532 40 66-65	Insert Reflective LH
308	532 17 18-77	Bolt 5/16-18 unc x 3/4
309	532 43 66-26	Backplate
310	532 44 66-36	Bracket Hangbar Bag LH
311	532 44 66-37	Bracket Hangbar Bag RH
319	532 17 46-62	Bracket Actuator Bagger
338	532 43 66-40	Bolt Shoulder
339	532 44 12-88	Lever Bagger Full
340	532 44 09-31	Door Battery Tray
341	532 43 66-38	Latch Batter Tray
342	532 43 59-38	Support Fender
343	532 44 07-49	Clip

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

DRIVE 40

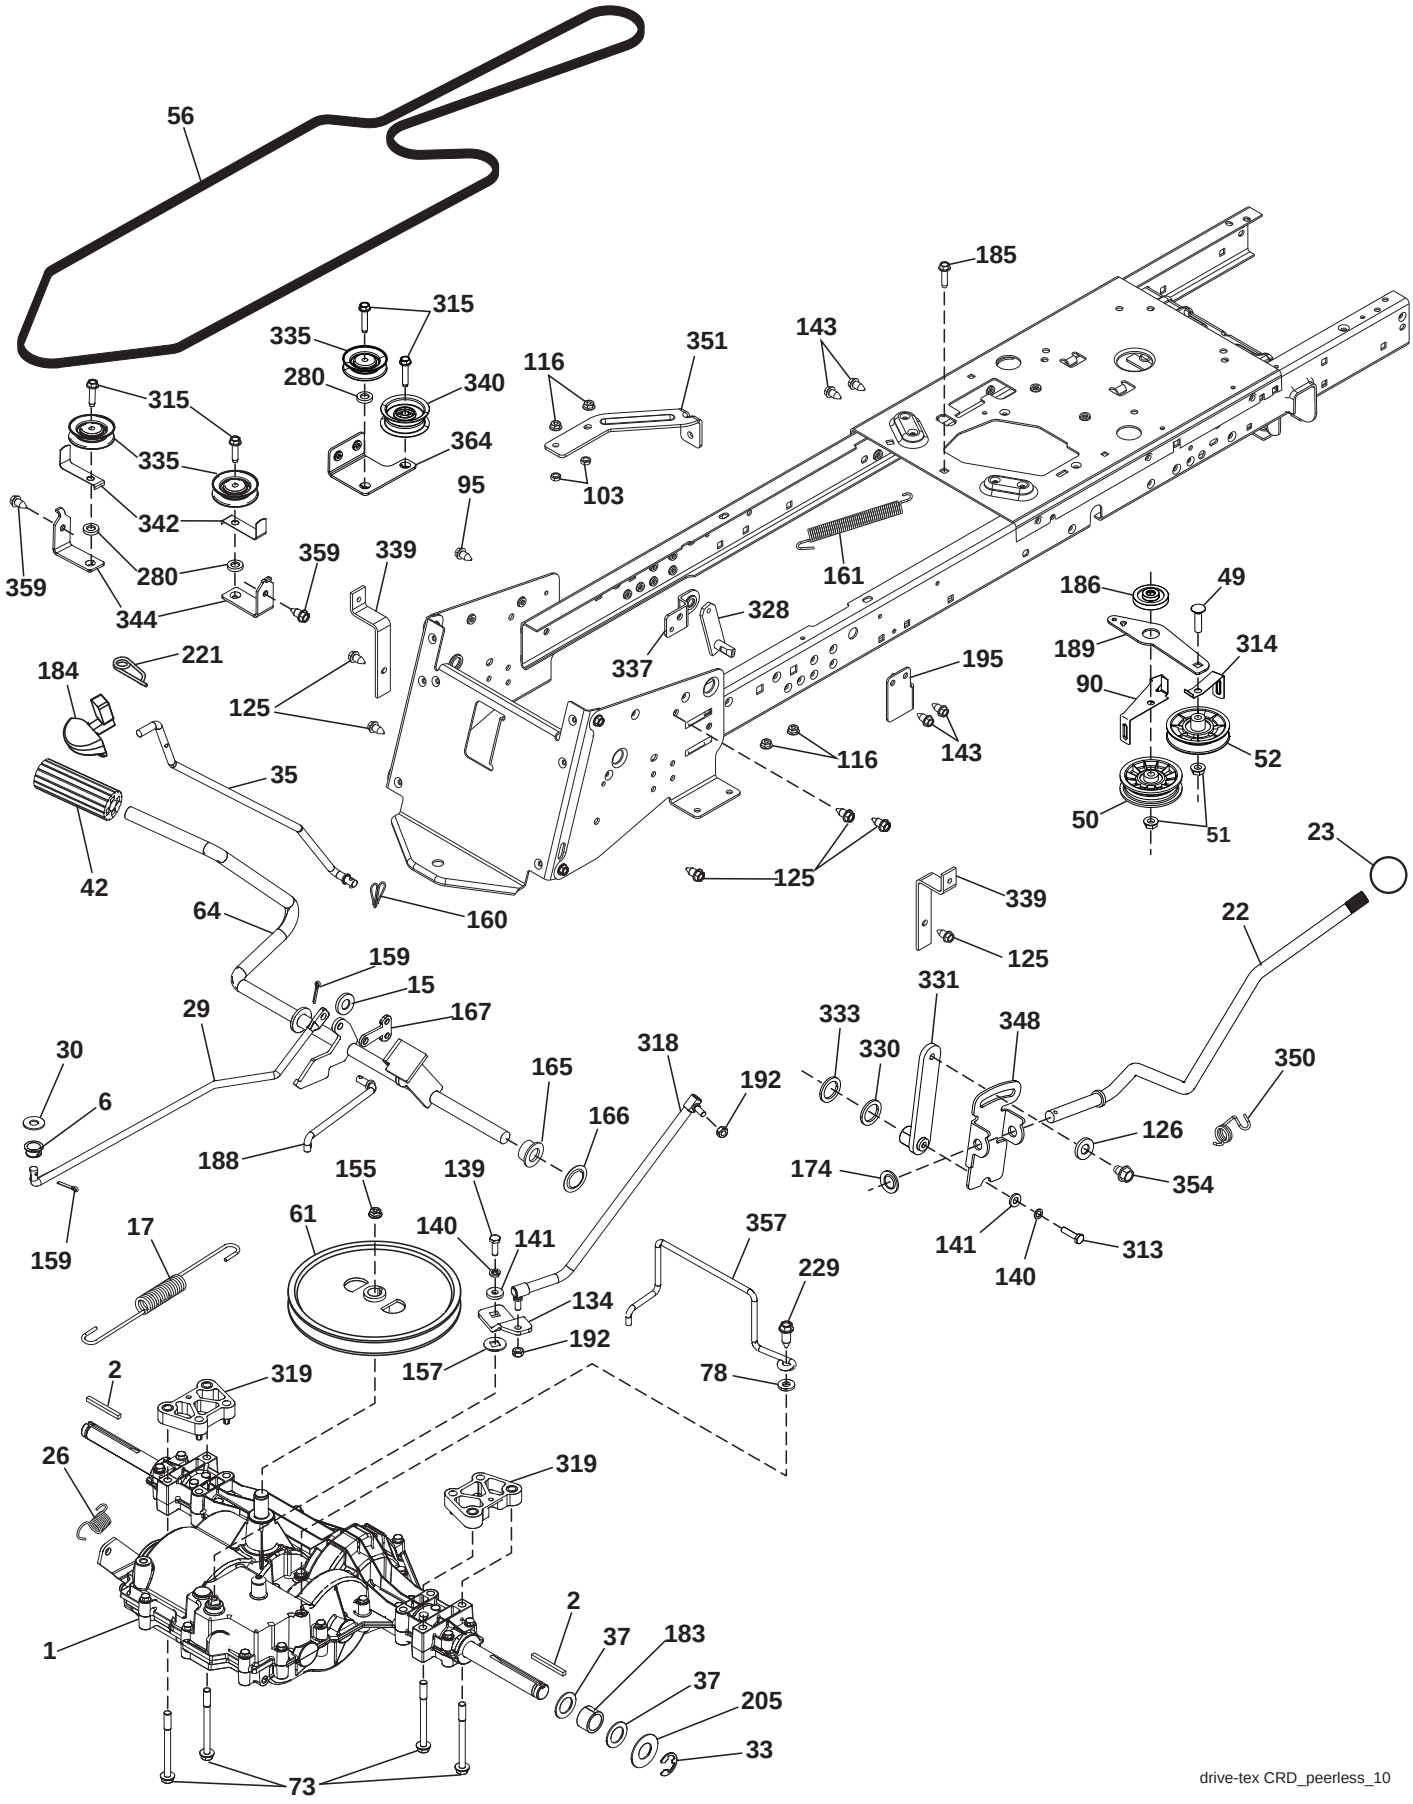

drive-tex CRD_peerless_10

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26


DRIVE 40

KEY NO.	PART NO.	DESCRIPTION
1	– – – – – –	Transaxle, Peerless 206-578 (436815)(Order parts from transaxle manufacturer.)
2	532 12 35-83	Key Square
6	532 12 40-28	Bushing
15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.
17	532 44 08-67	Spring, Brake
22	532 44 32-46	Rod Shift CRD Tex
23	532 12 12-74	Knob Duckhead 1/2-13
26	532 14 66-82	Spring Brake Return
29	532 43 70-16	Rod, Brake
30	819 13 16-16	Washer
33	812 00 00-01	Ring E
35	532 40 10-31	Rod, Brake, Park
37	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
42	532 12 48-72	Cover, Foot Pedal
49	872 11 06-14	Bolt
50	532 19 43-27	Idler Flat
51	873 90 06-00	Lock Nut 3/8-16
52	532 19 43-26	Pulley Idler V Groove Plastic
56	532 43 63-84	V-Belt, Drive
61	532 16 59-99	Pulley Transaxle
64	532 19 62-00	Shaft Asm. Pedal Brake Control
73	874 49 05-56	Bolt Flanged
78	819 11 12-12	Washer 11/32 x 3/4 x 12 Ga.
90	532 44 36-05	Keeper Belt Clutching
95	817 00 06-12	Screw
103	873 35 05-00	Nut
116	873 90 05-00	Nut Lock Hex Flange 5/16-18
125	817 00 05-12	Screw 5/16-18 x 3/4
126	532 16 60-02	Washer Srrtd 5/16 ID x 1.0 x .125
134	532 14 50-90	Asm. Shift
139	874 55 04-12	Bolt 1/4-28 unf Gr. 8 w/Patch
140	810 04 04-00	Washer Lock Hvy. Helical 1/4
141	819 09 12-10	Washer 9/32 x 3/4 x 10 Ga.
143	817 49 05-08	Screw Thdrol 5/16-18 x 1/2 TYTT
155	812 00 00-28	Ring Retainer
157	532 10 57-01	Washer Plate Shift
159	876 02 04-12	Cotter Pin
160	532 16 94-84	Retainer Clip
161	532 10 57-09	Spring, Return, Clutch
165	532 19 62-12	Bushing Shaft Brake Hand Control
166	532 42 91-64	Nut Push .625
167	532 40 52-57	Latch Brake Parking
174	532 19 72-89	Nut Push
183	532 13 70-57	Spacer Axle
184	532 44 14-07	Handle Parking Brake
185	872 11 06-22	Bolt
186	532 19 43-21	Spacer Retainer
188	532 19 43-23	Link Clutch Ground Drive
189	532 43 36-11	Bellcrank Ground Drive CRD Tex
192	532 15 03-60	Nut Lock Center 1/4-28 Fnthd.
195	532 43 58-65	Bracket Brake Rod
205	532 12 17-48	Washer 25/32 x 1-5/8 16 Ga.
221	532 40 31-87	Retainer Spring Clip
229	817 06 05-16	Screw 5/16-18 x 1
280	819 11 10-12	Washer
313	874 78 04-16	Bolt Hex Fin 1/4-20 x 1 Gr. 5
314	532 44 47-13	Keeper Belt
315	817 58 05-20	Screw Thdrol 5/16-18 x 4.25
318	532 43 70-22	Link Shift Gear
319	532 43 67-94	Spacer Transaxle Tex CRD
328	532 43 79-58	Shaft Shift Front
330	532 16 95-93	Washer Nylon
331	532 44 36-06	Hub Shift
333	532 17 08-68	Wave Spring Washer
335	532 19 95-34	Pulley V-Idler
337	532 43 59-37	Bracket Supt Shift CRD Tex
339	532 43 68-67	Strap Torue K46 CRD Tex
340	532 43 68-12	Idler Flat
342	532 18 26-82	Keeper Belt
344	532 43 56-45	Bracket Idler CRD Tex
348	532 44 36-07	Bracket Pivot Lever
350	532 44 50-20	Spring Torsion Shift
351	532 43 69-98	Bracket Deck Sway
354	817 49 05-10	Screw
357	532 44 13-38	Keeper Belt Trans.
359	817 49 06-10	Screw Hxwsh Thdr 3/8-16 x 5/8
364	532 44 30-32	Bracket

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

ENGINE 24

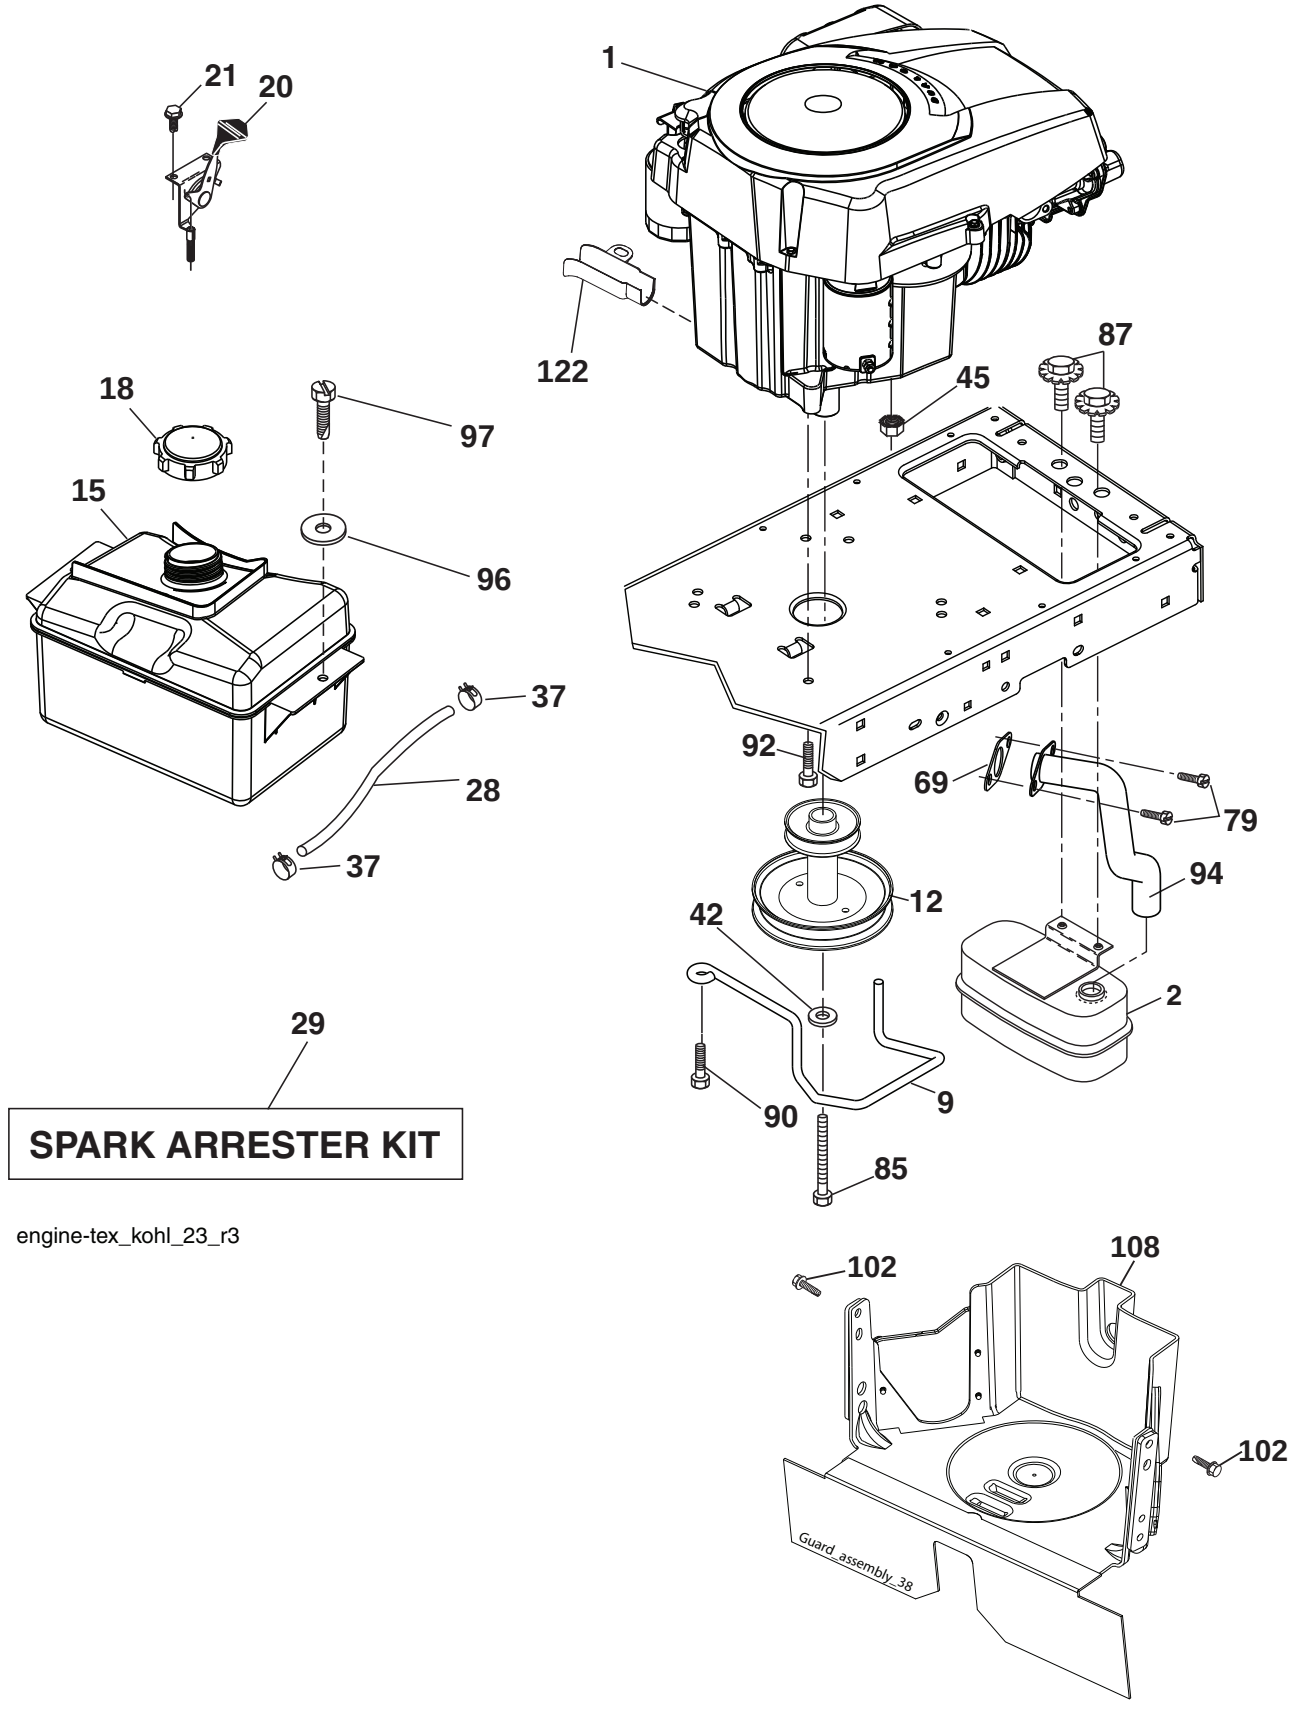

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26


ENGINE 24

KEY NO.	PART NO.	DESCRIPTION
1	– – – – – –	Engine Kohler Model No. SV470-3212 (438330)(Order parts from engine manufacturer.)
2	532 18 86-55	Muffler
9	532 19 43-20	Keeper Belt Engine
12	532 40 54-71	Pulley Engine
15	532 40 75-45	Tank Fuel 1.5
18	532 43 02-20	Cap Fuel
20	532 18 38-97	Control Throttle
21	532 41 63-58	Screw #10 x 0.750 BOS Thread
28	532 13 70-40	Fuel Line
29	532 13 71-80	Spark Arrester Kit
37	532 12 34-87	Clamp Hose
42	810 04 07-00	Lock Washer Hvy. 7/16
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
69	532 18 59-09	Gasket
79	532 19 23-34	Screw Socket HD 5/16-18 x .75
85	532 17 39-37	Bolt Hex 7/16-20 x 4 x Gr. 5-1.5 Thr
87	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems.
90	817 00 06-16	Screw 3/8-16 x 1
92	817 12 06-16	Screw 3/8-16 x 1
94	532 18 86-54	Tube Exhaust
96	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
97	817 67 04-12	Screw 1/4-20 x 3/4
102	817 06 05-16	Screw 5/16-18 x 1
108	532 42 30-41	Cover Pulley Engine
122	532 42 19-22	Extension Drain Oil

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

STEERING ASSEMBLY 41

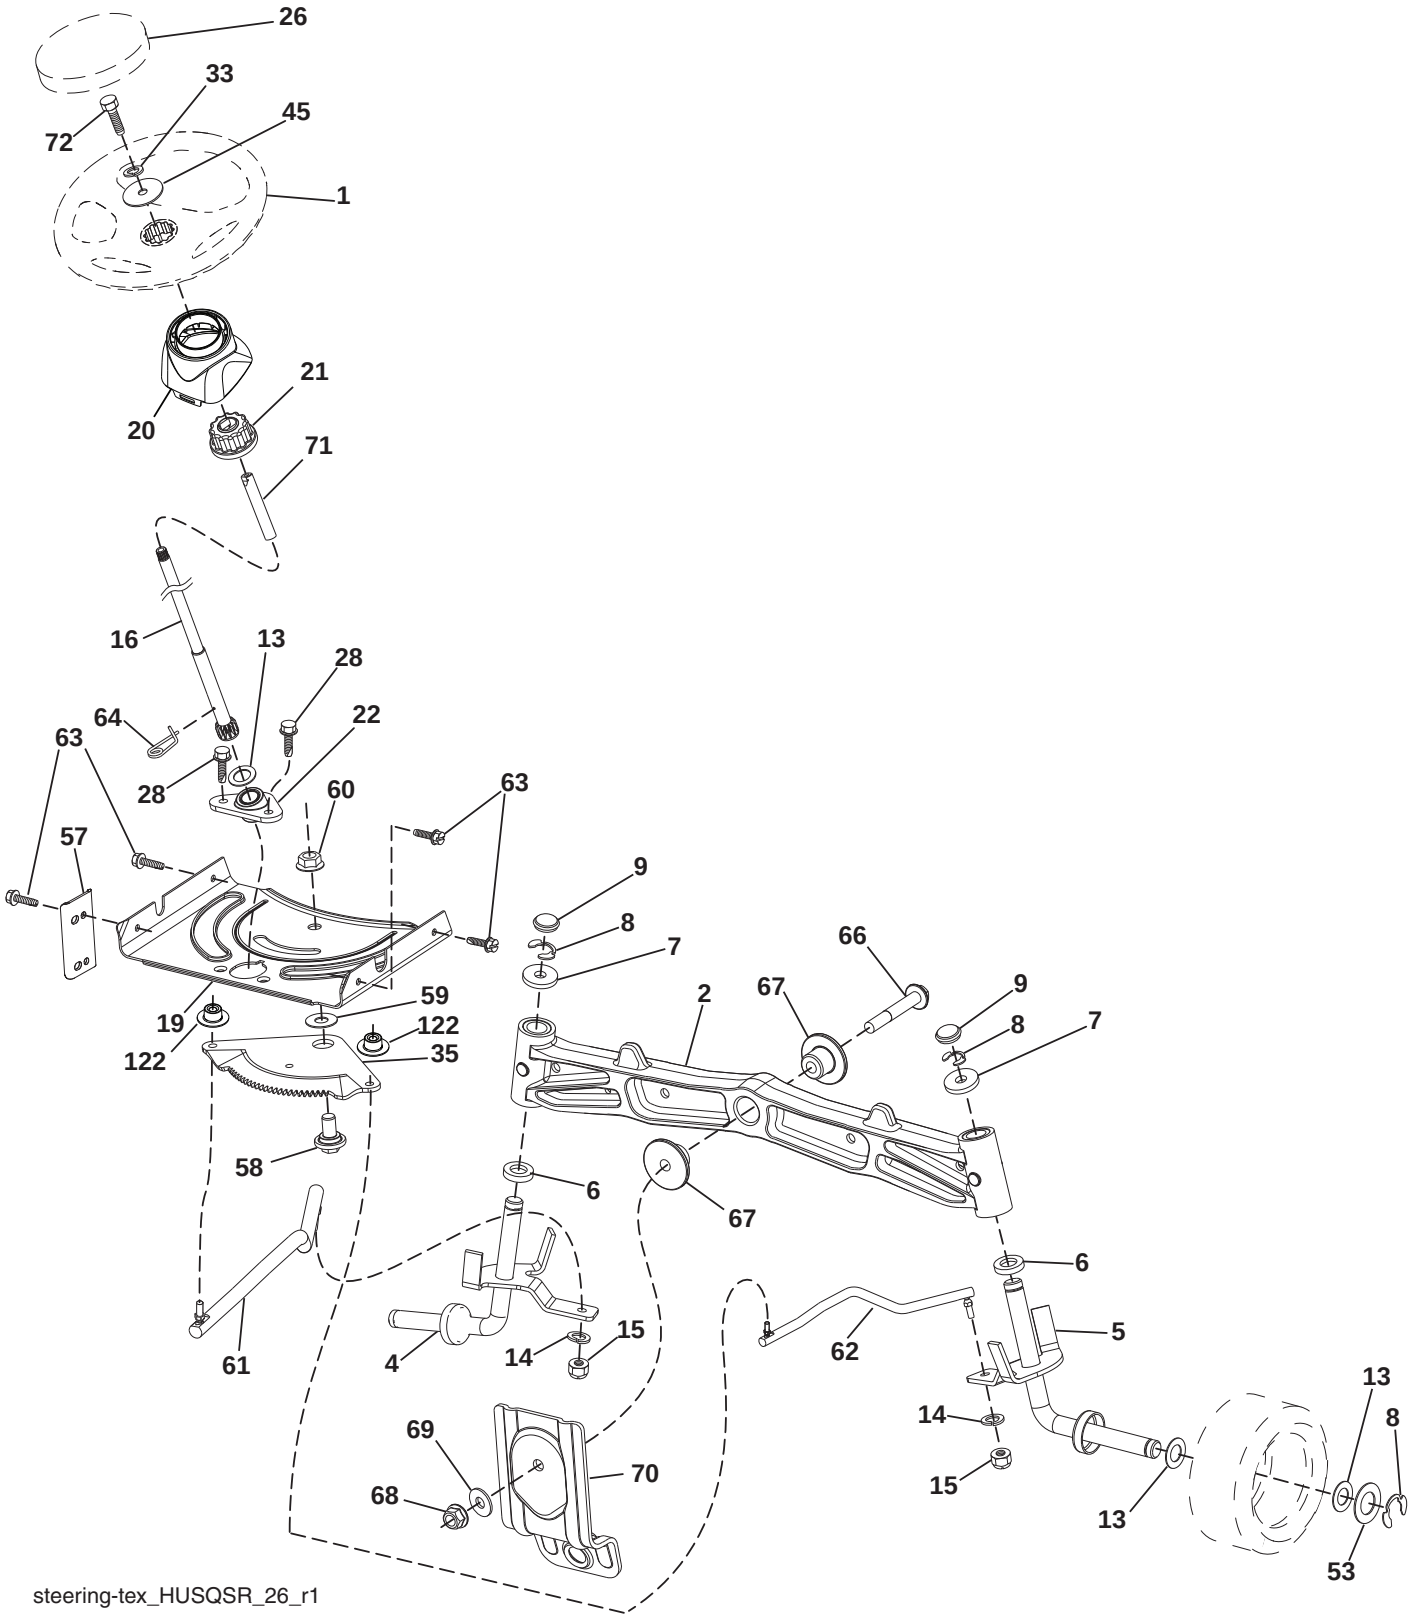


TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26
STEERING ASSEMBLY 41

KEY NO.	PART NO.	DESCRIPTION
1	532 43 97-40	Wheel, Steering Husq SR
2	532 19 59-68	Axle Asm., Front
4	532 40 30-87	Spindle Asm., LH
5	532 40 30-88	Spindle Asm., RH
6	532 12 49-31	Bearing, Race Thrust Hardened
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Clip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	810 04 06-00	Washer, Lock Hvy. Hlcl. Spr. 3/8
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	532 42 93-73	Shaft Steering
19	532 19 47-29	Plate Steering
20	532 44 14-25	Boot, Steering
21	532 18 67-37	Adapter, Wheel Steering
22	532 42 05-37	Supt., Strg. Lower
26	532 43 97-43	Insert, Wheel Steering Husq SR
28	817 00 06-12	Screw 3/8-16 x 3/4
33	810 04 05-00	Washer Lock 5/16
35	532 19 47-32	Gear, Sector Plate
45	819 11 38-12	Washer 11/32 x 3/8 x 12 Ga.
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
57	532 40 74-65	Bracket Upstop
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	532 19 47-40	Draglink, LH
62	532 19 47-41	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd. 7/16-14 x 3 Serr.
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	532 19 61-97	Bracket Deck Susp. Front
71	532 19 07-52	Shaft Extension Steering
72	532 42 89-82	Bolt Fin Hx 5/16-18 x 4 w/Patch
122	532 44 49-62	Cap Gear Sector

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

MOWER DECK 44

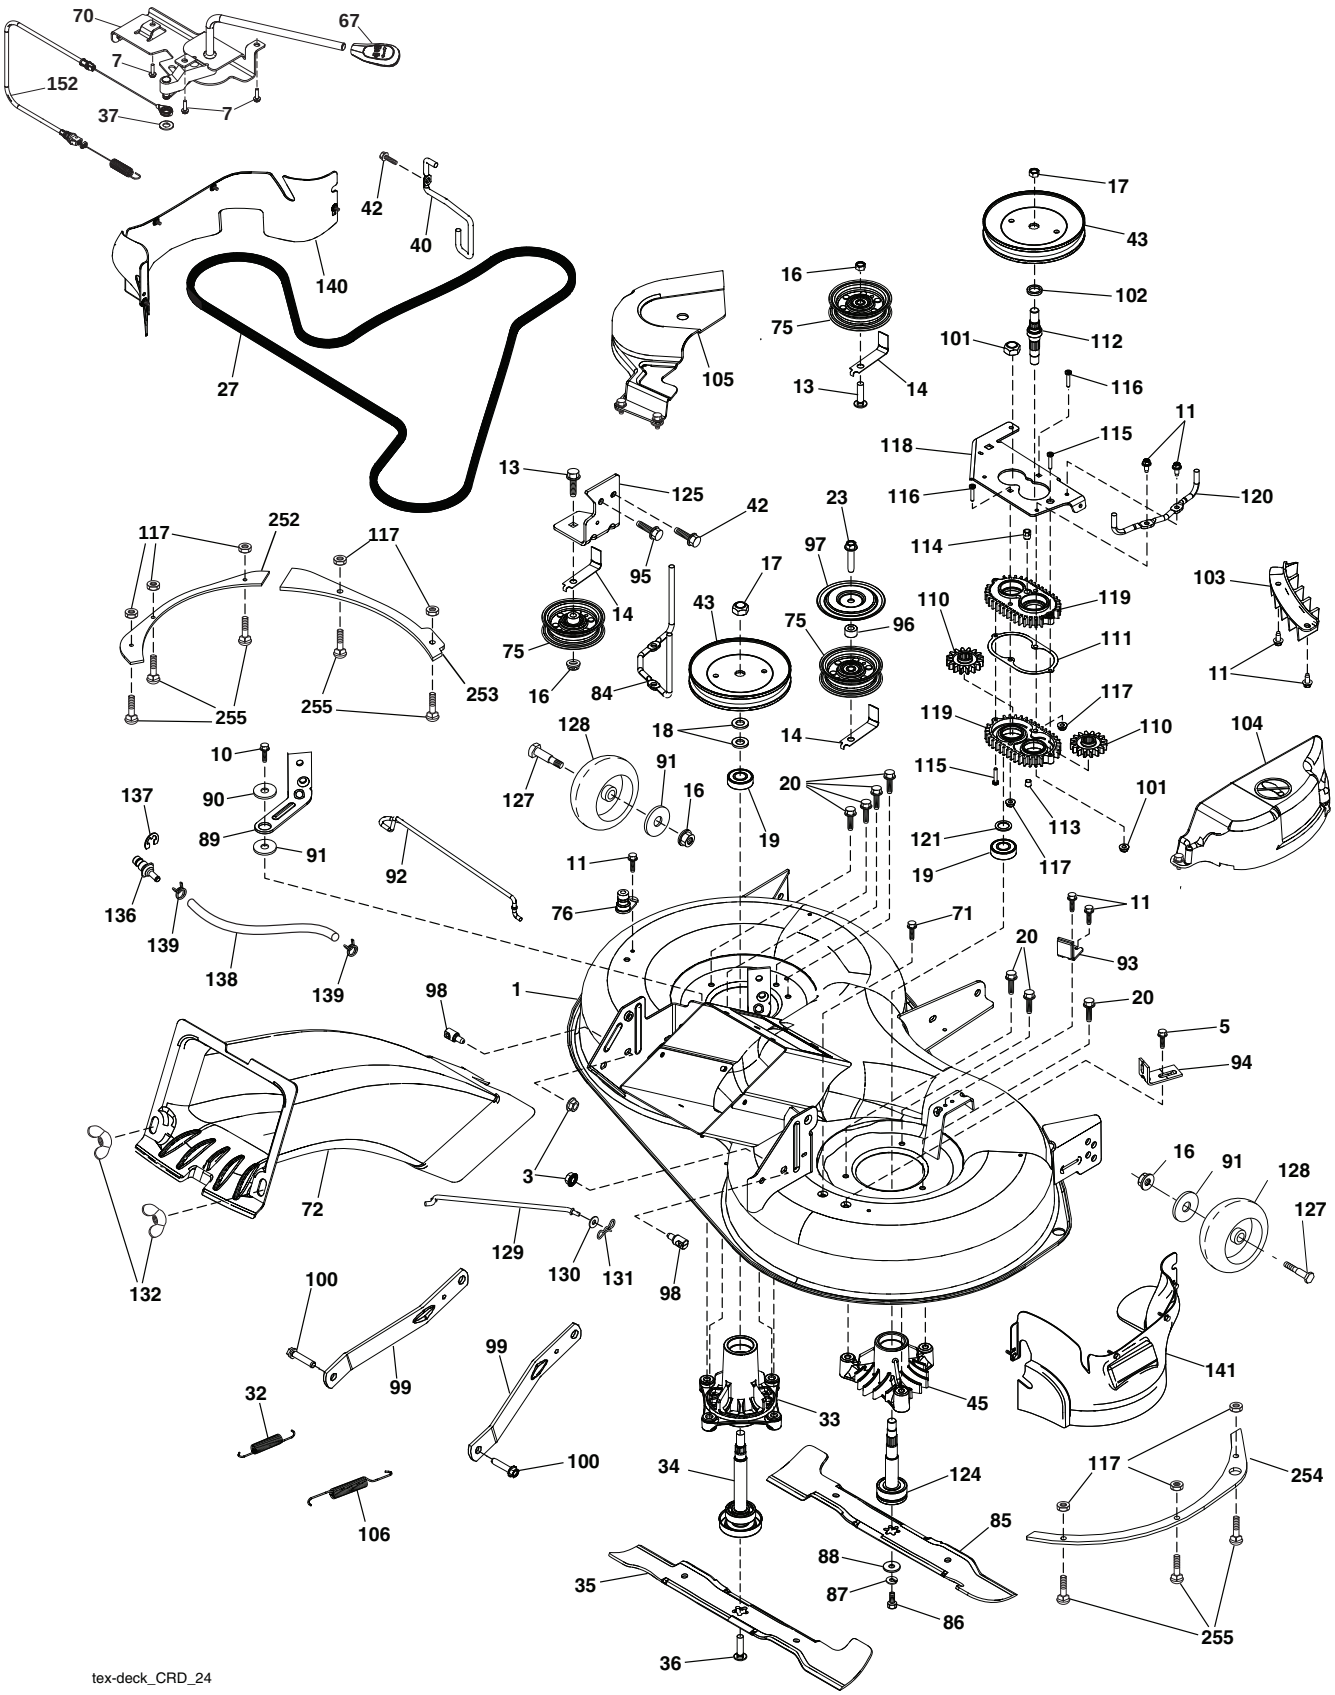


TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26
MOWER DECK 44

KEY NO.	PART NO.	DESCRIPTION
1	532 44 09-71	Deck Weldment
3	873 90 05-00	Nut Lock Hex Flange 5/16 - 18
5	817 00 05-10	Bolt 5/16-18
7	532 41 63-58	Screw #10 x 0.750 BOS Thread
10	817 00 06-16	Screw 3/8-16x1 smgml tap
11	532 13 77-29	Screw Thd Roll 1/4 - 20 X 5/8
13	872 11 06-12	Bolt Carr Sh 3/8 - 16 X 1 - 1/2 Gr. 5
14	532 15 60-85	Keeper Belt Idler
16	873 90 06-00	Nut Lock FlG 3/8 - 16 unc
17	532 40 02-34	Nut Flange Lock Top
18	532 18 76-90	Washer Spacer Mandrel
19	532 11 04-85	Bearing Ball Mandrel
20	532 17 39-84	Screw Thread Roll
23	817 49 06-28	Screw Thdrol 3/8 - 16 X 1-3/4
27	532 43 97-26	V-Belt Drive
32	532 40 18-72	Spring Return Deck
33	532 18 72-81	Housing Mandrel 4pt Service
34	532 19 28-72	Shaft Asm Mndrl N/Greaseable38
35	532 42 79-84	Blade Mower LH
36	532 19 30-03	Bolt/Washer Asm 7/16 - 20 unf
37	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.
40	532 19 72-58	Keeper Belt Engine LH
42	817 00 05-12	Screw 5/16-18 x 3/4
43	532 19 74-73	Pulley Mandrel
45	532 13 71-52	Housing Mandrel
67	532 40 30-12	Handle Clutch Cable
70	532 40 12-46	Clutch Asm Manual LT Pred
71	817 67 06-08	Screw Thdrol 3/8-16 x 1/2
72	532 44 68-10	Chute Upper
75	532 13 14-94	Pulley Idler Flat
76	532 43 96-40	Washout Port
84	532 43 25-20	Keeper Belt LH Mandrel
85	532 42 79-85	Blade Mower RH
86	532 18 17-13	Bolt 3/8-24 x 1.50 Gr. 8
87	810 03 06-00	Washer Lock Hvy 3/8
88	532 14 02-96	Washer Hard Blade Mower Vented
89	532 43 81-24	Arm Brake 97 LH
90	532 19 90-92	Spacer Retainer
91	819 13 20-12	Washer 13/32 x 1-1/4 x 12 Ga.
92	532 43 69-93	Rod Brake
93	532 43 81-25	Arm Brake RH
94	532 19 72-50	Bracket Clutch Cable
95	817 00 06-12	Screw 3/8-16 x 3/4
96	532 40 02-71	Spacer
97	532 18 20-61	Shield Idler Mower
98	532 19 51-61	Stud Fastener
99	532 19 51-86	Arm Suspension Mower Rear
100	532 19 65-39	Bolt Shoulder
101	873 68 09-00	Nut Crownlock 9/16 - 18 unc
102	532 40 25-11	Spacer Bearing Swing Plate
103	532 43 69-92	Guard Front Vent
104	532 44 14-79	Mandrel Cover RH
105	532 44 14-78	Mandrel Cover LH
106	532 19 32-16	Spring Brake Return
110	532 41 53-56	Gear Output
111	532 43 69-79	Gasket Gearcase
112	532 44 38-52	Shaft Gearcase
113	532 43 85-33	Plug Oil
114	532 43 85-34	Valve Relief
115	818 03 10-16	Screw Torx #10-24 x 1
116	872 11 04-14	Bolt 1/4-20 x 1.75 Gr. 5
117	873 90 04-00	Nut Hex Flange 1/4-20 unc
118	532 43 69-89	Arm Clutching
119	532 43 81-66	Gearcase Subasm
120	532 43 69-91	Keeper Belt RH
121	532 43 69-85	Washer
124	532 43 69-86	Non Greasable Mandrel Shaft
125	532 44 04-20	Bracket Idler Chasses
127	532 19 34-06	Bolt Shoulder 3/8-16 x 3-5/8 Gr. 5
128	532 17 48-73	Wheel Guage
129	532 40 48-51	Rod Anti-Sway
130	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.
131	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
132	532 17 88-99	Knob Handle
136	532 43 96-39	Washout Port Remote Hookup
137	812 00 00-29	Ring Klip
138	532 44 07-43	Hose 3/8 Long 12"
139	532 44 07-42	Clamp Hose 3/8
140	532 44 86-32	Guard Asm. LH
141	532 44 85-30	Guard Asm. RH
152	532 44 04-88	Cable Clutch Manual w/Spring
252	581 55 44-02	Plate 97 Left Bolt
253	581 55 45-02	Plate 97 LH Bolt
254	581 55 47-02	Plate 97 RH Side Bolt
255	539 10 98-00	Carriage Bolt
- -	532 19 28-70	Mandrel Assembly (Includes Housing, Shaft Assembly, And Bearing Only - Pulley/Nut/Washer And Blade Bolt/Washers Not Included)
- -	532 44 86-23	Replacement Mower Complete

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

MOWER LIFT 45

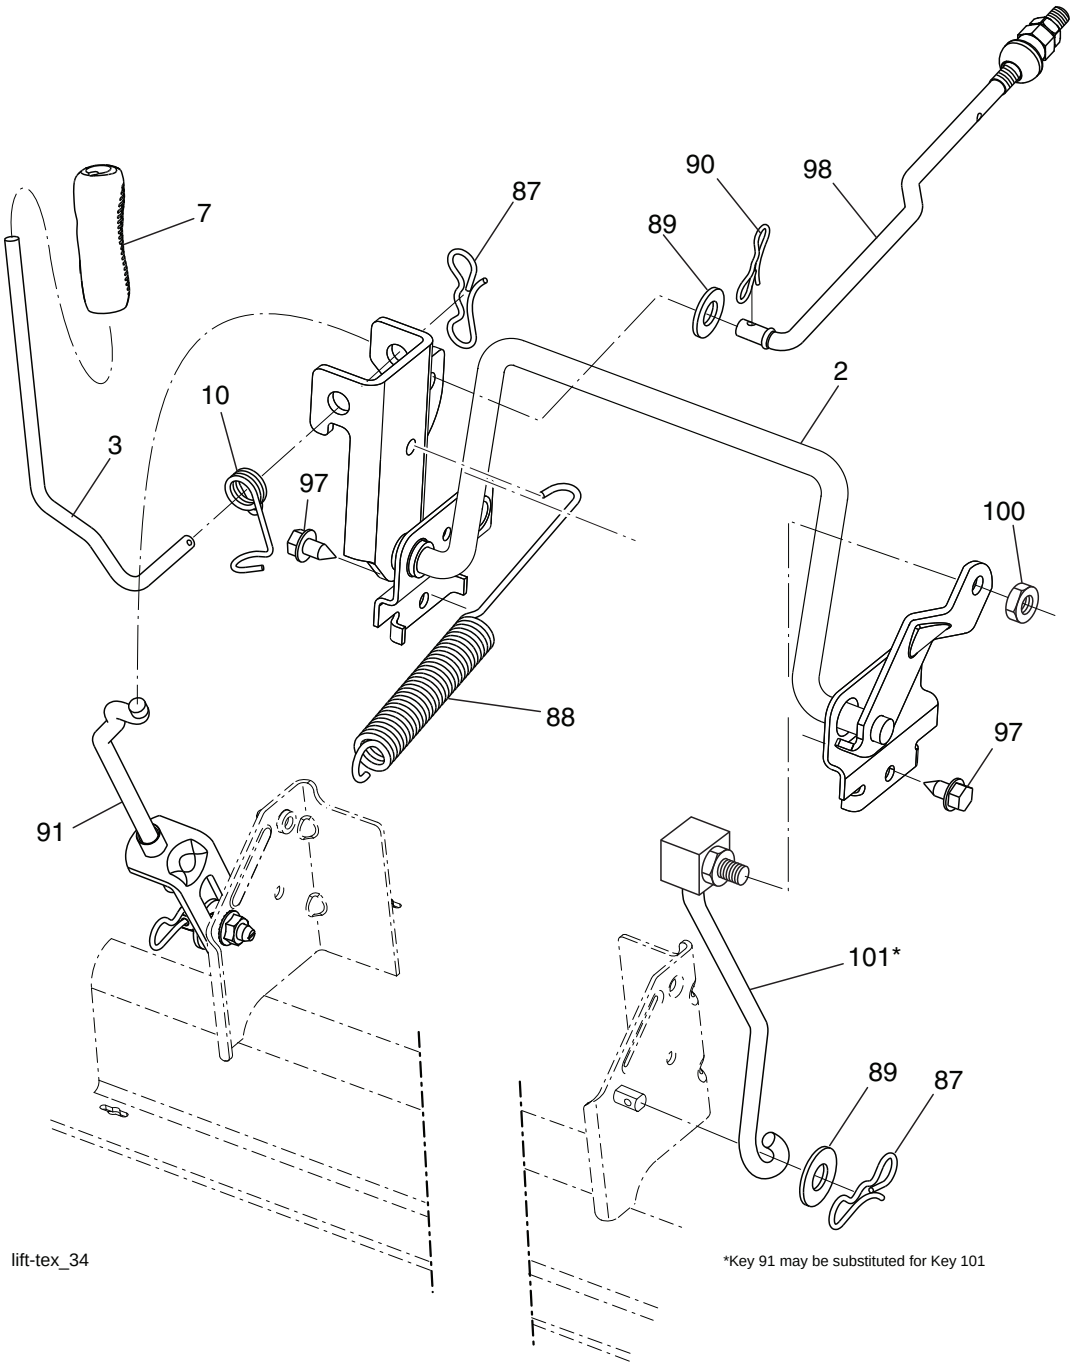


KEY NO.	PART NO.	DESCRIPTION
2	532 43 69-96	Deck Lift Weldment
3	532 19 52-31	Lever Asm., Lift RH
7	532 41 15-55	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 44 54-96	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
91	532 19 51-81	Link Lift Susp. Mower Rear
97	817 49 06-08	Screw 3/8-16 x 1/2
98	532 19 52-70	Link Lift Susp. Front Mower
100	873 93 06-00	Nut Centerlock 3/8-16
101	532 40-70-03	Link Asm. Lift FXD

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

SEAT ASSEMBLY 42

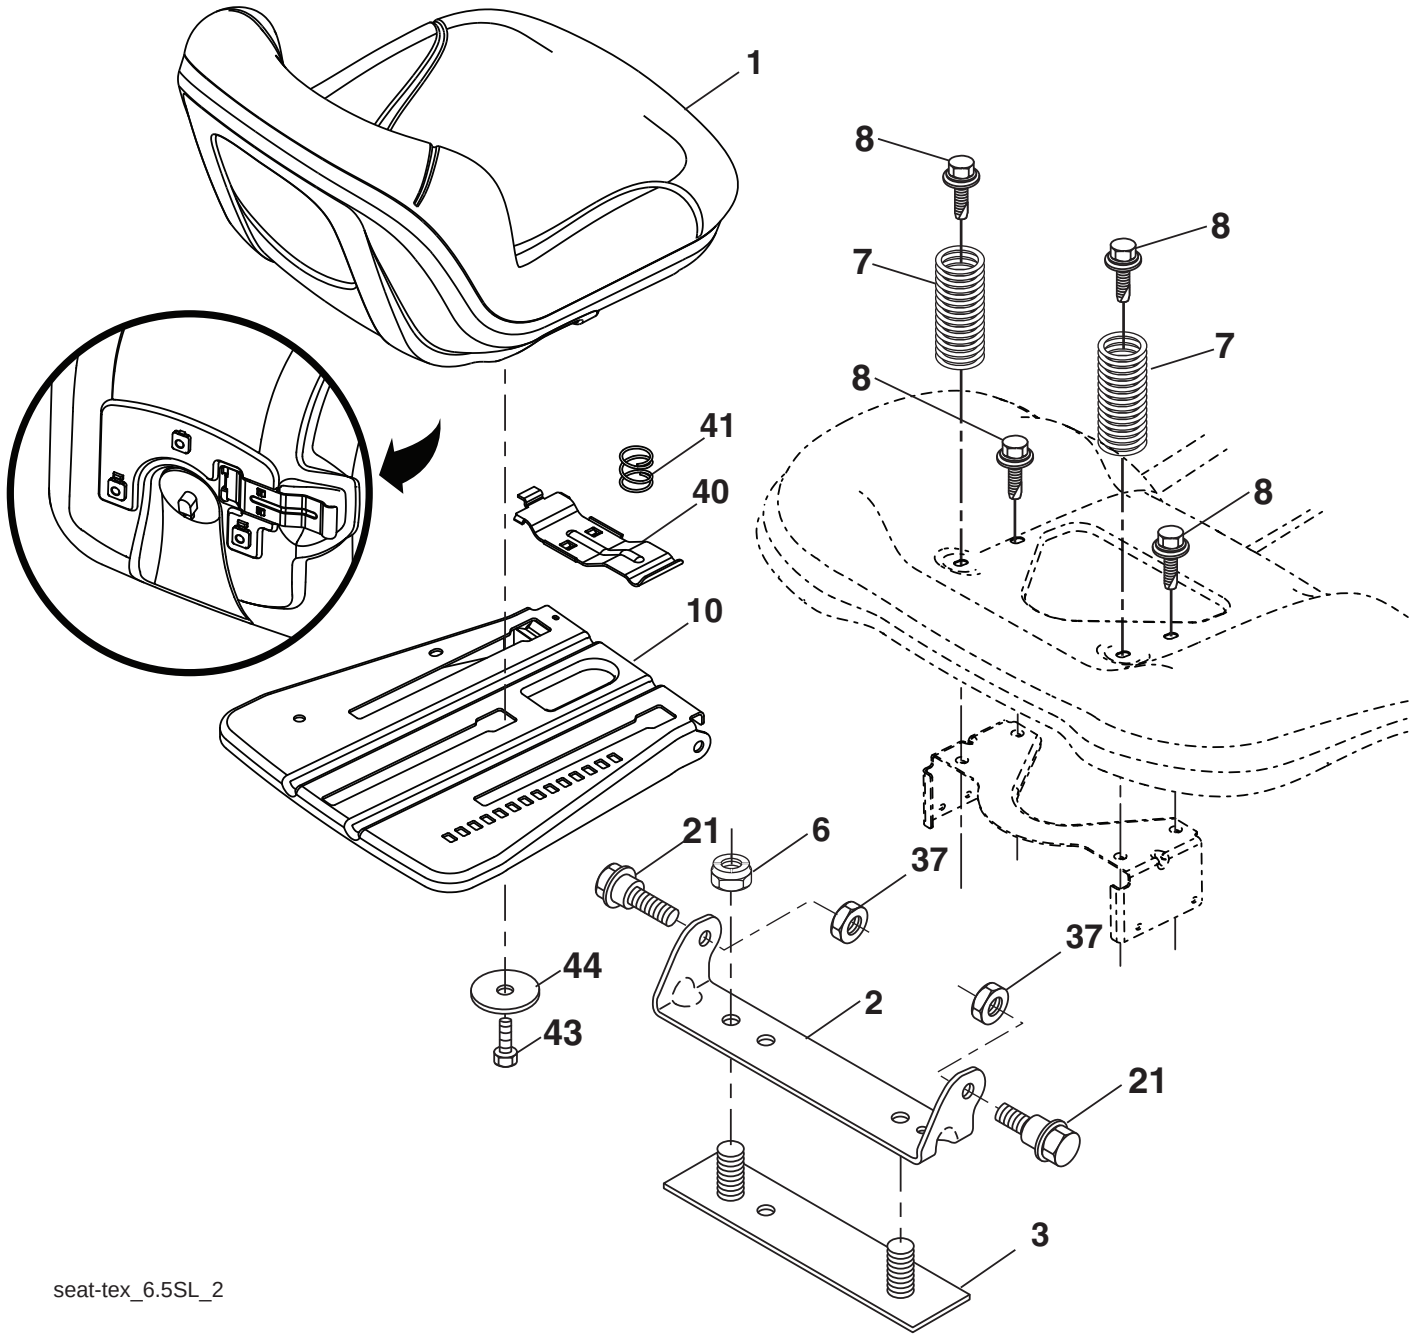


KEY NO.	PART NO.	DESCRIPTION
1	532 43 98-19	Seat
2	532 18 01-66	Bracket Pivot Fender
3	532 14 06-75	Strap, Asm. Fender
6	873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7	532 12 41-81	Spring, Seat Cprsn.
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems.
10	532 19 69-77	Pan, Seat
21	532 17 18-52	Bolt, Shoulder 5/16-18

KEY NO.	PART NO.	DESCRIPTION
37	873 80 05-00	Nut, Lock 5/16-18 unc
40	532 19 76-61	Handle
41	532 19 82-00	Spring
43	874 76 06-12	Bolt 3/8-16 unc x 3/4
44	819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CT154 (96051002600), PRODUCT NO. 960 51 00-26

BAGGER 46

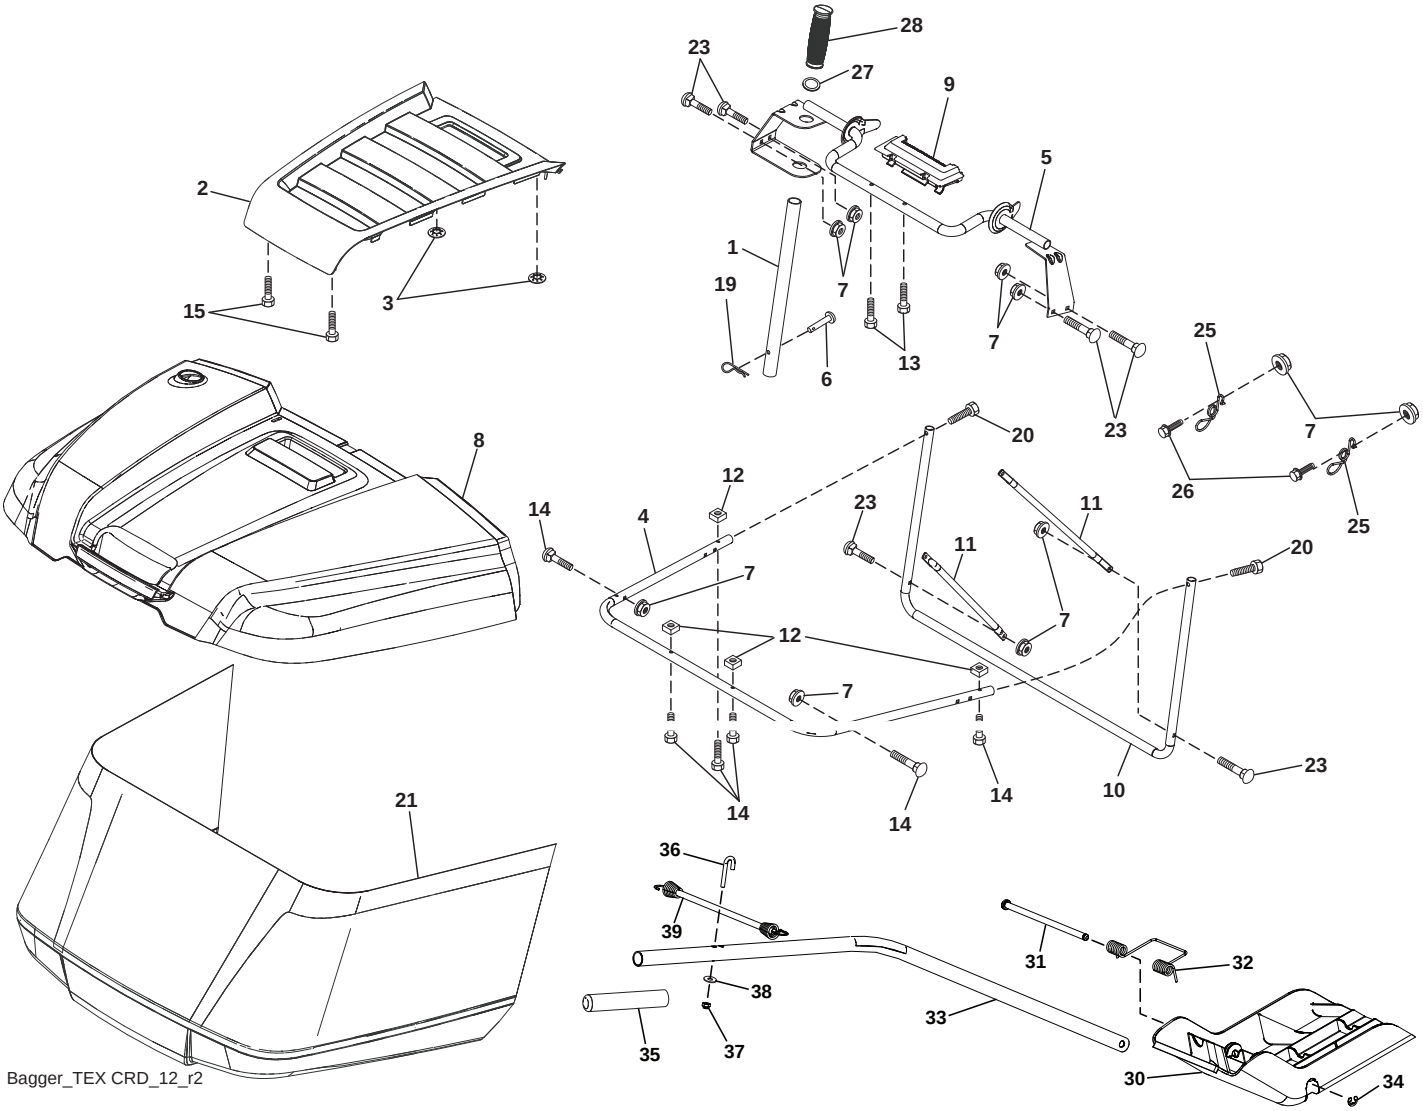

Bagger_TEX CRD_12_r2

BAGGER 46

KEY NO.	PART NO.	DESCRIPTION
1	532 42 86-10	Tube Handle Bagger
2	532 44 13-58	Applique
3	532 41 38-08	Nut Push .156
4	532 43 96-12	Frame Asm Bagger Top
5	532 41 76-32	Frame Asm Top Bagger
6	532 12 68-75	Rivet Drilled
7	873 90 04-00	Nut Hex Flange 1/4-20 unc
8	532 44 12-61	Cover Bagger
9	532 41 76-29	Insert Handle Bagger
10	532 43 67-70	Frame Front
11	532 43 67-71	Tubing Brace Bagger
12	532 42 17-93	Nut Square 1/4
13	532 42 17-80	Screw 1/4 x 1.150
14	532 42 18-00	Bolt Shoulder 1/2 x 1.150
15	532 42 18-01	Screw #8 Dlat Head Drill Tip
19	532 19 42-08	Cotter Pin 5/16 Bow Tie
20	585 36 88-01	Screw Hex Cap 1/4-20 x 1.375
21	532 44 83-06	Bag Asm
23	872 04 04-10	Bolt Carr. 1/4-20
25	532 42 16-14	Spring Latch Bagger
26	817 49 04-12	Screw 1/4-20 x 3/4
27	532 42 12-62	Grommet Rubber
28	532 16 57-87	Grip Handle Black
30	532 43 74-52	Plug
31	532 43 58-61	Pin Hinge
32	532 43 74-54	Spring Double Torsion
33	532 43 84-51	Shaft Mulch Plug
34	532 43 79-88	E-Ring 5/16
35	532 43 91-39	Grip Mulch Plug
36	532 43 90-98	Bolt J
37	532 06 91-80	Nut Lock #10-24 unc
38	819 07 08-18	Washer 7/32 x 1/2
39	532 43 92-42	Bungee

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm