
ILLUSTRATED PARTS LIST


MODEL NO. 96051000200
CUSTOMER CATALOG NO. CTH173
PRODUCT NO. 960 51 00-02

47

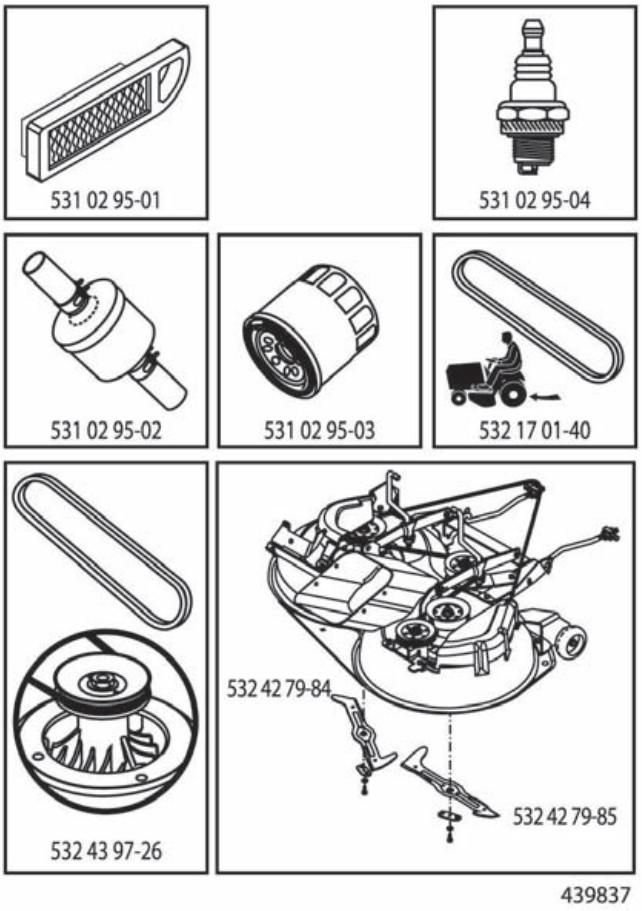


TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

DECALS 27

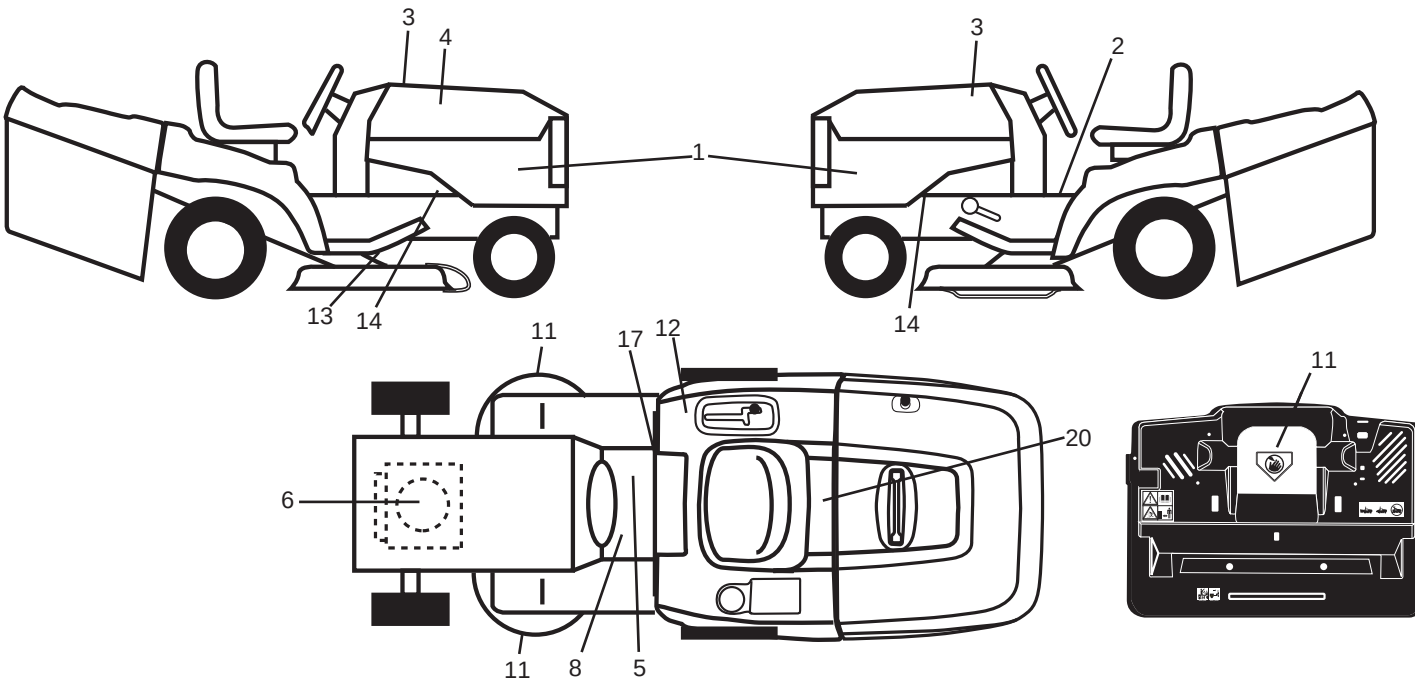

KEY NO.	PART NO.	DESCRIPTION
1	532 43 99-55	Decal Side Panel
2	532 40 03-89	Decal Warning Symbols CE
3	581 62 73-01	Emblem
4	532 43 98-37	Decal Replacement
5	532 17 83-02	Decal Cruise
6	532 19 68-41	Decal Warning Engine Symbols
8	532 15 97-37	Decal Brake/Clutch Symbol
11	532 18 21-66	Decal Mower Cut Finger Symbol
12	532 18 04-32	Decal Fender 100 DB/CE
13	532 44 11-89	Decal Belt Schematic
14	532 15 97-36	Decal Chassis Hot Muffler
17	532 14 08-37	Decal Saddle Brake Parking
20	532 44 09-01	Decal Bypass Fender
- -	532 44 32-61	Decal Inst. Mulch Plug
- -	532 44 27-44	Decal Battery Door
- -	532 44 14-09	Pad Footrest LH
- -	532 44 14-10	Pad Footrest RH
- -	532 44 03-17	Manual Operator's (Euro)
- -	532 44 03-18	Manual Operator's (Scan)
- -	532 44 03-19	Manual Operator's (E-Bloc)
- -	532 44 03-21	Manual Operator's (Baltic)

WHEELS & TIRES

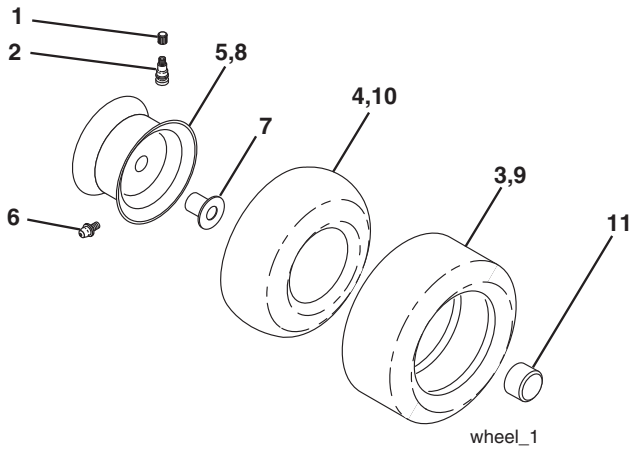


KEY NO.	PART NO.	DESCRIPTION
1	532 05 91-92	Cap Valve Tire
2	532 06 51-39	Stem Valve
3	532 10 62-22	Tire F Ts 15 x 6 0 - 6 Service
4	532 05 99-04	Tube Inner Front #35060
5	532 13 83-36	Rim Asm 6" Front Service
6	532 12 49-57	Fitting Grease
7	532 12 49-59	Bearing Flange
8	532 13 83-37	Rim Asm 8" Rear Service
9	532 42 05-31	Tire R Ts 20 x 10- 8 Service
10	532 12 49-26	Tube Rear 9 5 x 8 Service
11	532 17 50-39	Cap Axle Blk 1 50 x 1 00
- -	532 14 43-34	Sealant, Tire (10 oz. tube)

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

SCHEMATIC 38


SCH10

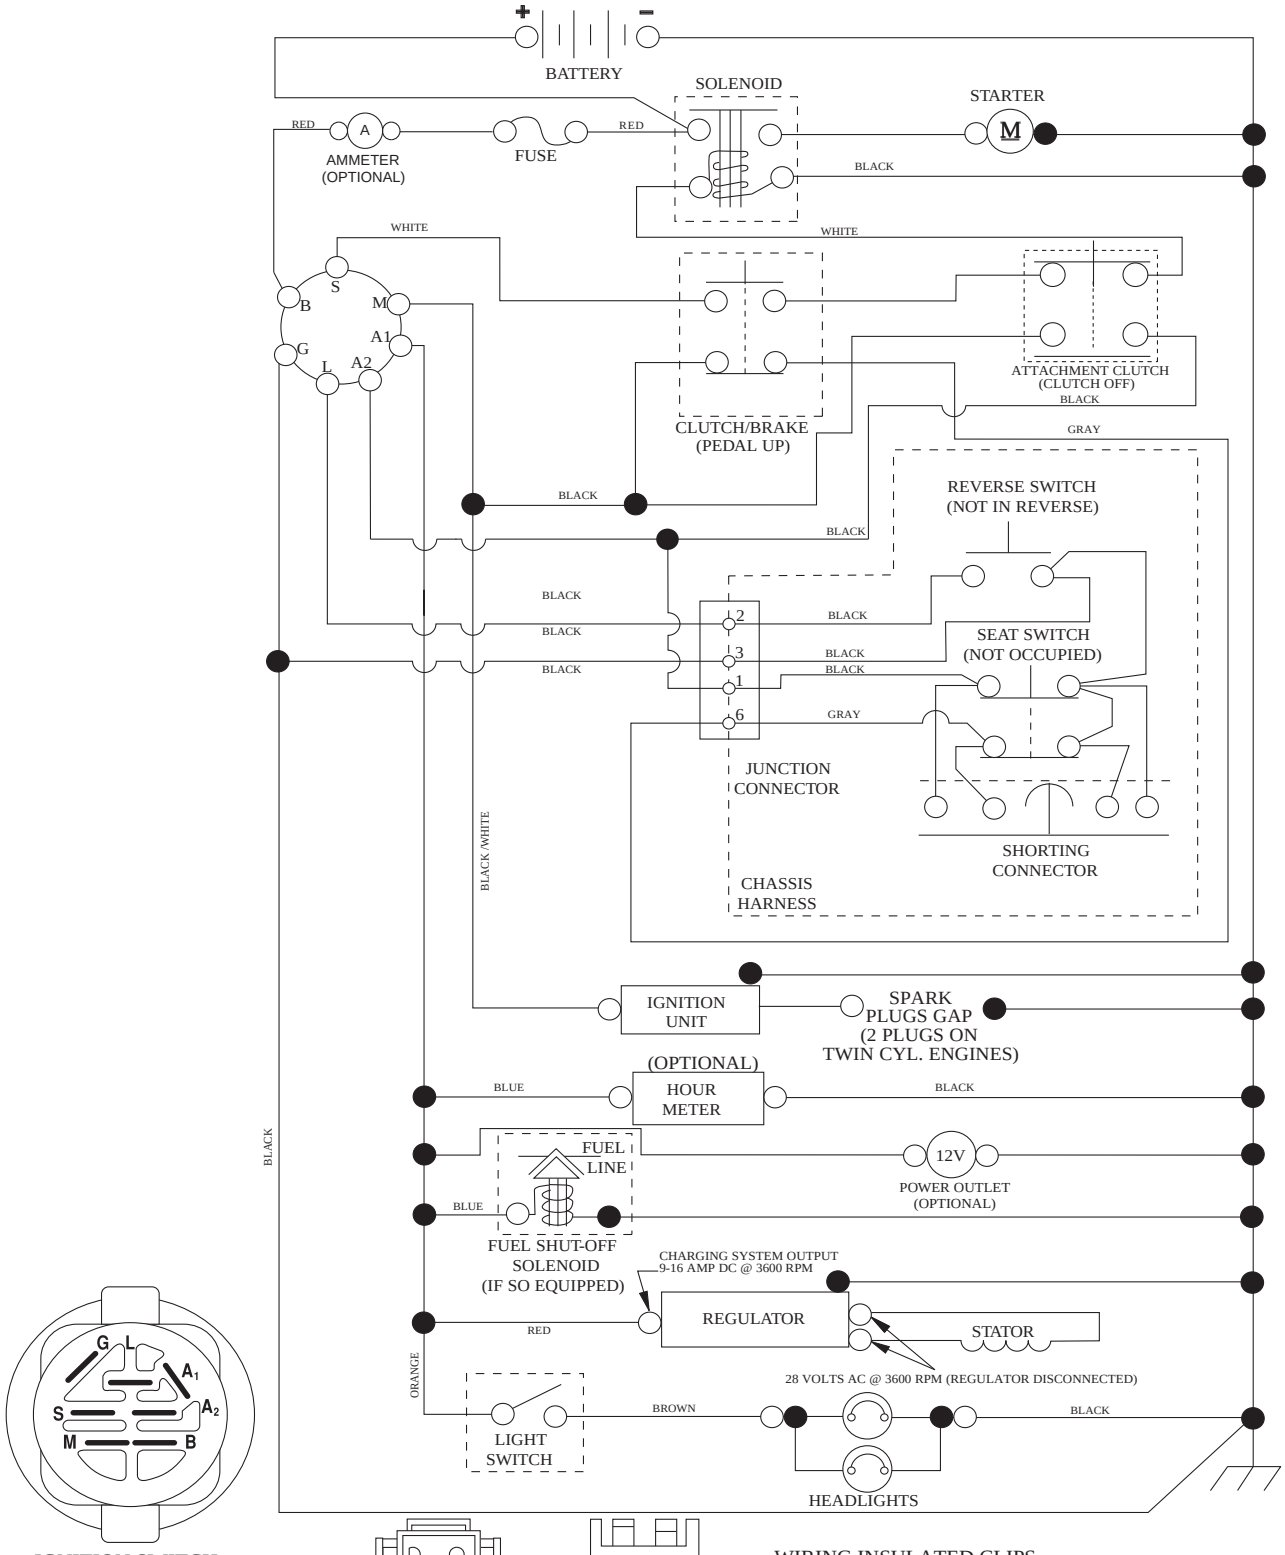


IGNITION SWITCH

POSITION	CIRCUIT "MAKE"
OFF	M+G+A1
RUN/OVERRIDE	B+A1
RUN	B+A1 L+A2
START	B + S + A1

03107

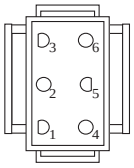

CHASSIS HARNESS CONNECTOR (MATING SIDE)



DASH HARNESS CONNECTOR (MATING SIDE)

WIRING INSULATED CLIPS


NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

ELECTRICAL 32

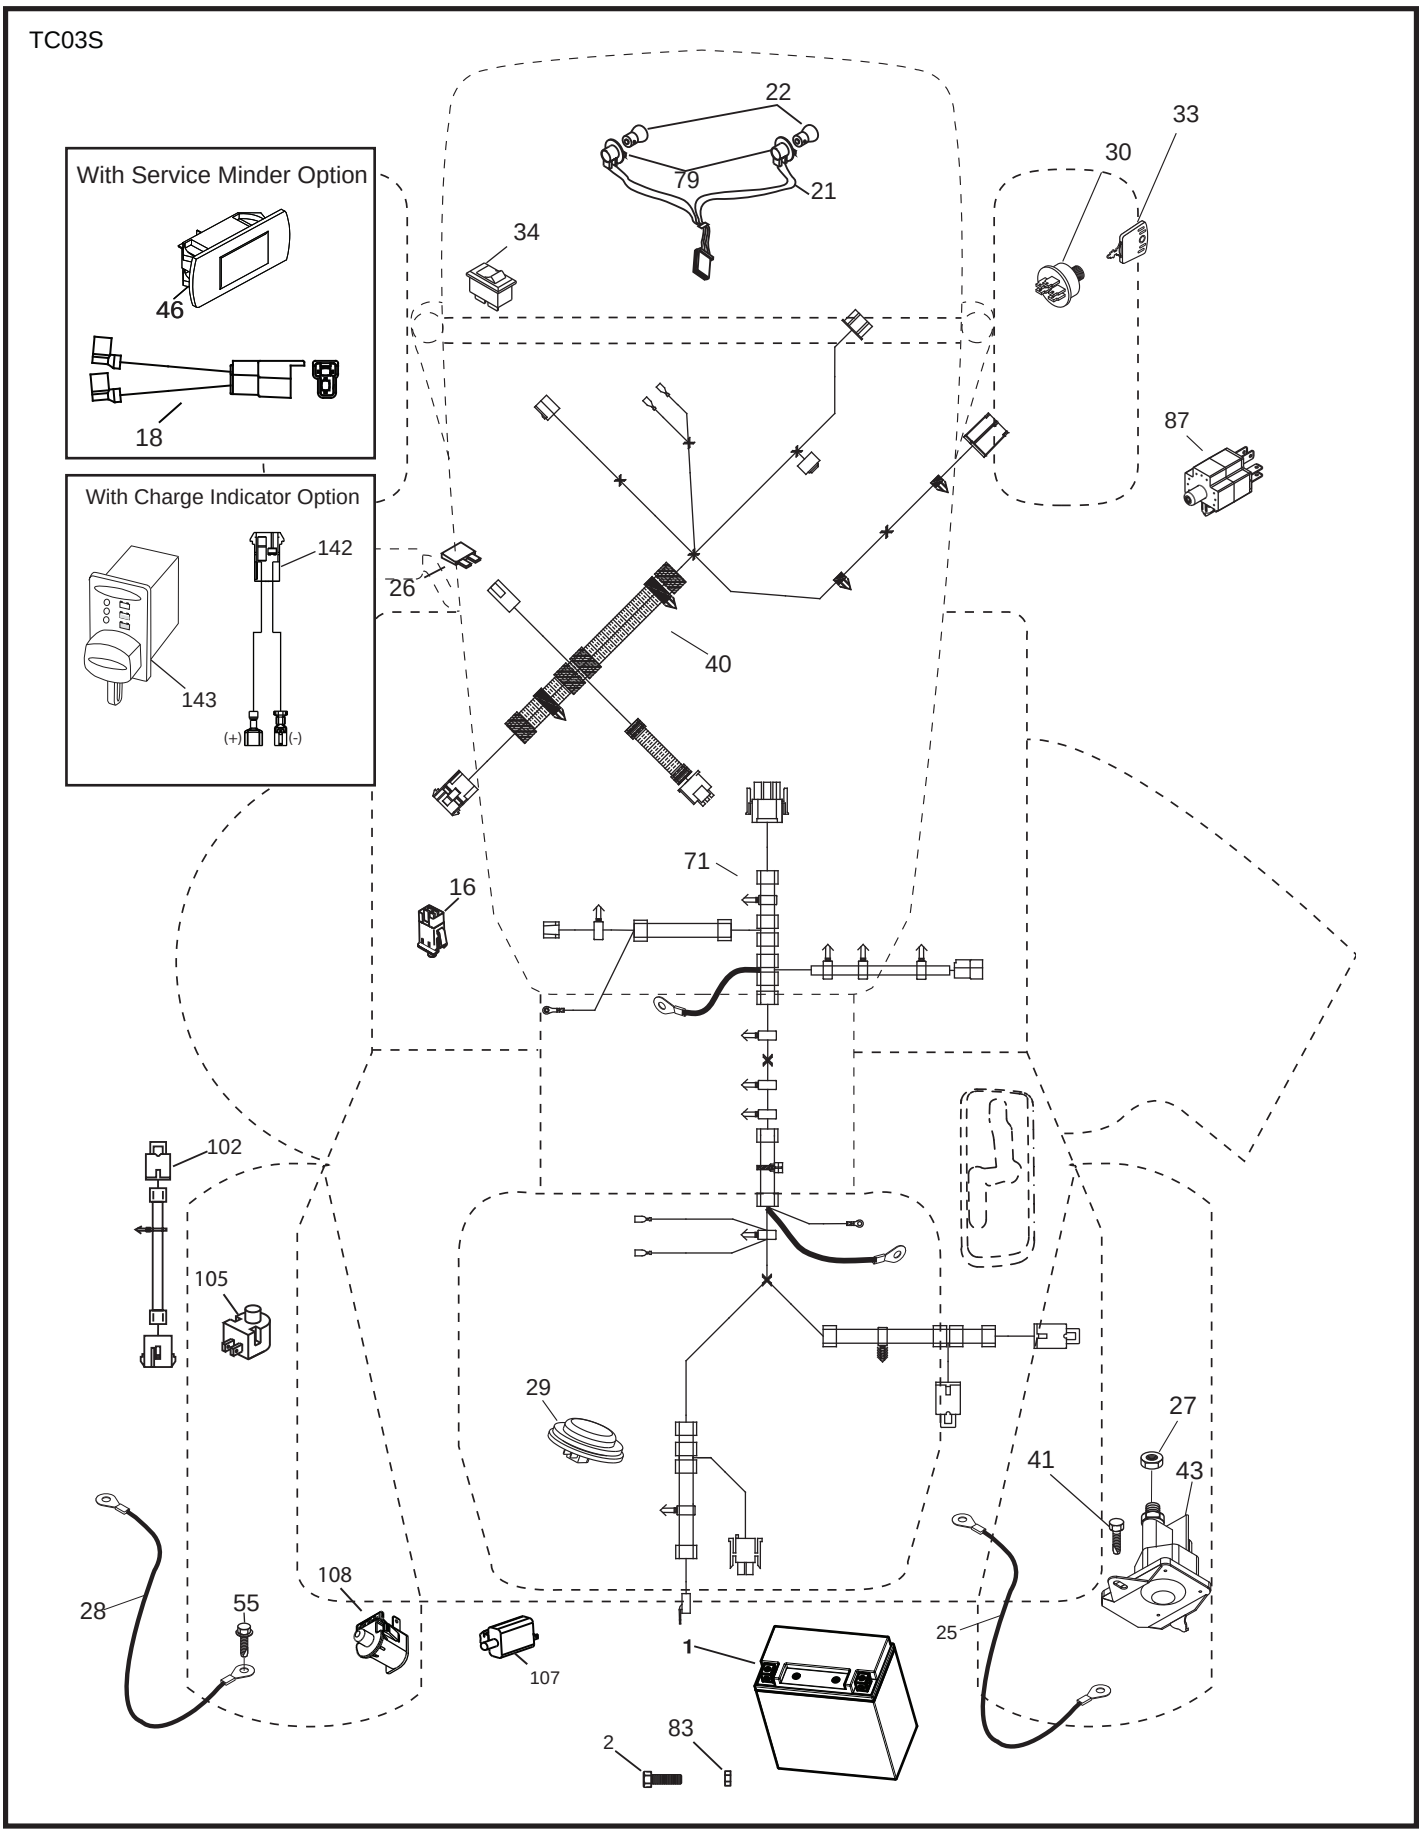


KEY NO.	PART NO.	DESCRIPTION
1	532 43 71-57	Battery
2	532 44 09-23	Screw M6 x 1.12mm
16	532 17 61-38	Switch Interlock Push-In
21	532 40 02-52	Harness Socket Light w/4152J
22	532 00 41-52	Bulb Light
25	532 43 71-62	Cable Starter
26	532 17 51-58	Fuse
27	873 51 04-00	Nut Keps Hex 1/4-20 unc
28	532 43 71-63	Cable, Ground
29	532 40 15-45	Switch, Seat
30	532 19 33-50	Switch, Ign
33	532 41 19-35	Key/Chain
34	532 11 07-12	Switch Light/Reset
40	532 42 10-02	Harness Ign. Dash
42	532 13 15-63	Cover, Terminal
43	532 19 25-07	Solenoid
55	817 06 05-12	Screw Thdrol 5/16-18 x 3/4 TYTT
71	532 44 08-19	Harness Ign.
79	532 17 52-42	Socket Asm
83	532 43 67-74	Nut Square M6 x 1 x 8.5 x 11mm
87	532 42 10-60	Switch Interlock Clutch Cbl
99	817 72 04-08	Screw Thd Cut 1/4-20 x 1/2
102	532 40 44-54	Harness Pigtail Reverse Switch
105	532 40 75-68	Switch Reverse
107	532 18 03-79	Switch Full Bagger
108	532 42 10-62	Switch Snapmount

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

CHASSIS 27

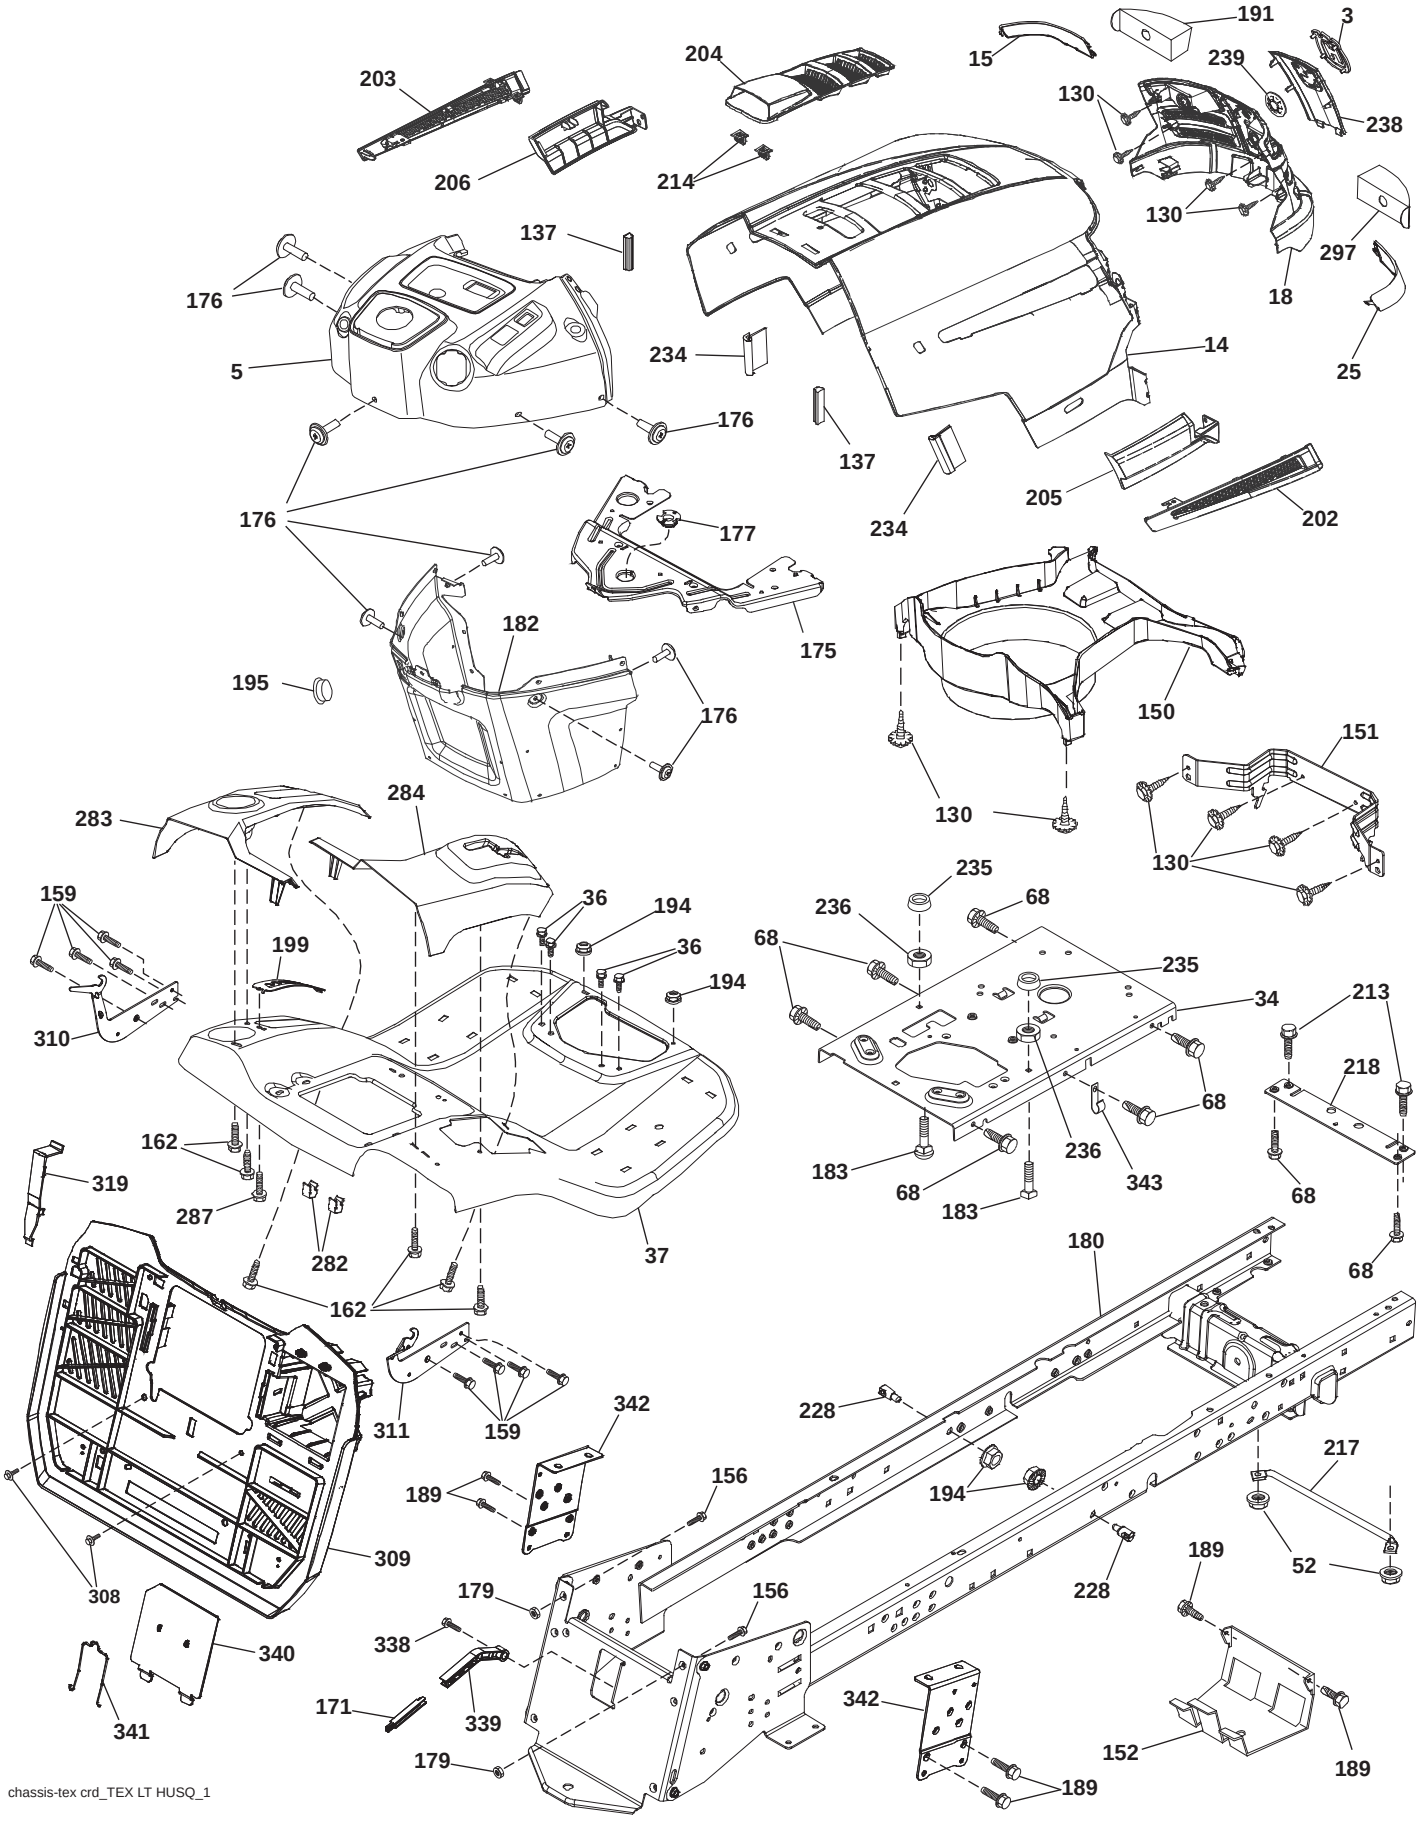


TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02
CHASSIS 27

KEY NO.	PART NO.	DESCRIPTION
3	532 40 50-12	Logo
5	532 43 89-64	Dash
14	532 44 12-67	Hood
15	532 44 14-28	Lens LH
18	532 44 13-68	Grille
25	532 44 14-27	Lens RH
34	532 44 72-53	Plate Engine
36	817 06 05-12	Screw 5/16-18 x 3/4
37	532 44 14-19	Fender
52	873 68 05-00	Nut Crownlock 5/16-18
68	817 49 05-08	Screw Thdrol. 5/16-18 x 1/2
130	532 41 63-58	Screw #10 x .750 BOS Thread
137	532 40 75-90	Bumper Dash
150	532 40 75-37	Air Duct
151	532 40 78-07	Bracket Pivot
152	532 19 95-35	Shield Browning
156	872 14 06-14	Bolt 3/4-16 unc x 1-3/4
159	817 00 06-12	Screw 3/8-16 x 3/4
162	532 14 24-32	Screw Hex Wsh. Hi-Lo 1/4 x 1/2 unc
171	532 44 12-89	Extension Bagger Full
175	532 19 94-72	Crossmember
176	532 40 07-76	Screw 10-24 x 5/8
177	532 19 52-28	Bushing Steering
179	532 16 89-37	Nut Push
180	532 43 54-72	Chassis
182	532 40 71-76	Dash Lower
183	874 52 05-20	Bolt 5/16-18 x 1-1/4
189	817 00 05-12	Screw 5/16-18 x 3/4
191	532 41 65-01	Insert Reflective RH
194	873 90 05-00	Nut Lock Hex Flange 5/16-18
195	532 43 99-76	Plug Dash
199	532 41 87-39	Plate Deck Lift
202	532 44 13-42	Vent Side Hood RH
203	532 44 13-43	Vent Side Hood LH
204	532 44 13-75	Vent Top Hood
205	532 44 13-44	Skirt Side RH
206	532 44 13-45	Skirt Side LH
213	874 76 05-12	Bolt Hex HD 5/16-18 unc 3/4
214	532 19 91-45	Clip Retainer
217	532 40 91-67	Rod Pivot Hood
218	532 19 63-95	X-Piece Hood Stop
228	532 19 51-61	Stud Fastener
234	532 40 47-42	Bumper Hood
235	532 40 61-29	Spacer Fender
236	873 93 05 00	Nut Center Lock 5/16-18 unc
238	532 44 13-74	Trim
239	532 40 48-83	Clip Tinnerman
282	532 41 41-10	Clip Retainer
283	532 44 05-31	Console Deck Lift
284	532 44 05-30	Console Shift RH
287	817 60 04-06	Screw Hex Washead. 1/4-20 x 3/8
297	532 40 66-65	Insert Reflective LH
308	532 17 18-77	Bolt 5/16-18 unc x 3/4
309	532 43 66-26	Backplate
310	532 44 66-36	Bracket Hangbar Bag LH
311	532 44 66-37	Bracket Hangbar Bag RH
319	532 17 46-62	Bracket Actuator Bagger
338	532 43 66-40	Bolt Shoulder
339	532 44 12-88	Lever Bagger Full
340	532 44 09-31	Door Battery Tray
341	532 43 66-38	Latch Batter Tray
342	532 43 59-38	Support Fender
343	532 44 07-49	Clip

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

DRIVE 40

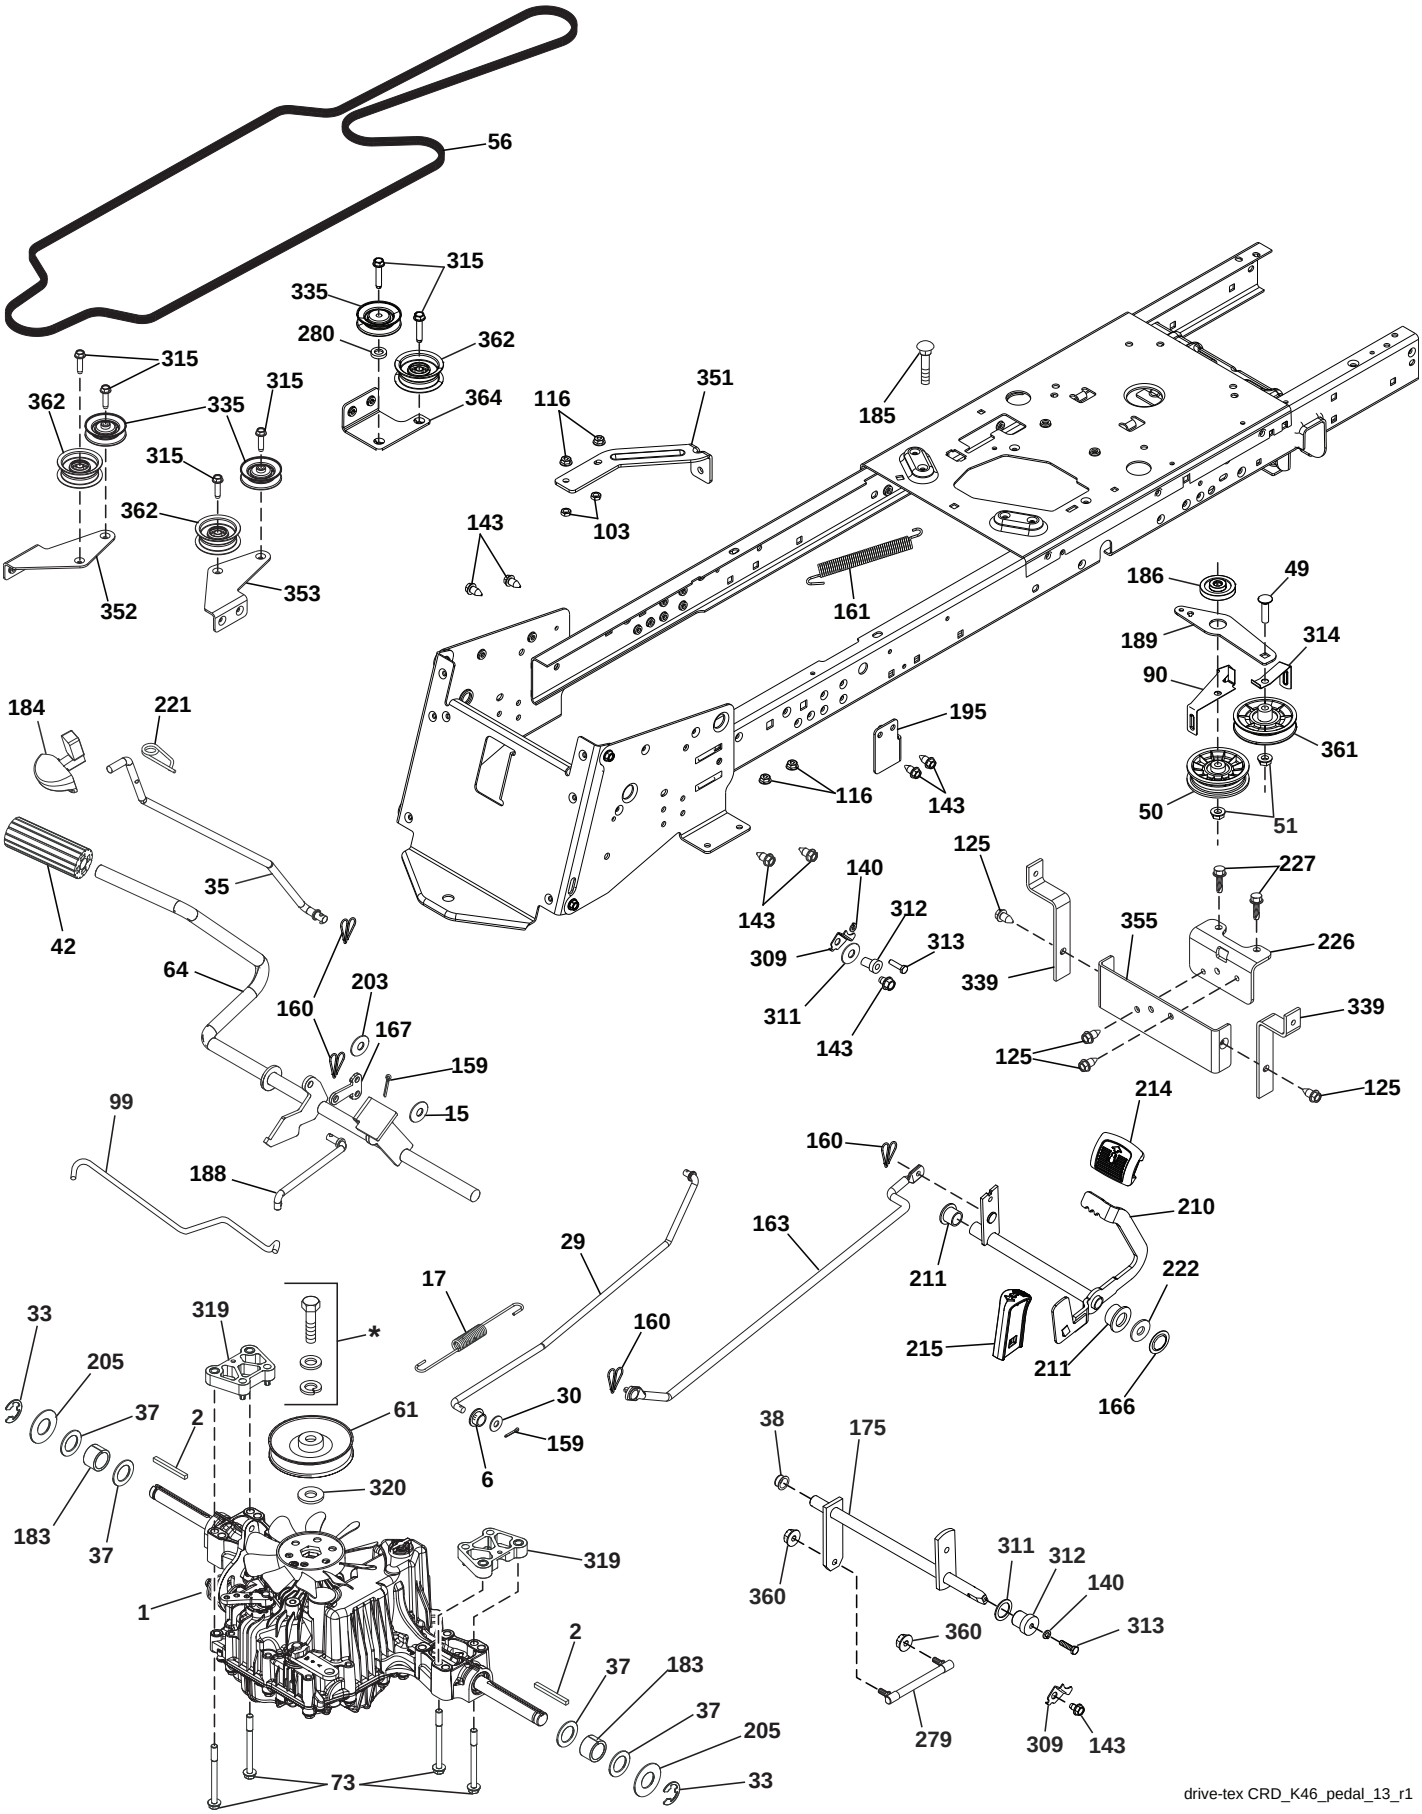

drive-tex CRD_K46_pedal_13_r1

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02
DRIVE 40


KEY NO.	PART NO.	DESCRIPTION
1	– – – – – –	Transaxle, TUFFTORQ K46 DF (446488) (Order parts from transaxle manufacturer.)
2	532 12 35-83	Key Square
6	532 12 40-28	Bushing Snap
15	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.
17	532 43 62-27	Spring, Brake
29	532 43 58-81	Rod, Brake
30	819 13 16-16	Washer 13/32 x 1 x 16 Ga.
33	812 00 00-01	Ring E
35	532 40 10-31	Rod, Brake, Park
37	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
38	532 16 96-13	Nylon Snap In
42	532 12 48-72	Cover, Foot Pedal
49	872 11 06-14	Bolt 3/8-16 unc 1-3/4 Gr. 5
50	532 19 43-27	Idler Flat
51	873 90 06-00	Lock Nut 3/8-16
56	532 44 18-34	V-Belt, Drive
61	532 43 77-88	Pulley Transaxle
64	532 19 78-65	Shaft Asm. Pedal Brake Control
73	874 49 05-56	Bolt Hex 5/16-18 x 3.75
90	532 44 36-05	Keeper Belt Clutching
99	532 44 39-47	Rod Bypass
103	873 35 05-00	Nut 5/16-18 unc
116	873 90 05-00	Nut Lock Hex Flange 5/16-18
125	817 00 05-12	Screw 5/16-18 x 3/4
140	810 04 04-00	Washer Lock Hvy. Helical 1/4
143	817 49 05-08	Screw Thdrol 5/16-18 x 1/2 TYTT
159	876 02 04-12	Pin Cotter 1/8 x 3/4
160	532 16 94-84	Retainer Clip
161	532 10 57-09	Spring, Return, Clutch
163	532 43 66-32	Rod Control
166	532 42 91-64	Nut Push .625
167	532 40 52-57	Latch Brake Parking
175	532 42 93-59	Shaft Asm. Cross Shift
183	532 13 70-57	Spacer Axle
184	532 44 14-07	Handle Park Brk.
185	872 11 06-22	Bolt 3/8-16 unc x 2-3/4 Gr. 5
186	532 19 43-21	Spacer Retainer
188	532 19 43-23	Link Clutch Ground Drive
189	532 43 36-11	Bellcrank Ground Drive
195	532 43 58-65	Bracket Brake Rod
203	819 11 11-16	Washer 11/32 x 11/16 x 16 Ga.
205	532 12 17-48	Washer 25/32 x 1-5/8 16 Ga.
210	532 40 09-80	Rocker Asm. Pedal
214	532 42 12-63	Pedal Forward
215	532 41 94-82	Pad Pedal Reverse
211	532 12 01-83	Bearing Nylon
221	532 40 31-87	Retainer Spring
222	879 21 20-10	Washer Flat
226	532 40 15-64	Bracket Mount Torque
227	817 49 05-12	Screw
279	532 44 42-83	Sub Asm. Link
280	819 11 10-12	Washer 11/32 x 5/8 x 12 Ga.
309	532 16 55-81	Plate Fstnr.
311	532 16 98-45	Washer Nylon
312	532 16 56-14	Hub Tapered
313	874 78 04-16	Bolt Hex Fin 1/4-20 unc x 1.GD5
314	532 44 47-13	Retainer, Belt
315	817 58 05-20	Screw Thdrol 5/16-18 x 4.25
319	532 43 67-94	Spacer Transaxle Tex CRD
320	532 18 76-90	Washer Spacer
335	532 19 95-34	Pulley V Idler Ground Drive
339	532 43 68-67	Strap Torue K46 CRD Tex
351	532 43 69-98	Bracket Deck Sway
352	532 43 58-19	Bracket Idler
353	532 43 65-77	Bracket Idler RH
355	532 43 56-69	Bracket
360	532 44 47-14	Nut 5/16 - 24
361	532 19 43-26	Idler V-Groove
362	532 43 68-12	Idler Flat
364	532 44 30-32	Bracket Idler

* Parts supplied by manufacturer

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

ENGINE 24

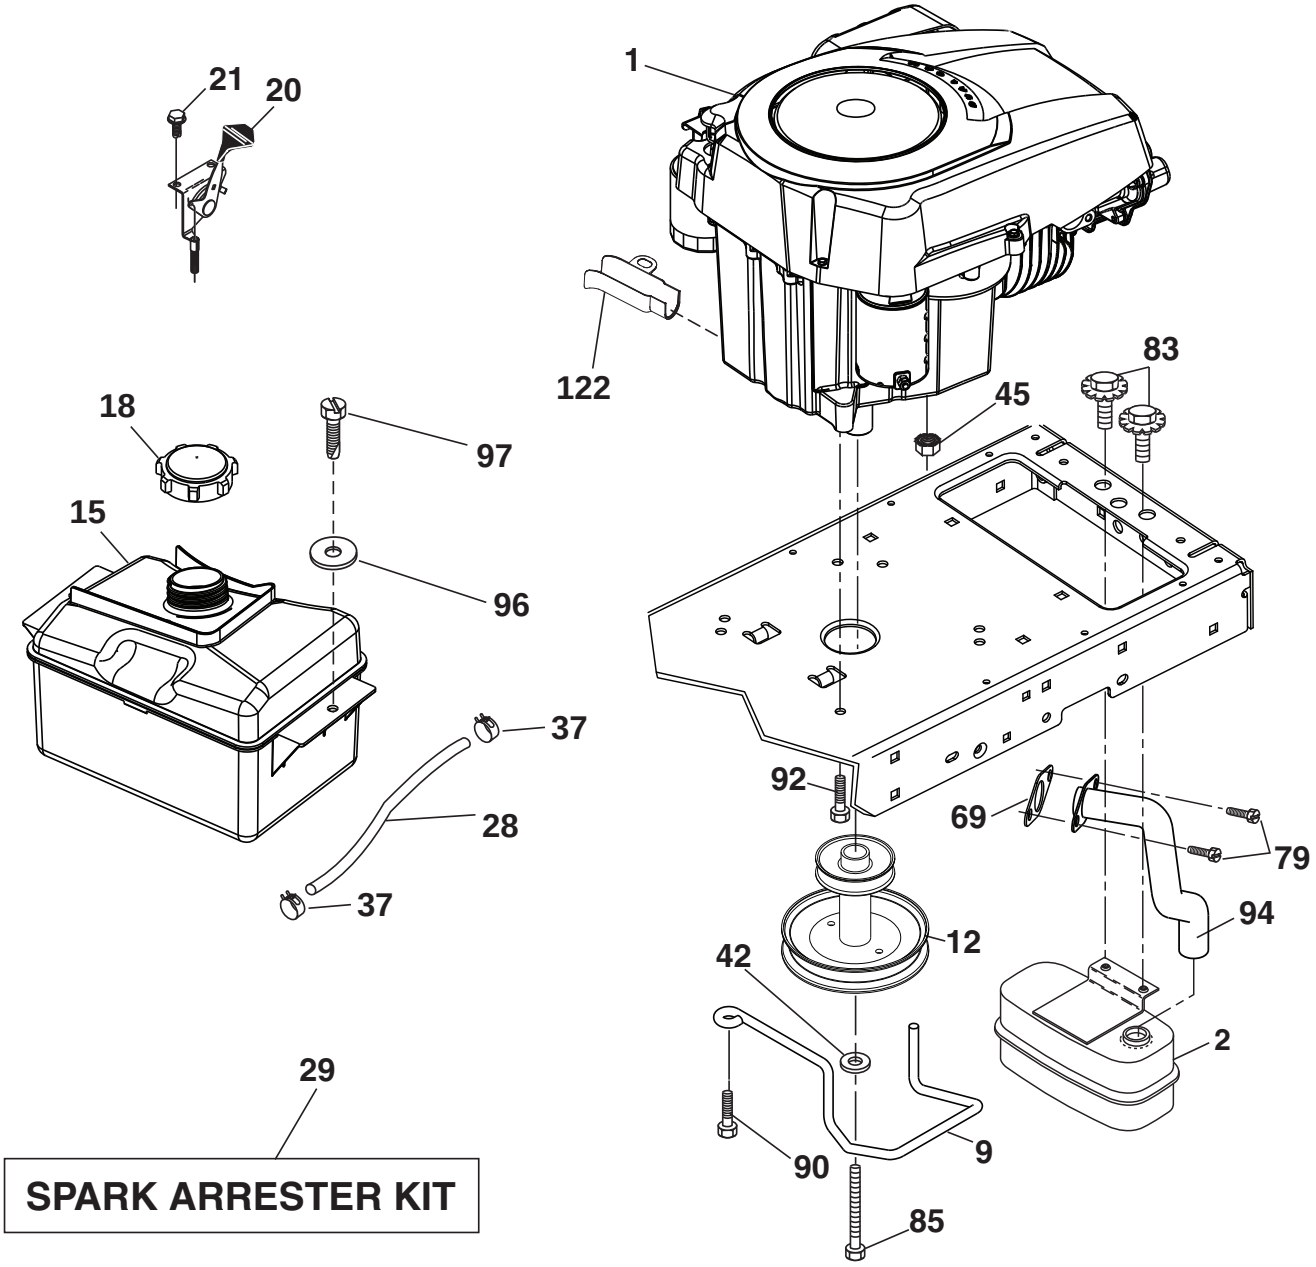

engine-tex_kohl_23_r2


ENGINE 24

KEY NO.	PART NO.	DESCRIPTION
1	– – – – – –	Engine Kohler Model No. SV530-0212 (422743) (Order parts from engine manufacturer.)
2	532 18 86-55	Muffler
9	532 19 43-20	Keeper Belt Engine
12	532 40 54-71	Pulley Engine
15	532 40 75-45	Tank Fuel 1.5
18	532 43 02-20	Cap Fuel
20	532 18 38-97	Control Throttle
21	532 41 63-58	Screw #10 x 0.75 BOS Thread
28	532 13 70-40	Fuel Line
29	532 13 71-80	Spark Arrester Kit
37	532 12 34-87	Clamp Hose
42	810 04 07-00	Washer
45	873 51 04-00	Nut Keps Hex 1/4-20 unc
69	532 18 59-09	Gasket (Order From Eng. Mfgr.)
79	532 19 23-34	Screw Socket 5/16-18 x .75
83	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
85	532 17 39-37	Bolt Hex 7/16-20 x 4 Gr. 5
90	817 00 06-16	Screw 3/8-16 x 1
92	817 12 06-16	Screw 3/8-16 x 1
94	532 18 86-54	Tube Exhaust
96	819 09 14-16	Washer 9/32 x 7/8 x 16 Ga.
97	817 67 04-12	Screw 1/4-20 x 3/4
122	532 42 19-22	Extension Oil Drain

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

STEERING ASSEMBLY 41

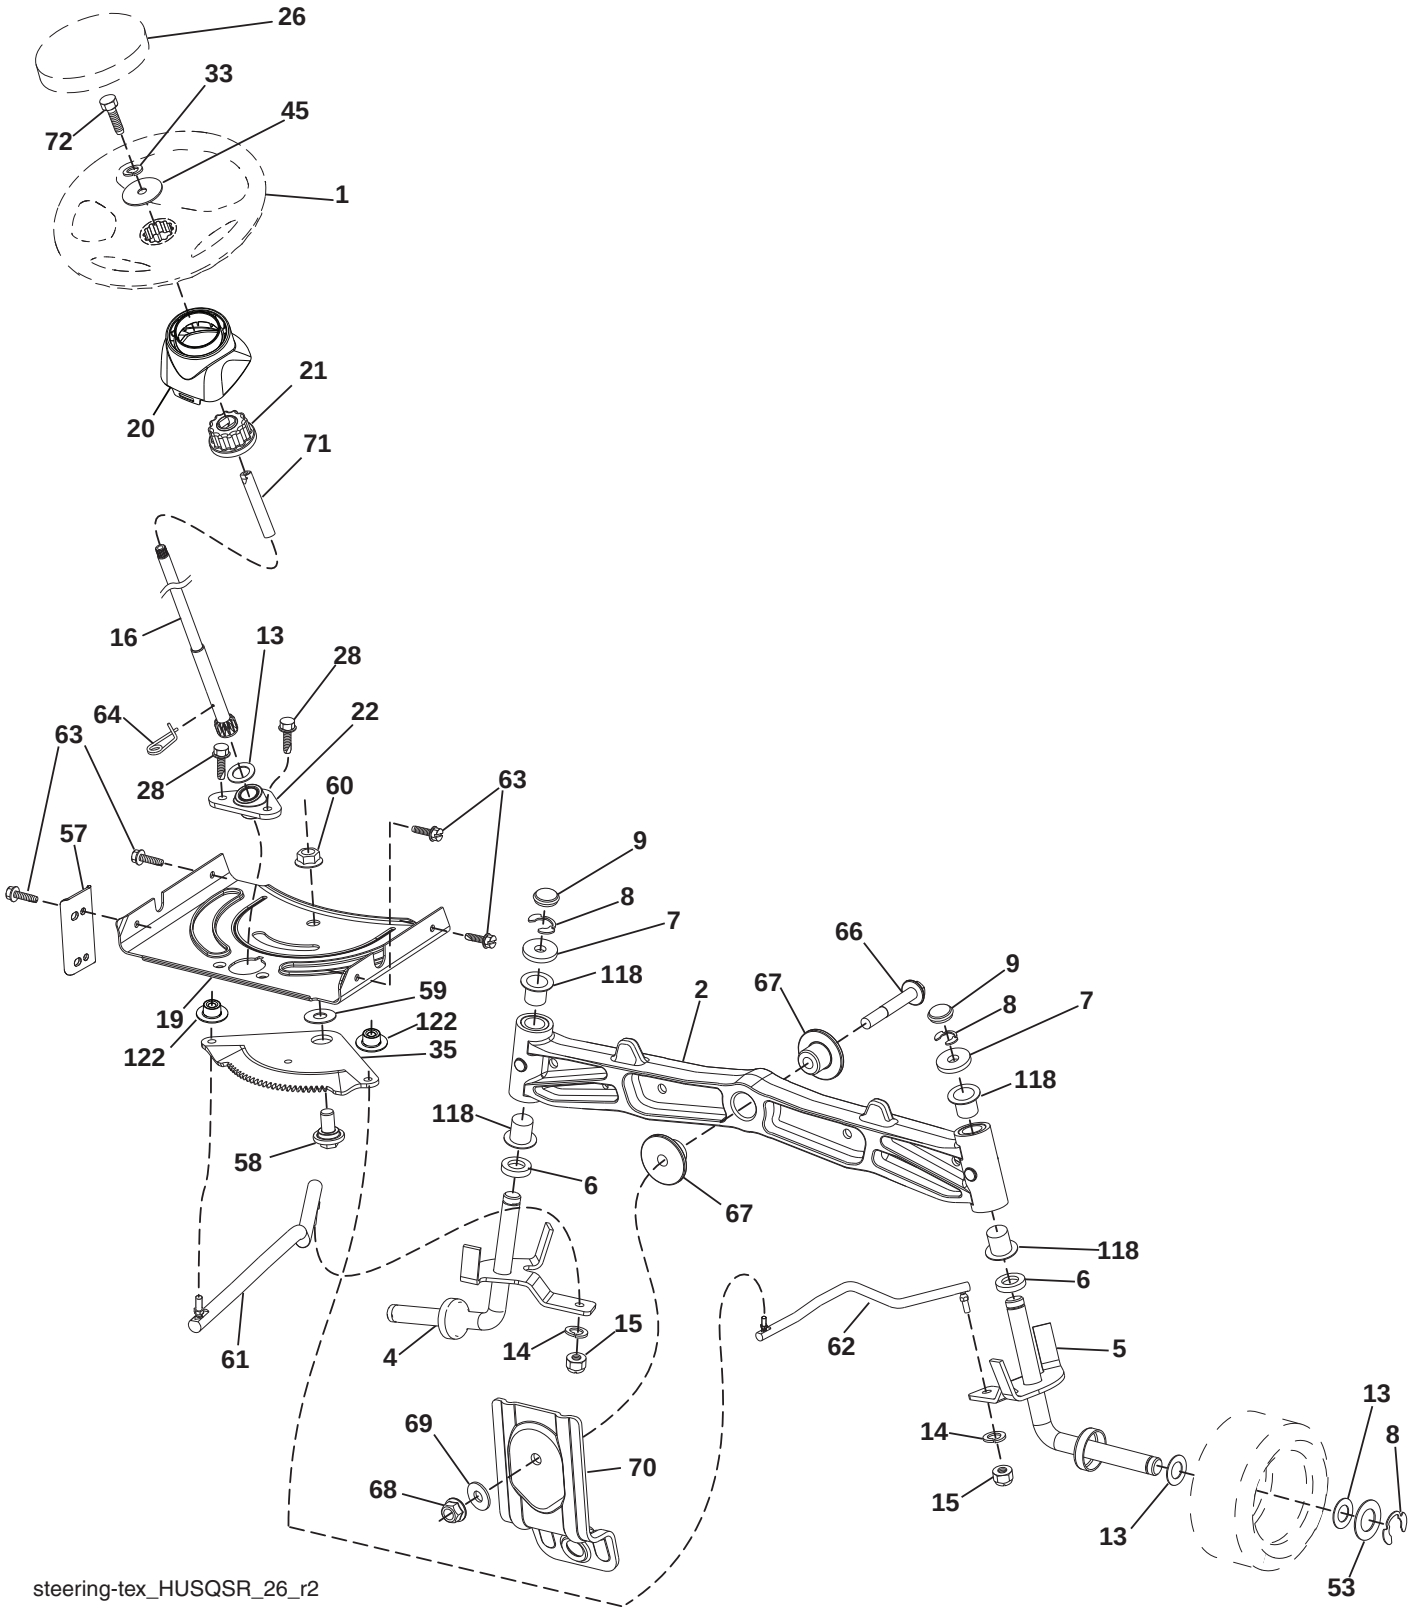


TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02
STEERING ASSEMBLY 41

KEY NO.	PART NO.	DESCRIPTION
1	532 43 97-40	Wheel, Steering Husq SR
2	532 41 35-91	Axle Asm., Front
4	532 40 30-87	Spindle Asm., LH
5	532 40 30-88	Spindle Asm., RH
6	532 12 49-31	Bearing, Race Thrust Hardened
7	532 12 17-48	Washer 25/32 x 1-5/8 x 16 Ga.
8	812 00 00-29	Ring, Clip #T5304-75
9	532 12 12-32	Cap, Spindle
13	532 12 17-49	Washer 25/32 x 1-1/4 x 16 Ga.
14	810 04 06-00	Washer, Lock Hvy. Hlcl. Spr. 3/8
15	873 54 06-00	Nut, Crown Lock 3/8-24 unf
16	532 42 93-73	Shaft Steering
19	532 19 47-29	Plate Steering
20	532 44 14-25	Boot, Steering
21	532 18 67-37	Adapter, Wheel Steering
22	532 42 05-37	Supt., Strg. Lower
26	532 43 97-43	Insert, Wheel Steering Husq SR
28	817 00 06-12	Screw 3/8-16 x 3/4
33	810 04 05-00	Washer Lock 5/16
35	532 19 47-32	Gear, Sector Plate
45	819 11 38-12	Washer 11/32 x 3/8 x 12 Ga.
53	532 18 89-67	Washer Hardened .793 x 1.637 x .060
57	532 40 74-65	Bracket Upstop
58	532 19 47-47	Bolt Shoulder Sector Pivot CFM
59	532 19 47-48	Washer Thrust Sector Steering
60	873 97 10-00	Nut Flange Lock 5/8-11
61	532 19 47-40	Draglink, LH
62	532 19 47-41	Draglink, RH
63	817 00 05-12	Screw 5/16-18 x 3/4
64	532 19 98-49	Retainer Clip Spring Steering
66	871 02 07-48	Bolt Hex Fghd. 7/16-14 x 3 Serr.
67	532 19 47-37	Bushing PM Front Axle
68	873 90 07-00	Nut Lock Flange 7/16-14 Gr. 5
69	532 19 91-62	Washer 1.5 x .505 x .118
70	532 19 61-97	Bracket Deck Susp. Front
71	532 19 07-52	Shaft Extension Steering
72	532 42 89-82	Bolt Fin Hx 5/16-18 x 4 w/Patch
118	532 40 60-13	Bushing
122	532 44 49-62	Cap Gear

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

MOWER DECK 44

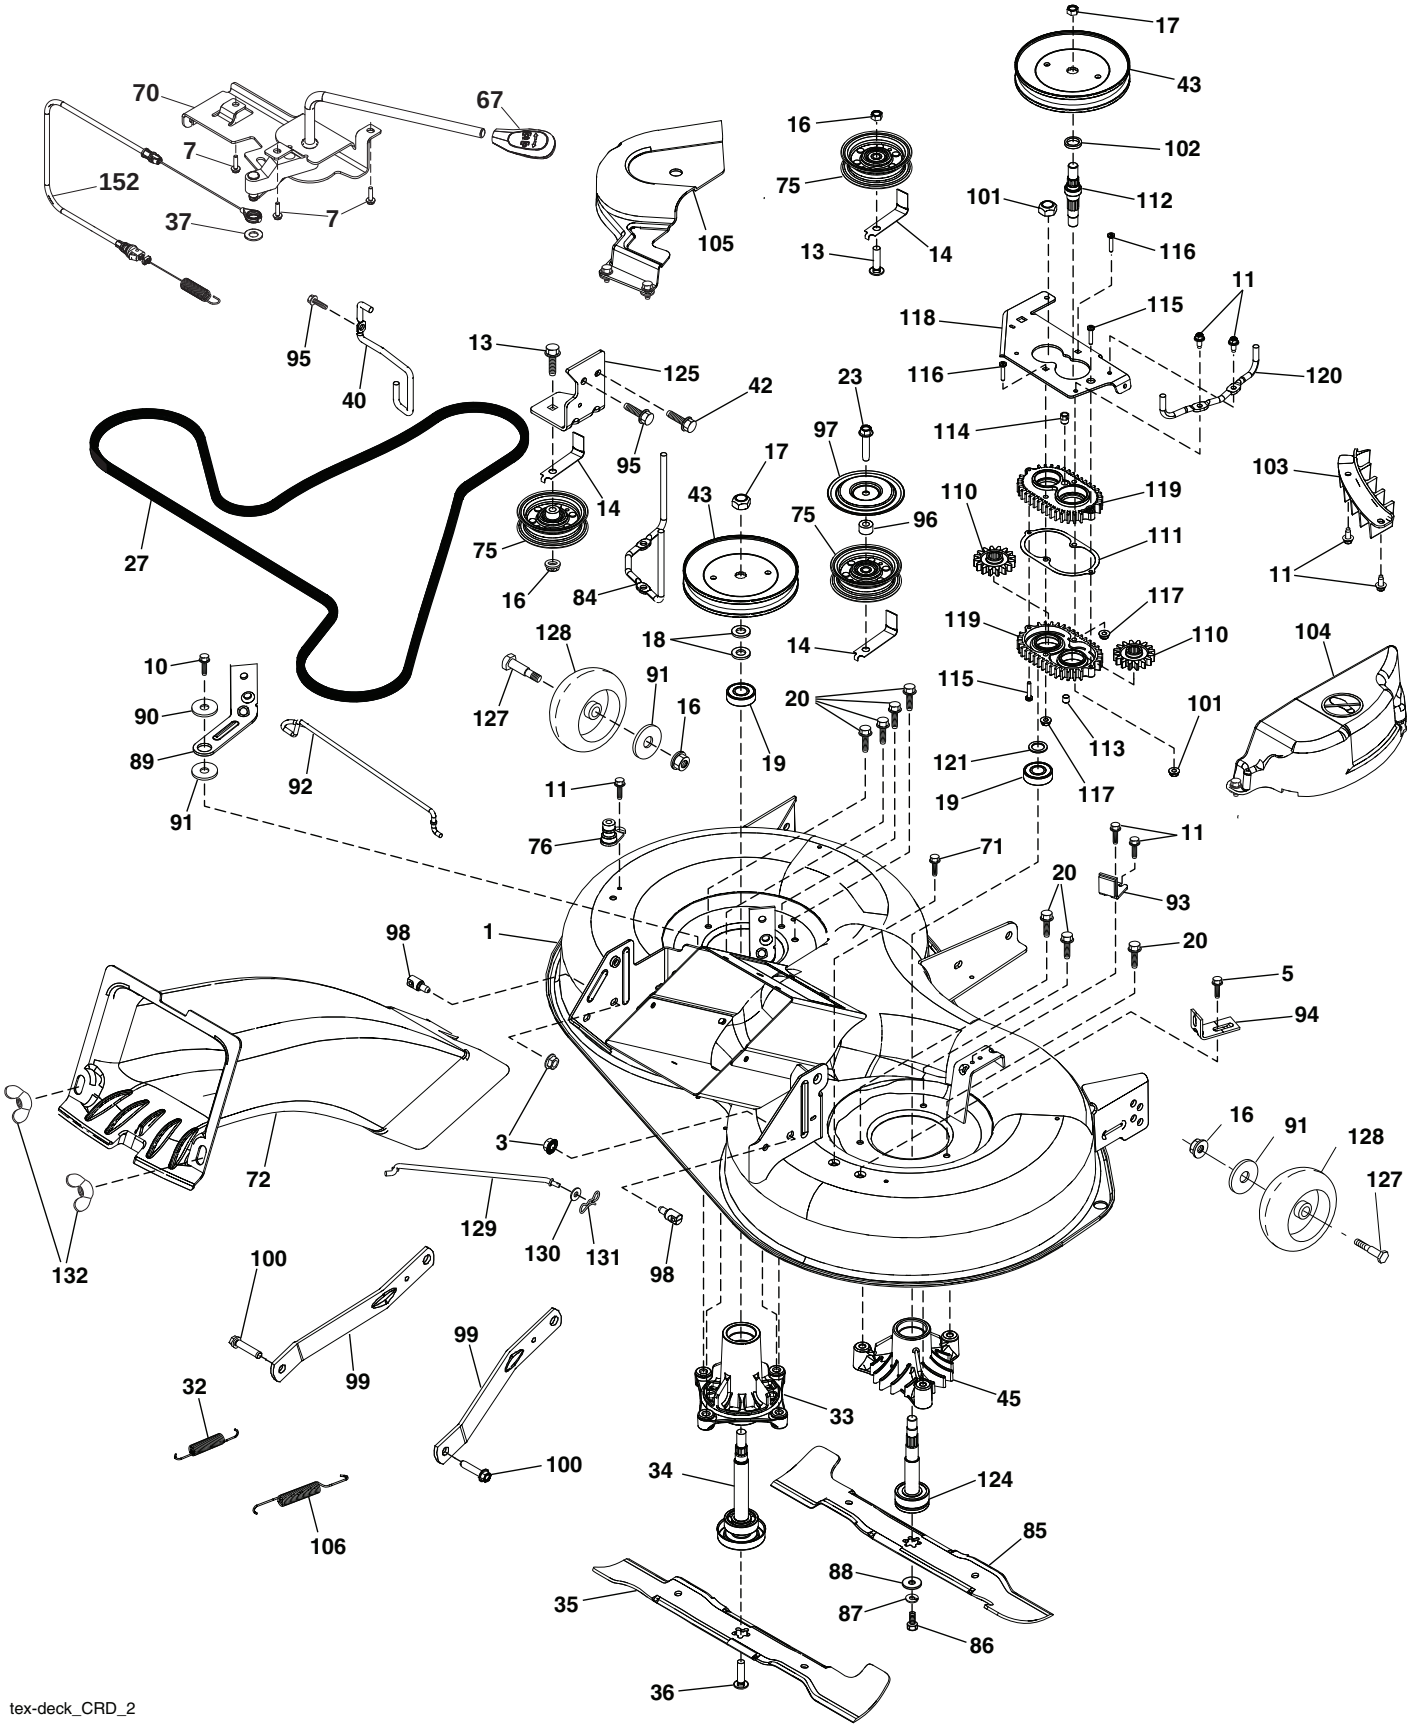


TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02
MOWER DECK 44

KEY NO.	PART NO.	DESCRIPTION
1	532 44 09-71	Deck Weldment
3	873 90 05-00	Nut Lock Hex Flange 5/16 - 18
5	817 00 05-10	Bolt 5/16-18
7	532 41 63-58	Screw #10 x 0.750 BOS Thread
10	817 00 06-16	Screw 3/8-16 x 1.SMGM1.Tap
11	532 13 77-29	Screw Thd Roll 1/4 - 20 X 5/8
13	872 11 06-12	Bolt Carr Sh 3/8 - 16 X 1 - 1/2 Gr. 5
14	532 15 60-85	Keeper Belt Idler
16	873 90 06-00	Nut Lock FlG 3/8 - 16 unc
17	532 40 02-34	Nut Flange Lock Top
18	532 18 76-90	Washer Spacer
19	532 11 04-85	Bearing Ball Mandrel
20	532 17 39-84	Screw Thread Roll
23	817 49 06-28	Screw Thdrol 3/8 - 16 X 1-3/4
27	532 43 97-26	V-Belt Drive
32	532 40 18-72	Spring Return Deck
33	532 18 72-81	Housing Mandrel 4pt Service
34	532 19 28-72	Shaft Asm Mndrl N/Greaseable38
35	532 42 79-84	Blade Mower LH
36	532 19 30-03	Bolt/Washer Asm 7/16 - 20 unf
37	819 13 13-16	Washer 13/32 x 13/16 x 16 Ga.
40	532 19 72-58	Keeper Belt Engine LH
42	817 00 05-12	Screw 5/16-18 x 3/4
43	532 19 74-73	Pulley Mandrel
45	532 13 71-52	Housing Mandrel
67	532 40 30-12	Handle Clutch Cable
70	532 40 12-46	Clutch Asm Manual LT Pred
71	817 67 06-08	Screw Thdrol 3/8-16 x 1/2
72	532 44 68-10	Chute Upper
75	532 13 14-94	Pulley Idler Flat
76	532 41 55-98	Washout Port
84	532 43 25-20	Keeper Belt LH Mandrel
85	532 42 79-85	Blade Mower RH
86	532 18 17-13	Bolt 38-24 x 1.50 Gr. 8
87	810 03 06-00	Washer Lock Hvy 3/8
88	532 14 02-96	Washer Hard Blade Mower Vented
89	532 43 81-24	Arm Brake 97 LH
90	532 19 90-92	Spacer Retainer
91	819 13 20-12	Washer 13/32 x 1-1/4 x 12 Ga.
92	532 43 69-93	Rod Brake
93	532 43 81-25	Arm Brake RH
94	532 19 72-50	Bracket Clutch Cable
95	817 00 06-12	Screw 3/8-16 x 3/4
96	532 40 02-71	Spacer
97	532 18 20-61	Shield Idler Mower
98	532 19 51-61	Stud Fastener
99	532 19 51-86	Arm Suspension Mower Rear
100	532 19 65-39	Bolt Shoulder
101	873 68 09-00	Nut Crownlock 9/16-18 unc
102	532 40 25-11	Spacer Bearing Swing Plate
103	532 43 69-92	Guard Front Vent
104	532 44 14-79	Mandrel Cover RH
105	532 44 14-78	Mandrel Cover LH
106	532 19 32-16	Spring Brake Return
110	532 41 53-56	Gear Output
111	532 43 69-79	Gasket Gearcase
112	532 44 38-52	Shaft Gearcase
113	532 43 85-33	Plug Oil
114	532 43 85-34	Valve Relief
115	818 03 10-16	Screw Torx #10-24 x 1
116	872 11 04-14	Bolt 1/4-20 x 1.75 Gr. 5
117	873 90 04-00	Nut Hex Flange 1/4-20 unc
118	532 43 69-89	Arm Clutching
119	532 43 81-66	Gearcase Subasm
120	532 43 69-91	Keeper Belt RH
121	532 43 69-85	Washer
124	532 43 69-86	Non Greasable Mandrel Shaft
125	532 43 69-94	Bracket Idler Chasses
126	532 43 81-66	Gear Case
127	532 19 34-06	Bolt Shoulder 3/8-16 x 3-5/8 Gr. 5
128	532 17 48-73	Wheel Guage
129	532 40 48-51	Rod Anti-Sway
130	819 13 13-12	Washer 13/32 x 13/16 x 12 Ga.
131	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
132	532 17 88-99	Knob Handle
152	532 44 04-88	Cable Clutch Manual w/Spring
- -	532 19 28-70	Mandrel Assembly (Includes Housing, Shaft Assembly, And Bearing Only - Pulley/Nut/Washer And Blade Bolt/Washers Not Included)
- -	532 44 03-32	Replacement Mower Complete

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

MOWER LIFT 45

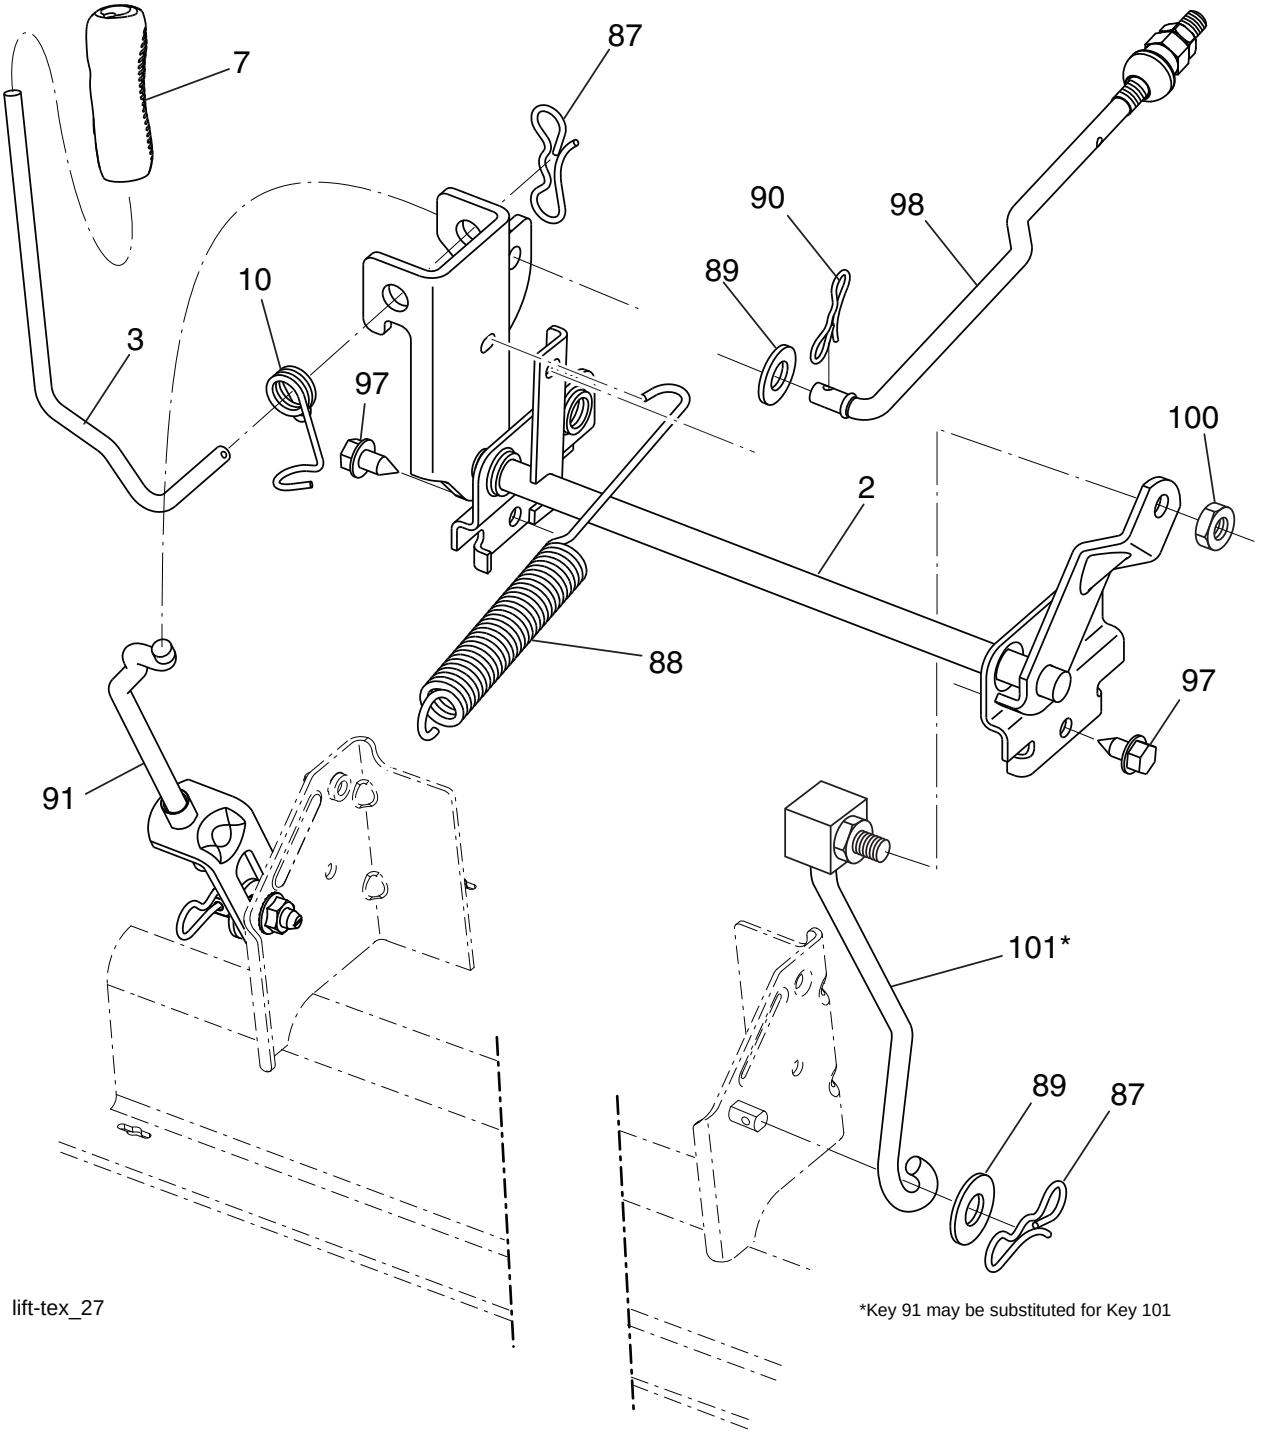


KEY NO.	PART NO.	DESCRIPTION
2	532 43 69-96	Deck Lift Weldment
3	532 19 52-31	Lever Asm., Lift RH
7	532 41 15-55	Grip, Lever
10	532 19 63-14	Spring Torsion
87	532 19 42-09	Pin Cotter 7/16 Bow Tie Lock
88	532 43 69-95	Spring Lift Assist
89	819 19 19-12	Washer Clear Zinc
90	532 19 42-08	Pin Cotter 5/16 Bow Tie Lock
91	532 19 51-81	Link Lift Susp Mower Rear
97	817 49 06-08	Screw 3/8-16 x 1/2 TYTT
98	532 19 52-70	Link Lift Susp. Front Mower
100	873 93 06-00	Nut Centerlock 3/8-16
101	532 40 70-03	Link Asm Lift FXD

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

SEAT ASSEMBLY 42

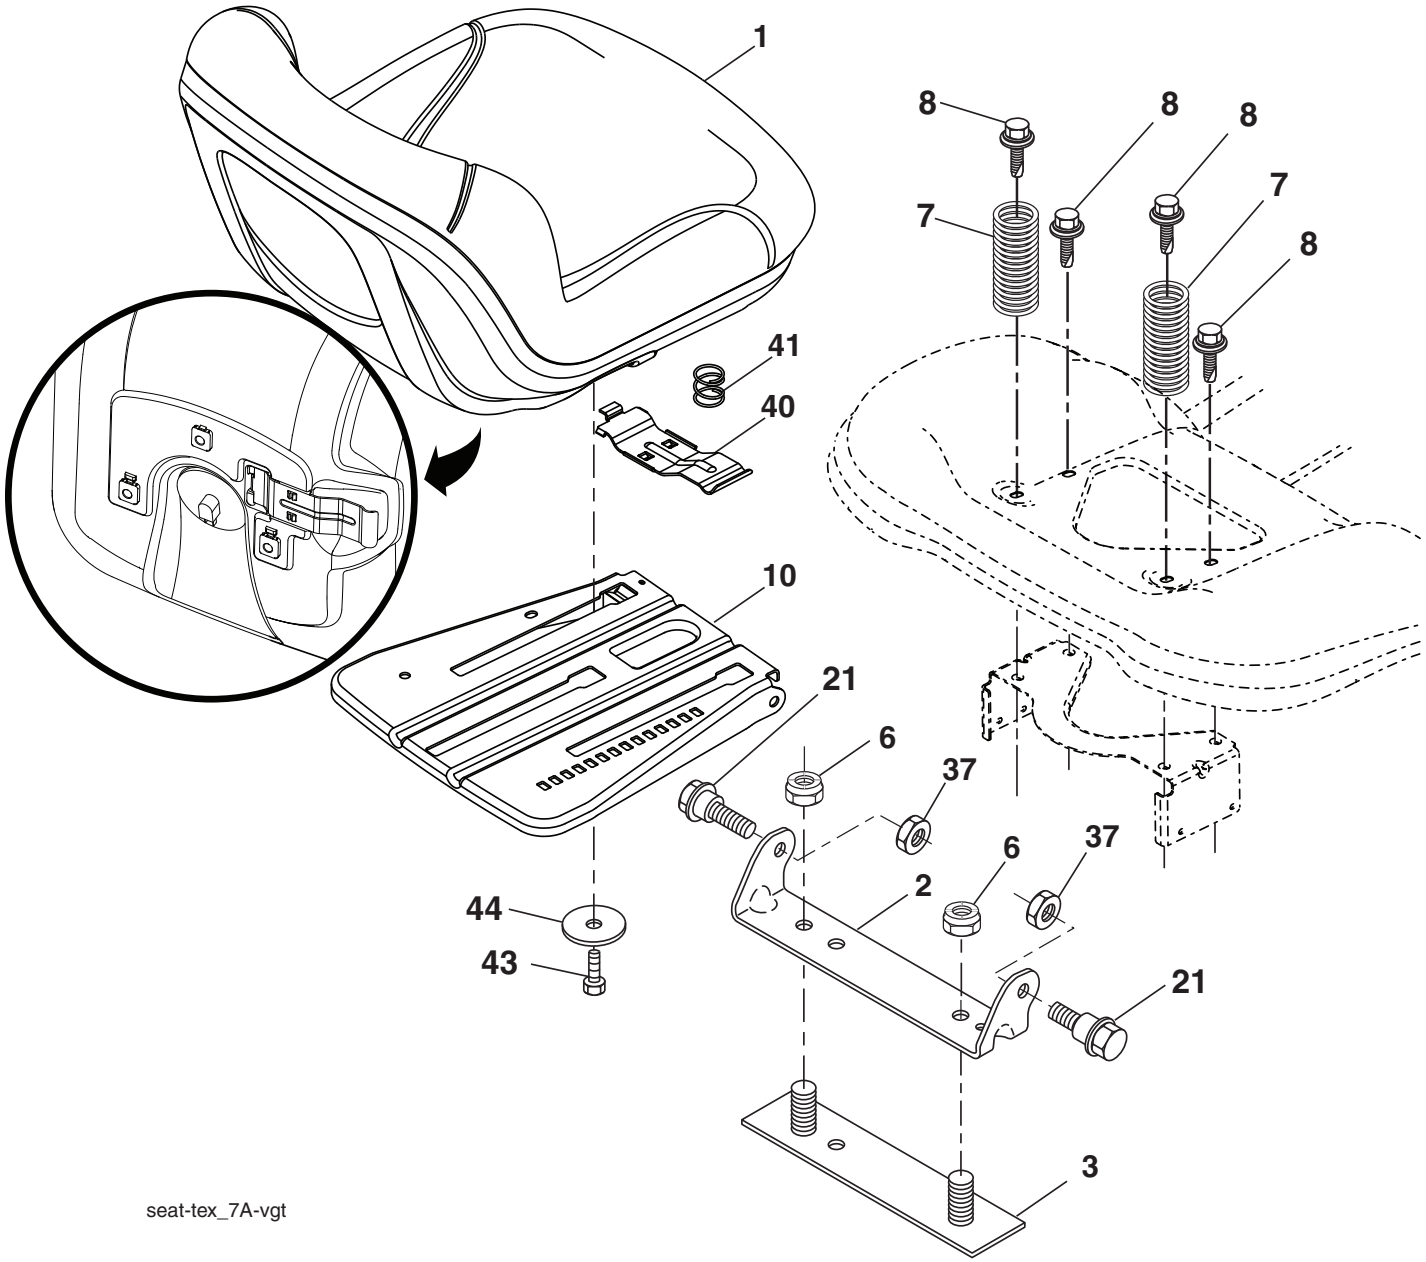


KEY NO.	PART NO.	DESCRIPTION
1	532 43 98-22	Seat
2	532 18 01-66	Bracket Pivot Fender
3	532 14 06-75	Strap, Asm Fender
6	873 80 06-00	Nut, Lock w/Ins. 3/8-16 unc
7	532 12 41-81	Spring, Seat Cprsn
8	532 17 18-77	Bolt 5/16-18 unc x 3/4 w/Sems
10	532 19 69-77	Pan, Seat
21	532 17 18-52	Bolt, Shoulder 5/16-18

KEY NO.	PART NO.	DESCRIPTION
37	873 80 05-00	Nut, Lock 5/16-18 unc
40	532 19 76-61	Handle Slide
41	532 19 82-00	Spring Latch
43	874 76 06-12	Bolt Fin Hex 3/8-16 unc x 3/4
44	819 13 38-12	Washer 13/32 x 2-3/8 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NO. CTH173 (96051000200), PRODUCT NO. 960 51 00-02

BAGGER 46

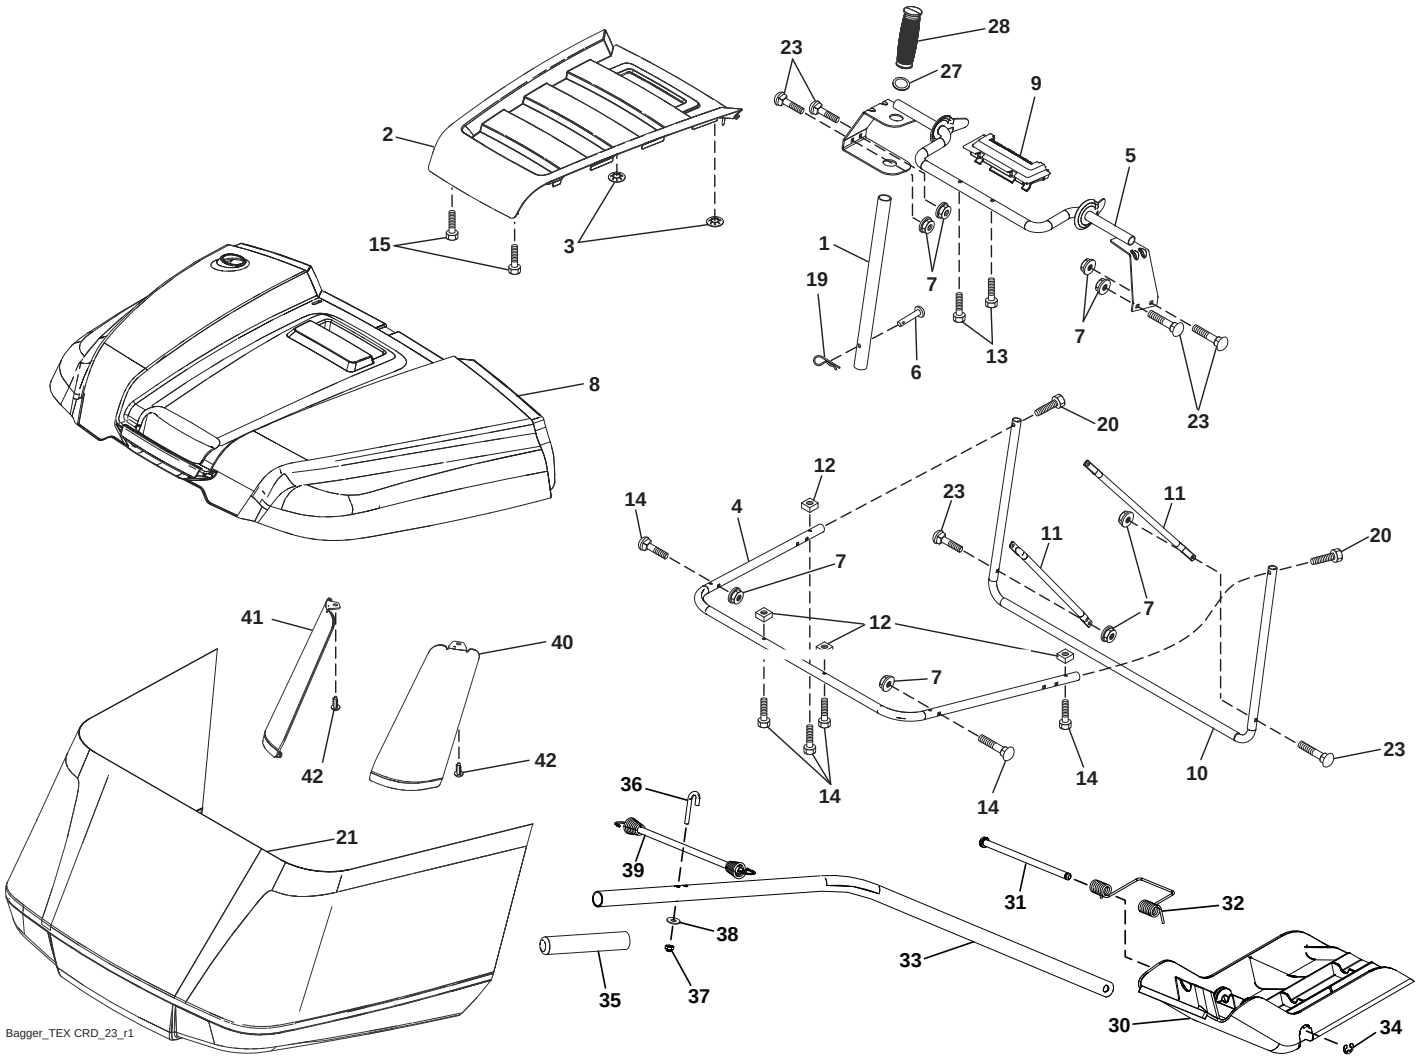

BAGGER 46

KEY NO.	PART NO.	DESCRIPTION
1	532 42 86-10	Tube Handle Bagger
2	532 44 13-58	Applique Top
3	532 41 38-08	Nut Push .156
4	532 43 96-12	Top Tube
5	532 41 76-32	Frame Asm Top Bagger
6	532 12 68-75	Drilled Rivet
7	873 90 04-00	Nut Hex Flange 1/4-20 unc
8	532 44 12-61	Cover Bagger
9	532 41 76-29	Insert Handle Bagger
10	532 43 67-70	Frame Front
11	532 43 67-71	Tubing Brace Bagger
12	532 42 17-93	Nut Square 1/4
13	532 42 17-80	Screw 1/4 x 1.150 Hx Wsh
14	532 42 18-00	Bolt Shoulder Hx Wsh 1/4 x 1.150
15	532 42 18-01	Screw #8 FLHD Drill Tip
19	532 19 42-08	Retainer Spring
20	585 36 88-01	Screw Hex Cap 1/4-20 x 1.375
21	532 43 81-62	Bag Asm
23	872 04 04-10	Bolt 1/4-20
27	532 42 12-62	Grommet Rubber
28	532 16 57-87	Grip Handle Black
30	532 43 74-52	Plug
31	532 43 58-61	Pin Hinge
32	532 43 74-54	Spring Double Torsion
33	532 43 84-51	Shaft Tex CRD Mulch Plug
34	532 43 79-88	E-Ring 5/16
35	532 43 91-39	Grip Mulch Plug Hand
36	532 43 90-98	Bolt J
37	532 06 91-80	Nut Lock #10-24 unc
38	819 07 08-18	Washer 7/32 x 1/2 18 Ga.
39	532 43 92-42	Bungee Tex CRD
40	532 43 94-18	Support Bagger Corner RH
41	532 43 94-35	Support Bagger Conrer LH
42	532 44 04-28	Chriatmas Tree Clip

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm