
Husqvarna

7

# LR125


954 001 202B

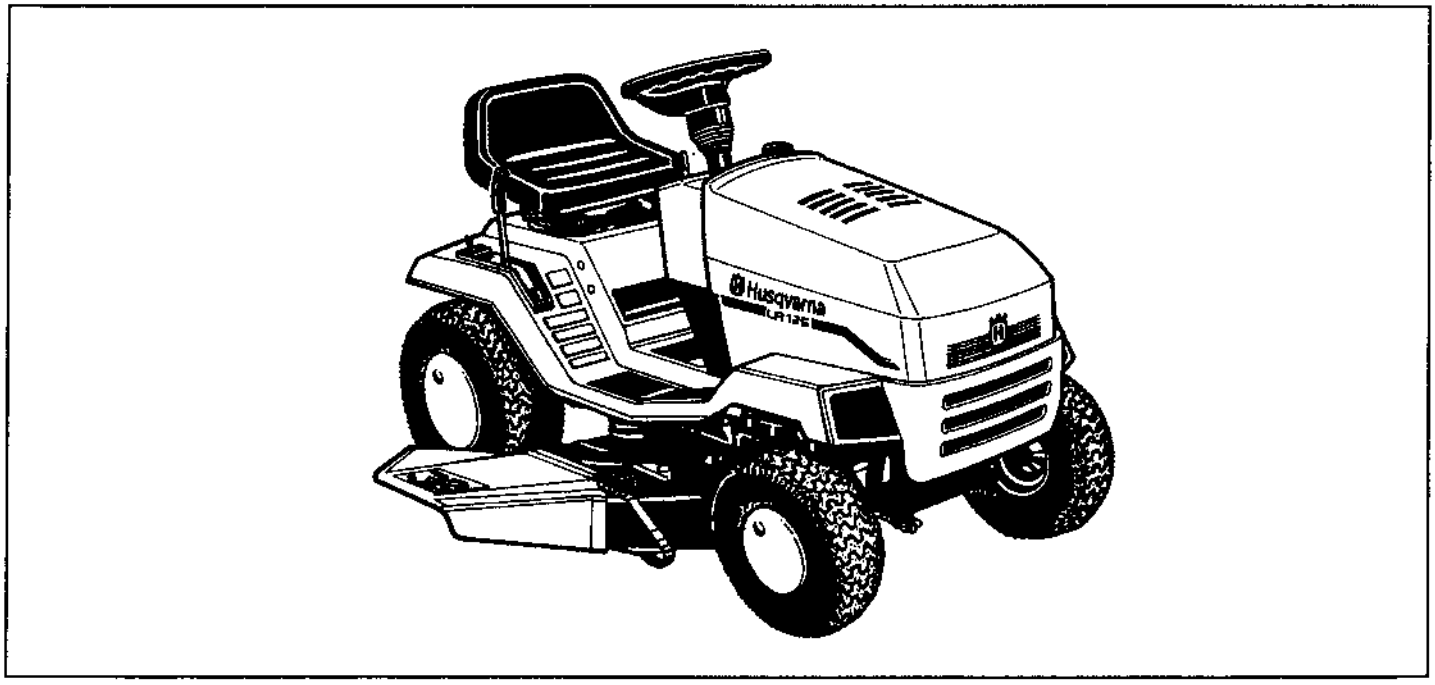


## 1.1995
## Spare parts

# TRACTOR - - MODEL NUMBER LR125 (954001202B)

## SCHEMATIC

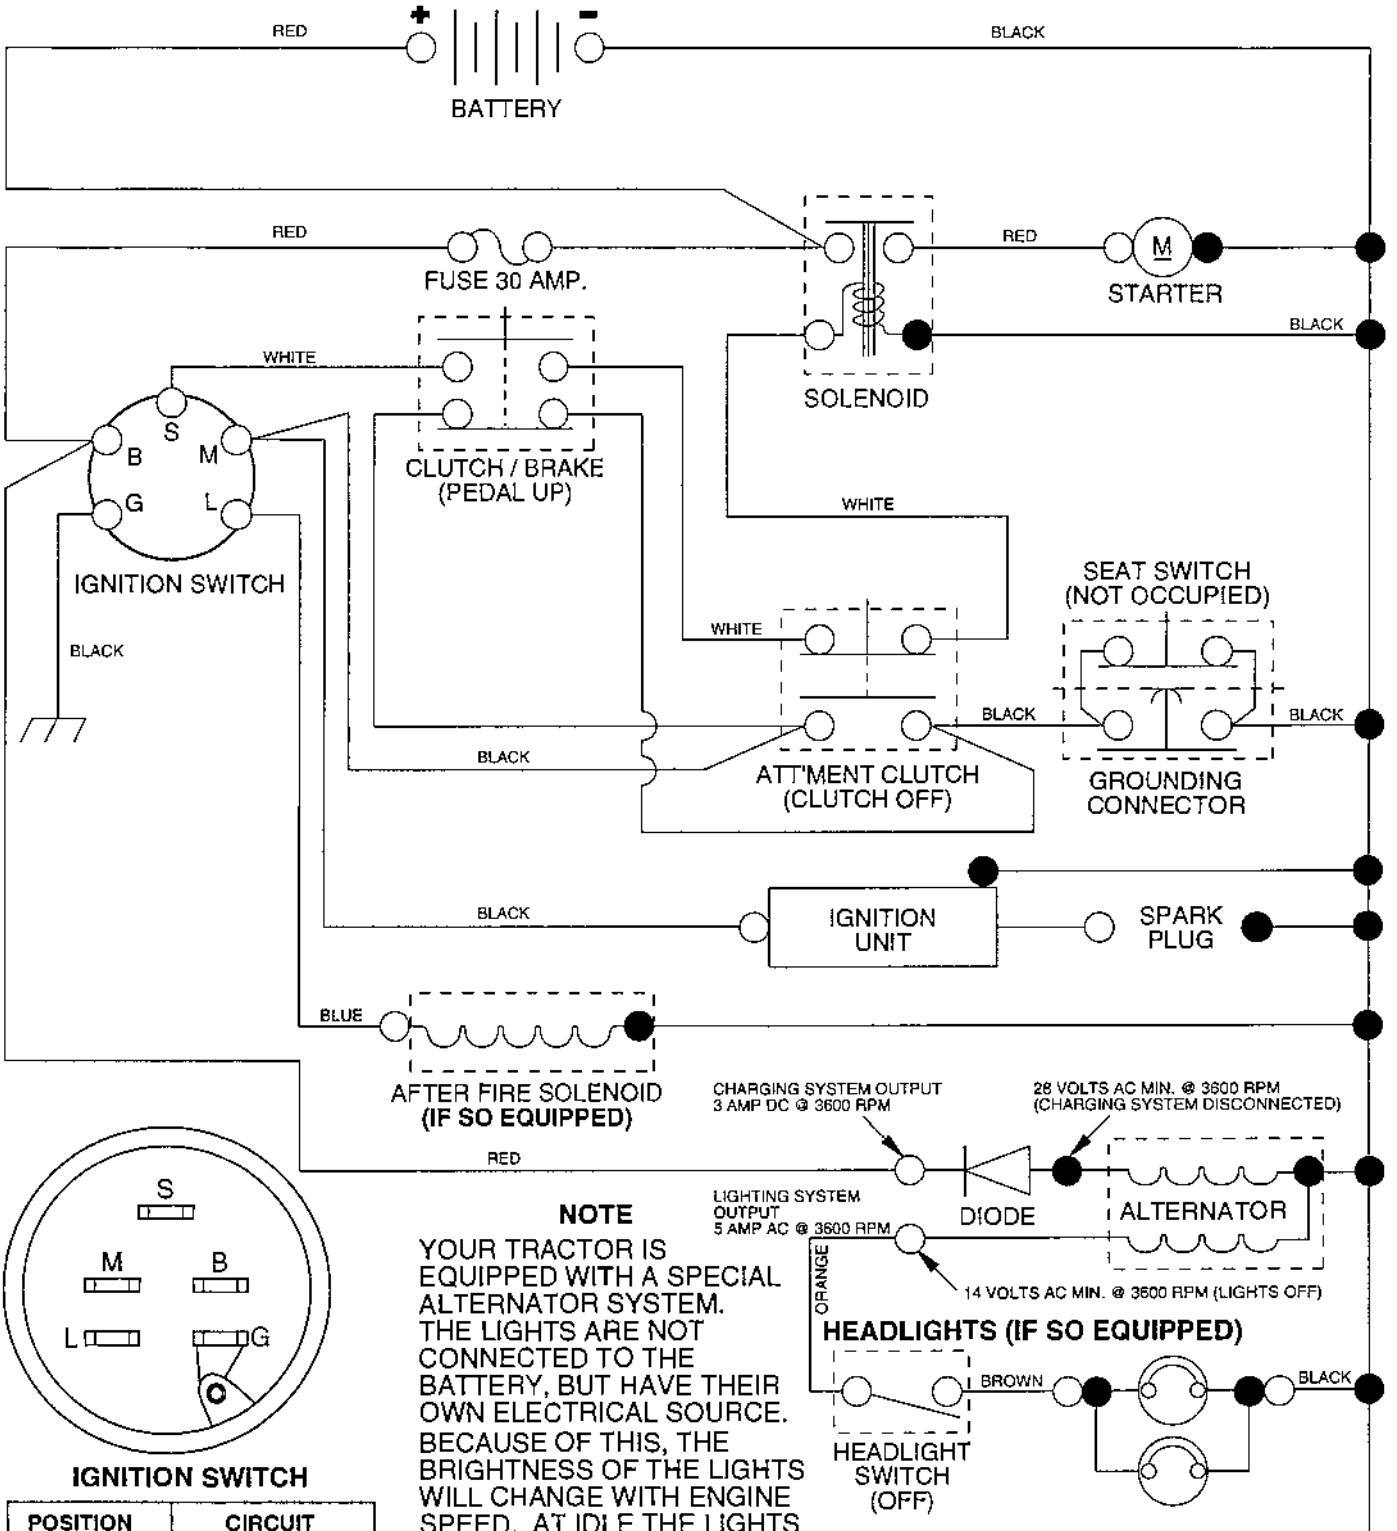


**IGNITION SWITCH**

| POSITION | CIRCUIT |
|---|---|
| OFF | M + G |
| ON | B + L |
| START | B + S + L |

**NOTE**

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

**WIRING INSULATED CLIPS**


**NOTE:** IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS — REMOVABLE CONNECTIONS

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### DECALS

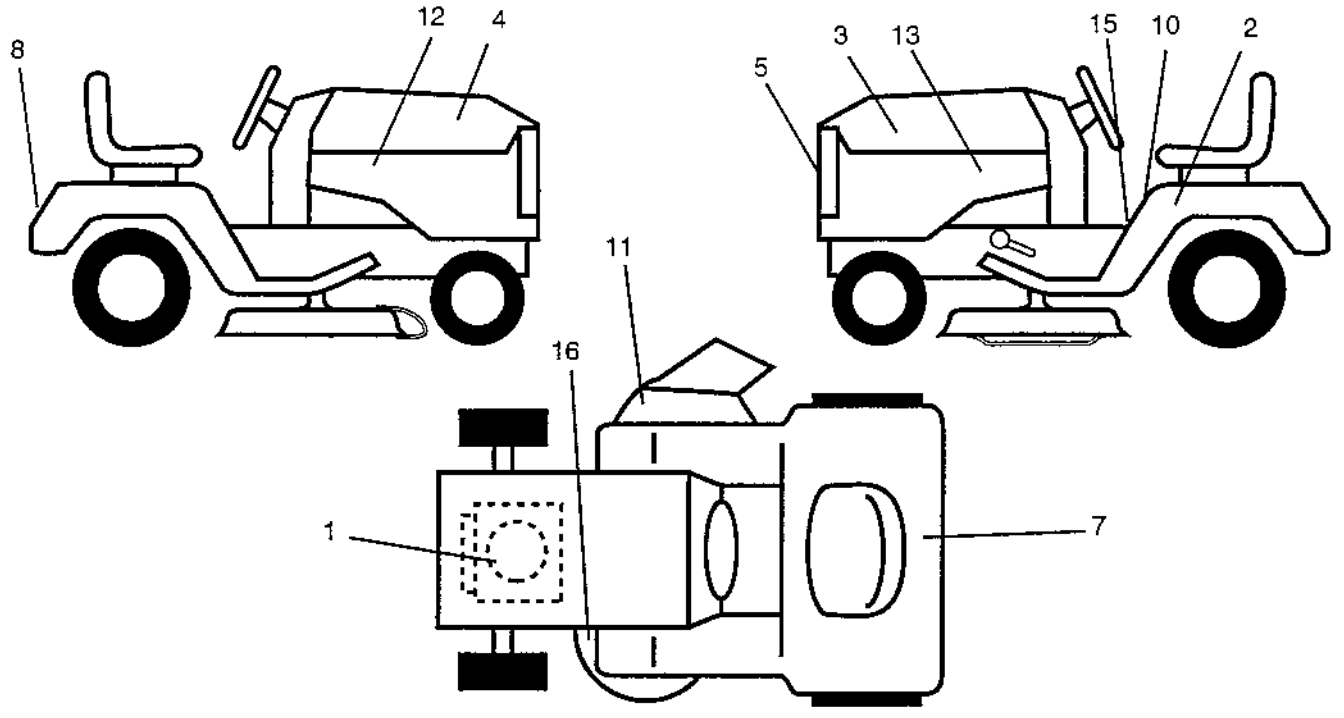



| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532140013 | Decal, Engine, HP |
| 2 | 532135073 | Decal, Indicator |
| 3 | 532140206 | Decal, Hood, L.H. |
| 4 | 532140205 | Decal, Hood, R.H. |
| 5 | 532140213 | Decal, Logo, Grill |
| 7 | 532145005 | Decal, Caution Battery |
| 8 | 532131582 | Decal, Logo, Fender |
| 10 | 532133795 | Decal, Fender, Caution |
| 11 | 532137259 | Decal, Warning, Multi-Language |
| 12 | 532140867 | Decal, Hood, Insert, R.H. |
| 13 | 532140866 | Decal, Hood, Insert, L.H. |
| 15 | 532138269 | Decal, Instruction, Operating |
| 16 | 532136832 | Decal, V-Belt Schematic |
| - - | 532149010 | Manual, English |
| - - | 532149011 | Manual, French |

Available accessories not included with tractor:

| | | |
|---|---|---|
| - - | CR38 | Grass Catcher |
| - - | MK380 | Mulch Kit |

### WHEELS & TIRES

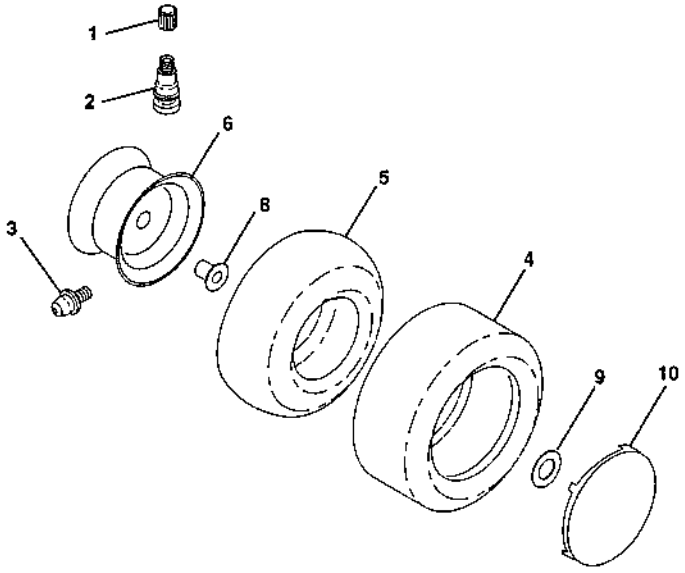



| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532059192 | Cap, Valve Stem |
| 2 | 532065139 | Stem, Valve |
| 3 | 532124957 | Fitting, Grease (Front Wheels Only) |
| 4 | 532137422 | Tire, Front |
| | 532132703 | Tire, Rear |
| 5 | 532059904 | Tube, Front Tire (Optional - Service Item Only) |
| | 532008134 | Tube, Rear Tire (Optional - Service Item Only) |
| 6 | 532140298 | Rim, Front |
| | 532140453 | Rim, Rear |
| 8 | 532124959 | Bearing Flange |
| 9 | 532121748 | Washer 25/32 x 1-5/8 x 16 Gauge |
| 10 | 532124577 | Cover, Wheel, Front, 6" |
| | 532124578 | Cover, Wheel, Rear, 8" |
| - - | 532144334 | Sealant, Tire (10 oz. Tube) |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)


### ELECTRICAL

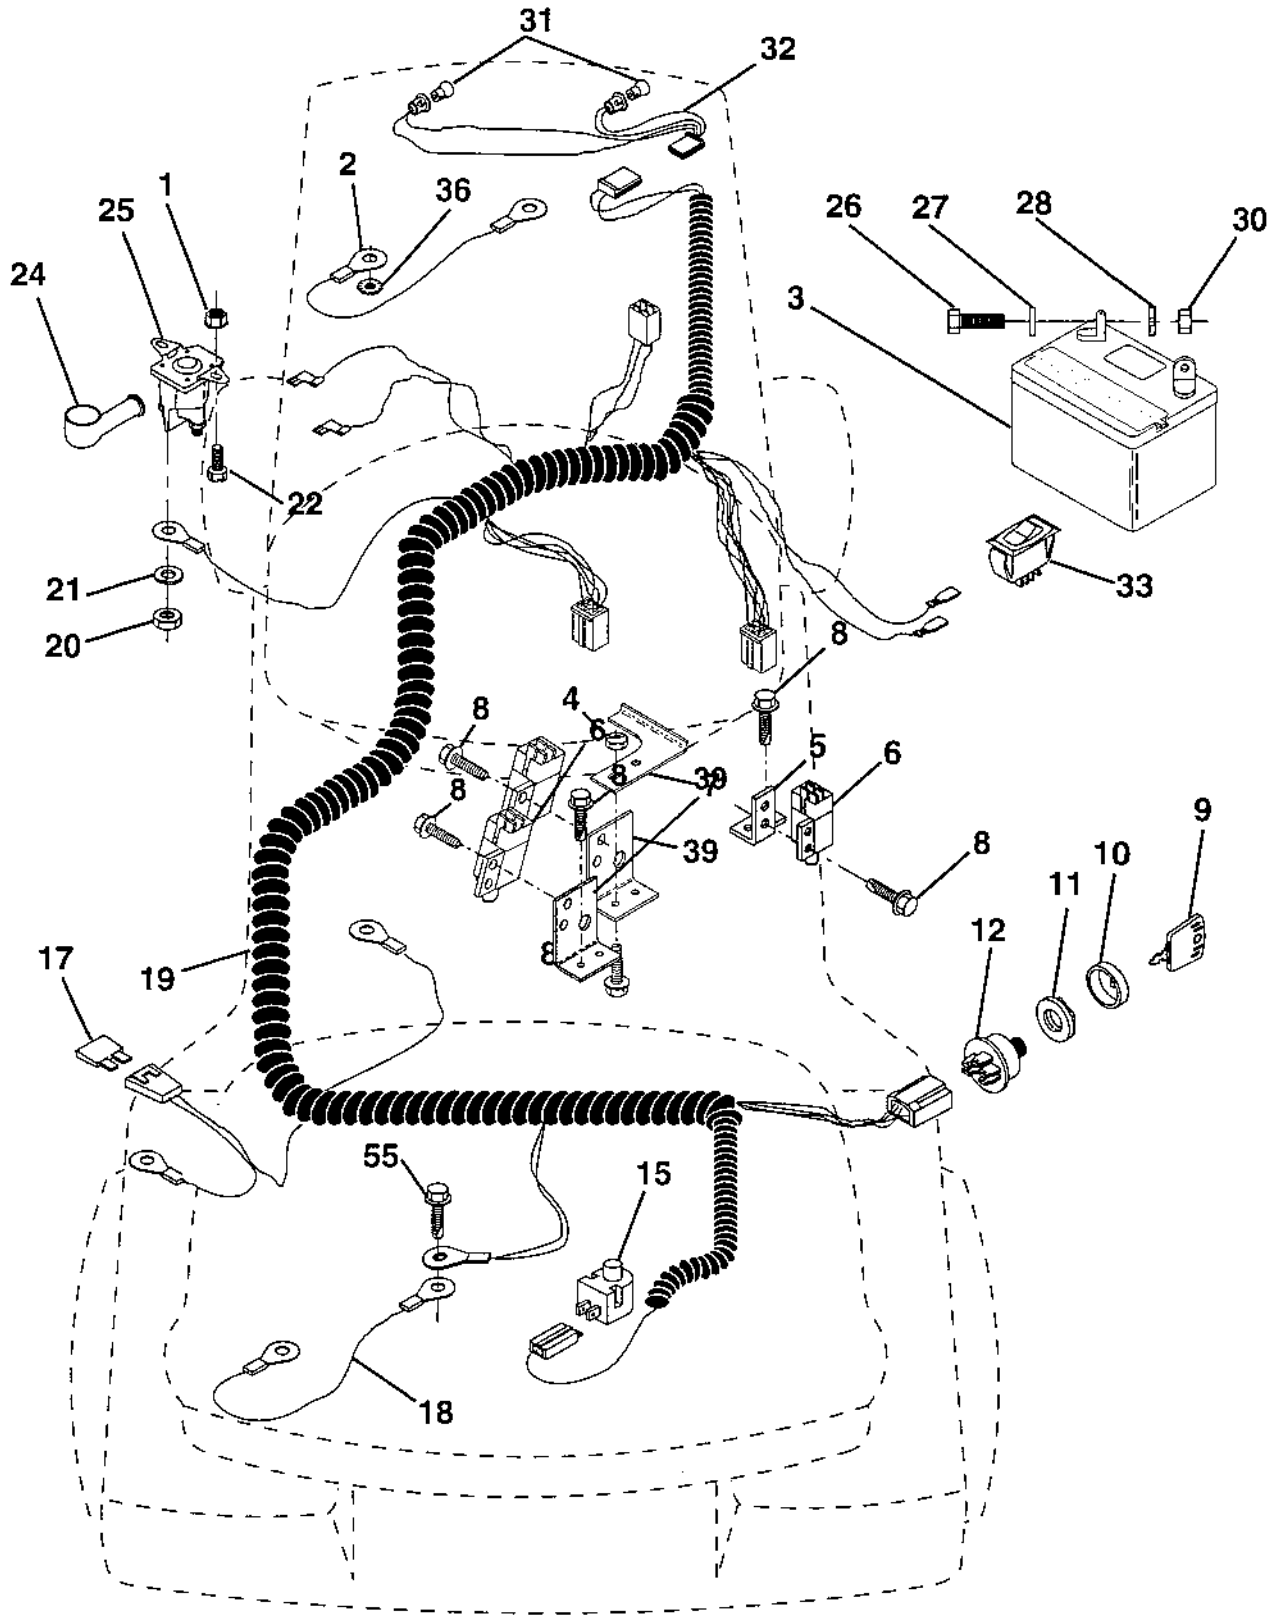

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### HOOD

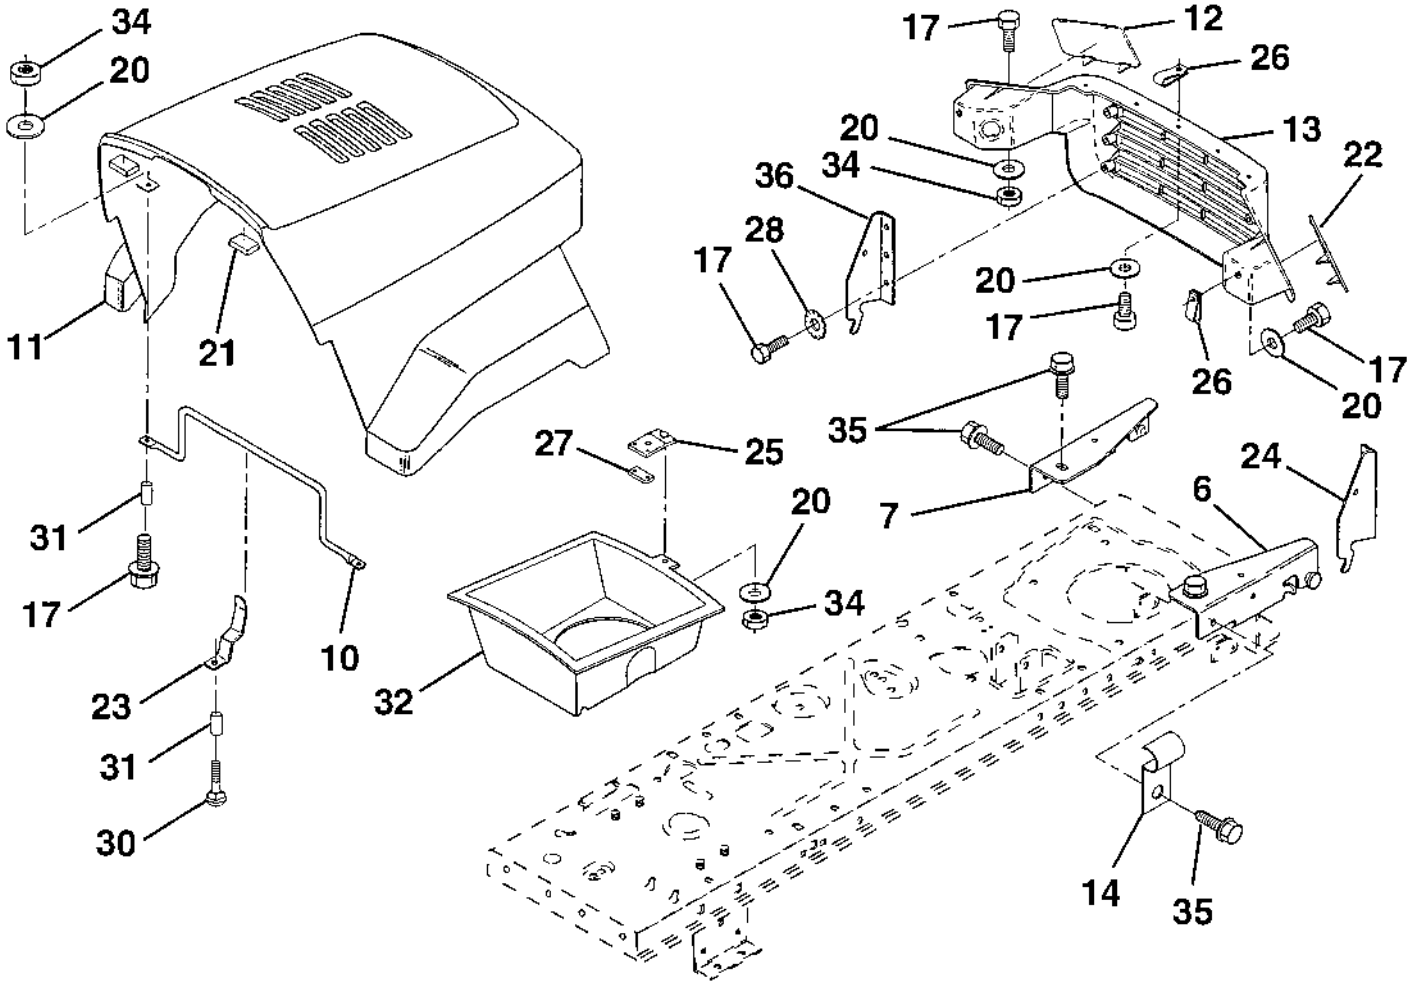


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 3 | 532128445 | Bracket Pivot Hood LH |
| 6 | 532140051 | Bracket Asm. Pivot Hood RH |
| 7 | 532140050 | Bracket Asm. Pivot Hood LH |
| 10 | 532130850 | Brace Hood |
| 11 | 532140142 | Hood |
| 12 | 532130986 | Lens LH |
| 13 | 532130984 | Grille |
| 14 | 532124996 | Clip Line Fuel |
| 17 | 874780410 | Bolt Fin Hex 1/4-20 x 5/8 |
| 20 | 819091016 | Washer Flat 1/4 |
| 21 | 532126938 | Bumper Hood |
| 22 | 532130985 | Lens RH |
| 23 | 532139969 | Latch Hood |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 24 | 532142873 | Bracket Pivot Hood RH |
| 25 | 532138740 | Clip, Duct Air |
| 26 | 532052921 | Clip, Tinnerman |
| 27 | 532131028 | Clip, Tinnerman |
| 28 | 811050400 | Washer Lock Ext Tooth |
| 30 | 872050411 | Bolt Rdhd. Sht. Nk 1/4-20 x 1-3/8 |
| 31 | 532147031 | Spacer |
| 32 | 532123840 | Duct Air Hood |
| 33 | 874780424 | Bolt Hex Fin 1/4-20 x 1-1/2 |
| 34 | 873680400 | Nut Crownlock 1/4-20 |
| 35 | 817490512 | Screw Thdrol 5/16-18 x 3/4 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### FENDER/CHASSIS

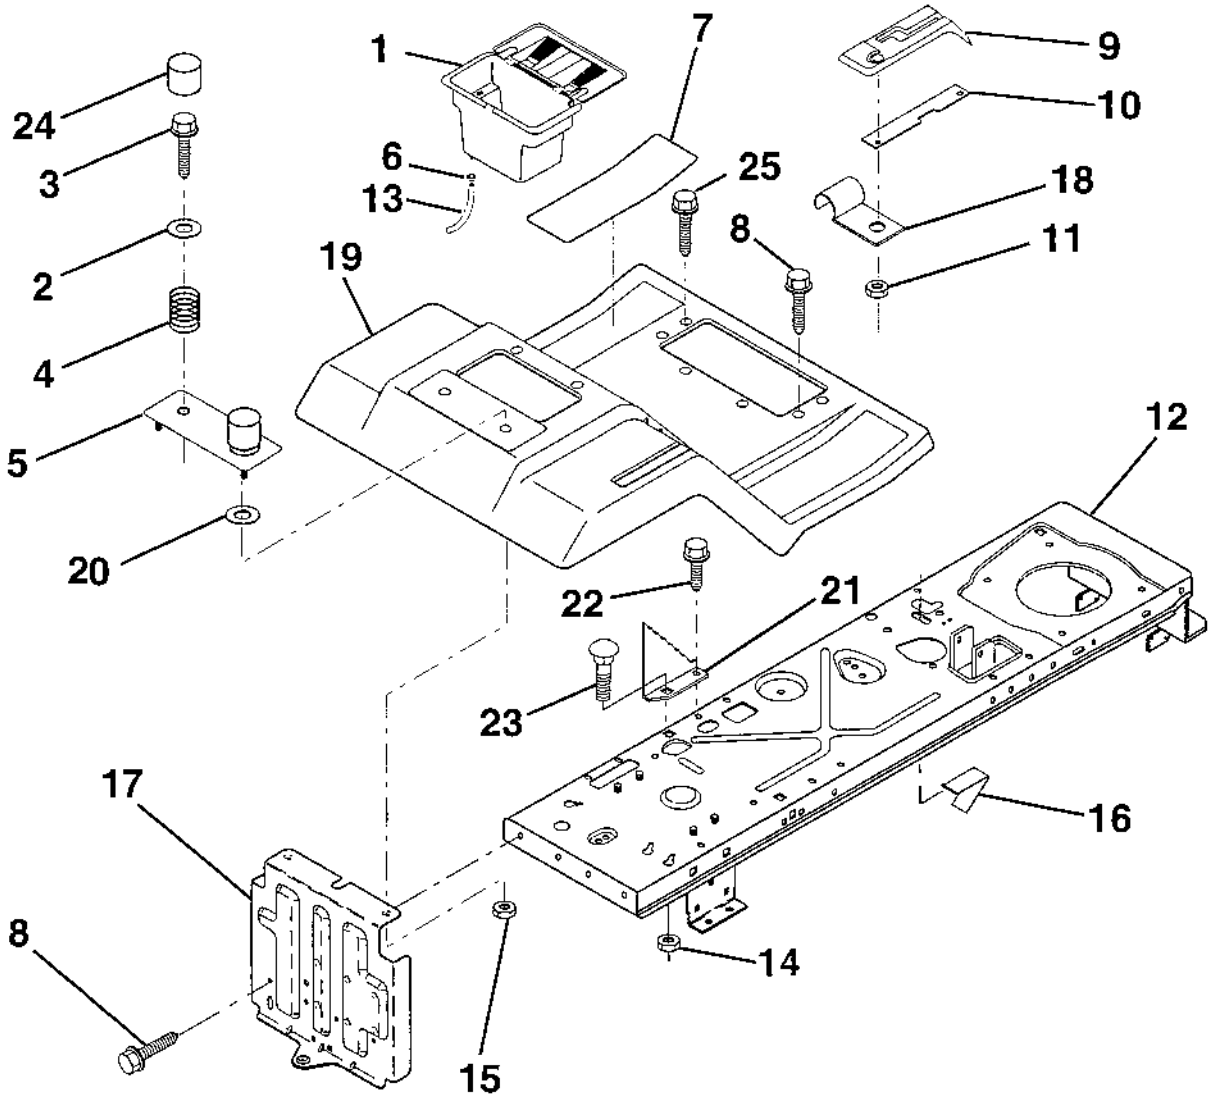


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532144940 | Case Asm. Battery |
| 2 | 819132012 | Washer 13/32 x 1-1/4 x 12 Ga. |
| 3 | 817490612 | Screw Thdrol. 3/8-16 x 3/4 |
| 4 | 532124181 | Spring seat |
| 5 | 532125142 | Plate Asm. Pnt Battery Fender |
| 6 | 532109596 | Clamp Hose Olive |
| 7 | 532126700 | Pad Footrest Rubber Deluxe |
| 8 | 817490512 | Screw Thdrol. 5/16-18 x 3/4 |
| 9 | 532126995 | Console Shf. 6sp W/Ign. |
| 10 | 532139783 | Plate Lock Shift |
| 11 | 532124346 | Nut Self Thd. Wsh-Hd 1/4 |
| 12 | 532145190 | Chassis Asm. Weldment |
| 13 | 532109238 | Tube Plastic |
| 14 | 873680500 | Nut Crownlock 5/16-18 |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 15 | 873640400 | Nut Keps Blk Hex 1/4-20 UNC |
| 16 | 532141736 | Switch Activator |
| 17 | 532140782 | Drawbar Asm. |
| 18 | 532126470 | Clip Insulated |
| 19 | 532141366 | Fend/Foot Asm. Pnt Shf. Fnd. |
| 20 | 819091413 | Washer 9/32 x 7/8 x 13 Ga. |
| 21 | 532140297 | Bracket Stop Depth |
| 22 | 817490508 | Screw Thdrol 5/16-18 x 1/2 |
| 23 | 872110506 | Bolt Rdhdsqnk. 5/16-18 x 3/4 |
| 24 | 532124238 | Cap Spring Seat |
| 25 | 817190516 | Scr-Hex Wsh Rol 5/16-18 x 1 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### SEAT

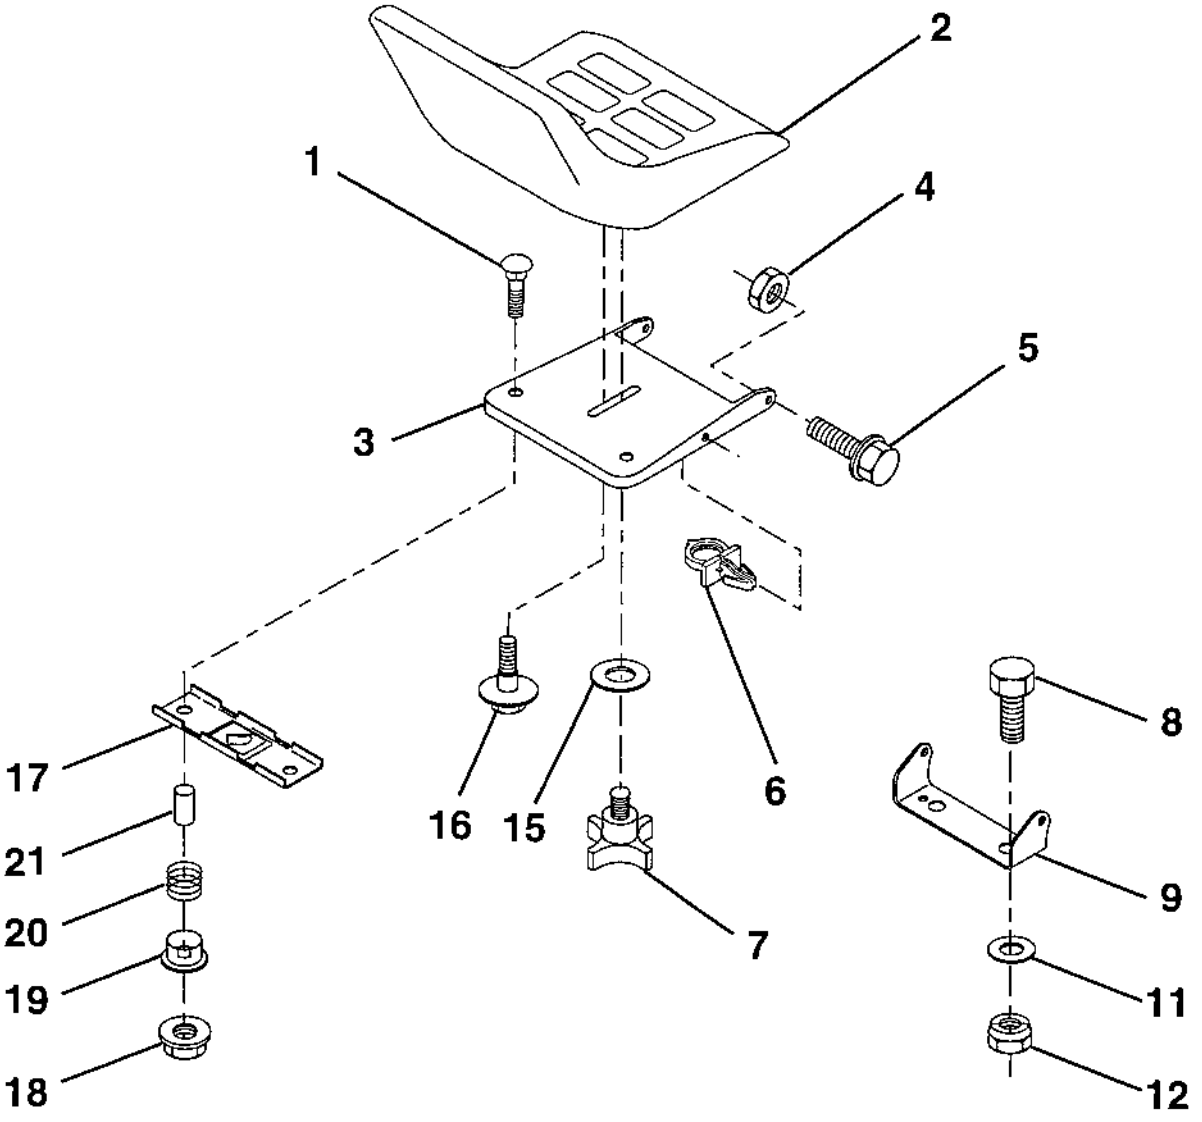


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 872050411 | Bolt, Carriage 1/4-20 x 1-3/8 |
| 2 | 532130875 | Seat |
| 3 | 532140552 | Pan, Seat |
| 4 | 873800500 | Nut Lock Hex W/Ins 5/16-18 |
| 5 | 532139888 | Bolt, Shoulder 5/16-18 UNC |
| 6 | 532145006 | Clip, Push-In |
| 7 | 532120068 | Knob, Seat |
| 8 | 874760616 | Bolt, Hex, Fin. 3/8-16 UNC x 1 |
| 9 | 532140551 | Bracket, Pivot, Seat |
| 11 | 819133210 | Washer 12/32 x 2 x 10 Gauge |
| 12 | 873800600 | Nut Lock Hex W/Wsh 3/8-16 |
| 15 | 819171912 | Washer 17/32 x 1-3/16 x 12 Gauge |
| 16 | 532127018 | Bolt, Shoulder |
| 17 | 532121246 | Bracket, Switch Mounting |
| 18 | 532123976 | Nut, Hex, Large, Flange Lock |
| 19 | 532121248 | Bushing, Snap |
| 20 | 532121250 | Spring, Compression |
| 21 | 532134300 | Spacer, Split, Large .28 Id. x .96 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR -- MODEL NUMBER LR125 (954001202B)

### DASH

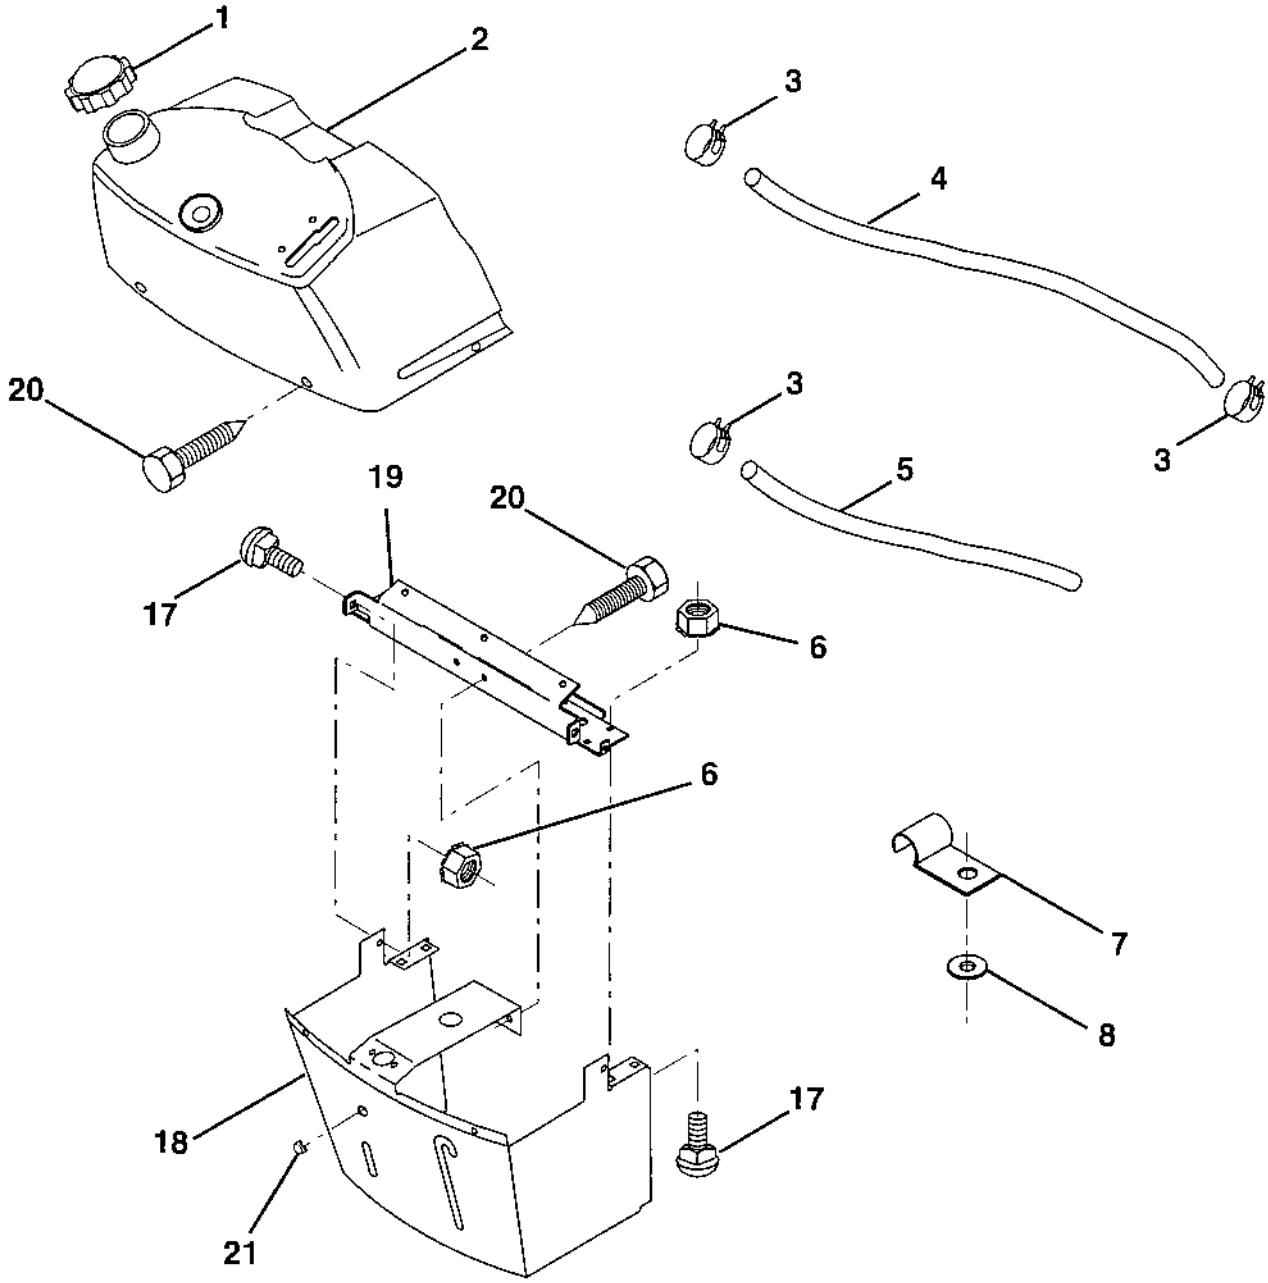


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532142187 | Cap, Fuel Tank |
| 2 | 532138395 | Assembly, Dash & Fuel Tank |
| 3 | 532123487 | Clamp, Hose |
| 4 | 532008544 | Line, Fuel |
| 5 | 532008548 | Line, Fuel |
| 6 | 873640400 | Nut, Keps Blk Hex 1/4-20 |
| 7 | 532124996 | Clip, Fuel Line |
| 8 | 819091216 | Washer 9/32 x 3/4 x 16 Gauge |
| 17 | 872110404 | Bolt, Carriage 1/4-20 x 1/2 Grade 5 |
| 18 | 532131886 | Support Assembly, Dash |
| 19 | 532134744 | Brace, Cross |
| 20 | 817060408 | Screw, Self-Tapping 1/4-20 x 1/2 |
| 21 | 532134014 | Plug, Dome, Black |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR -- MODEL NUMBER LR125 (954001202B)

### STEERING WHEEL

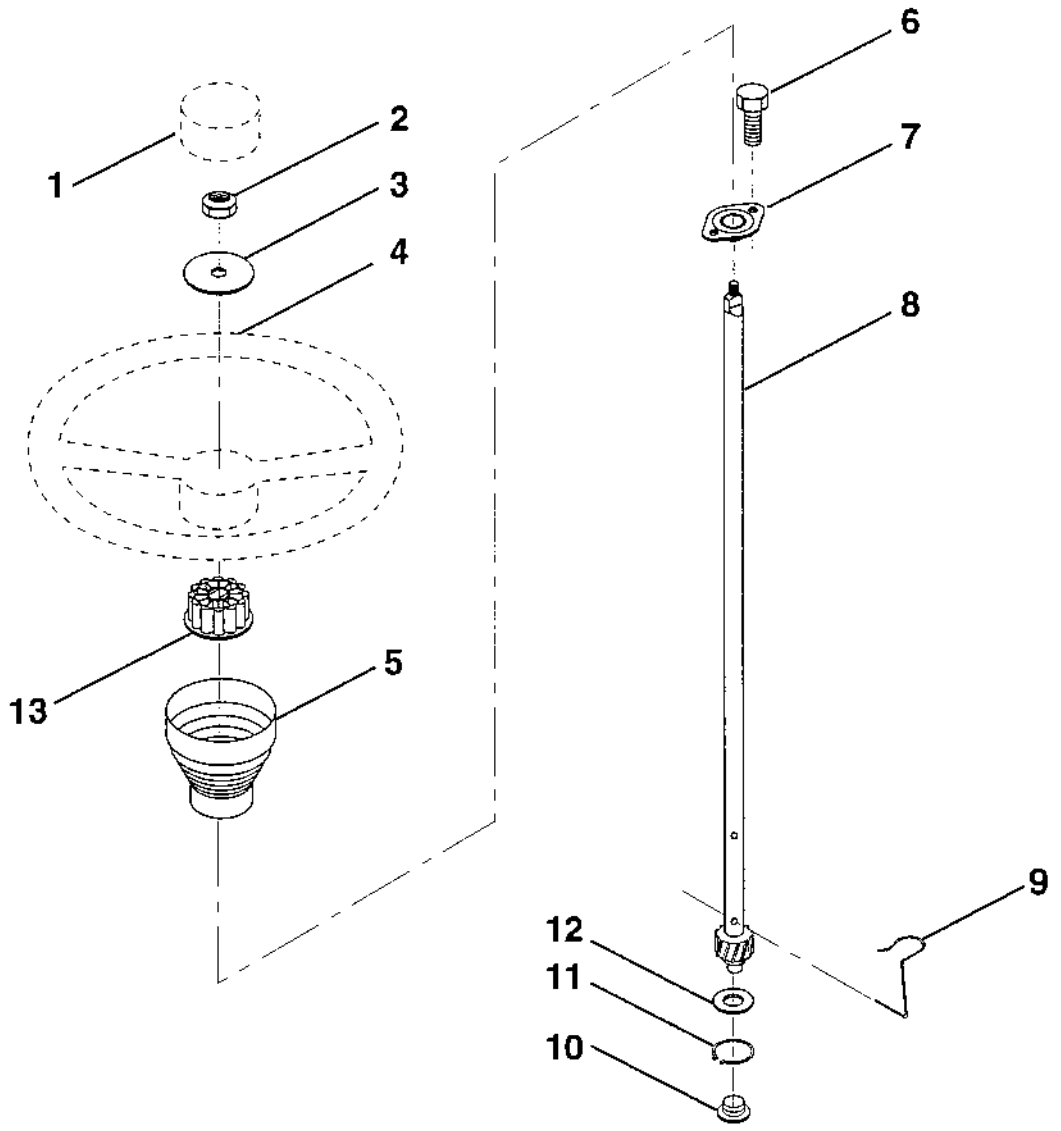


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532124416 | Insert, Steering Wheel |
| 2 | 532124701 | Locknut 3/8-24 UNF |
| 3 | 819133808 | Washer 12/32 x 2-3/8 x 8 Gauge |
| 4 | 532124415 | Steering Wheel |
| 5 | 532127396 | Sleeve, Steering |
| 6 | 817431008 | Screw, Hex Head #10-16 x 1/2 |
| 7 | 532102803 | Bushing, Steering |
| 8 | 532123651 | Shaft, Steering |
| 9 | 532124210 | Clip, Steering |
| 10 | 532123438 | Bushing, Lower, Steering |
| 11 | 812000045 | Ring, Retaining |
| 12 | 819211616 | Washer 21/32 x 1 x 16 Gauge |
| 13 | 532104820 | Adaptor, Steering Wheel |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR -- MODEL NUMBER LR125 (954001202B)

### SECTOR GEAR / AXLE SUPPORT

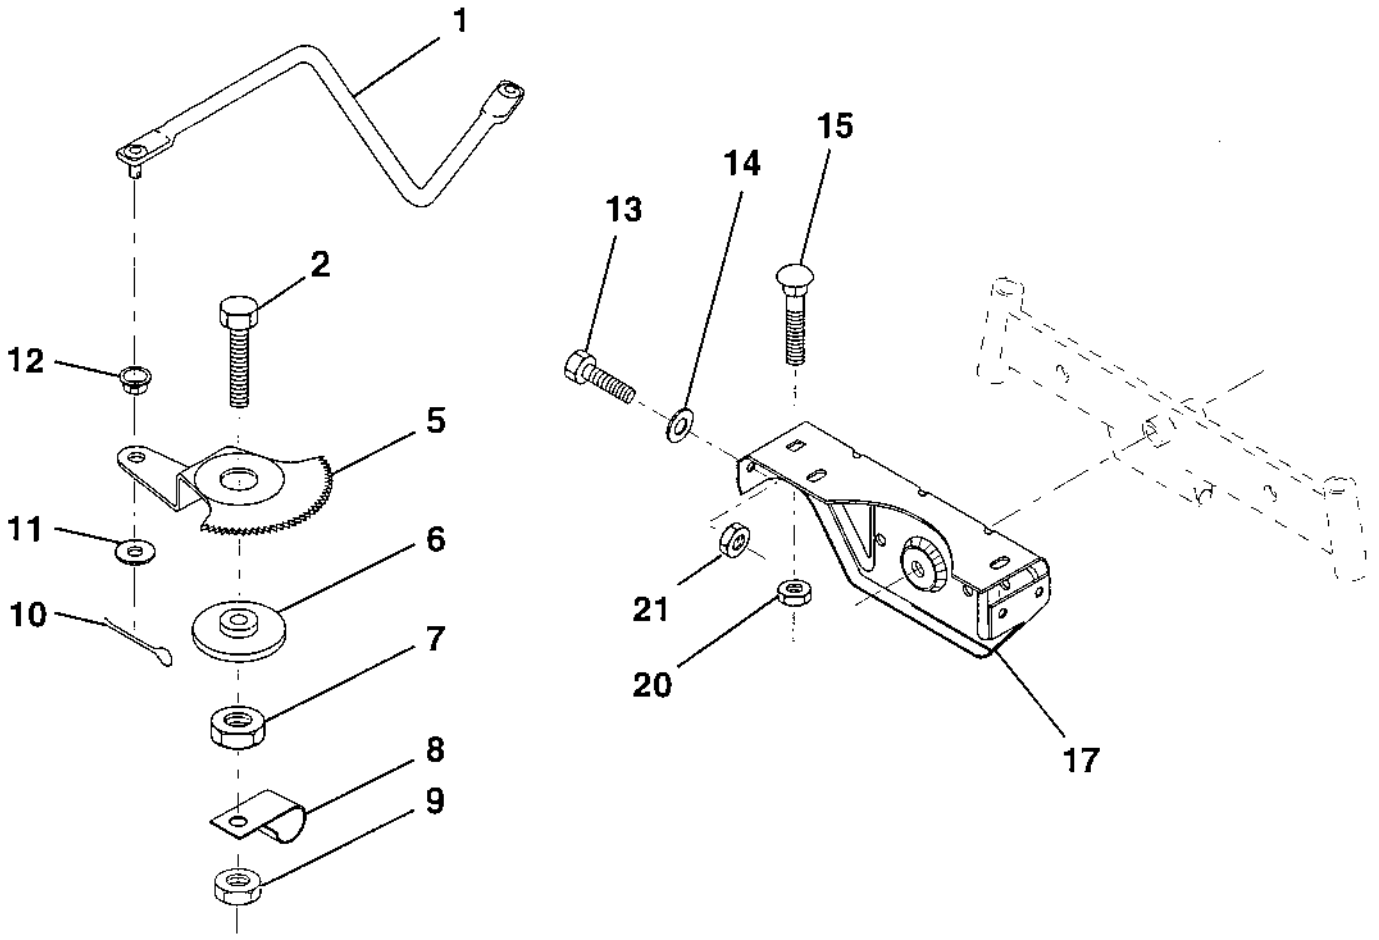


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532132566 | Link, Drag |
| 2 | 874780828 | Bolt, Hex, Fin. 1/2-13 x 1-3/4 |
| 5 | 532121926 | Gear, Sector |
| 6 | 532121927 | Bushing |
| 7 | 873030800 | Nut, Heavy Hex, Top Lock 1/2-13 UNC |
| 8 | 532126472 | Clip, Insulated |
| 9 | 873680800 | Nut, Crownlock 3/8-16 |
| 10 | 876020412 | Pin, Cotter 1/8 x 3/4 |
| 11 | 819131316 | Washer 13/32 x 13/16 x 16 Gauge |
| 12 | 532126847 | Bushing |
| 13 | 874760512 | Bolt, Hex Head 5/16-18 UNC x 1 |
| 14 | 819111416 | Washer 11/32 x 7/8 x 16 Gauge |
| 15 | 872110606 | Bolt, Carriage 3/8-16 UNC x 3/4 |
| 17 | 532137096 | Support, Front Axle |
| 20 | 873680600 | Nut Crownlock 3/8-16 |
| 21 | 873680500 | Nut Crownlock 5/16-18 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR -- MODEL NUMBER LR125 (954001202B)

### FRONT AXLE

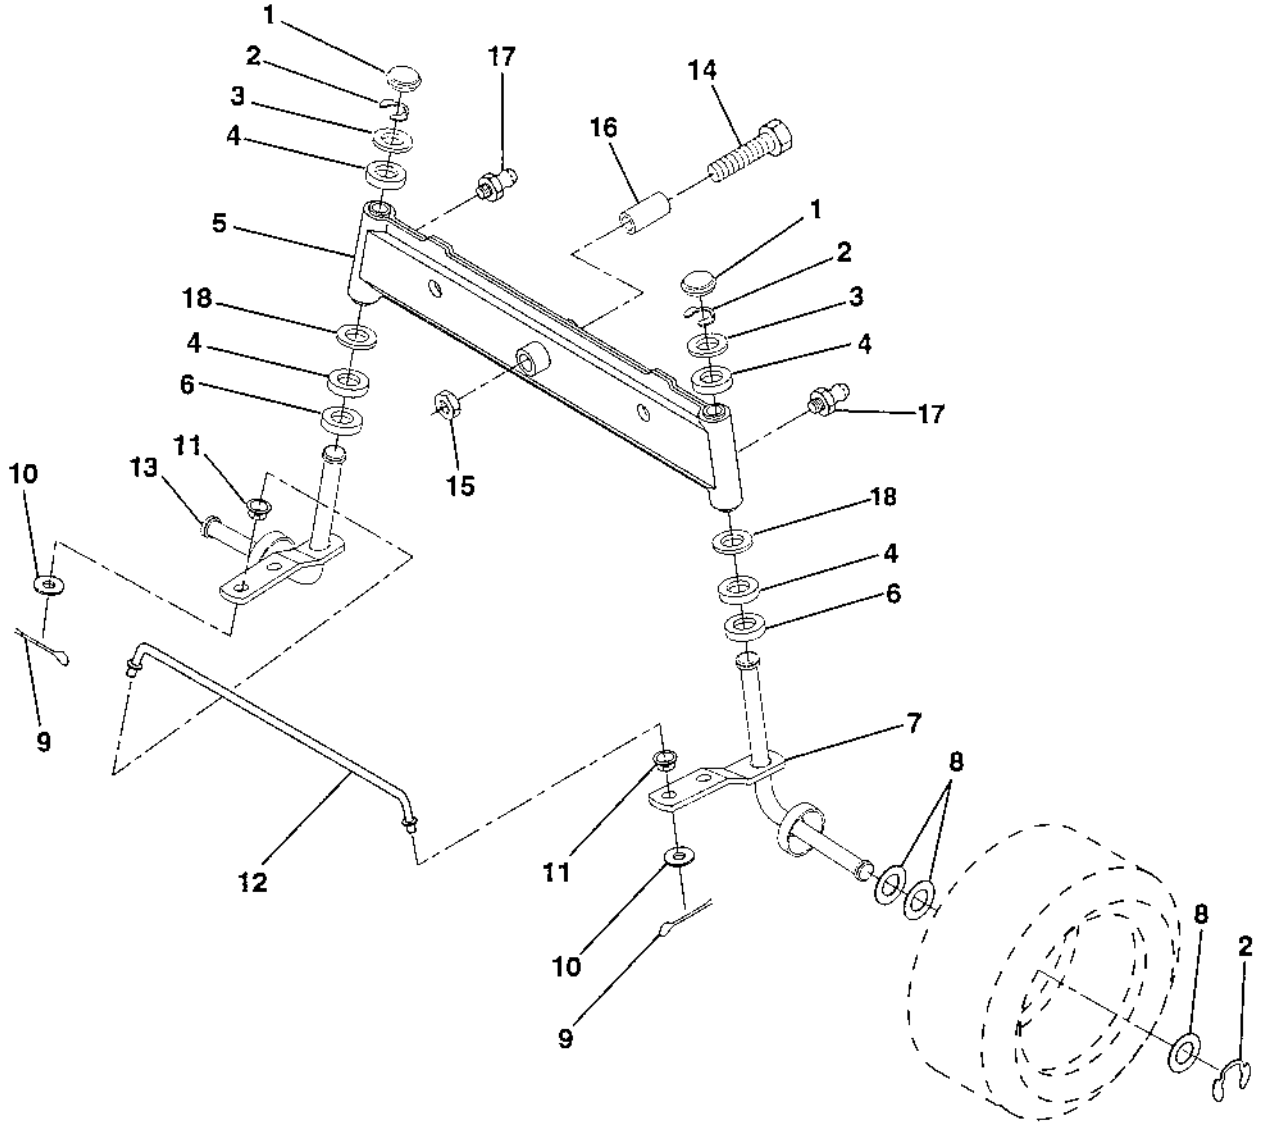


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532121232 | Cap, Spindle |
| 2 | 812000029 | Ring, Clip |
| 3 | 532121748 | Washer 25/32 x 1-5/8 x 16 Gauge |
| 4 | 532124937 | Bearing |
| 5 | 532142033 | Axle, Front |
| 6 | 532124931 | Bearing, Thrust |
| 7 | 532137062 | Spindle Assembly, R.H. |
| 8 | 532121749 | Washer 25/32 x 1-1/4 x 16 Gauge |
| 9 | 876020412 | Pin, Cotter 1/8 x 3/4 |
| 10 | 819131316 | Washer 13/32 x 13/16 x 16 Gauge |
| 11 | 532126847 | Bushing |
| 12 | 532130465 | Tie Rod |
| 13 | 532137061 | Spindle Assembly, L.H. |
| 14 | 874011056 | Bolt Hex 5/8-11 Unc x 3-1/2 |
| 15 | 873901000 | Nut Lock Flange 5/8-11 Unc |
| 16 | 532110438 | Spacer Bearing |
| 17 | 532124836 | Fitting Grease |
| 18 | 819272016 | Washer 27/32 x 1-1/4 x 16 Ga. |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR -- MODEL NUMBER LR125 (954001202B)

### BRAKE / REAR MOWER LIFT ASSEMBLY

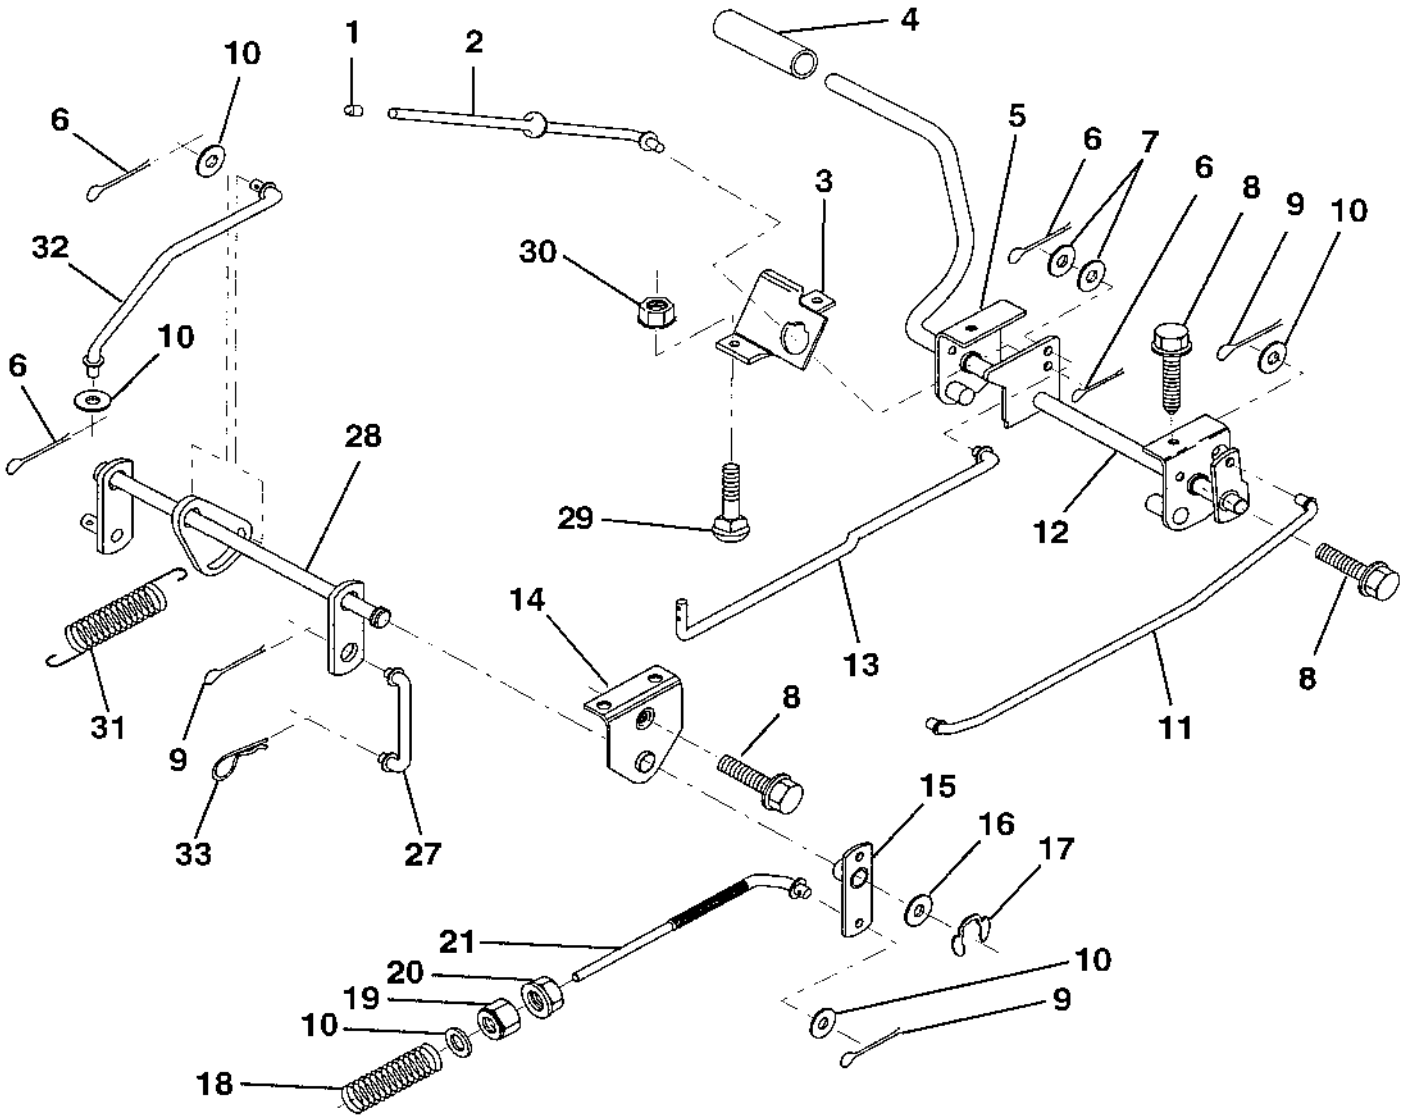


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532071673 | Cap, Plunger |
| 2 | 532123436 | Rod, Parking Brake |
| 3 | 532123437 | Bracket, Parking Brake |
| 4 | 532008156 | Cover, Pedal |
| 5 | 532132205 | Bracket, Clutch/Brake Pedal, L.H. |
| 6 | 876020312 | Pin, Cotter 3/32 x 3/4 |
| 7 | 819131016 | Washer 13/32 x 5/8 x 16 Gauge |
| 8 | 817490508 | Screw, Hex Head, Thd., Roll. 5/16-18 x 1/2 |
| 9 | 876020412 | Pin, Cotter 1/8 x 3/4 |
| 10 | 819131316 | Washer 13/32 x 13/16 x 16 Gauge |
| 11 | 532123543 | Rod, Brake, Front |
| 12 | 532139934 | Assembly, Clutch/Brake Pedal |
| 13 | 532123394 | Rod, Clutch |
| 14 | 532121978 | Bracket, Lift Shaft |
| 15 | 532133332 | Assembly, Brake, Pivot, Arm |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 16 | 819251816 | Washer 25/32 x 1-1/8 x 16 Gauge |
| 17 | 812000034 | Ring, Klip |
| 18 | 532106888 | Spring, Brake Rod |
| 19 | 873680600 | Nut, Crownlock 3/8-16 UNC |
| 20 | 873350600 | Nut, Hex, Jam 3/8-16 UNC |
| 21 | 532131460 | Rod, Brake, Rear |
| 27 | 532136780 | Link, Lift, Rear |
| 28 | 532140777 | Assembly, Rear Mower Lift |
| 29 | 872110506 | Bolt, Carriage 5/16-18 UNC x 3/4 |
| 30 | 873510500 | Nut, Hex, Keps 5/16-16 UNC |
| 31 | 532133095 | Spring, Counterbalance |
| 32 | 532133721 | Link, Lift Lever |
| 33 | 532124670 | Retainer Spring |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### ENGINE

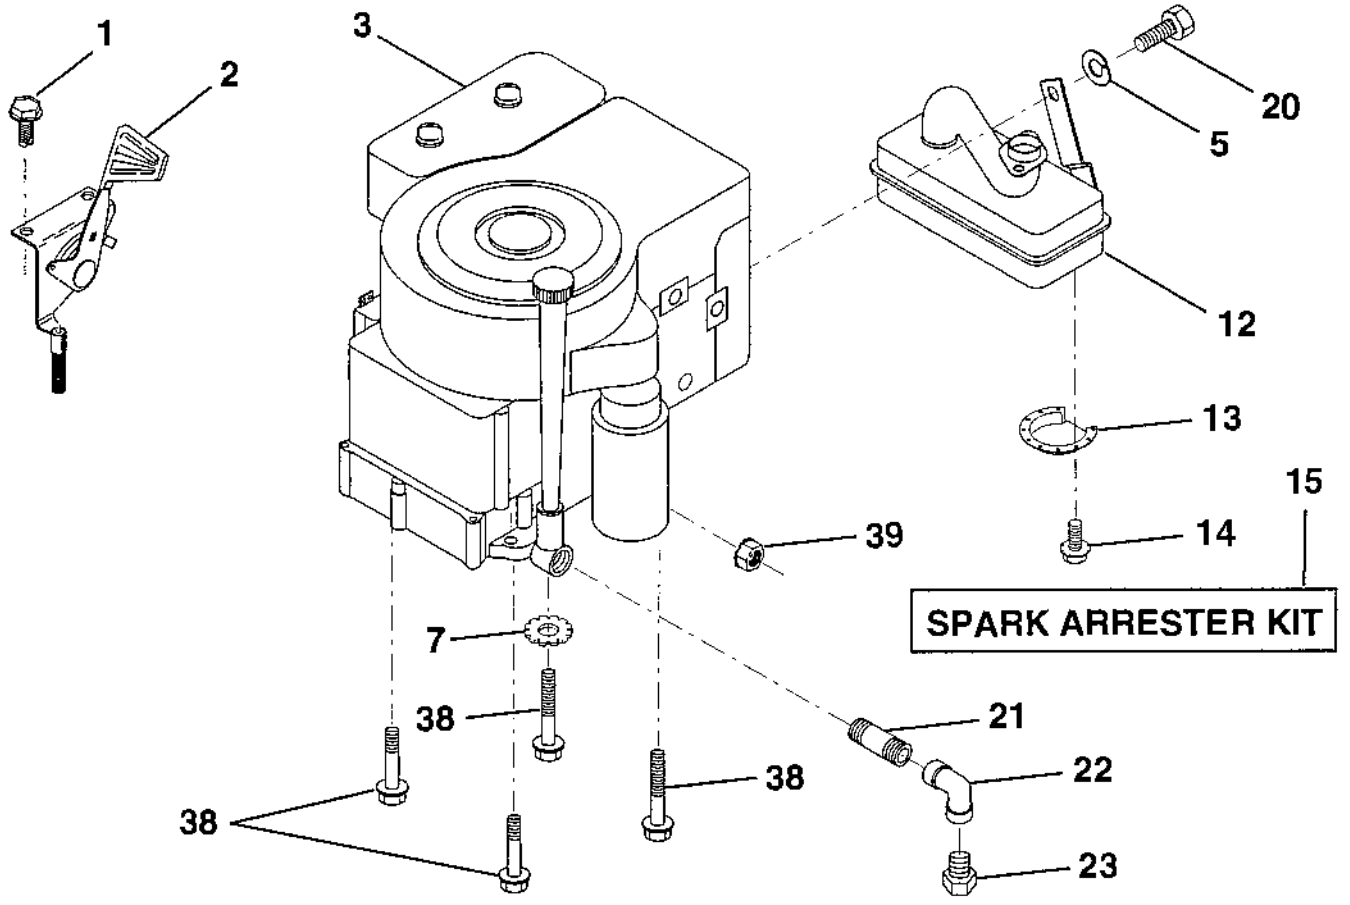


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 817060408 | Screw, Head Head, Thread Cutting 1/4-20 x 1/2 |
| 2 | 532132753 | Control, Throttle |
| 3 | - - - - - - - - | Engine, Kohler 12.5 Hp Model C.V.14 |
| 5 | 810040500 | Washer, Lock, Heavy Helical Spring 5/16 |
| 7 | 811050600 | Washer, Lock Ext. Tooth 3/8 |
| 12 | 532138149 | Muffler |
| 13 | 532101326 | Deflector, Muffler |
| 14 | 817030808 | Screw, Spiderlock |
| 15 | 532137180 | Arrester, Spark (Optional Equipment) |
| 20 | 874760508 | Bolt, Hex Hd. 5/16-18 x 1/2 |
| 21 | 813280328 | Nipple, Pipe 3/8 NPT x 3-1/2 |
| 22 | 813200300 | Elbow, STD 90 Degree 3/8-18NPT |
| 23 | - - - - - - - | Nipple, Pipe (Order from eng. mfg.) |
| 38 | 532125398 | Bolt, Hex |
| 39 | 873510400 | Nut Keps Hex 1/4-20 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### GROUND DRIVE

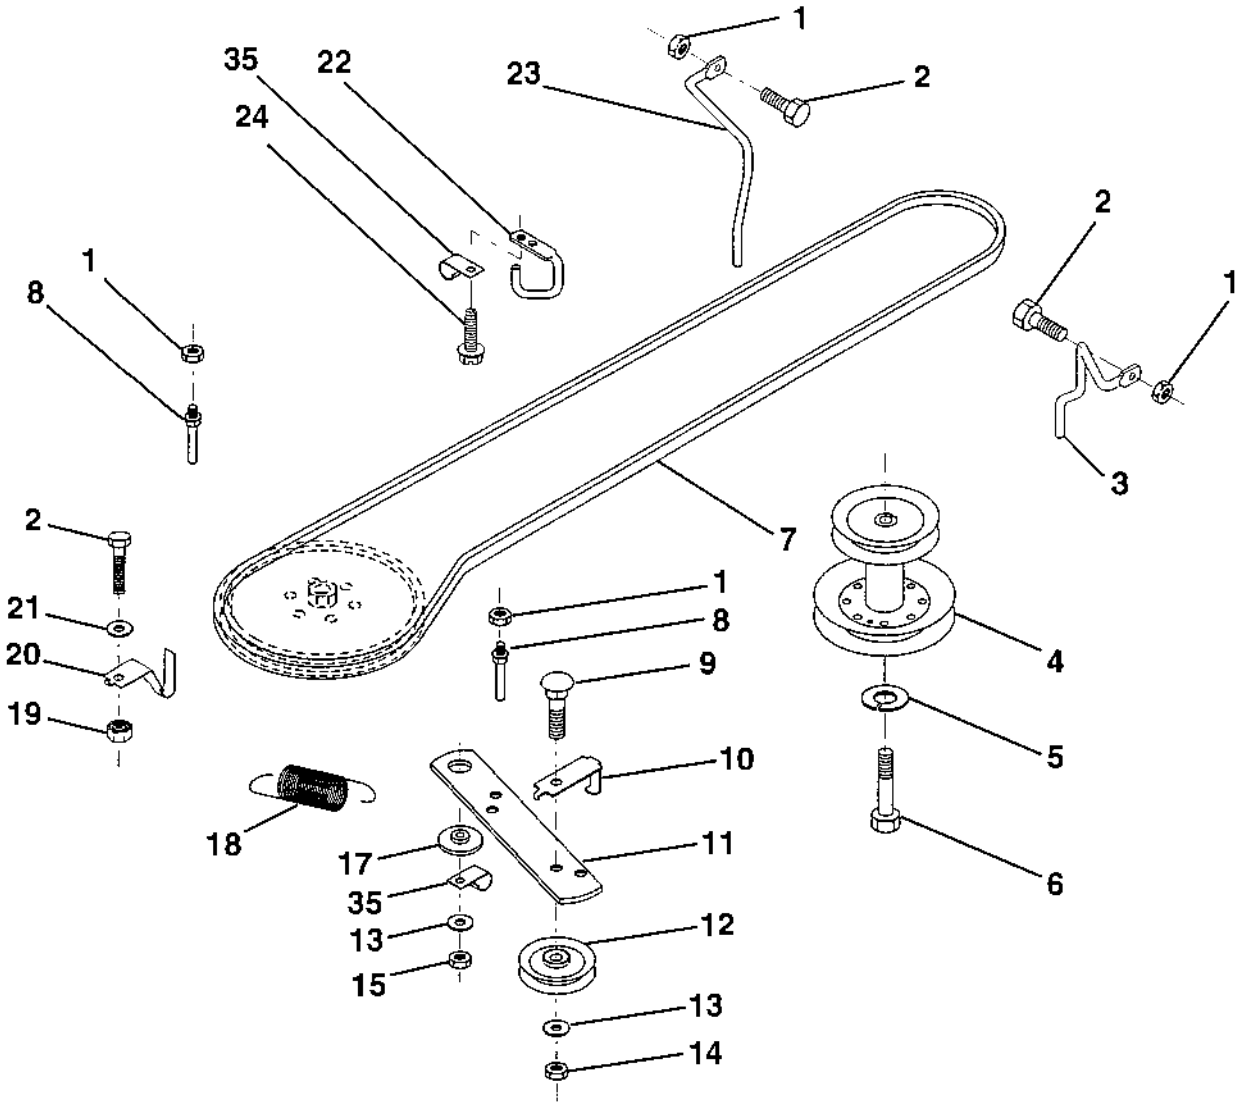


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 873680500 | Nut, Corwnlock 5/16-18 |
| 2 | 874760512 | Bolt, Hex Head 5/16-18 UNC x 3/4 |
| 3 | 532141341 | Keeper, Mower Drive, R.H. |
| 4 | 532138029 | Pulley, Engine |
| 5 | 810040700 | Washer, Lock 7/16 |
| 6 | 532138887 | Bolt, Fin Hex M10 x 1.5 x 75 MM |
| 7 | 532124525 | Traction, V-Belt Drive |
| 8 | 532123405 | Keeper, T/A, Ground Drive Belt |
| 9 | 872140612 | Bolt, Carriage 3/8-16 UNC x 1-1/2 |
| 10 | 532123396 | Keeper, Ground Drive Belt Idler |
| 11 | 532140911 | Arm, Ground Drive Clutch |
| 12 | 532123674 | Idler, Flat |
| 13 | 819131316 | Washer 13/32 x 13/16 x 16 Gauge |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 14 | 873930600 | Nut, Hex, Centerlock 3/8-16 UNC |
| 15 | 873680600 | Nut, Crownlock 3/8-16 UNC |
| 17 | 532122052 | Spacer, Retainer |
| 18 | 532131459 | Spring, Extension |
| 19 | 873510500 | Nut, Hex, Keps 5/16-18 UNC |
| 20 | 532139919 | Keeper, T/A, Ground Drive Belt |
| 21 | 819111016 | Washer 11/32 x 5/8 x 16 Gauge |
| 22 | 532123404 | Keeper, Frame Ground Drive Belt |
| 23 | 532146792 | Keeper, Belt LH Front |
| 24 | 817720408 | Screw, Thd. Cut 1/4-20 x 1/2 |
| 35 | 532126472 | Clip, Insulated |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### MOWER LIFT LEVER

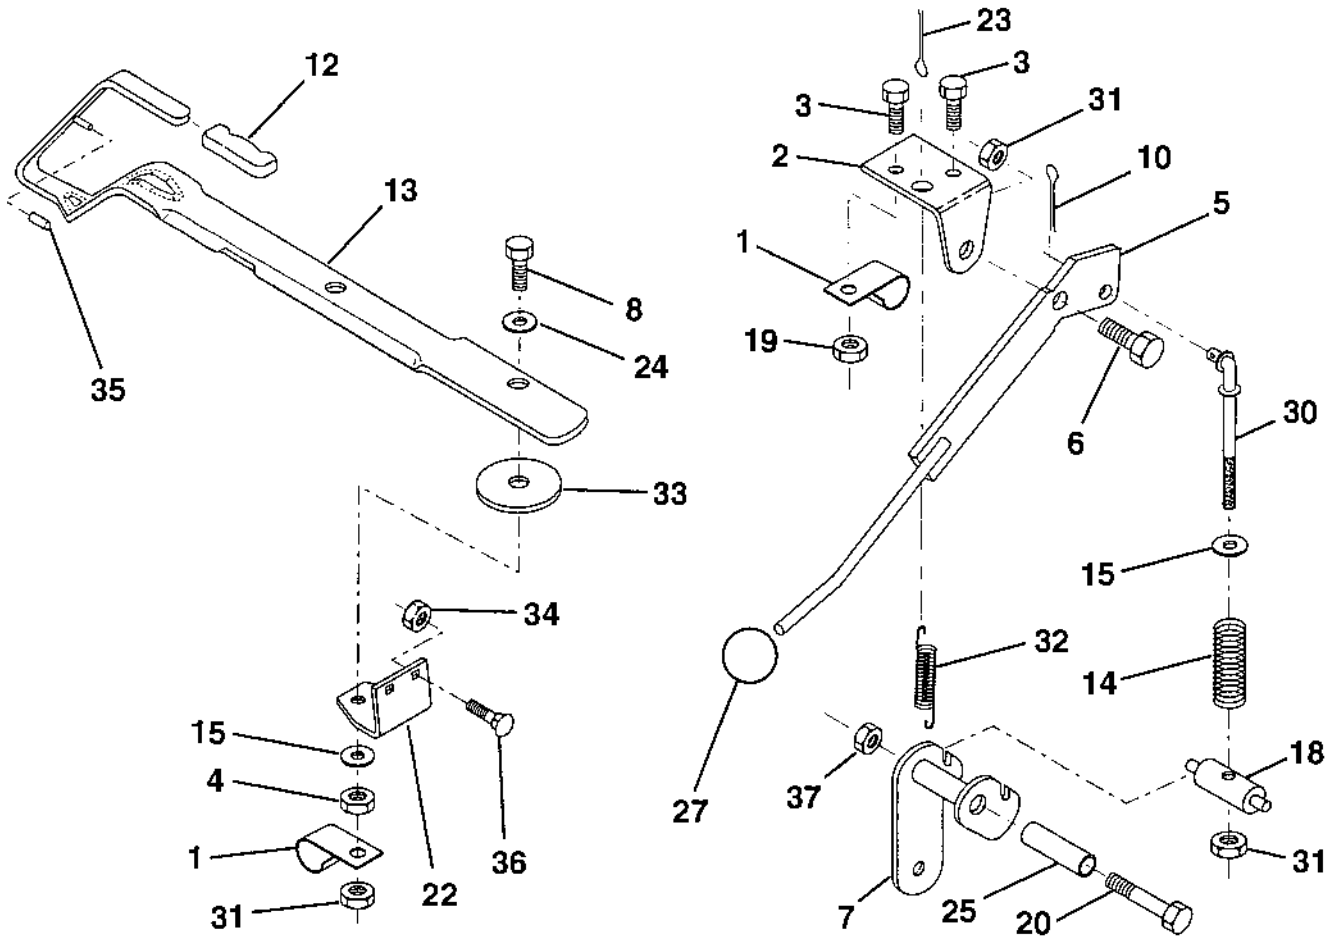


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532126470 | Clip, Insulated |
| 2 | 532122018 | Bracket, Mower Clutch |
| 3 | 871110408 | Bolt, Blk Fin. Hex 1/4-20 x 1/2 |
| 4 | 873930600 | Nut,Lock Hex w/Wsh 3/8-16 |
| 5 | 532147187 | Assembly, Clutch Lever |
| 6 | 532106451 | Bolt, Shoulder |
| 7 | 532141435 | Assembly, Mower Clutch Arm |
| 8 | 874930624 | Bolt, Hex Head 3/8-16 UNC x 1-1/2 |
| 10 | 876020412 | Pin, Cotter 1/8 x 3/4 |
| 12 | 532122027 | Handle, Lift Lever |
| 13 | 532136658 | Assembly, Lift Handle |
| 14 | 532133939 | Spring, Compression |
| 15 | 819131616 | Washer 13/32 x 1 x 11 Gauge |
| 18 | 532135107 | Trunnion, Threaded 3/8-16 |
| 19 | 873680400 | Nut, Crownlock 1/4-20 |
| 20 | 874760644 | Bolt, Hex Hd Fin 3/8-16 UNC x 2-3/4 |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 22 | 532132561 | Bracket, Lift Lever |
| 23 | 876020312 | Pin, Cotter 3/32 x 3/4 |
| 24 | 532007672 | Washer 25/64 x 1-1/4 x 12 Gauge |
| 25 | 532121933 | Tube, Spacer |
| 27 | 532121466 | Knob |
| 30 | 532135039 | Rod, Tension, Clutch |
| 31 | 873800600 | Nut, Lock Hex W/Ins. 3/8-16 |
| 32 | 532133435 | Spring, Extension, Return |
| 33 | 532062333 | Washer .390 x 1.437 x .074 |
| 34 | 873800500 | Nut,Lock Hex w/Ins 5/16-18 |
| 35 | 532133603 | Cap, Vinyl, Red |
| 36 | 872140506 | Bolt, Carriage 5/16-18 x 3/4 |
| 37 | 873680600 | Nut, Crownlock 3/8-16 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### TRANSAXLE

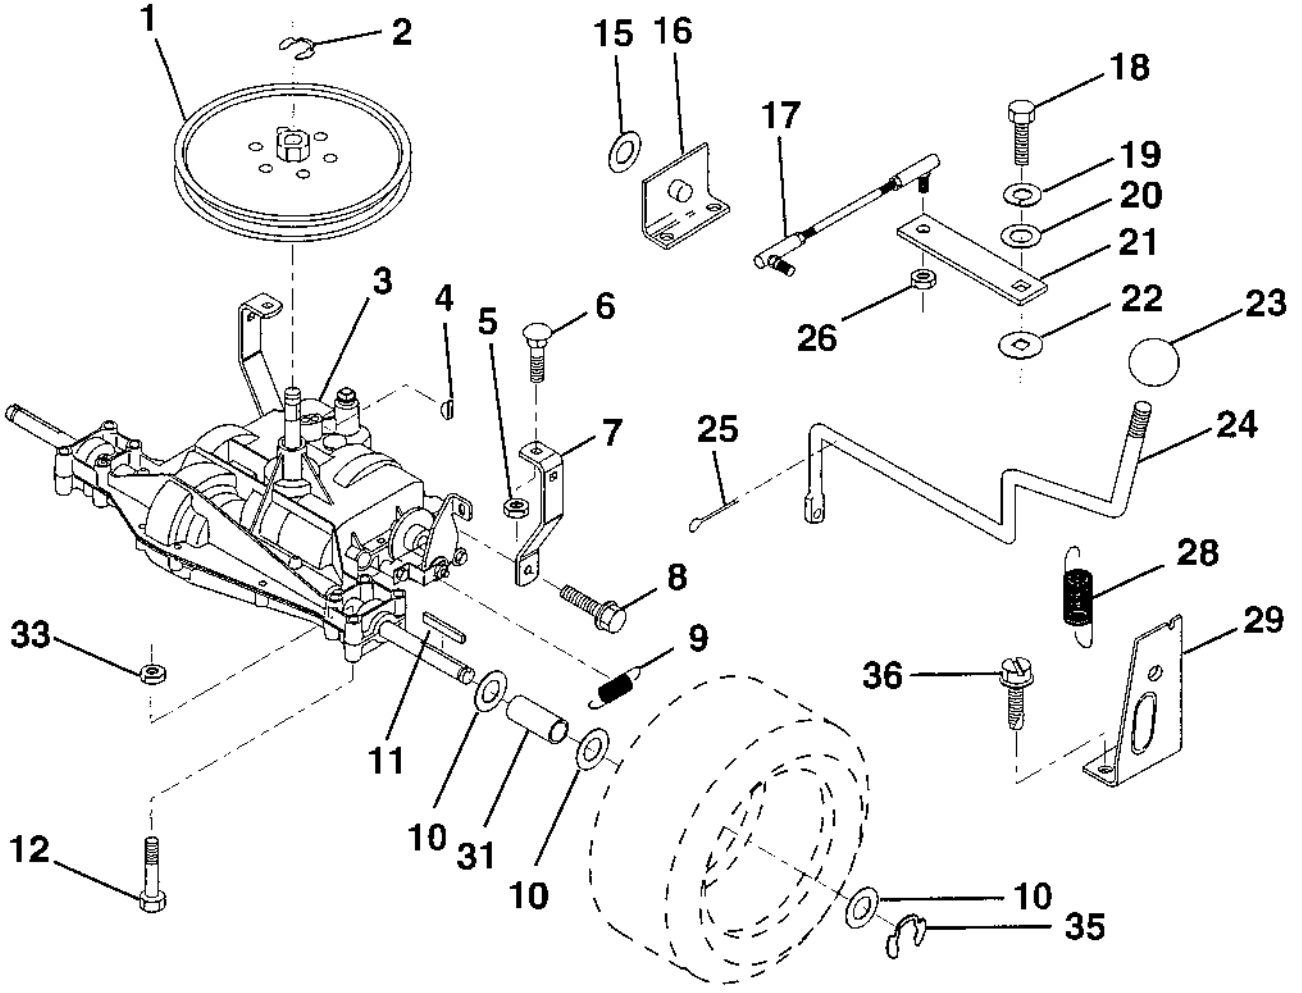


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532123385 | Pulley |
| 2 | 812000028 | Ring, Retainer |
| 3 | 532142603 | Transaxle, Dana Model No. 4360-79 |
| 4 | 532125096 | Key, Woodruff #9 |
| 5 | 873680500 | Nut, Crownlock 5/16-18 |
| 6 | 872140506 | Bolt, Carriage 5/16-18 UNC x 3/4 |
| 7 | 532123378 | Strap, Torque |
| 8 | 817490512 | Screw 5/16-18 x 3/4 |
| 9 | 532146682 | Spring, Brake |
| 10 | 532121749 | Washer 25/32 x 1-1/4 x 16 Gauge |
| 11 | 532123583 | Key, Square |
| 12 | 874760644 | Bolt, Hex, Fin. 3/8-16 Unc x 2-3/4 |
| 15 | 819171616 | Washer 17/32 x 1 x 16 Gauge |
| 16 | 532124600 | Support Handle Shiff, LH |
| 17 | 532123632 | Link, Shiff |
| 18 | 874550412 | Bolt, Hex, Fin. 1/4-28 UNF x 3/4 Grade 8 |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 19 | 810040400 | Washer, Lock 1/4 |
| 20 | 819091210 | Washer 9/32 x 3/4 x 10 Gauge |
| 21 | 532123539 | Arm, Shift |
| 22 | 532105701 | Washer, Shiff Plate |
| 23 | 532121274 | Knob, Duckhead |
| 24 | 532128215 | Rod Assembly, Shift |
| 25 | 876020416 | Pin, Cotter 1/8 x 1 |
| 26 | 873810500 | Locknut 5/16-24 UNF |
| 28 | 532128085 | Extension, Spring |
| 29 | 532128084 | Support Handle Shift, RH |
| 31 | 532109502 | Spacer Split |
| 33 | 873680600 | Nut, Crownlock 3/8-16 UNC |
| 35 | 812000001 | E-Ring |
| 36 | 817720408 | Screw, Thd. Cut 1/4-20 x 1/2 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### MOWER DECK

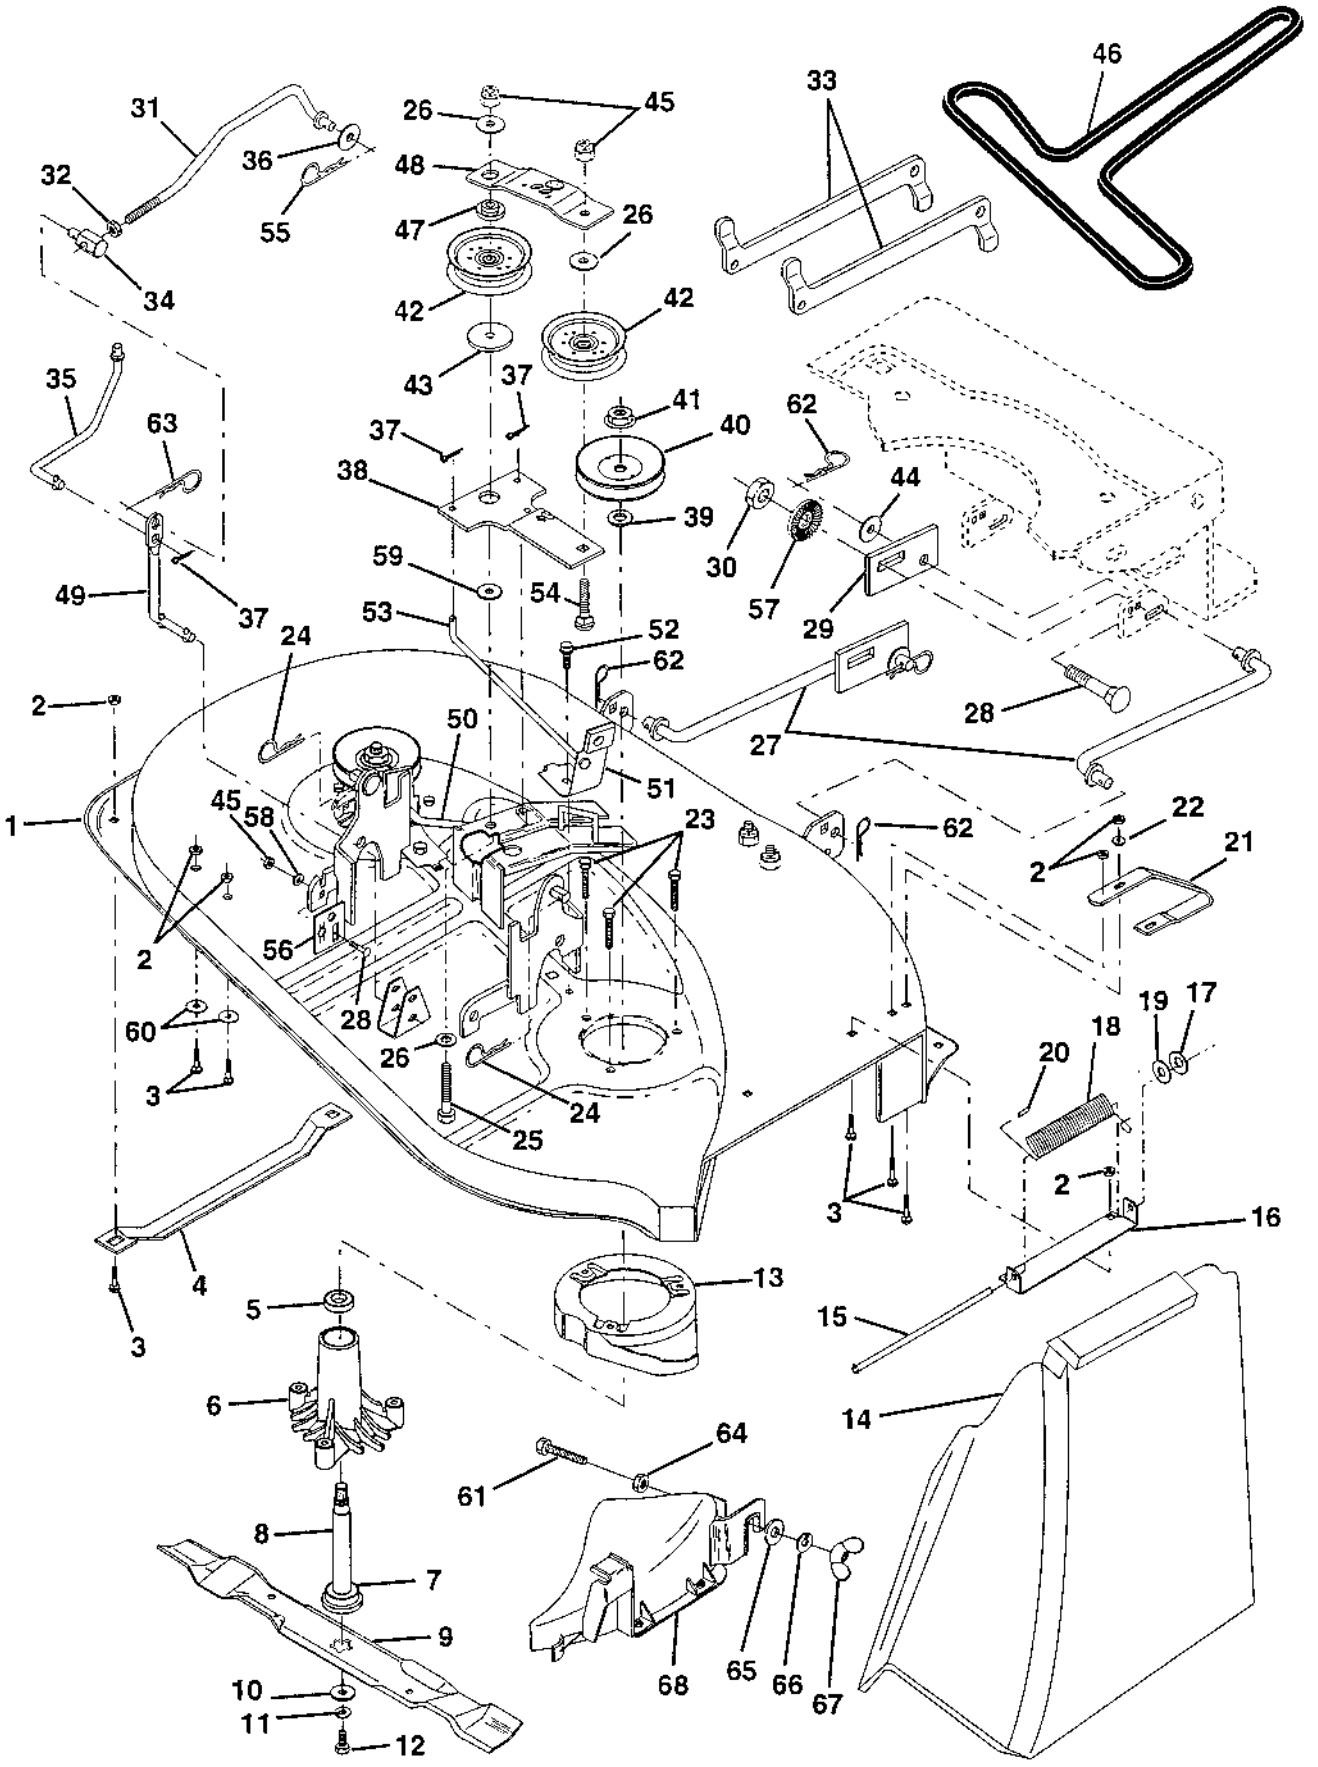

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

### MOWER DECK

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532142830 | Mower Deck Assembly |
| 2 | 873680500 | Nut, Crownlock 5/16-18 |
| 3 | 872140506 | Bolt, Carriage 5/16-18 x 3/4 |
| 4 | 532125074 | Runner, L.H. |
| 5 | 532110485 | Bearing |
| 6 | 532128774 | Housing, Mandrel |
| 7 | 532129895 | Bearing |
| 8 | 532137645 | Shaft and Bearing Assembly, Mandrel (Includes Key Number 7) |
| 9 | 532134148 | Blade |
| 10 | 532140296 | Washer, Hardened |
| 11 | 810030600 | Washer, Lock 3/8 |
| 12 | 532850857 | Bolt, Hex 3/8-24 x 1-1/4 Grade 8 |
| 13 | 532140329 | Stripper, Mower, Vented |
| 14 | 532106736 | Shield, Deflector |
| 15 | 532106735 | Rod, Hinge |
| 16 | 532137607 | Bracket Assembly, Deflector |
| 17 | 532110452 | Pushnut |
| 18 | 532123713 | Spring, Deflector |
| 19 | 819111016 | Washer 11/32 x 5/8 x 16 Gauge |
| 20 | 532105304 | Cap, Sleeve |
| 21 | 532128772 | Runner, R.H. |
| 22 | 819111216 | Washer 11/32 x 3/4 x 16 Gauge |
| 23 | 532138776 | Screw, Thdrol. Hex Hd. Zinc Mwr |
| 24 | 532124670 | Retainer, Spring |
| 25 | 874600636 | Bolt, Carriage 3/8-16 x 2-1/4 |
| 26 | 819131612 | Washer 13/32 x 1 x 12 Gauge |
| 27 | 532139756 | Link Assembly, Front |
| 28 | 872140608 | Bolt, RdHd SqNk 3/8-16 x 1 |
| 29 | 532139757 | Plate, Slide Link |
| 30 | 873800600 | Nut, Lock Hex w/Wsh 3/8-16 |
| 31 | 532140915 | Clutch Rod, Primary |
| 32 | 873350600 | Nut, Hex, Jam 3/8-16 |
| 33 | 532132559 | Arm, Suspension, Rear |
| 34 | 532133604 | Trunnion 3/8-16 |
| 35 | 532132554 | Clutch Rod, Secondary |
| 36 | 819131316 | Washer 13/32 x 13/16 x 16 Gauge |
| 37 | 876020312 | Pin, Cotter 3/32 x 3/4 |
| 38 | 532133840 | Idler Arm |
| 39 | 532129963 | Washer .150 Thick |
| 40 | 532129206 | Pulley, Mandrel |
| 41 | 532137266 | Nut, Flangelock 9/16 |
| 42 | 532121316 | Pulley, Flat Idler |
| 43 | 532122052 | Spacer, Retainer |
| 45 | 873680600 | Nut, Crownlock 3/8-16 |
| 46 | 532126520 | Belt |
| 47 | 532133502 | Spacer, Idler Arm |
| 48 | 532133503 | Stiffener, Idler Arm |
| 49 | 532133551 | Rod, Pivot |
| 50 | 532131289 | Rod, Brake, L.H. |
| 51 | 532130840 | Brake Assembly |
| 52 | 817490512 | Screw, Hex Washer Head, Thd., Roll. 5/16-18 x 3/4 |
| 53 | 532131288 | Rod, Brake, R.H. |
| 54 | 872110614 | Bolt, Carriage 3/8-16 x 1-3/4 Grade 5 |
| 55 | 532124961 | Spring, Retainer |
| 56 | 532136782 | Adjustment Plate, Rear Link, L.H. |
| 57 | 532144283 | Washer, Serranted 13/32 x 1 |
| 58 | 819131212 | Washer 13/32 x 3/4 x 12 Gauge |
| 59 | 532133943 | Washer, Hardened |
| 60 | 819111112 | Washer 11/32 x 11/16 x 12 Gauge |
| 61 | 874930620 | Bolt 3/8-16 x 1-1/4 |
| 62 | 532124660 | Retainer, Spring |
| 63 | 532124788 | Retainer, Spring |
| 64 | 873930600 | Nut Centerlock 3/8-16 |
| 65 | 819132016 | Washer 13/32 x 1-1/4 x 16 |
| 66 | 810040600 | Washer Lock Hvy Hicl |
| 67 | 532135651 | Nut Wing |
| 68 | 532132803 | Cover Asm. Mulching 38" |
| - - | 532130794 | Mandrel Assembly (Includes Key Numbers 5-8, 10-12, 39 and 41) |
| - - | 532142862 | Mower Deck, Complete (Std. Deck Order Mulcher Plate Components Separately Key Nos. 61, 64-68) |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

## TRANSAXLE DANA, MODEL NO. 4360-79

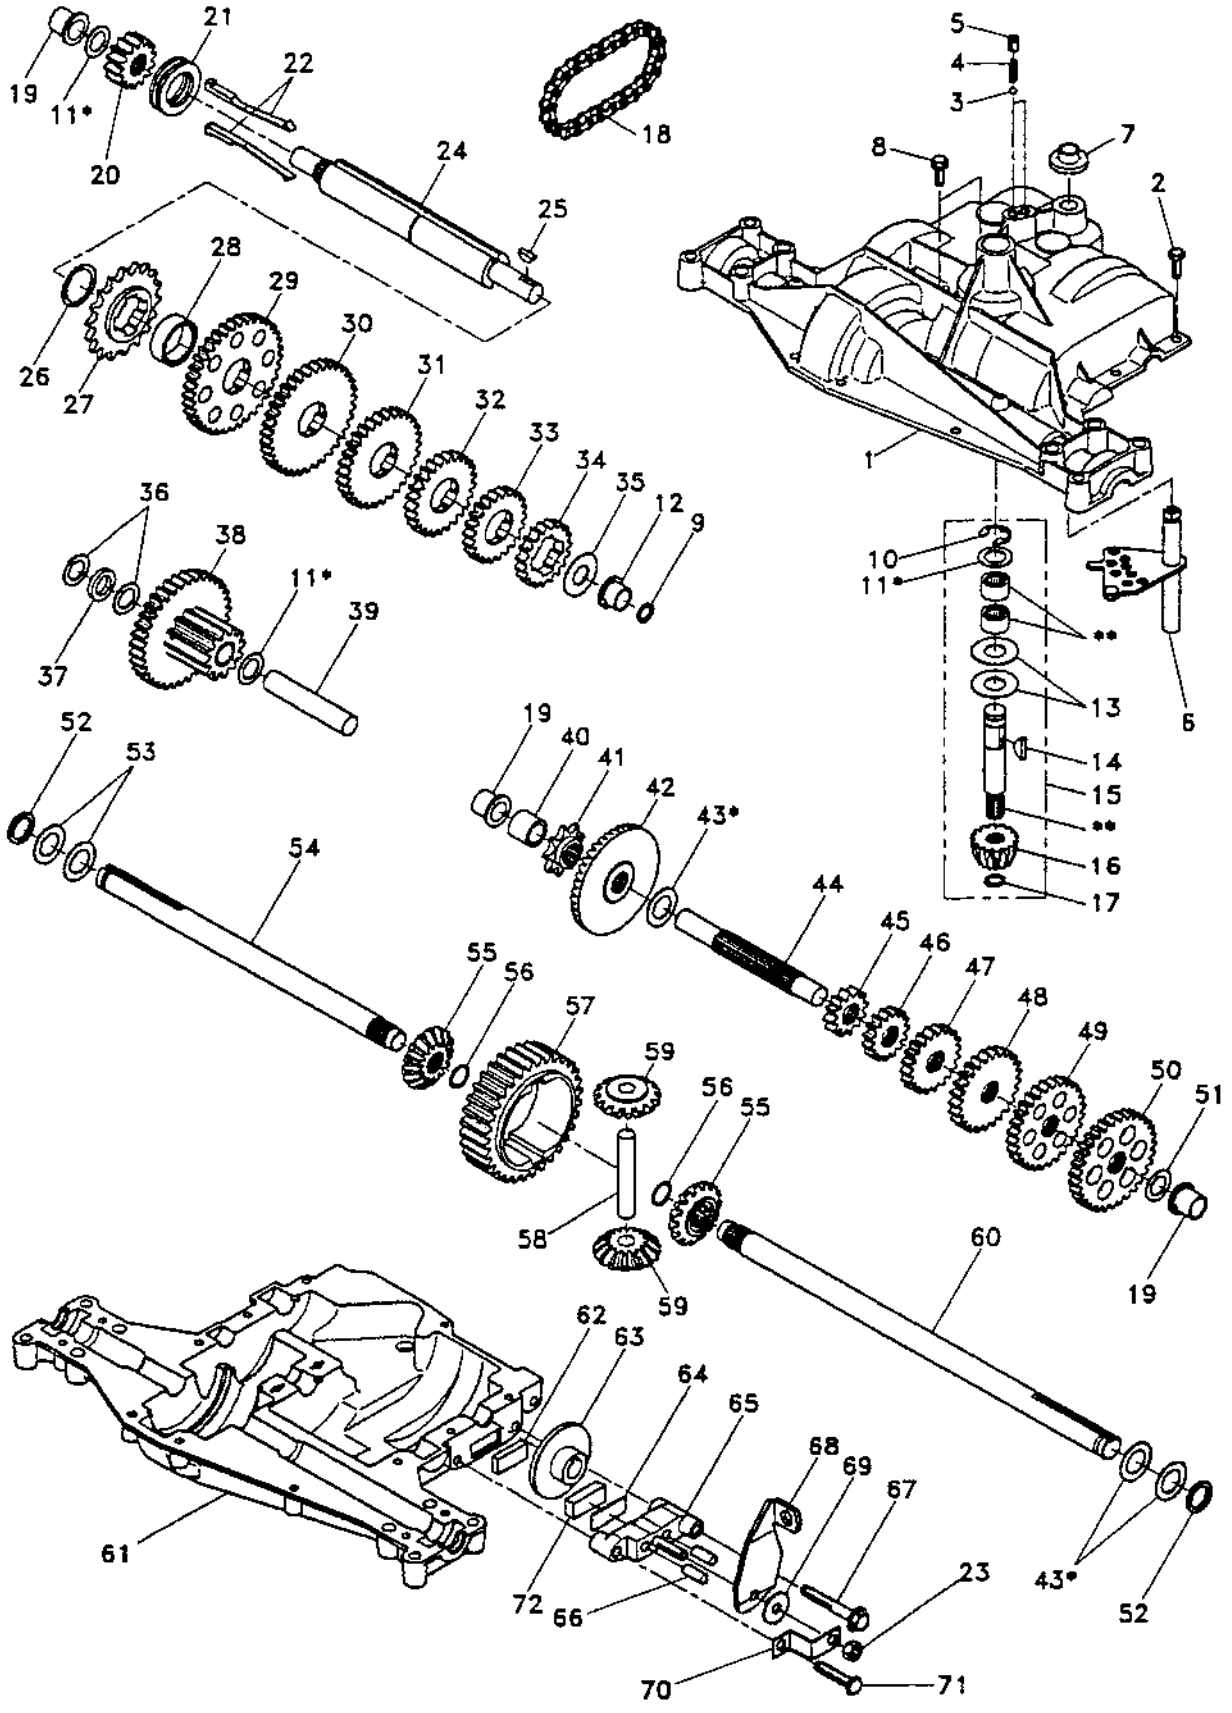

# REPAIR PARTS

## TRACTOR - - MODEL NUMBER LR125 (954001202B)

## TRANSAXLE DANA, MODEL NO. 4360-79

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532142671 | Housing, Upper |
| 2 | 532002274 | Screw, Self-Tapping, Large 1/4-20 x .734 |
| 3 | 532134400 | Ball, Detent |
| 4 | 532105904 | Spring, Detent |
| 5 | 532105905 | Screw, Set |
| 6 | 532138235 | Kit, Shifter Assembly |
| 7 | 532134399 | Boot, Shifter |
| 8 | 532134791 | Screw, Self-Tapping, with Sealer |
| 9 | 532138241 | Square Ring |
| 10 | 532142672 | Ring, Retaining |
| 11 | 532134793 | * Assembly, Kit, Shim .625 Shaft |
| 12 | 532142673 | Bearing, Flange |
| 13 | 532120415 | Washer, Plain .632 x 1.38 x .046 |
| 14 | 532142674 | Key, Woodruff, #9 |
| 15 | 532138234 | Assembly, Kit, Input Shaft |
| 16 | 532110078 | Pinion, Bevel, 14 Teeth |
| 17 | 532105909 | Ring, Retaining |
| 18 | 532105910 | Chain, 24 Pitches |
| 19 | 532105911 | Bearing, Flange |
| 20 | 532142675 | Gear, Spur, 14 Teeth |
| 21 | 532138246 | Collar, Clutch |
| 22 | 532138236 | Assembly, Kit, Clutch Keys |
| 23 | 873810500 | Locknut 5/16-24 |
| 24 | 532142676 | Shaft, Intermediate |
| 25 | 532002244 | Key, Woodruff, #61 |
| 26 | 532105916 | Ring, Retaining |
| 27 | 532120470 | Sprocket, 18 Teeth (Reverse) |
| 28 | 532110070 | Spacer |
| 29 | 532142677 | Gear, Spur, 37 Teeth (1st) |
| 30 | 532142681 | Gear, Spur, 35 Teeth (2nd) |
| 31 | 532120405 | Gear, Spur, 30 Teeth (3rd) |
| 32 | 532108980 | Gear, Spur, 25 Teeth (4th) |
| 33 | 532120406 | Gear, Spur, 22 Teeth (5th) |
| 34 | 532134796 | Gear, Spur, 19 Teeth (6th) |
| 35 | 532105925 | Washer, Plain .640 x 1.37 x .061 |
| 36 | 532002232 | Washer, Plain .632 x 1.00 x .026 |
| 37 | 532108978 | Spacer .630 x 1.00 x .169 |
| 38 | 532110079 | Assembly, Gear, Combination of 12 Teeth and 35 Teeth |
| 39 | 532124639 | Shaft, Idler |
| 40 | 532120472 | Spacer .635 x .875 x .755 |
| 41 | 532105928 | Sprocket, 9 Teeth (Reverse) |
| 42 | 532110084 | Gear, Bevel, 42 Teeth |
| 43 | 532134394 | * Assembly, Kit, Shim .750 Shaft |
| 44 | 532120473 | Shaft, Drive |
| 45 | 532142678 | Gear, Spur, 12 Teeth (1st) |
| 46 | 532142679 | Gear, Spur, 15 Teeth (2nd) |
| 47 | 532120407 | Gear, Spur, 20 Teeth (3rd) |
| 48 | 532106589 | Gear, Spur, 25 Teeth (4th) |
| 49 | 532120408 | Gear, Spur, 28 Teeth (5th) |
| 50 | 532105937 | Gear, Spur, 31 Teeth (6th) |
| 51 | 532002226 | Washer, Plain .632 x 1.00 x .060 |
| 52 | 532134401 | Washer, Neoprene |
| 53 | 532002264 | Washer, Plain .758 x 1.25 x .031 |
| 54 | 532120474 | Axle, L.H. |
| 55 | 532110081 | Gear, Miter, 15 Teeth |
| 56 | 532105941 | Ring, Retaining |
| 57 | 532110071 | Gear, Spur, 32 Teeth |
| 58 | 532120952 | Shaft, Cross |
| 59 | 532110082 | Gear, Miter, 15 Teeth |
| 60 | 532123908 | Axle, R.H. |
| 61 | 532142680 | Housing, Lower |
| 62 | 532120961 | Puck, Friction |
| 63 | 532007294 | Disc, Brake |
| 64 | 532108989 | Spacer |
| 65 | 532120953 | Jaw, Brake |
| 66 | 532120954 | Pin, Dowel |
| 67 | 532134799 | Screw, Self-Tapping, Large 5/16-18 x 2.25 |
| 68 | 532138244 | Lever, Actuating |
| 69 | 532108996 | Washer, Plain .321 x 1.00 x .055 |
| 70 | 532120956 | Bracket, Anti-Rotation |
| 71 | 532106596 | Screw, Self-Tapping, Large 5/16-18 x 1.44 |
| 72 | 532120951 | Puck, Friction |
| 73 | 532120416 | Grease |

* Use in combinations to maintain proper clearances

** Order Key No. 15

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm