
Husqvarna

Illustrated Parts List	1996-01
	I9602017

GT 200

(HCGTK200A) 954840001

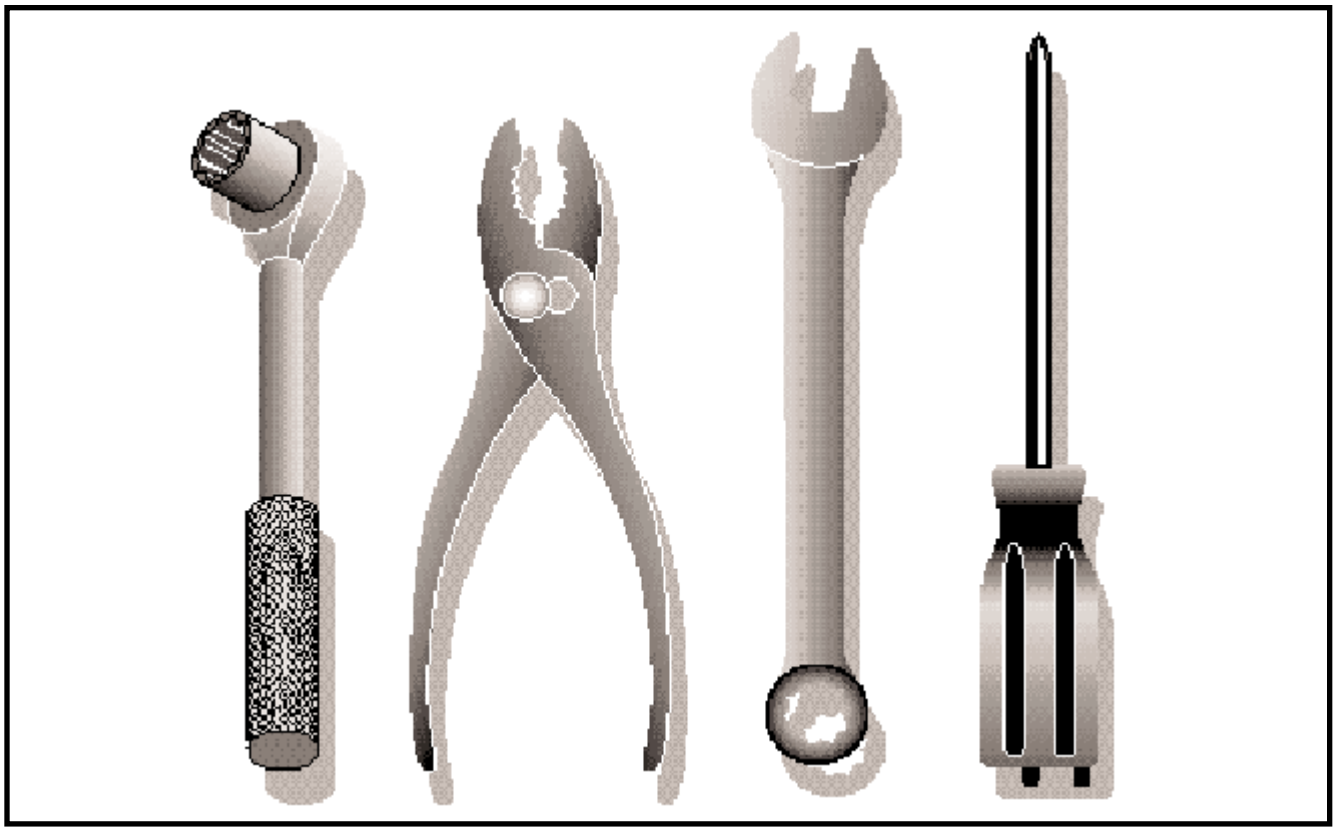


Repair Parts Manual

Ride Mower

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

SCHEMATIC

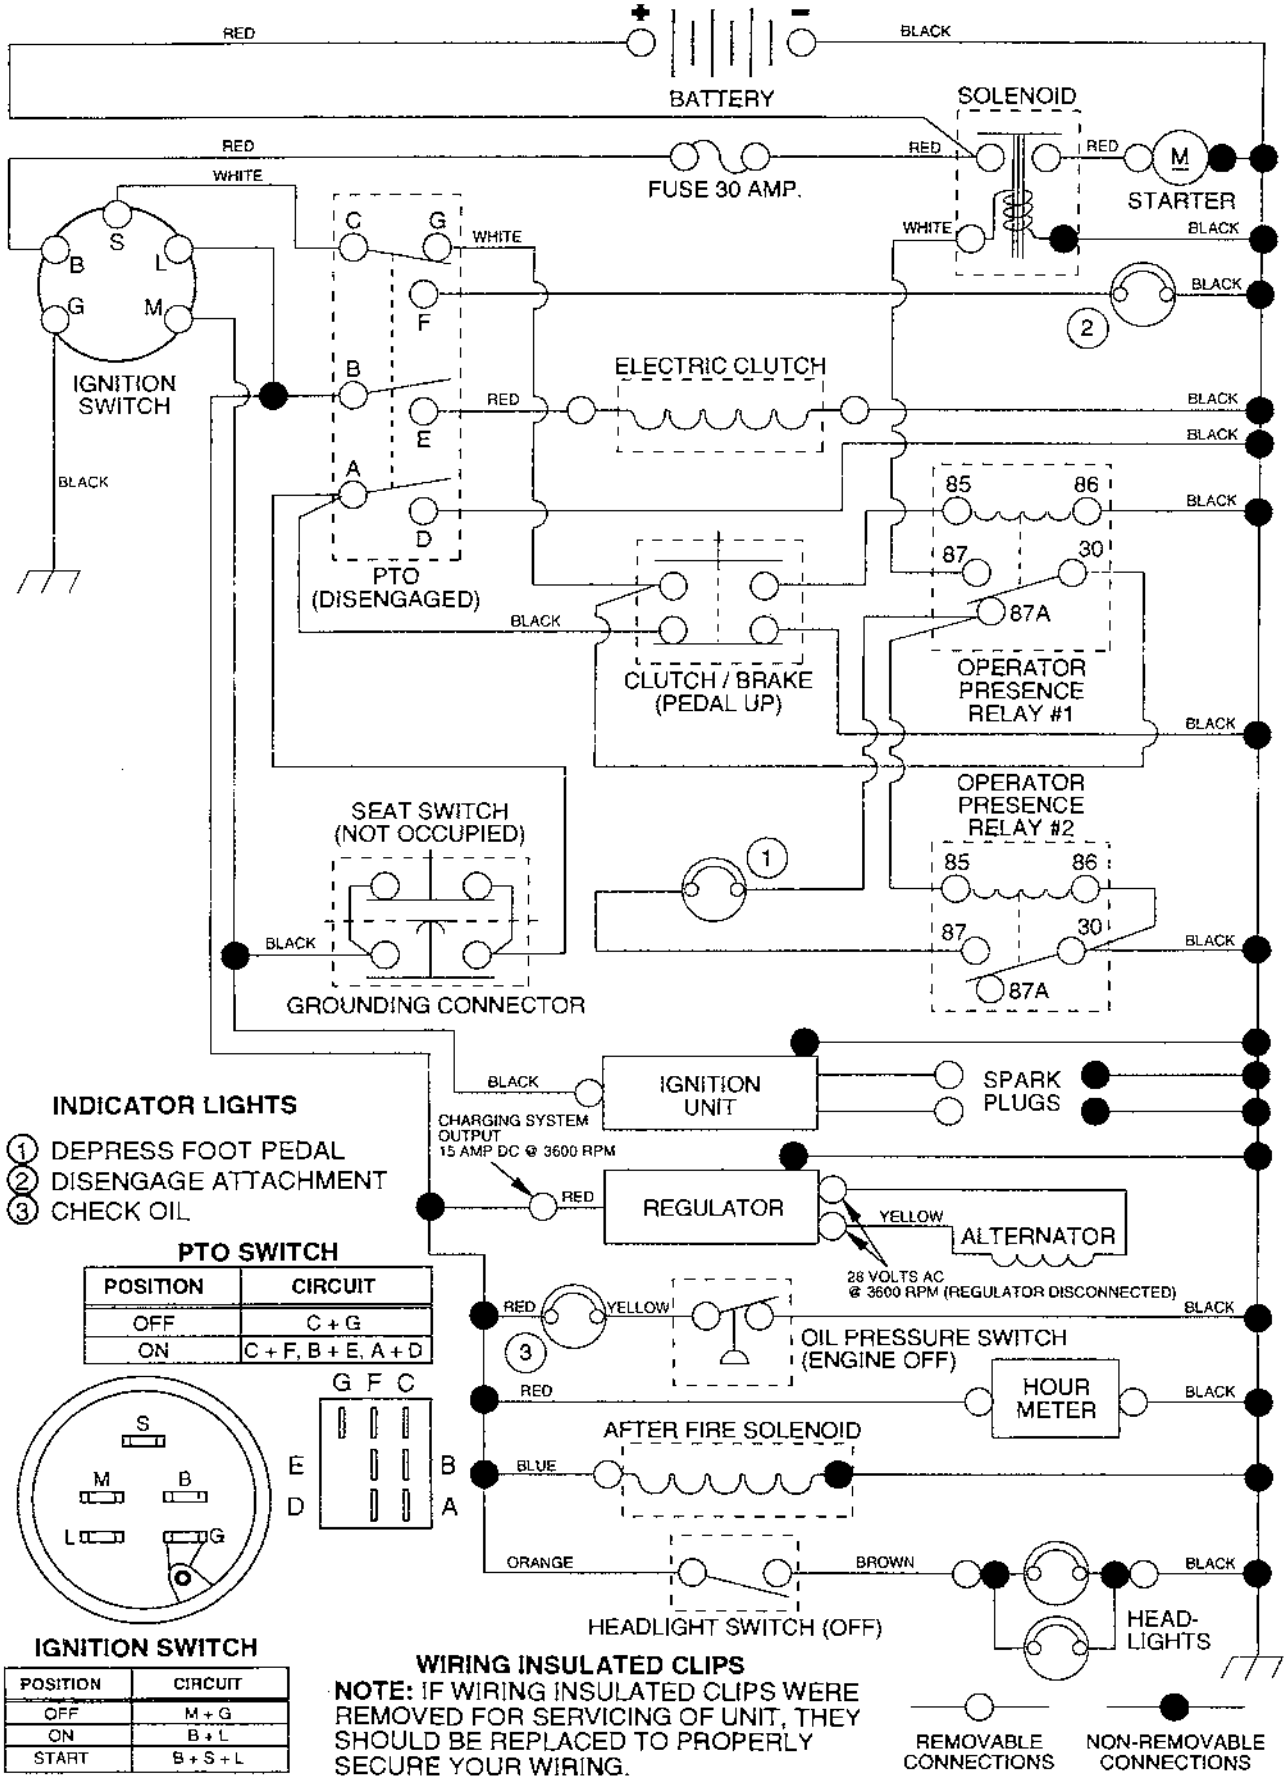

INDICATOR LIGHTS

1. DEPRESS FOOT PEDAL
2. DISENGAGE ATTACHMENT
3. CHECK OIL

PTO SWITCH

POSITION	CIRCUIT
OFF	C + G
ON	C + F, B + E, A + D

IGNITION SWITCH

POSITION	CIRCUIT
OFF	M + G
ON	B + L
START	B + S + L

WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.


REMOVABLE CONNECTIONS

NON-REMOVABLE CONNECTIONS

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

ELECTRICAL

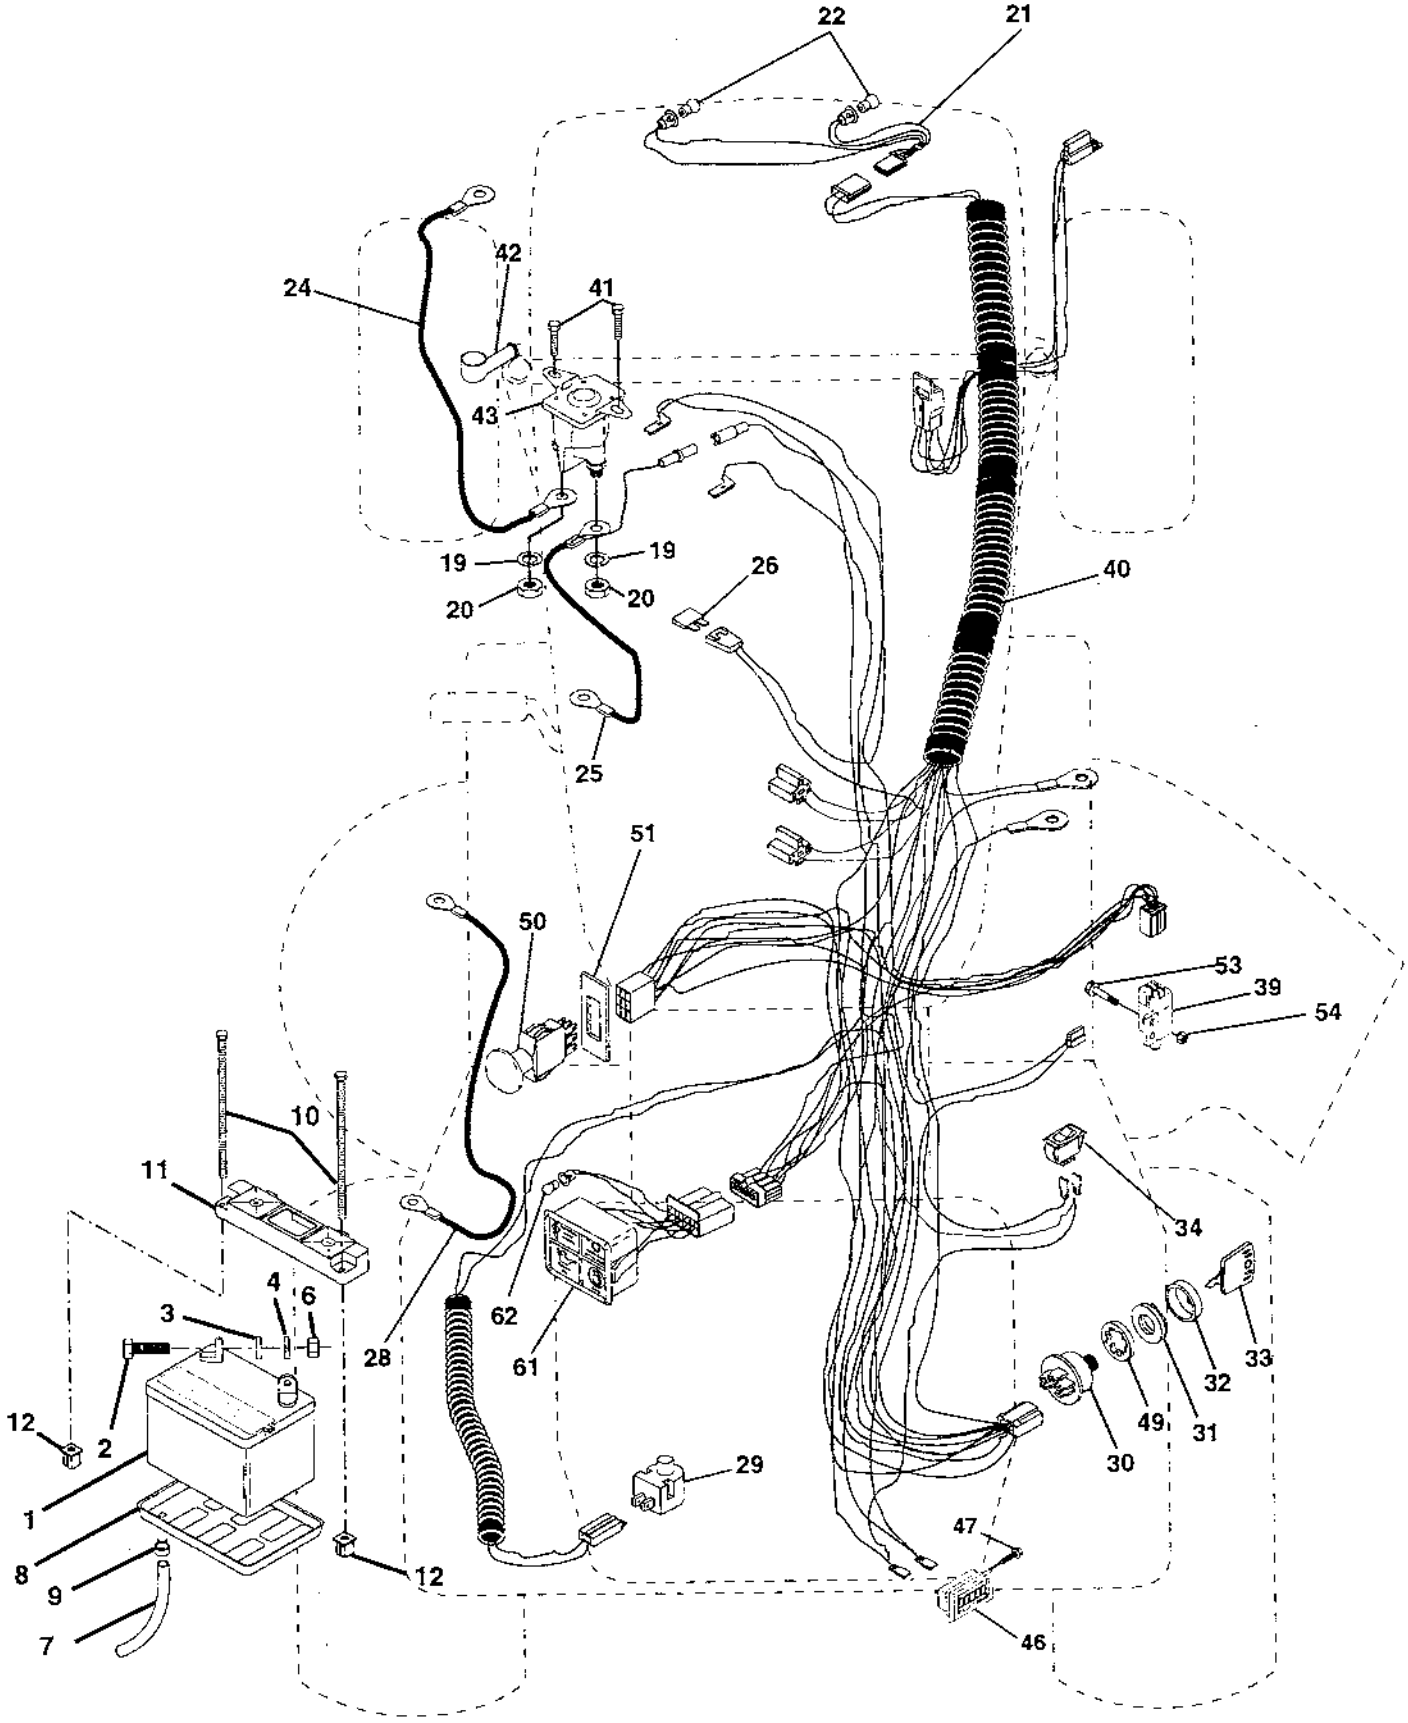

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

ELECTRICAL


KEY NO.	PART NO.	DESCRIPTION
1	532146141	Battery
2	874760412	Bolt Hex Head 1/4-20 x 3/4
3	810040400	Washer, Lock 1/4
4	819091016	Washer 9/32 x 5/8 x 16 Ga
6	873220400	Nut Fin Hex 1/4-20
7	532007697	Tube Plastic
8	532124886	Tray, Battery
9	532109596	Clamp, Hose
10	532145211	Bolt, Btr Frt 1/4-20 x 7-1/2 Zinc
11	532145209	Holddown Battery Dash Mount
12	532145769	Nut Push Nylon 1/4" Battery Frt.
19	810090400	Washer, Lock 1/4
20	873350400	Nut, Jam Hex 1/4-20
21	532136850	Harness Socket Light w/4152J
22	532004152	Bulb Light
24	532004014	Cable, Starter
25	532146686	Cable, Battery
26	532108824	Fuse
28	532006408	Cable, Ground
29	532121305	Switch, Plunger
30	532144921	Switch, Ign
31	532140400	Nut, Ignition Switch
32	532141226	Cover Switch Key
33	532140401	Key
34	532110712	Switch, Light
39	532109553	Intlk Switch
40	532151873	Harness Ign.
41	817720408	Screw 1/4-20 x 1/2
42	532131563	Cover, Terminal Red
43	532145673	Solenoid
46	532110940	Meter Hour
47	817011008	Screw #10-24 x 1/2
49	811151000	Washer, Lock Internal Tooth 5/8
50	532140404	Switch, PTO
51	532140405	Ring Retainer PTO
53	871031008	Screw Hex Washer Hd #10-32 x 1
54	873951000	Nut Keps #10-32
61	532138101	Light Pkg Asm
62	532110143	Bulb, Light Pkg.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

CHASSIS AND ENCLOSURES

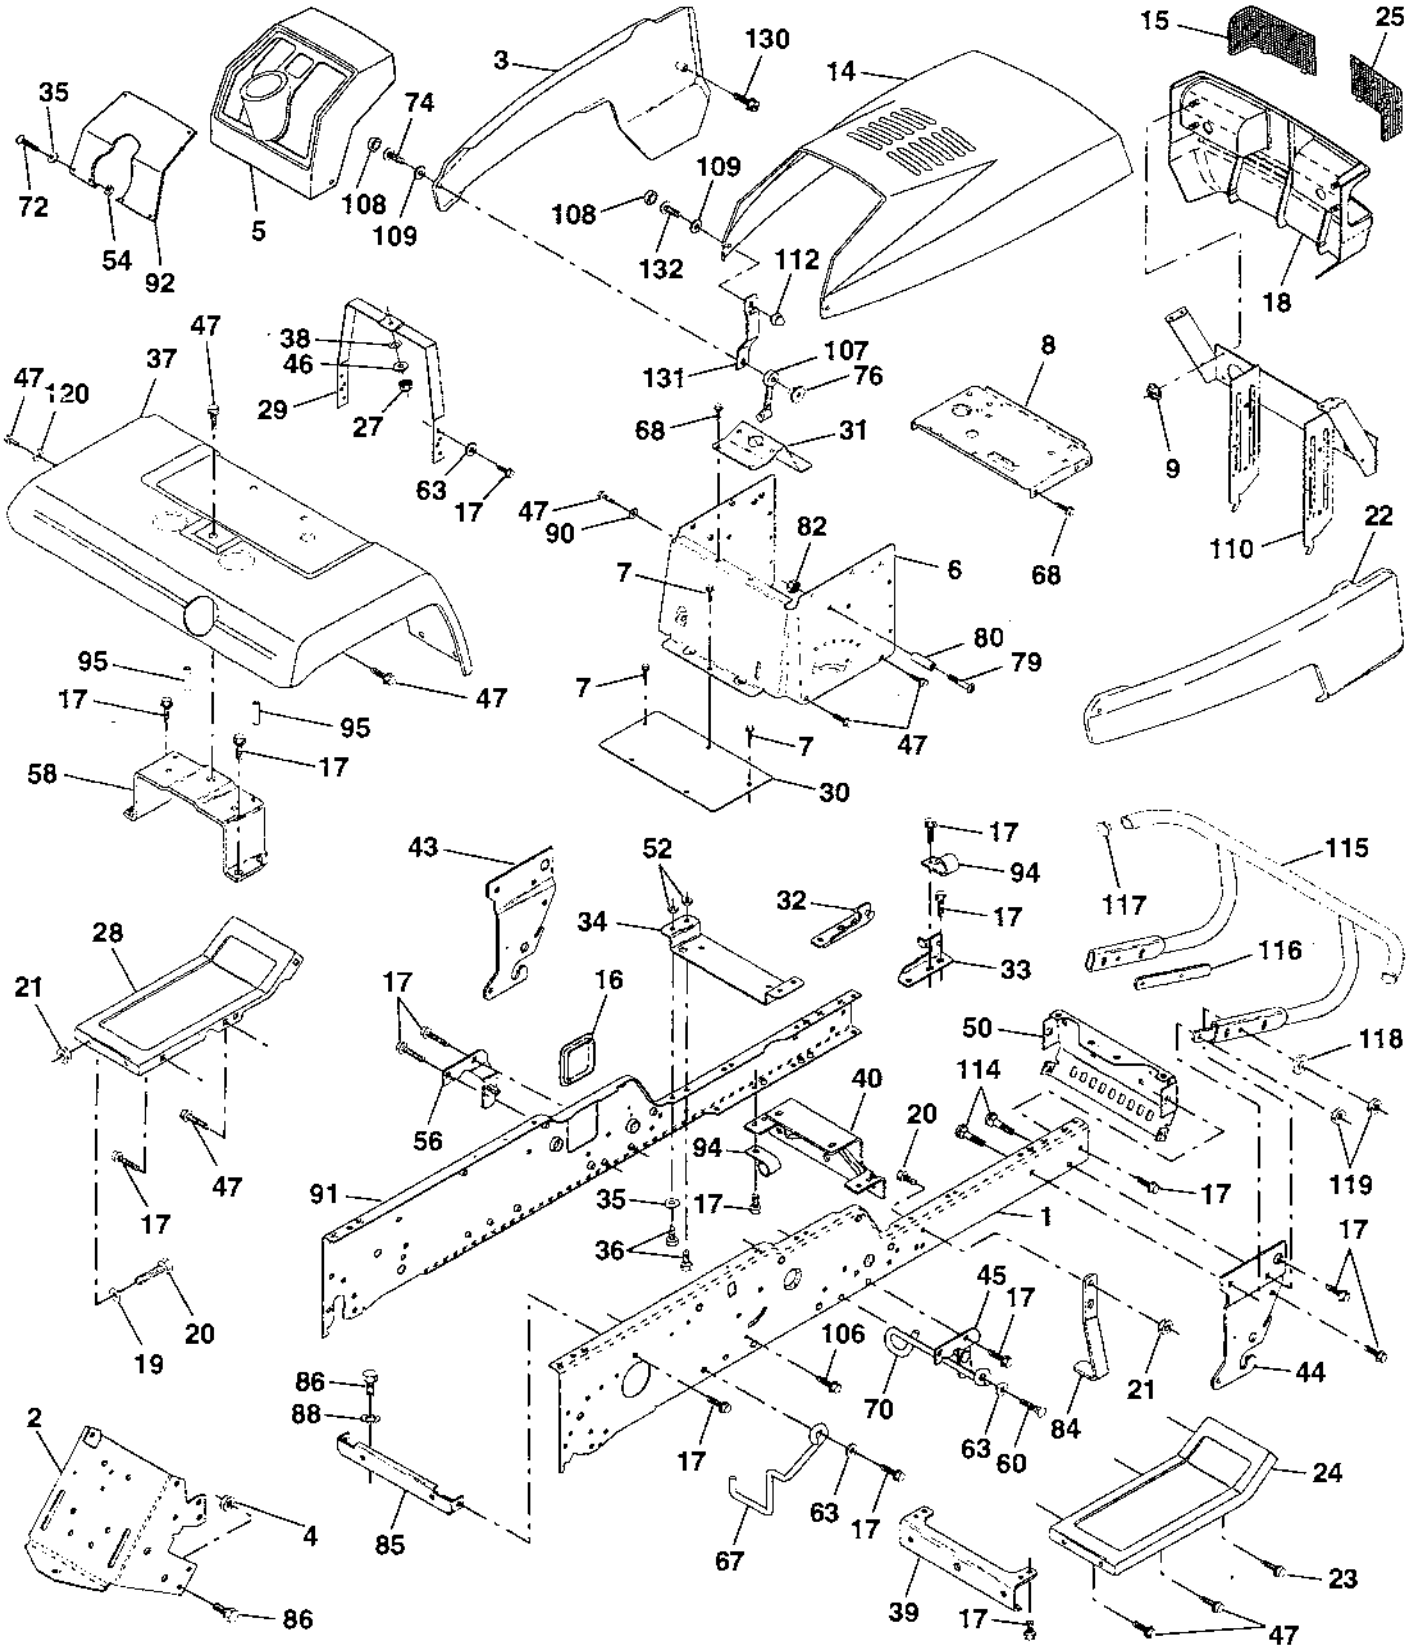

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

CHASSIS AND ENCLOSURES


KEY NO.	PART NO.	DESCRIPTION
1	532150253	Rail, Frame RH
2	532140506	Drawbar, Gt
3	532150478	Panel Asm., Side LH
4	873800700	Nut, Lock Hex 7/16 Unc
5	532140452	Dash, Plastic Black
6	532150273	Dash 1-PCS, Lower
7	817720408	Screw, Thd Cut 1/4-20 x 1/2
8	532145166	Support, Battery
9	532108067	Nut Pal
14	532150477	Hood Asm., Pnt
15	532124250	Lens, Headlight LH
16	532121794	Cover, Access
17	817490612	Screw, Thdrol 3/8-16 x 3/4
18	532127325	Grille
19	819131312	Washer 13/32 x 13/16 x 12 Ga.
20	874760616	Bolt, Fin Hex 3/8-16 x 1
21	873680600	Nut, Crownlock 3/8-16 Unc
22	532150479	Panel Asm., Side RH
23	817490616	Screw Thdrol. 3/8-16 x 1 Ty-TT
24	532147202	Footrest, RH
25	532124251	Lens Headlight RH
27	873220400	Nut Fin Hex 1/4-20
28	532147203	Footrest, LH
29	532145205	Bracket, Support Dash
30	532145051	Saddle
31	532145183	Brace, Support Steering
32	532141315	Bracket Asm., Frame Pivot Lh
33	532141314	Bracket Asm., Frame Pivot Rh
34	532142131	Bracket, Engine Support Rear
35	819111116	Washer 11/32 x 11/16 x 16 Ga.
36	874780512	Bolt, Fin Hex 5/16-18 x 3/4
37	532124927	Fender, Pnt.
38	810040400	Washer, Lock 1/4
39	532136961	Bracket, Axle Front
40	532142132	Bracket, Support Axle/Engine
43	532136939	Bracket, Spnsn Front Lh
44	532136940	Bracket, Spnsn Front Rh
45	532138460	Bracket Asm., Susp Chassis Rh
46	819091216	Washer 9/32 x 3/4 x 16 Ga.
47	817490608	Screw Thdrol 3/8-16 x 1/2
50	532136575	Bracket, Chassis Front
52	873800500	Locknut, Hex W/Ins 5/16-18 Unc
54	873510500	Nut 5/16-18
56	532138461	Bracket Asm., Susp Chassis Lh
58	532137113	Bracket Asm., Fender
60	817490620	Screw Thdrol 3/8-16 x 1-1/4
63	819131614	Washer 13/32 x 1 x 14 Ga.
67	532140737	Guide Belt Trans VGT
68	817490508	Screw, Thdrol 5/16-18 x 1/2
70	532137159	Guide, Belt Mid Span
72	874180512	Screw, Mach Trhd 5/16-18 x 3/4
74	874191008	Screw, Machine #10-24
76	532125004	Nut, Weld #10-24
79	874981020	Screw, Machine #10-24 x 1/4
80	532007206	Spacer, Split
82	873731000	Nut #10-24
84	532142992	Stop, Over Center 44" 20/23" T. 94
85	532144911	Bracket Support Pnt Trans VGT
86	874760716	Bolt, Fin Hex 7/16-14 Unc x 1
88	810040700	Washer Lock Hvy Hicl Spr 7/16
90	811050600	Washer, Lock External Tooth 3/8
91	532150851	Rail, Frame Lh
92	532141626	Plate, Silkscreen Dash
94	532100207	Clip, Fuel Line
95	532105531	Push Nut, Nylon
106	532138776	Screw Thdrol. Hex Hd Zinc Mur
107	532109808	Latch, Chute Blk
108	532110356	Cap, Snap Black
109	532110357	Cap, Washer Snap
110	532150200	Pivot Asm. Grille/Hood Husq. VGT
112	532060867	Nut, Acorn, Hex #10-24
114	872140610	Bolt, Carriage 3/8-16 x 1-1/4
115	532150300	Bumper Asm.
116	532141461	Bracket Extension Bumper
117	532143679	Plug Plastic
118	819131316	Washer 13/32 x 13/16 x 16 Ga.
119	873680600	Nut Crownlock 3/8-16 UNC
120	819131616	Washer 13/32 x 1 x 16 Ga.
130	817521312	Screw, SLTD Hex Hd. W/Pl Washer
131	532150195	Bracket Support Hood/Panel YP
132	874291006	Screw, Truss Hd. #10-24 x 3/8
- -	532125085	Plug, Hole

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

GROUND DRIVE

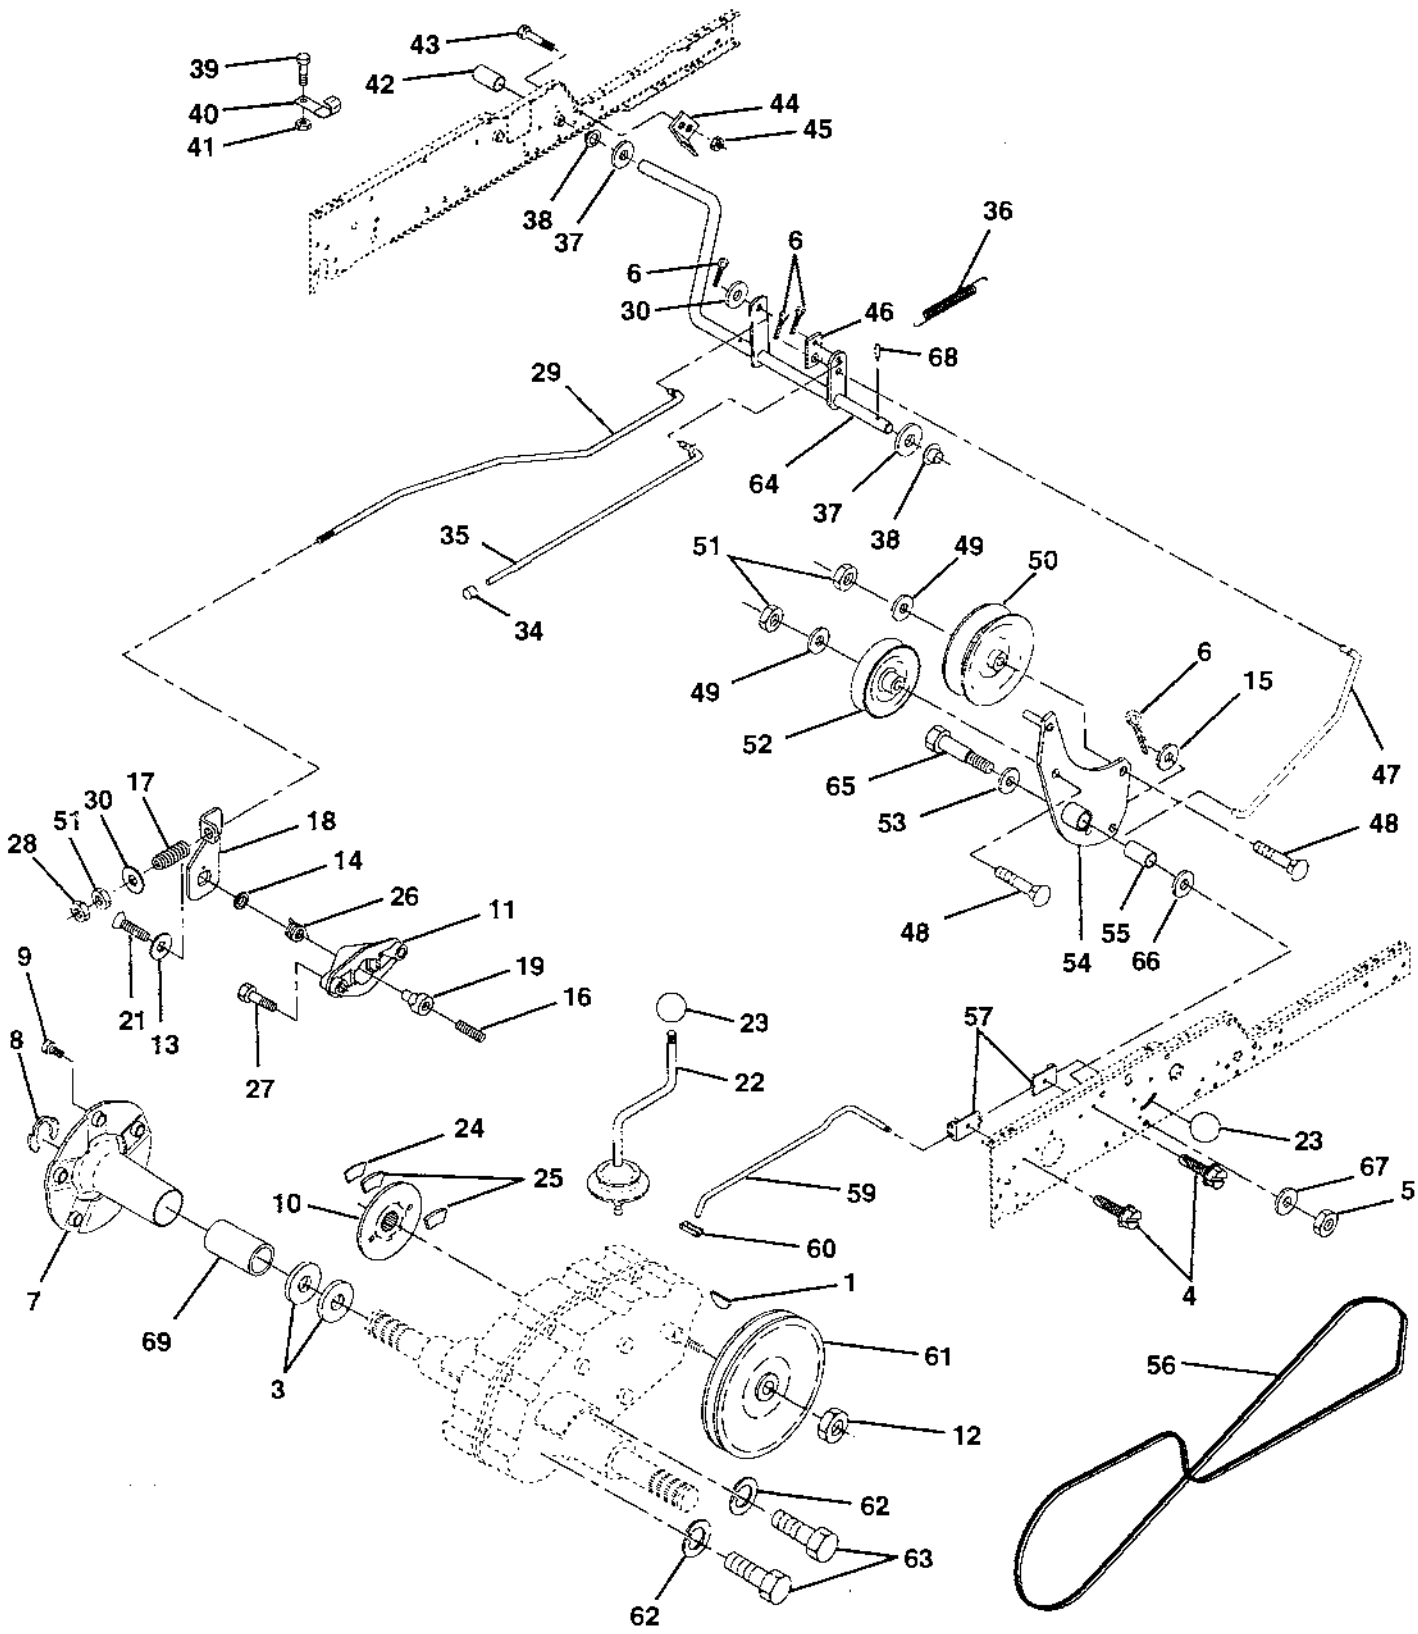

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

GROUND DRIVE


KEY NO.	PART NO.	DESCRIPTION
1	532124708	Key Woodruff
3	532007563	Washer Thrust Axle Harden
4	817490508	Screw Thdrol 5/16-18 x 1/2 TYT
5	873680600	Nut Crownlock 3/8-16
6	876020412	Pin Cotter 1/8 x 3/4
7	532149176	Wheel Hub Asm.
8	812000034	Ring Klip
9	532140080	Bolt Hub
10	532142509	Disc Brake
11	532136927	Yoke Brake Disc
12	532009204	Locknut 1/2-20
13	532139419	Washer Special
14	532138901	Bushing
15	819131316	Washer 13/32 x 13/16 x 16 Ga
16	532143012	Set Screw 1/4-28 x 3/4
17	532126909	Spring
18	532137104	Lever Brake
19	532136926	Cam Brake Disc
21	823260412	Screw Flat Head 1/4-28 x 3/4
22	532124863	Gearshift Lever Assembly
23	532121466	Knob
24	532136925	Support Puck Brake
25	532136923	Puck Brake Top
26	532137552	Spring Return
27	817490528	Screw Hex Wsh Thd 5/16-18 x 1-3/4
28	873350600	Nut Hex Jam 3/8-16
29	532137213	Brake Rod
30	819131616	Washer 13/32 x 1 x 16 Ga
34	532071673	Cap Plunger
35	532137648	Rod Parking Brake
36	532149412	Spring Drive Ground
37	532121749	Washer 25/32 x 1-1/4 x 16 Ga
38	532150035	Nyliner
39	874321016	Screw Fin #10-24 x 1
40	532005304	Actuator Interlock Switch
41	873631000	Nut Lock #10-24
42	532123533	Cover Pedal
43	874760412	Bolt Hex Head 1/4-20 x 3/4
44	532104601	Bracket Interlock
45	873800400	Nut Lock W/Insert 1/4-20
46	532145170	Retainer Spring
47	532138228	Clutch Rod
48	872110614	Bolt Carriage 3/8-16 x 1-3/4 Gr 5
49	819131413	Washer 13/32 x 7/8 x 13 Ga
50	532131494	Pulley Idler Flat
51	873800600	Nut Lock Hex 3/8-16
52	532139123	Pulley Idler Grooved
53	532000207	Washer Hartdened
54	532138390	Clutch Arm Asm
55	532105706	Bearing, Idler
56	532137153	V-Belt
57	532141756	Bracket Shift Rod Hi-Lo
59	532122253	Shift RodHi-Lo
60	532122268	Spring Clip Connecting Link
61	532137524	Pulley Transaxle
62	810040700	Washer Lock 7/16
63	874760720	Bolt Fin Hex 7/16-14 x 1-1/4
64	532137649	Shaft Clutch/Brake Pedal
65	532067609	Bolt Shoulder
66	532140296	Washer Hardened
67	819131312	Washer 13/32 x 13/16 x 12 Ga.
68	532005142	Pin Roli
69	532136327	Hub Cover

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

STEERING ASSEMBLY

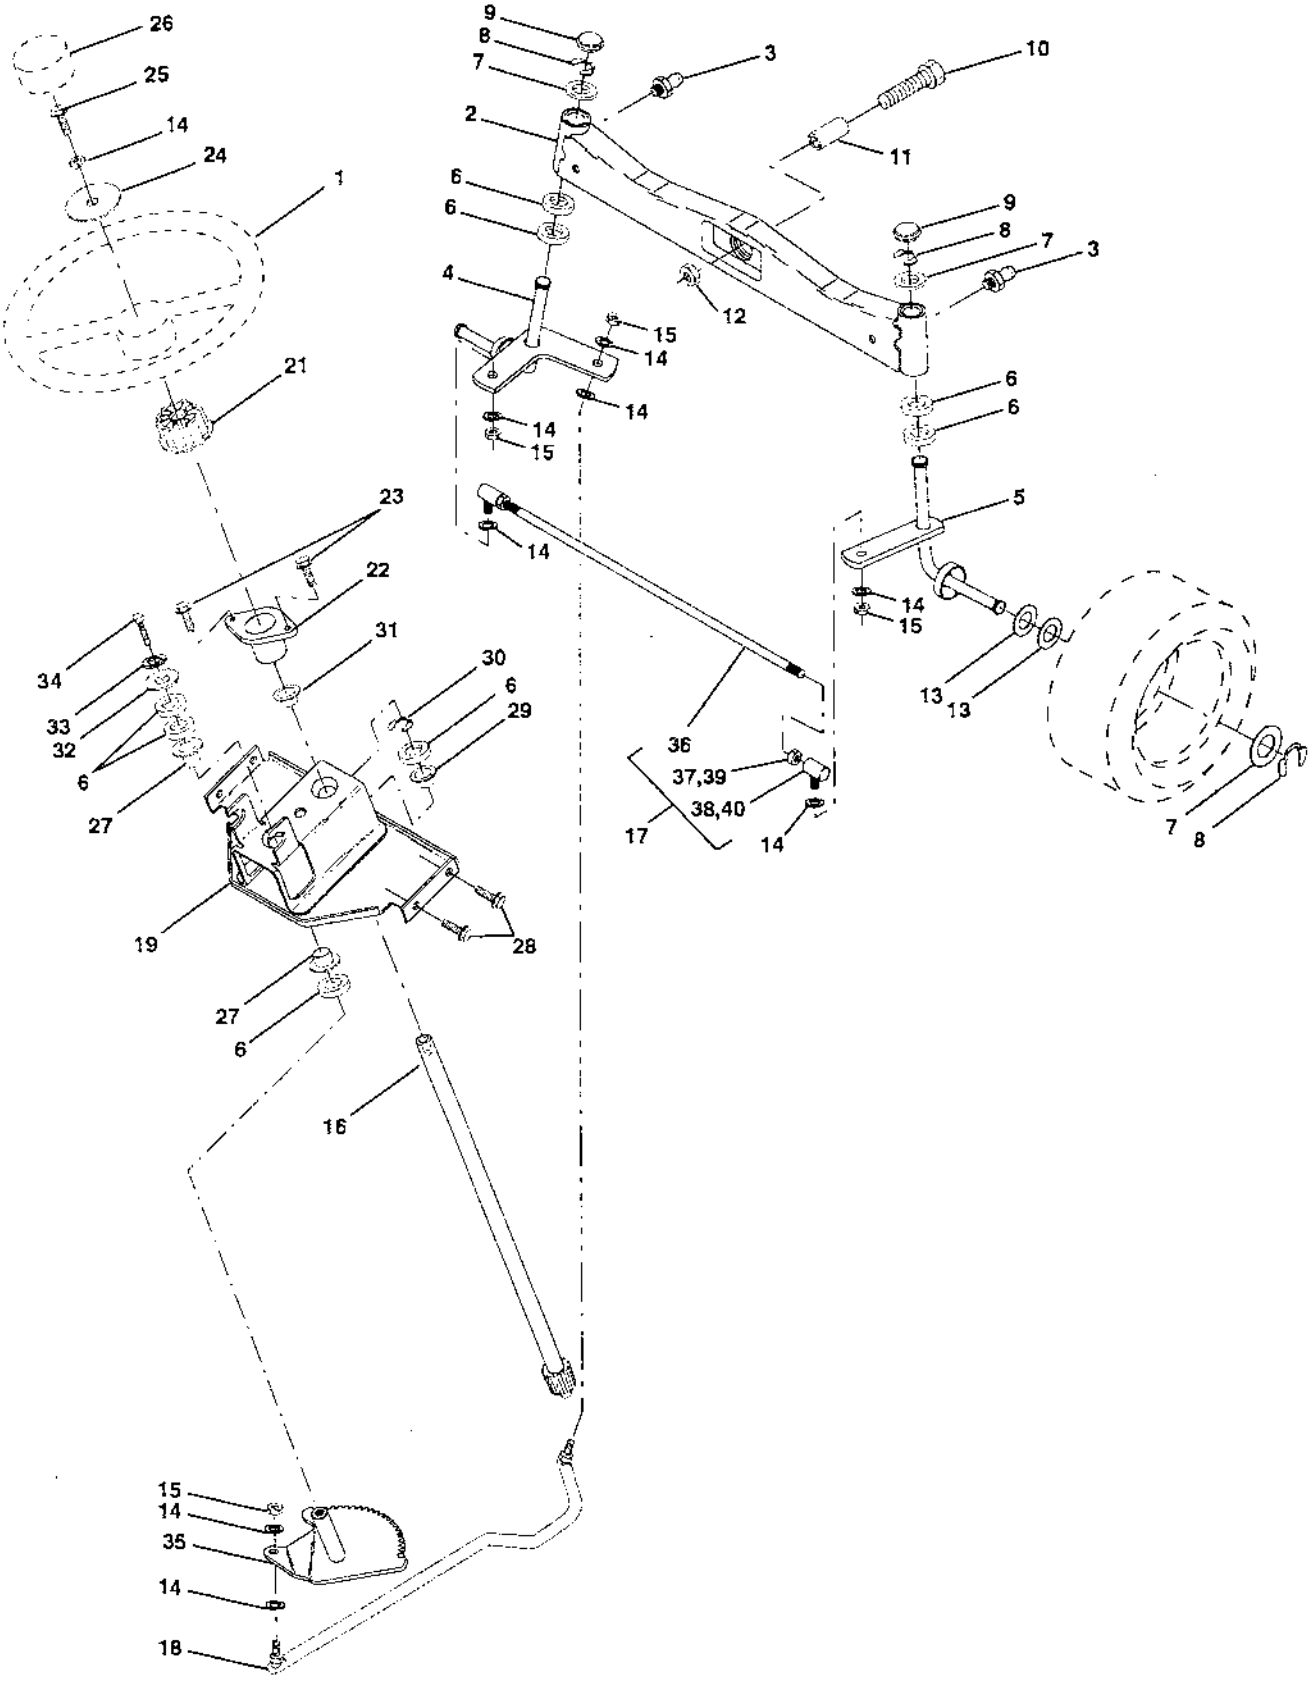

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

STEERING ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
1	532124415	Wheel, Steering
2	532137094	Axle Asm., Front
3	532124836	Fitting, Grease
4	532136960	Spindle Asm, LH
5	532136959	Spindle Asm., RH
6	532124931	Bearing, Race Thrust Harden
7	532121748	Washer 25/32 x 1-5/8 x 16 Ga.
8	812000029	Ring, Klip #T5304-75
9	532121232	Cap, Spindle
10	874781044	Bolt, Fin Hex 5/8-11 x 2-3/4
11	532136518	Spacer, Brg. Axle Front
12	873901000	Nut, Lock Flange 5/8-11 Unc
13	532121749	Washer 25/32 x 1-1/4 x 16 Ga.
14	810040600	Washer, Lock Hvy Hlcl Spr 3/8
15	873610600	Nut, Fin Hex 3/8-24 Unf
16	532145103	Shaft Asm., Steering
17	532137347	Rod Asm., Tie Ball J Ball Vgt (Inc. Key No. 36-40)
18	532137155	Draglink, Ball Joint Solid Vgt
19	532146611	Support Asm., Steering Vgt
21	532100711	Adapter, Wheel Steering
22	532124720	Bushing, Strg. Blk
23	817431008	Screw, Slftp #10-16 x 1/2 Ty-b
24	819133808	Washer 13/32 x 2-3/8 x 8 Ga.
25	874780616	Bolt, Fin Hex 3/8-16 x 1 Gr. 5
26	532124416	Cap , Wheel Steering
27	532124937	Bearing, Col. Strg.
28	817490612	Screw Thdrol 3/8-16 x 3/4
29	532104239	Bearing, Flange
30	812000034	Ring, Klip Truarc #5304-75
31	532138136	Bushing, Nyliner Snap
32	819111610	Washer 11/32 x 1 x 10 Ga.
33	810040500	Washer, Lock Hvy Hlcl Spr 5/16
34	874760512	Bolt, Hex Hd 5/16-18 x 3/4
35	532138059	Gear, Sector Steering
36	532137156	Tie Rod
37	873360600	Jam Nut RH Thread
38	532109850	Joint Asm. Ball RH Thread
39	873700600	Jam Nut LH Thread
40	532109851	Joint Asm. Ball LH Thread

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

ENGINE

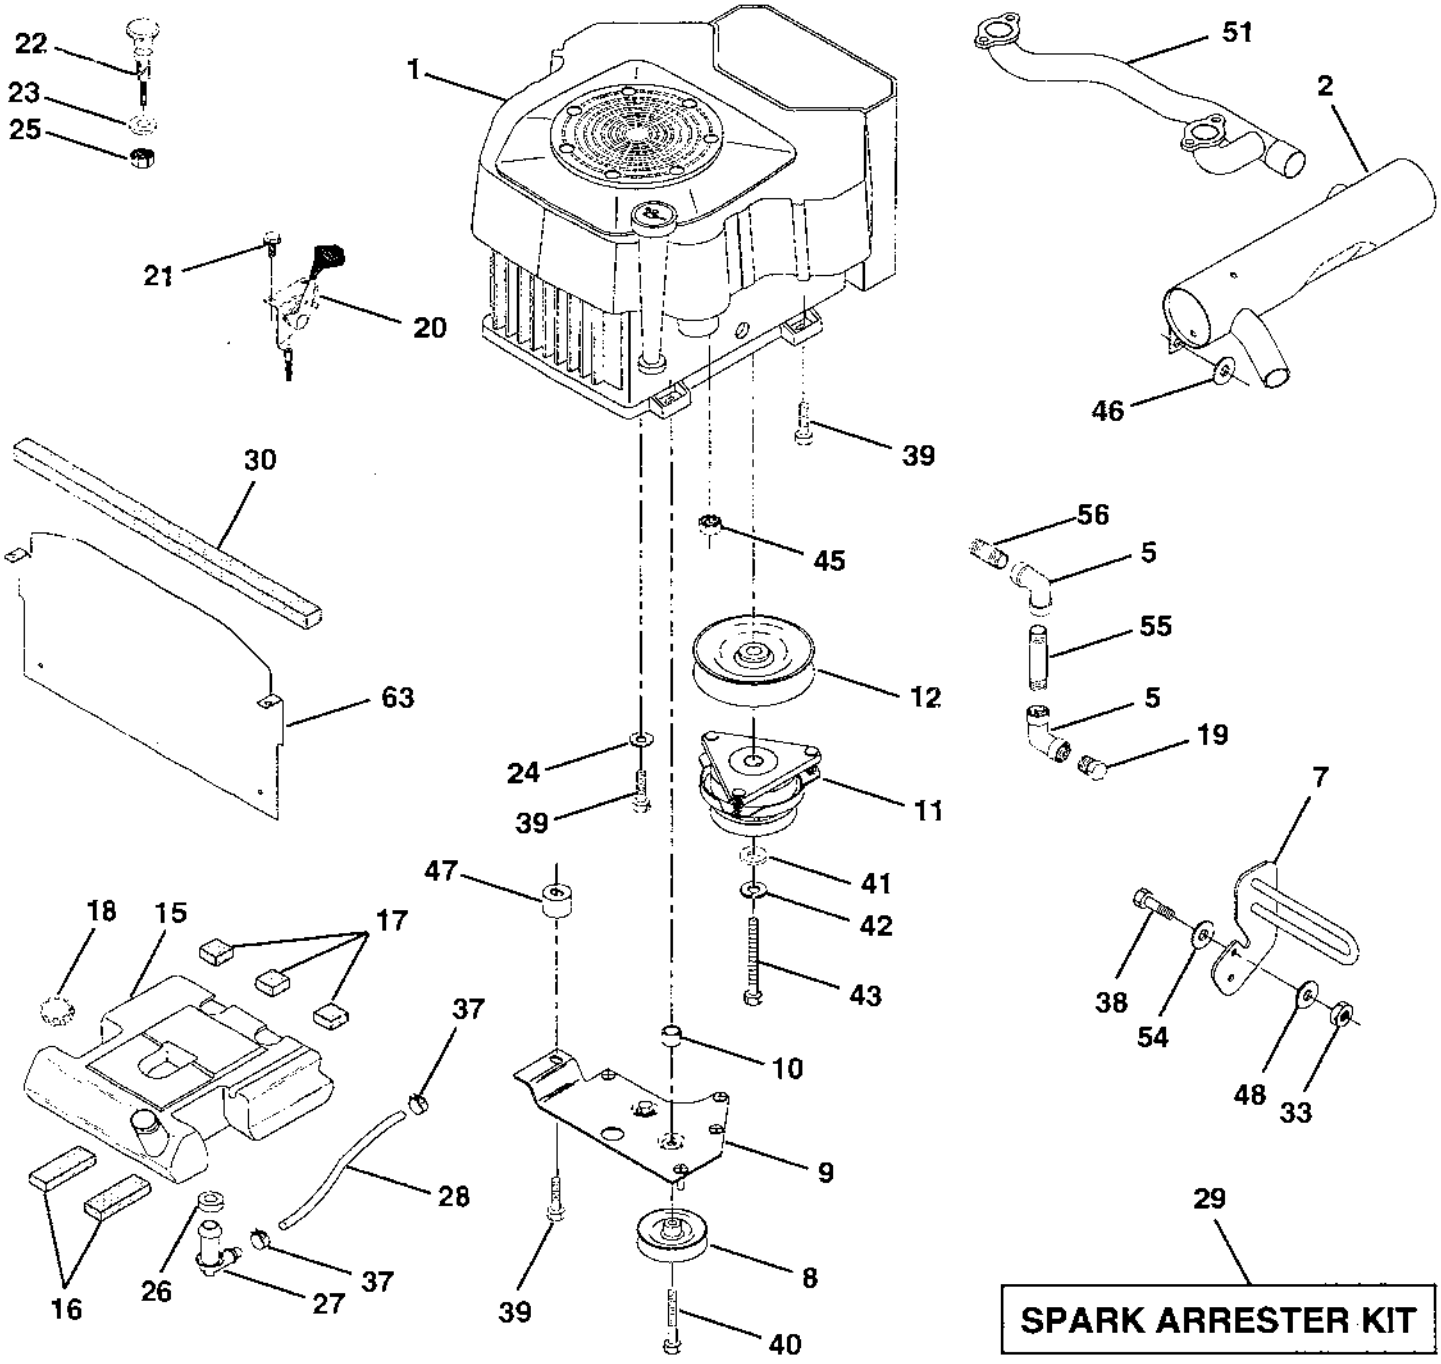

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

ENGINE


KEY NO.	PART NO.	DESCRIPTION
1	- - - - - - -	Engine Kohler, Model No. CV20S
2	532144636	Muffler VGT Cylinder
5	813200300	Elbow STD 90 Degree 3/8-18 NPT
7	532151396	Muffler Assembly Guard
8	532121361	Pulley V-Idler
9	532145109	Stop Keeper Asm VGT
10	532105432	Bushing
11	532140923	Clutch Electric
12	532143996	Pulley Engine VGT Elect Clutch
15	532141069	Tank Fuel W/Sym Vented
16	532109227	Pad Spacer
17	532106082	Pad Spacer
18	532140527	Cap Asm Fuel W/Sym Vented
19	813290300	Plug Oil Drain (Order From Engine Manufacturer)
20	532132747	Control Throttle
21	817720410	Screw Hex Thd Cut 1/4-20 X 5/8
22	532132781	Control Choke
23	819131316	Washer 13/32 X 13/16 x 16 Ga
24	811050600	Washer Ext Tooth 3/8
25	873920600	Nut Keps 3/8-24 UNF
26	532124952	Bushing
27	532139277	Stem Tank Fuel
28	532124703	Fuel Line
29	532132920	Spark Arrester Kit
30	532105037	Strip Foam 18"
33	873800600	Nut, Hex W/Ins. 3/8-16 UNC
37	532123487	Clamp Hose
38	874780624	Bolt, Fin Hex 3/8-16 UNC x 1-1/2
39	817490636	Screw TT 3/8-16 x 2-1/4 UNC
40	817490664	Screw TT 3/8-16 x 4 UNC
41	532126197	Washer 1-1/2 OD X 15/32 ID X .250
42	810040700	Washer Lock 7/16
43	532150280	Bolt Hex 7/16-20 X 4-1/4 Ga 5
45	532128861	Nut Flange 1/4-20 Starter Nut
46	819131616	Washer 13/32 x 1 x 16 Ga.
47	532142040	Spacer Engine
48	819132007	Washer 13/32 x 1-1/4 x 7 Ga.
51	532140787	Pipe Crossover
54	819131414	Washer Flat 13/32 x 7/8 x 14 Ga.
55	813090336	Nipple, Pipe 3/8 NPT x 4-1/2
56	813090308	Nipple, Pipe 3/8 NPT x 1.00
63	532145549	Shield, Heat VGT YP/Husq.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

SEAT ASSEMBLY

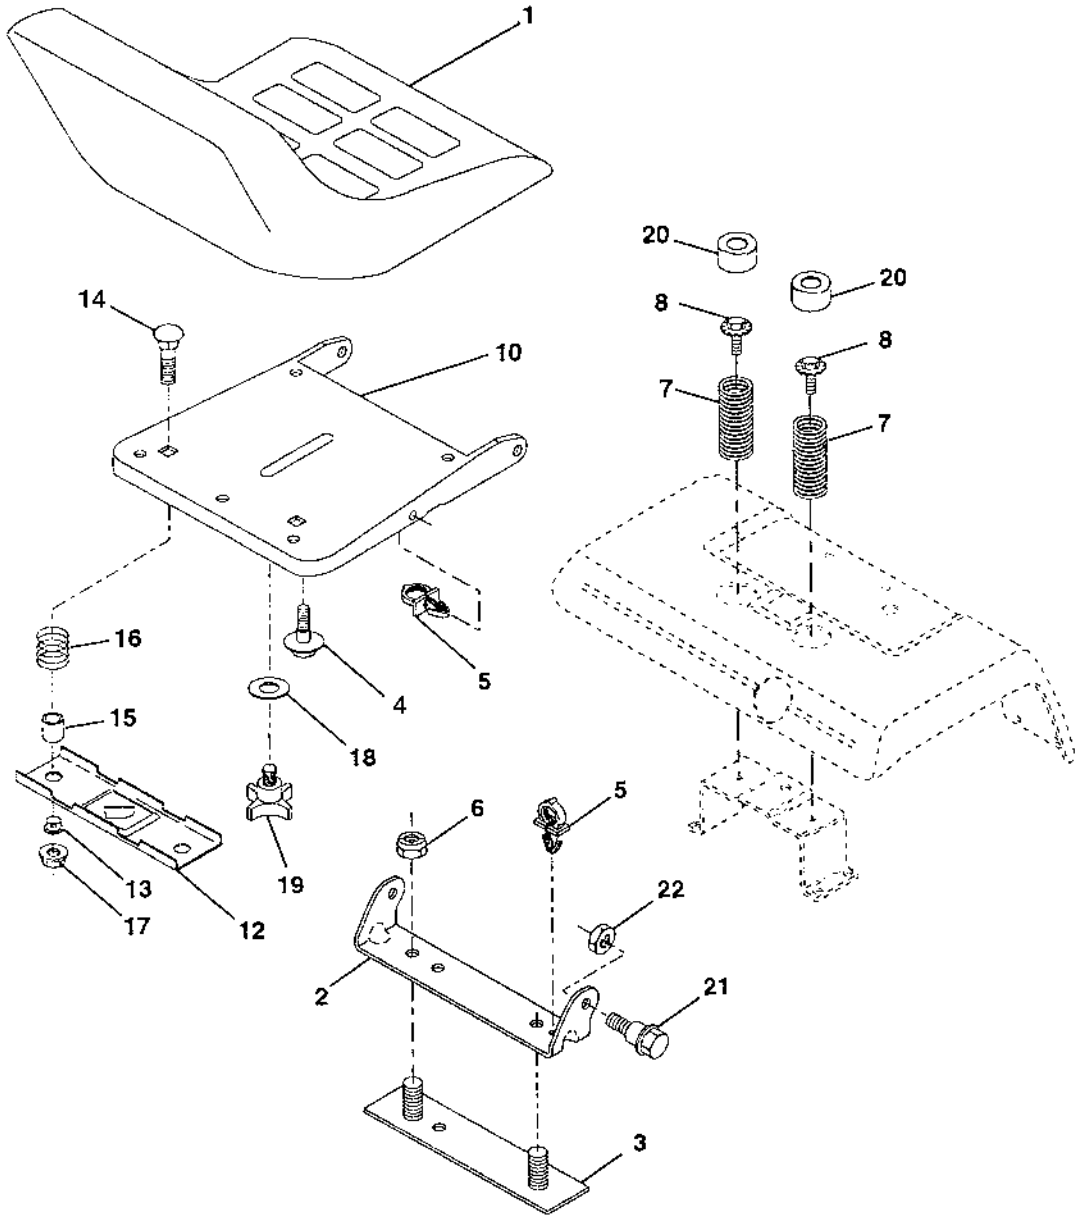

KEY NO.	PART NO.	DESCRIPTION
1	532141525	Seat
2	532140551	Bracket, Pivot Seat
3	532140675	Strap, Fender
4	532127018	Bolt, Shoulder 5/16-18 X .62
5	532145006	Clip, Push In Hinged
6	873800600	Nut, Lock Hex W/Ins. 3/8-16 Unc
7	532124181	Spring, Seat Cprsn
8	532150176	Bolt 5/16-18 Unc x 3/4 w/Sems
10	532140552	Pan, Seat
12	532121246	Bracket, Mounting Switch
13	532121248	Bushing, Snap
14	872050411	Bolt, Carriage 1/4-20 X 1-3/8


KEY NO.	PART NO.	DESCRIPTION
15	532121249	Spacer, Split
16	532123740	Spring, Cprsn
17	532123976	Nut, Lock 1/4 Lge Flg Gr. 5
18	819171912	Washer 17/32 X 1-3/16 X 12 Ga.
19	532120068	Knob, Seat 1/2-13 Unc
20	532124238	Cap, Spring Seat
21	532139888	Bolt, Shoulder 5/16-18 Unc
22	873680500	Nut, Crownlock 5/16-18 Unc

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

DECALS

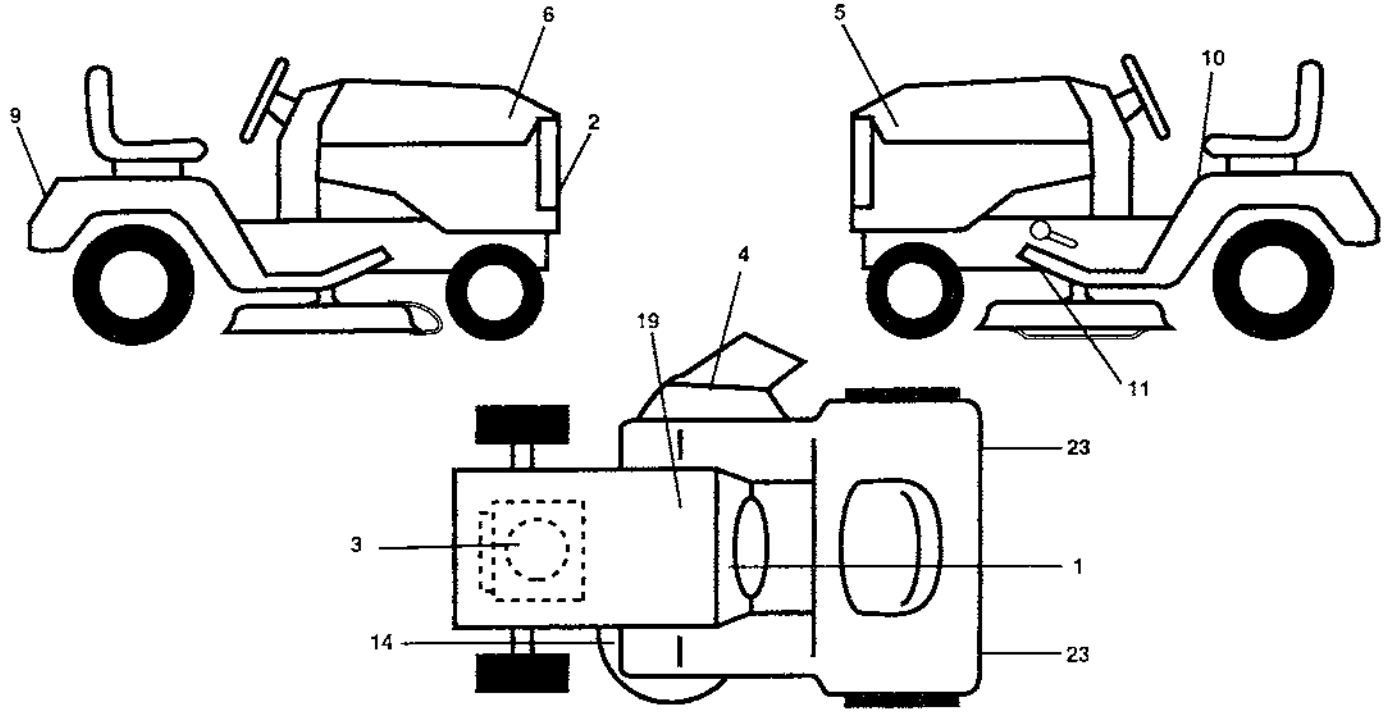


KEY NO.	PART NO.	DESCRIPTION
1	532138956	Decal, Operating Instruction
2	532150616	Decal, Grille Husqvarna
3	532153700	Decal, Kohler 20 Hp Cmd
4	532137259	Decal, Warning Multi-Lang
5	532150641	Decal, Hood LH GT200
6	532150640	Decal, Hood RH GT200
9	532150617	Decal, Fender
10	532133795	Decal, Caution
11	532101892	Decal, Clutch/Brake
14	532139346	Decal, V-Belt Schematic
19	532146451	Decal, Battery
23	532106202	Reflector, Taillight
--	532138311	Decal, Handle Lft Height Adjust (Lift Handle)
--	532145246	Pad Ftrest Rbr Sq Generic 95
--	532145247	Fastener Pop-In Footrest (8 per)
--	532153287	Manual, Owner's (English)
--	532153288	Manual, Owner's (French)

Accessories not included with tractor:

--	SH10	Sleeve Hitch
--	TA128	Tire Chains
--	TS20	8HP Tiller
--	TA321	#55 Wheel Weights
--	TR72	Dozer Blade
--	TR30	10" Plow

WHEELS & TIRES

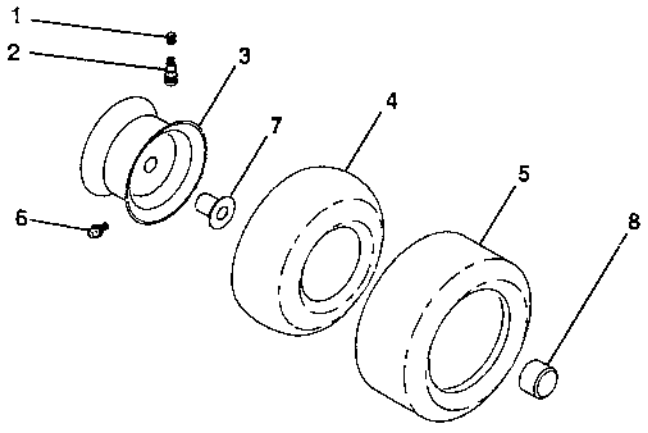


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap, Valve, Tire
2	532065139	Stem, Valve
3	532144509	Rim Assembly, Front
	532144510	Rim Assembly, Rear
4	532008134	Tube, Front (Service Item Only)
	532007154	Tube, Rear (Service Item Only)
5	532106230	Tire, Front
	532105588	Tire, Rear
6	532124860	Fitting, Grease
7	532124959	Bearing, Flange (Front Wheel Only)
8	532104757	Cap, Hub, Axle Blk.
--	532144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

LIFT ASSEMBLY

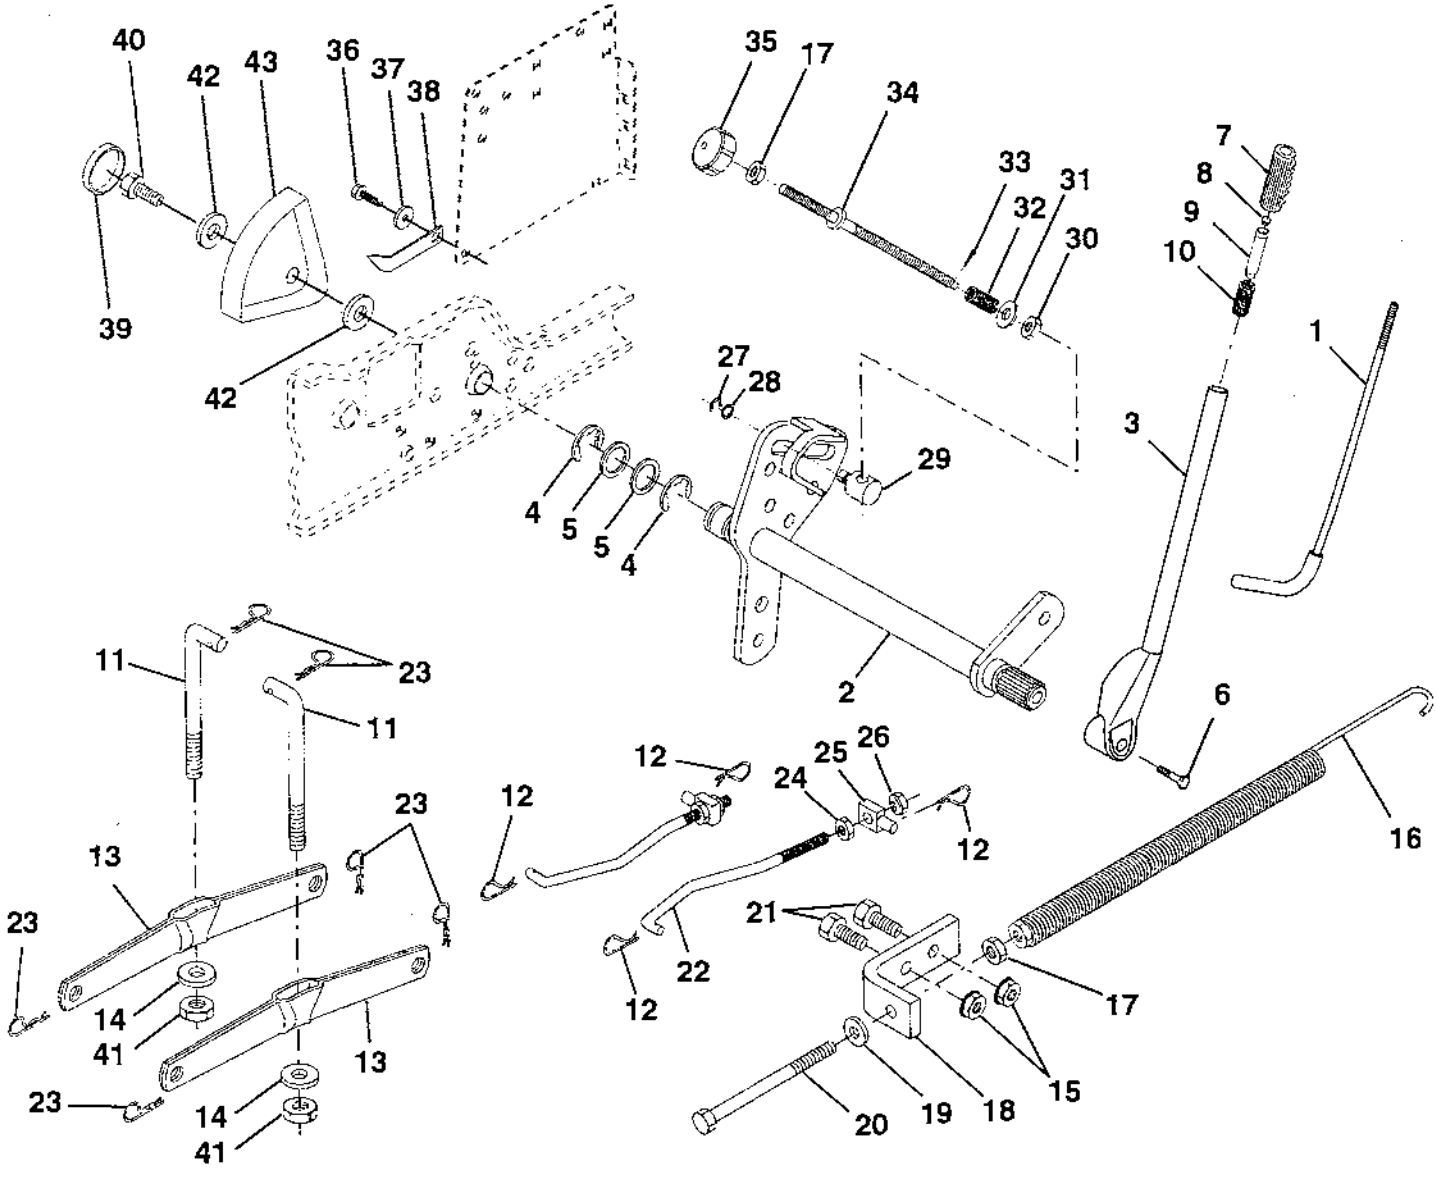

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

LIFT ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
1	532121006	Rod Asm., Lever
2	532145542	Shaft Asm., Lift Vgt
3	532121002	Lever Asm., Lift Rh
4	812000022	E-Ring Truarc #5133-87
5	819292016	Washer 29/32 x 1-1/4 x 16 Ga.
6	874780624	Bolt, Fin Hex 3/8-16 x 1-1/2
7	532125631	Grip, Handle Fluted
8	532124526	Button, Plunger
9	532122364	Plunger, Lever Lift
10	532124874	Spring 2-1/8"
11	532146704	Link Lift
12	532124660	Retainer, Spring
13	532139868	Arm, Suspension Vgt
14	532140302	Bearing
15	873680600	Nut, Crownlock 3/8-16 Unc
16	532124687	Spring Asm., Assist Lift
17	873350600	Nut, Hex Jam 3/8-16 Unc
18	532143363	Bracket, Spring Assist
19	819131316	Washer 13/32 x 13/16 x 16 Ga.
20	532005328	Bolt, Adjust Spring Assist
21	874760616	Bolt, Fin Hex 3/8-16 x 1
22	532127218	Link, Front
23	532124670	Retainer, Spring
24	873350800	Nut, Jam Hex 1/2-13 Unc
25	532130171	Trunnion
26	873800800	Nut, Lock W/Wsh 1/2-13 Unc
27	812000037	Ring, Klip #T5304-37
28	819151216	Washer 15/32 x 3/4 x 16 Ga.
29	532110810	Trunnion, Dp Stop Dbl Thds Plt
30	532110807	Nut, Special
31	819131016	Washer 13/32 x 5/8 x 16 Ga.
32	532137150	Spring, Compression Inf Hgt
33	876020308	Pin, Cotter 3/32 x 1/2
34	532137167	Rod, Adj Lift
35	532138057	Knob, Inf 3/8-16 Unc
36	817490612	Screw, Thdrol 3/8-16 x 3/4
37	532120529	Washer, Nylon
38	532138346	Pointer, Pnt Height Indicator
39	532123935	Plug, Hole
40	817490512	Screw Thdrol 5/16-18 x 3/4
41	873540600	Nut, Crownlock 3/8-24
42	819112410	Washer 11/32 x 1-1/2 x 10 Ga.
43	532123934	Scale, Indicator Height

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

MOWER DECK

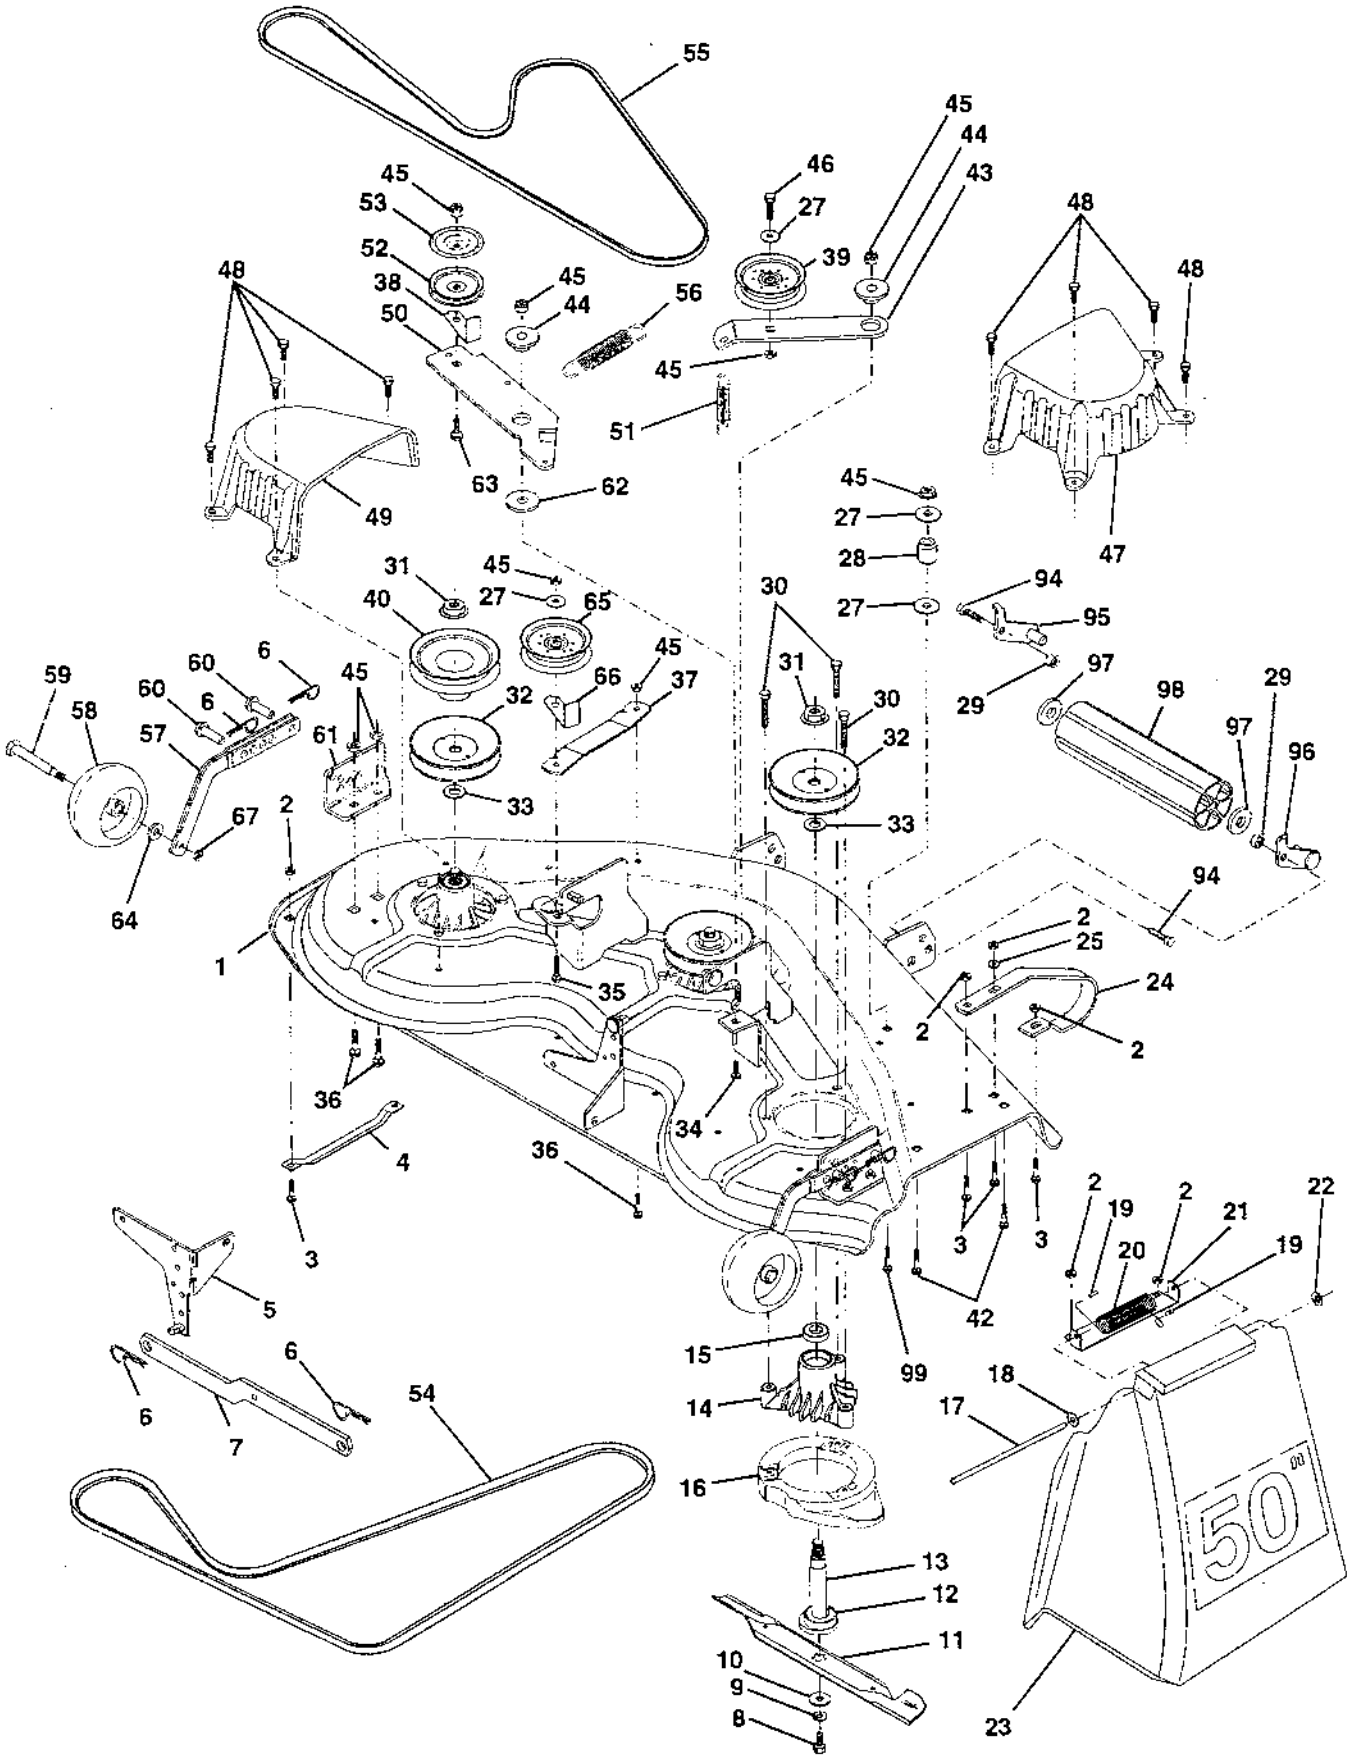

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

MOWER DECK


KEY NO.	PART NO.	DESCRIPTION
1	532136457	Deck Asm., Mower 50" Vented
2	873800500	Locknut, Hex W/Ins 5/16-18 Unc
3	872110506	Bolt, Carriage 5/16-18 x 3/4
4	532125074	Runner, Mower LH
5	532138457	Bracket Asm., Sway Bar
6	532124670	Retainer, Spring
7	532130832	Arm Suspension, Rear
8	532850857	Bolt 3/8-24 x 1.25 Gr. 8 Patched
9	810030600	Washer, Lock Hvy 3/8 Unplated
10	532140296	Washer, Hard Blade Mower Vented
11	532137380	Blade (3 Required)
12	532129895	Bearing, Ball #6204 (Mandrel)
13	532137553	Shaft Asm., W/Lower Brg (Includes Key No. 12)
14	532137152	Housing, Mandrel 50" Vent
15	532110485	Bearing, Ball Mandrel
16	532140329	Stripper, Mower Vented
17	532106735	Rod, Hinge
18	819111016	Washer 11/32 x 5/8 x 16 Ga.
19	532105304	Cap, Sleeve
20	532123713	Spring, Torsion Deflector
21	532137607	Bracket, Deflector
22	532110452	Nut, Push
23	532110509	Shield, Deflector Mower
24	532136320	Runner, RH
25	819111216	Washer 11/32 x 3/4 x 16 Ga.
27	819131316	Washer 13/32 x 13/16 x 16 Ga.
28	532132823	Spacer, Spring Stop Idler
29	873800600	Nut, Lock Hex W/Wsh 3/8-16 Unc
30	532138776	Screw Thdrol Hex Head
31	532137266	Nut, Flg Top Lock Cntr 9/16
32	532129861	Pulley, Mandrel
33	532129963	Washer, Spacer Mower Vented
34	872140610	Bolt, Carriage 3/8-16 x 1-1/4
35	872110616	Bolt, Carriage 3/8-16 x 2
36	872110608	Bolt, Carriage 3/8-16 x 1 Gr. 5
37	532137166	Stiffener, Arm Idler
38	532137554	Keeper, Belt Idler
39	532131494	Pulley, Idler Flat
40	532136572	Pulley, Driven
42	872140506	Bolt, Carriage 5/16-18 Unc x 3/4
43	532136460	Arm, Idler Secondary
44	532122052	Spacer, Retainer
45	873680600	Nut, Crownlock 3/8-16 Unc
46	874760628	Bolt, Fin Hex 3/8-16 Unc x 1-3/4
47	532137200	Cover, Mandrel RH
48	532137729	Screw, Thd Roll 1/4-20 x 5/8
49	532136574	Cover, Mandrel LH
50	532137272	Arm, Idler Primary
51	532137273	Spring, Secondary
52	532139245	Pulley, Idler V Groove
53	532137789	Shield, Idler
54	532139573	V-Belt, Mower Primary
55	532144959	V-Belt, Mower Secondary
56	532138687	Spring, Primary
57	532136577	Bar Asm., Wheel Gauge
58	532133957	Wheel, Gauge
59	532137644	Bolt, Shoulder
60	532139031	Pin, Clevis
61	532136573	Bracket, Wheel Gauge
62	532133943	Washer Hardened
63	872110612	Bolt Carriage 3/8-16 x 1-1/2
64	819121414	Washer 3/8 x 7/8 x 14 Ga.
65	532151831	Pulley Idler Flat Mower
66	532139622	Keeper, Belt Idler 50" Vent
67	873930600	Nut, Center Lock 3/8-16
95	532132274	Bracket, Asm. Noseroller LH
96	532132273	Bracket, Asm. Noseroller RH
97	819171416	Washer 17/32 x 7/8 x 16 Ga.
98	532132264	Roller, Nose
94	874760616	Bolt, Fin Hex 3/8-16 x 1
99	872110614	Bolt, Carriage 3/8-16 x 1-3/4 Gr. 5
--	532143651	Mandrel Asm (Includes Key Nos. 8-10, 12-15, 31 and 33)
--	532141051	Mower Asm Service (Std. Deck - Order separately all Nose Roller and all Gauge Wheel components)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

TRANSAXLE

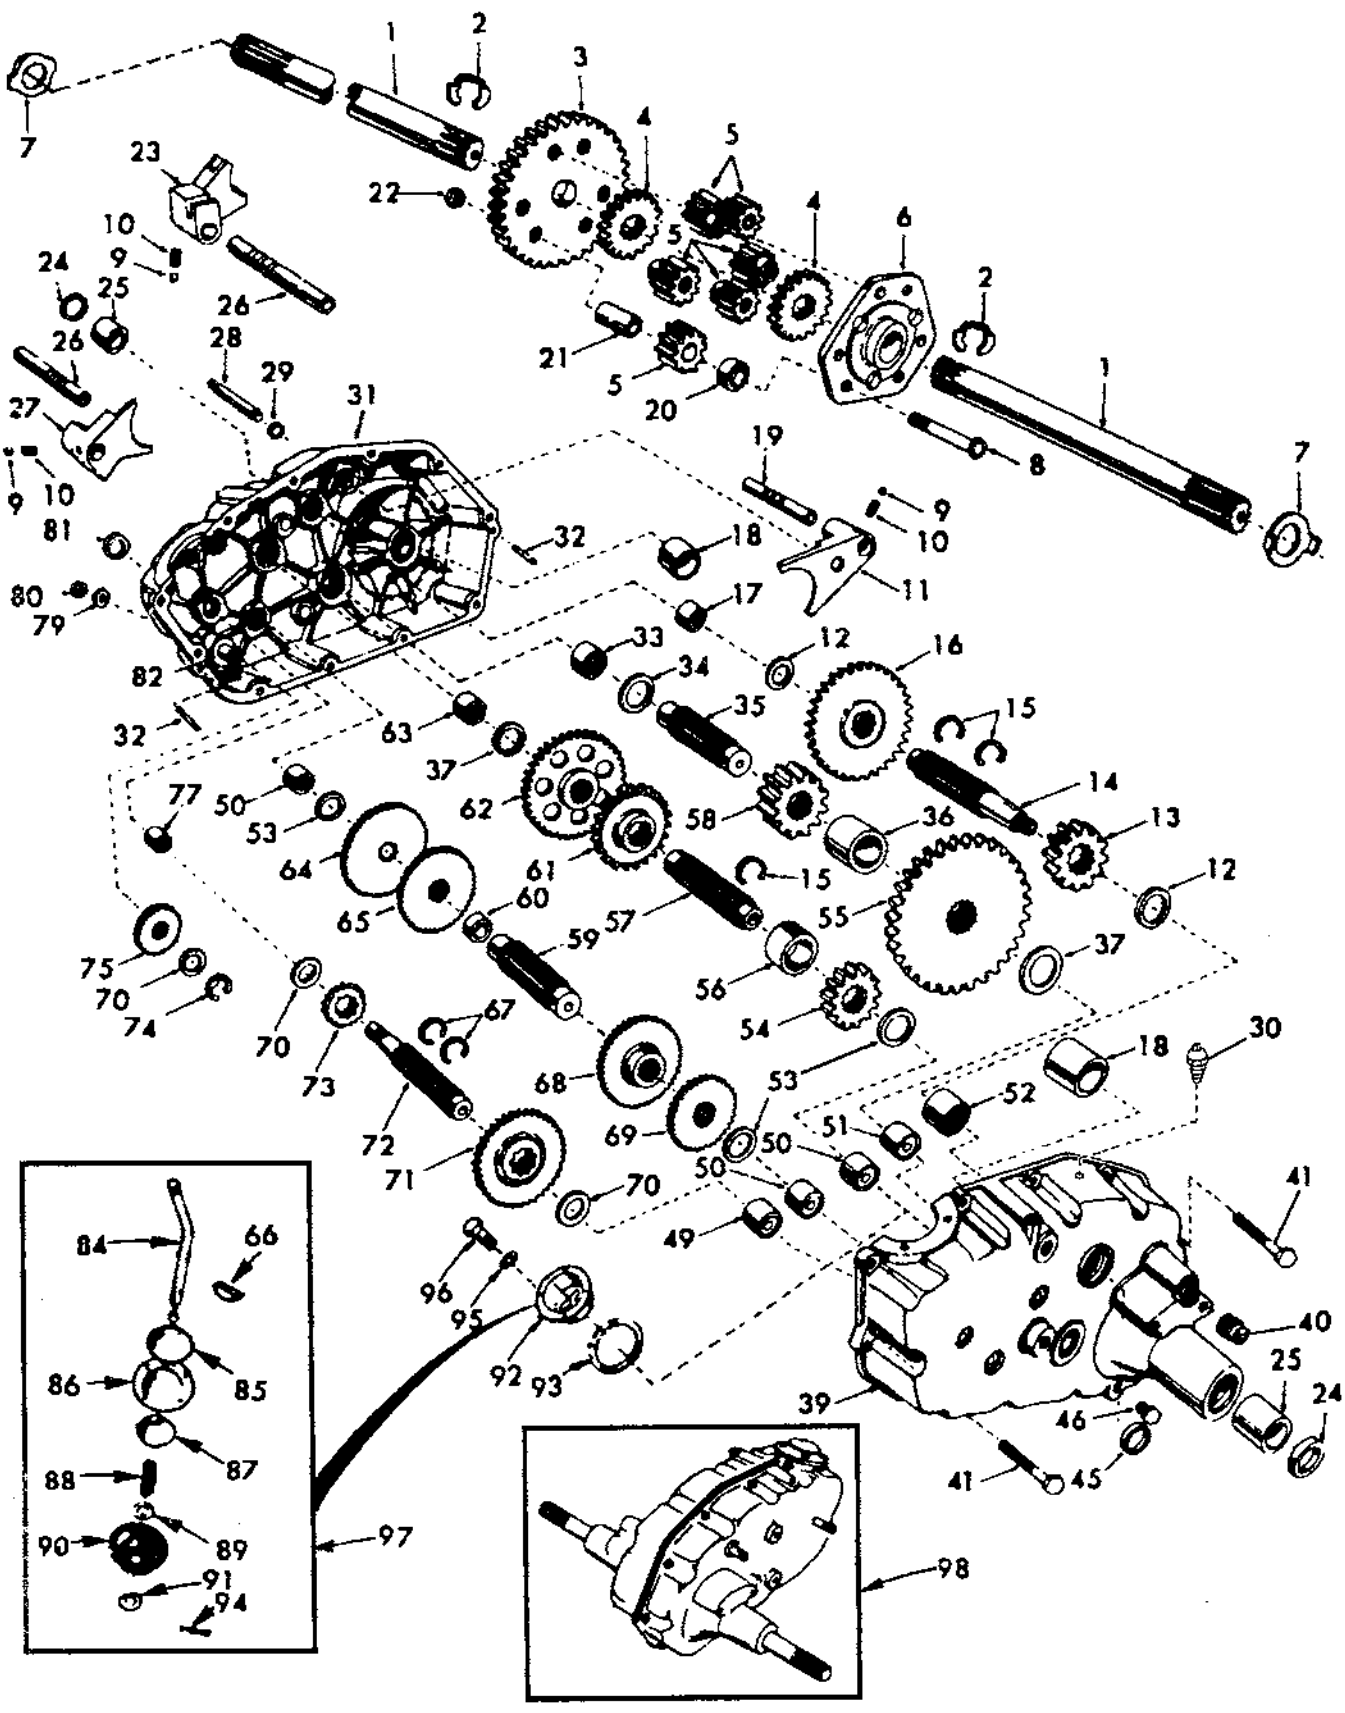

REPAIR PARTS

TRACTOR - MODEL NO. GT200 (HCGTK200A), PRODUCT NO. 954 84 00-01

TRANSAXLE

KEY NO.	PART NO.	DESCRIPTION
1	532124662	Axle Shaft
2	812000034	Retaining Ring
3	532004199	Final Drive Gear
4	532004216	Differential Gear
5	532004215	Differential Pinion
6	532004217	Differential Carrier
7	532124674	Axle Thrust Washer
8	874020652	Bolt, Hex Head 3/8-24 x 3-1/4 (1" Thread Length)
9	532124697	Steel Ball
10	532137261	Spring Shift Fork Detent
11	532004985	Shift Fork, High-Low Range
12	532124931	Thrust Bearing Race
13	532124667	4th Reduction Pinion
14	532137125	3rd Reduction Gear Shaft
15	532124677	Snap Ring, Crescent Type
16	532124679	High-Low Range Gears
17	532008118	Needle Bearing
18	532124705	Sintered Iron Bearing
19	532122238	Shift Fork Shaft, High-Low Range
20	532004218	Differential Pinion Spacer
21	532124673	Differential Pinion Bushing
22	532124701	Gripco Centerlock Nut 3/8-24
23	532006262	Shift Fork, R.H.
24	532124698	Oil Seal
25	532124709	Sintered Iron Bearing
26	532139111	Shift Fork Shaft
27	532004986	Shift Fork, L.H.
28	532122254	Shift Shaft, High-Low Range
29	532006269	Oil Seal
30	532005855	Pressure Relief Valve
31	532139538	Gearcase, Reverse Idler Shaft and Bearings, R.H. (Includes Key No.'s 17,18, 25, 33, 50, 63, 77 and 82)
32	532006277	Dowel Pin
33	532004225	Needle Bearing
34	532007396	Thrust Bearing Race
35	532004198	4th Reduction Gear Shaft
36	532124663	4th Reduction Gear Spacer
37	532007395	Thrust Bearing Race
39	532139536	Gearcase and Bearings, L.H. (Includes Key Numbers 18, 25, 49, 50 (2), 51 and 52)
40	813320400	Pipe Plug 1/2-14 N.P.T.
41	817580520	Bolt, Hex 5/16-18 UNC x 1-1/4
45	532006271	Oil Seal
46	813060200	Pipe Plug 1/4-18 N.P.T.
49	532124792	Needle Bearing
50	532004222	Needle Bearing
51	532001529	Needle Bearing
52	532008119	Needle Bearing
53	532004220	Thrust Bearing Race
54	532004209	3rd Reduction Pinion, Low
55	532124668	4th Reduction Gear
56	532004442	3rd Reduction Pinion Spacer
57	532004195	2nd Reduction Gear Shaft
58	532004214	Final Drive Pinion
59	532004194	1st Reduction Gear Shaft
60	532007528	1st Reduction Shaft Spacer
61	532124666	3rd Reduction Pinion High
62	532124665	2nd Reduction Gear
63	532007398	Needle Bearing
64	532124664	Low Speed Gear and 2nd Reduction Pinion Cluster
65	532004204	Reverse Gear
66	532002898	Key, Hi-Pro 1/8 x 17/32
67	812000033	Snap Ring, Crescent Type
68	532004205	Intermediate Speed Gear
69	532125099	High Speed Gear
70	532001370	Thrust Bearing Race
71	532124681	Intermediate and High Speed Cluster Pinions
72	532139120	Input Shaft
73	532004201	Low Speed Pinion
74	812000008	E-Ring
75	532001153	Reverse Idler Gear
77	532006803	Needle Bearing
79	532001167	Sealing Washer
80	873360700	Nut, Hex, Jam 7/16-20
81	532124675	Oil Seal
82	532136984	Reverse Idler Shaft
84	532005384	Gearshift Lever, Bent
85	532002978	Gearshift Cap
86	532124682	Gearshift Ball Cover and Pin
87	532124704	Shift Lever Guide Ball, Keyed
88	532004924	Spring
89	819151516	Washer 15/32 x 15/16 x 16 Gauge
90	532110542	Shift Mechanism Seal
91	819181511	Washer 9/16 x 15/16 x 12 Gauge
92	532000075	Gearshift Gate and Reinforcement
93	532006274	Shift Ball Cover Gasket
94	876020412	Cotter Pin 1/8 x 3/4
95	810040500	Washer, Lock 5/16
96	874760514	Bolt, Hex Head 5/16-18 UNC x 7/8
97	532124863	Gear Shift Lever Assembly
98	532140332	Transaxle, 6 Speed, Complete Assembly

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm