Husqvarna

SERVICE

7

I0400056

IPL, CTH172, 2004-01, 106 31 73-61


HECTH172A

# CTH172

**Spare parts**
**Ersatzteile**
**Pièces détachées**
**Reserve onderdelen**
**Repuestos**
**Reservdelar**

# TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

## SCHEMATIC

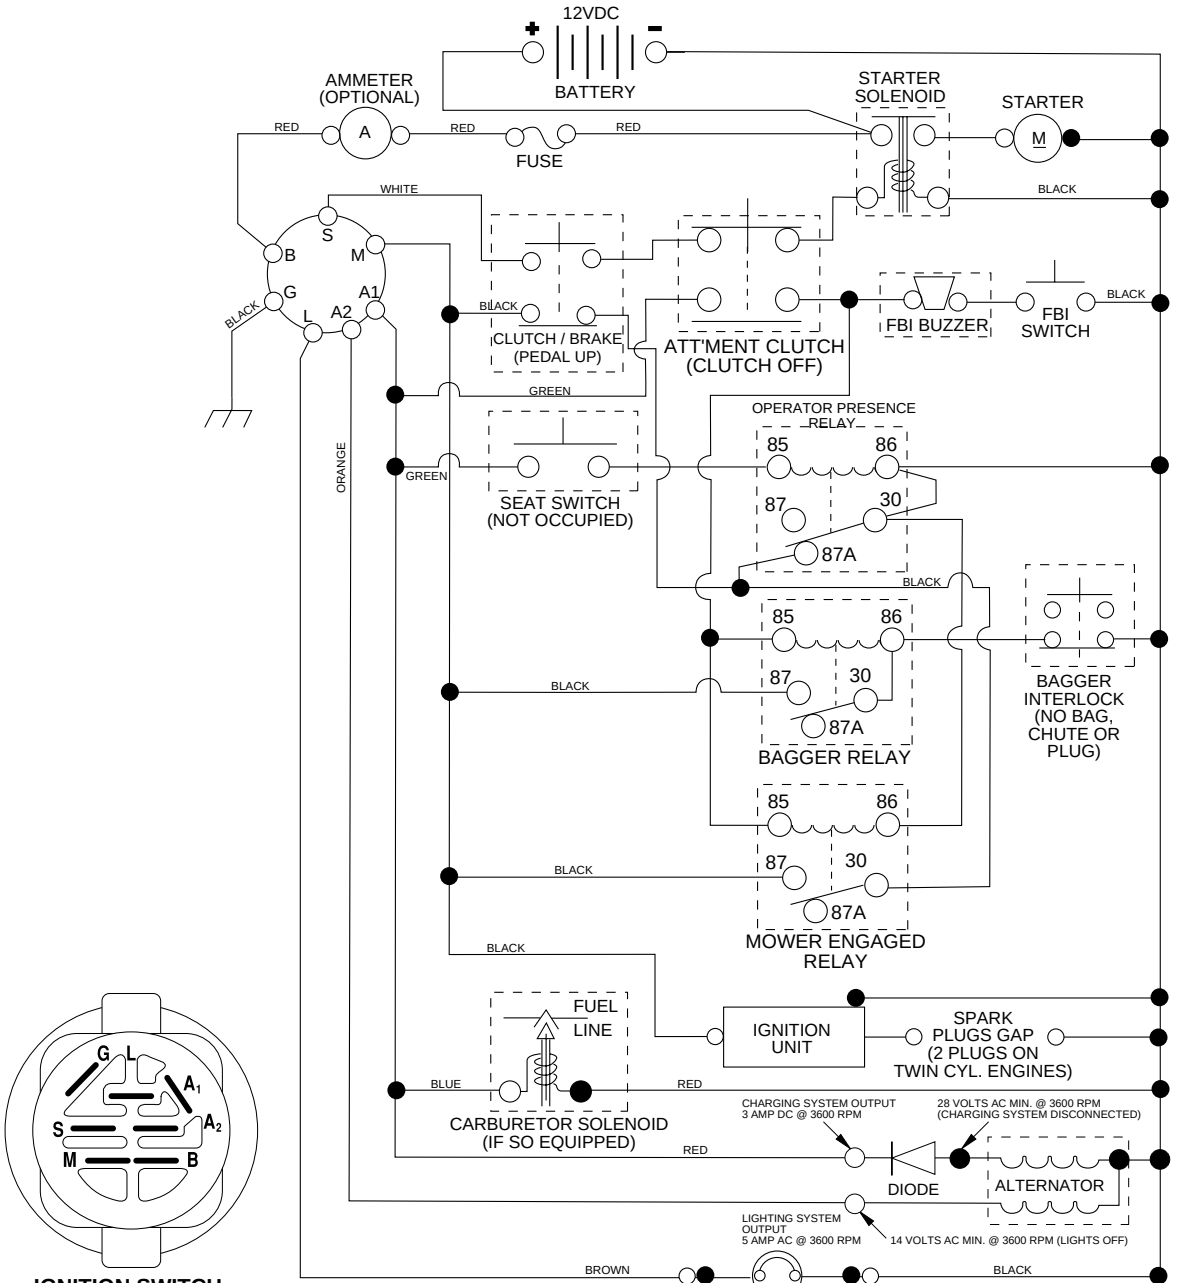





**IGNITION SWITCH**

| POSITION | CIRCUIT | "MAKE" |
|---|---|---|
| OFF | M+G+A1 | NONE |
| RUN/LIGHT | B+A1 | A2+L |
| RUN | B+A1 | NONE |
| START | B + S + A1 | NONE |

**WIRING INSULATED CLIPS**
**NOTE:** IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.


NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS


**PTO SWITCH**

| POSITION | CIRCUIT |
|---|---|
| OFF | C + G, B + H |
| ON | C + F, B + E, A + D |

**NOTE**
YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

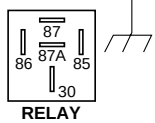



**RELAY**



# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### ELECTRICAL

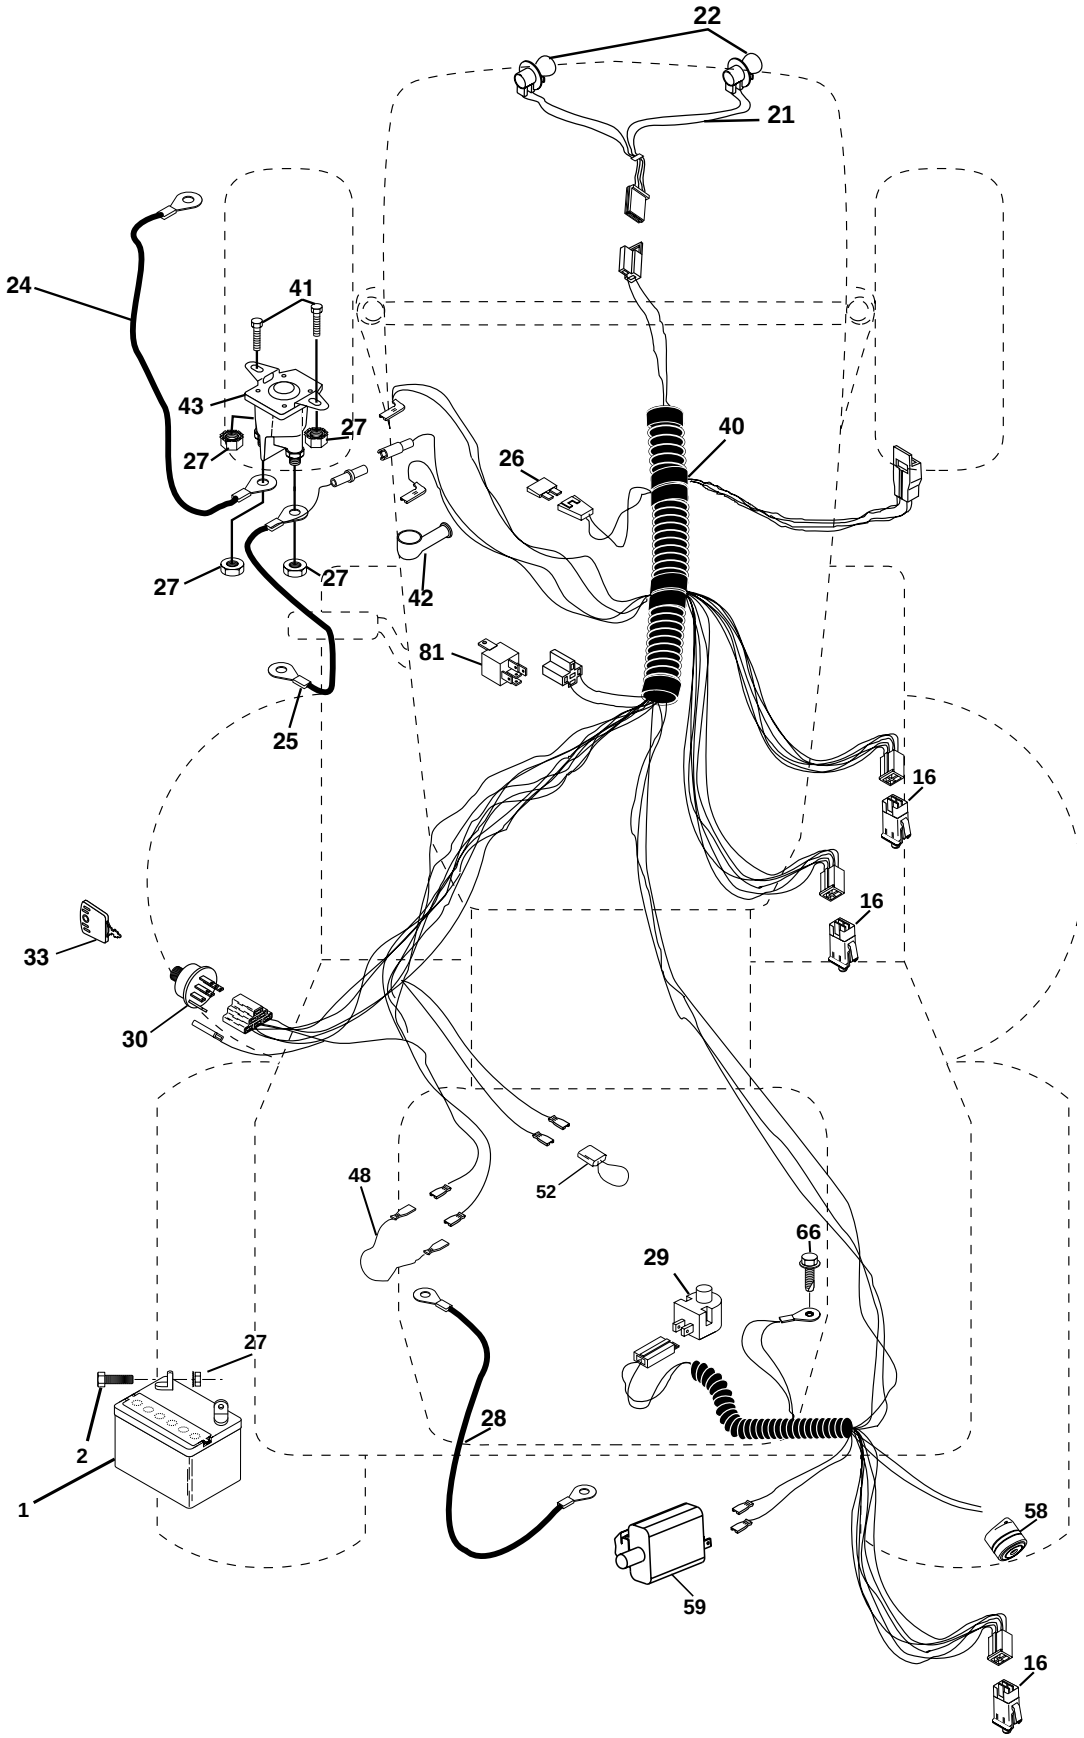

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### ELECTRICAL


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 14 49-27 | Battery |
| 2 | 874 76 04-12 | Bolt Hex Hd 1/4-20 unc x 3/4 |
| 16 | 532 17 61-38 | Switch Interlock |
| 21 | 532 17 56-88 | Harness Asm Light W/4152J |
| 22 | 532 00 41-52 | Bulb Light #1156 |
| 24 | 532 12 47-80 | Cable Starter 6 Ga. 11" Red |
| 25 | 532 16 59-87 | Cable Battery Crd 56" Red |
| 26 | 532 17 51-58 | Fuse |
| 27 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 28 | 532 12 77-25 | Cable Ground 6 Ga. 18" Black |
| 29 | **532 16 07-84** | Switch Plunger Normal Op Olive |
| 30 | 532 17 55-66 | Switch Ignition |
| 33 | 532 14 04-01 | Key Ign |
| 40 | **532 17 97-28** | Harness Ign |
| 41 | 871 11 04-08 | Bolt Flk Fin Hex 1/4-20 unc x 1/2 |
| 42 | 532 13 15-63 | Cover Terminal Red |
| 43 | 532 17 88-61 | Solenoid |
| 48 | 532 14 08-44 | Adapter Ammeter Rectangular |
| 52 | 532 14 19-40 | Protection Wire Loop |
| 58 | 532 16 94-19 | Buzzer Crd |
| 59 | 532 18 03-79 | Switch FBI CRD |
| 66 | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2 Ty-Tt |
| 81 | 532 10 97-48 | Relay Asm |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### CHASSIS AND ENCLOSURES

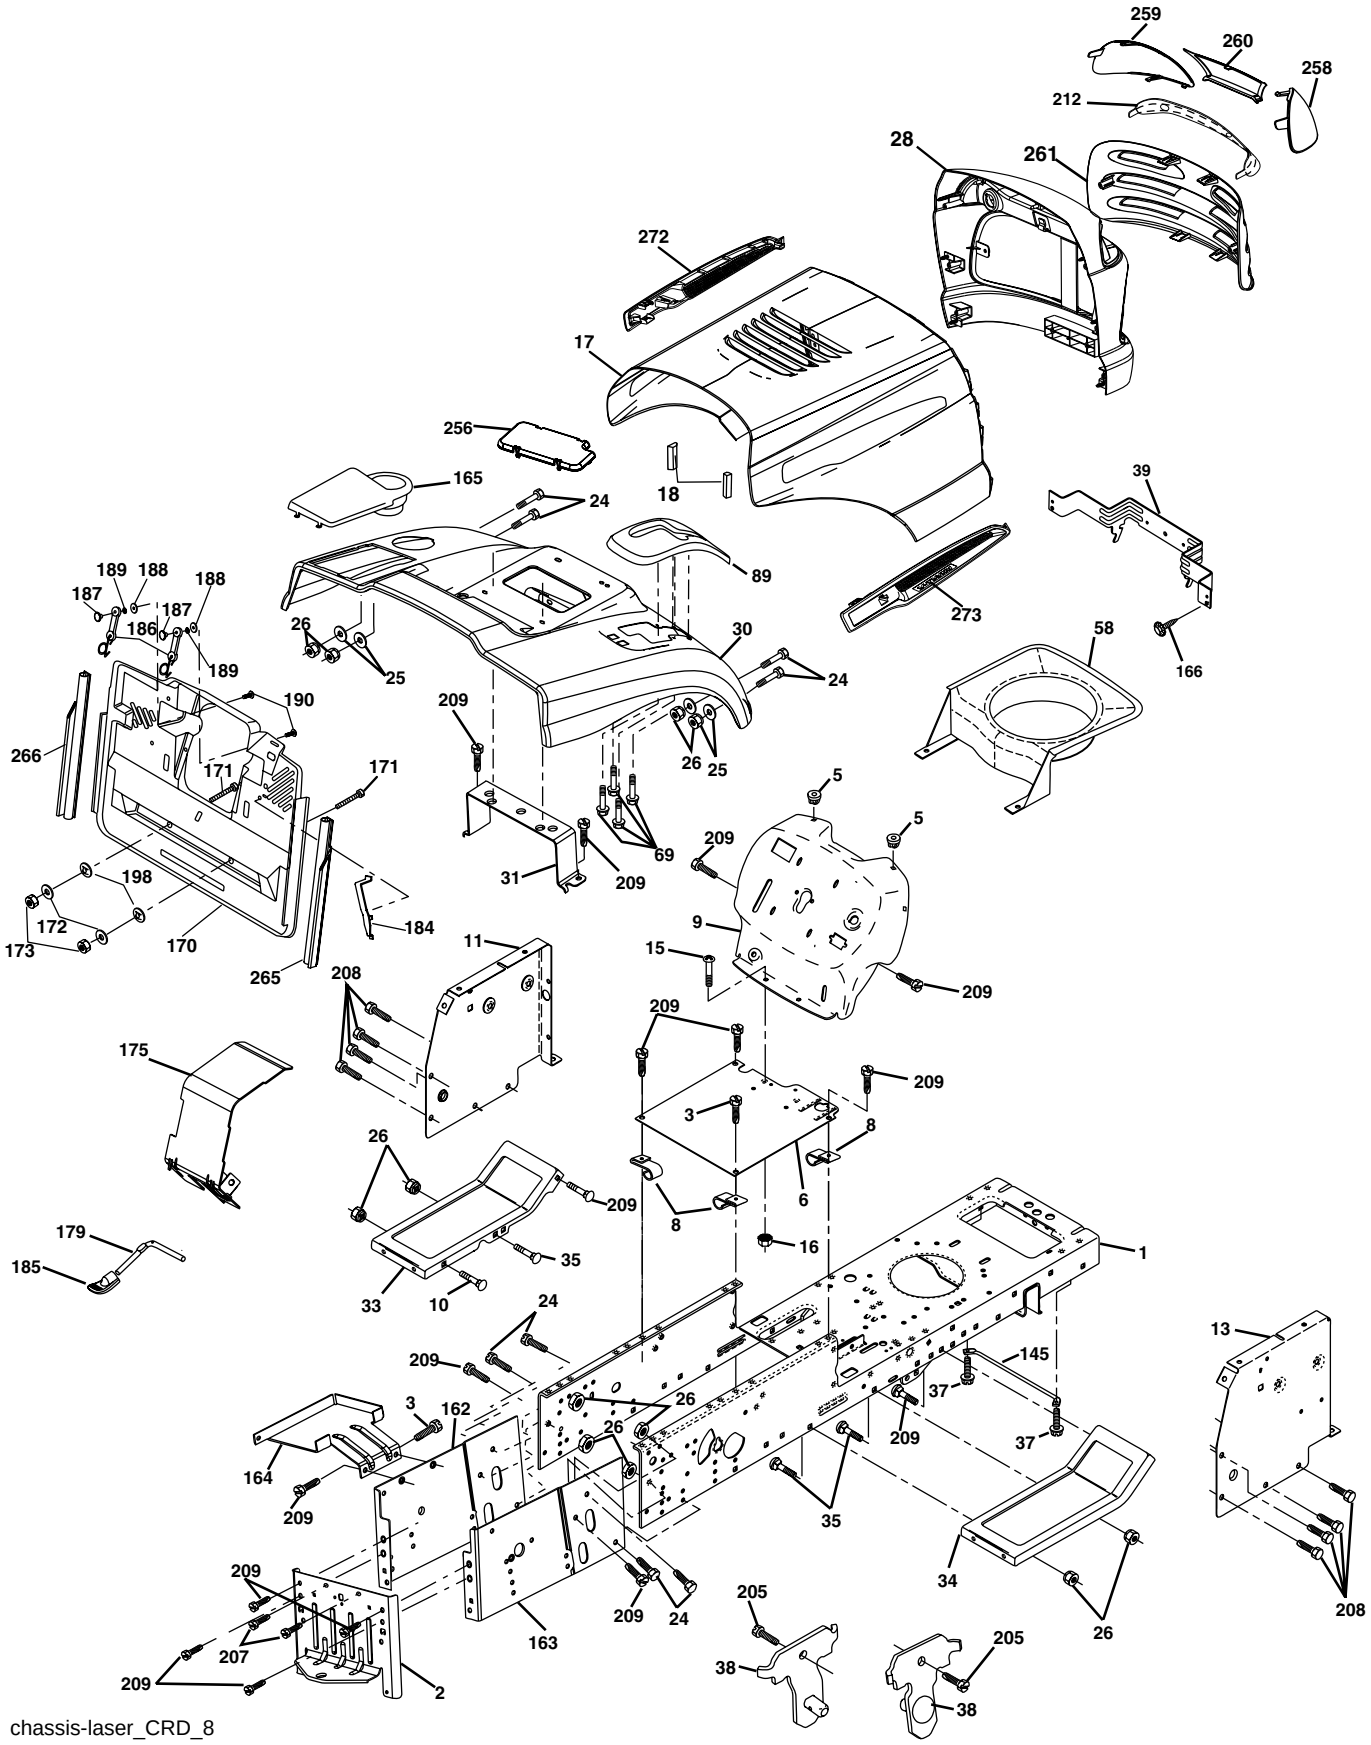


chassis-laser_CRD_8

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### CHASSIS AND ENCLOSURES


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 17 46-20 | Chassis |
| 2 | 532 18 03-84 | Drawbar |
| 3 | 817 06 06-12 | Screw 3/8-16 x 3/4 |
| 5 | 532 15 52-72 | Bumper Hood/Dash |
| 6 | 532 18 44-19 | Saddle |
| 8 | 532 12 64-71 | Clip Insulator 13/32 Mtg. Hole |
| 9 | 532 18 52-10 | Dash |
| 10 | 872 14 06-08 | Bolt, Carriage 3/8-16 x 3/4 |
| 11 | 532 17 49-96 | Panel, Dash, L.H. |
| 13 | 532 17 21-06 | Panel, Asm. Dash R.H. |
| 15 | 874 18 05-12 | Screw, Machine, Truss Head 5/16-18 unc x 3/4 |
| 16 | 873 51 05-00 | Nut |
| 17 | 532 18 88-93 | Hood |
| 18 | 532 18 49-21 | Bumper Hood |
| 24 | 874 78 06-16 | Bolt |
| 25 | 819 13 13-12 | Washer 13/32 x 13/16 x 12 Ga. |
| 26 | 873 80 06-00 | Nut |
| 28 | 532 18 35-38 | Grille /Lens Asm |
| 30 | 532 18 25-06 | Fender |
| 31 | 532 16 51-56 | Bracket, Fender Support |
| 33 | 532 18 10-57 | Footrest, L.H. |
| 34 | 532 18 10-58 | Footrest, R.H. |
| 35 | 872 11 06-06 | Bolt |
| 37 | 817 49 05-08 | Screw Thdrol 5/16-18 x 1/2 TYT |
| 38 | 532 18 17-48 | Bracket Asm Pivot Mower Rear |
| 39 | 532 17 47-14 | Bracket Pivot |
| 58 | 532 18 71-54 | Duct Air |
| 69 | 532 14 24-32 | Screw Hx Wsh Hi-Lo 1/4-1/2 |
| 89 | 532 18 10-99 | Console Crd Auto Grey |
| 145 | 532 15 65-24 | Rod Pivot Chassis/Hood |
| 162 | 532 18 03-82 | Bracket Exten Chassis Lh CRD |
| 163 | 532 18 03-83 | Bracket Exten Chassis Rh CRD |
| 164 | 532 16 56-05 | Support Battery CRD |
| 165 | 532 18 11-00 | Cover Battery |
| 166 | 532 17 18-75 | Screw Hi-Lo #13-16 x 3/4 |
| 170 | 532 17 88-62 | Backplate CRD |
| 171 | 872 14 06-20 | Bolt Rdhd Sqnk 3/8-16 x 2-1/2 Gr. 5 |
| 172 | 819 13 20-16 | Washer 13/32 x 1-1/4 x 16 Ga. |
| 173 | 873 51 06-00 | Nut, Keps Hex 3/8-16 unc |
| 175 | 532 18 82-03 | Guard Trap |
| 179 | 532 18 82-02 | Rod Pivot FBI CRD |
| 184 | 532 17 46-62 | Bracket Actuator Bagger CRD |
| 185 | 532 18 11-01 | Knob Rod Brake Parking |
| 186 | 532 16 07-93 | Latch Asm Mulch/Bagger |
| 187 | 532 12 50-04 | Nut Weld |
| 188 | 819 06 12-16 | Washer #10 |
| 189 | 810 07 10-00 | Washer Lock #10 |
| 190 | 871 08 10-10 | Screw Pan Hd Phillip 10-24 x 5/8 |
| 198 | 532 16 89-37 | Nut, Push |
| 205 | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2 |
| 207 | 817 67 05-08 | Screw Thdrol 5/16-18 x 1/2 |
| 208 | 817 67 06-08 | Screw Thdrol 3/8-16 x 1/2 |
| 209 | 817 00 06-12 | Screw Hex Wsh Thdrol 3/8-16 |
| 212 | 532 18 35-48 | Insert Lens Reflect |
| 256 | 532 18 13-61 | Cover Fender Rack |
| 258 | 532 18 52-13 | Lens RH |
| 259 | 532 18 52-14 | Lens LH |
| 260 | 532 18 52-16 | Cover Lens |
| 261 | 532 18 52-12 | Insert Grille |
| 265 | 532 18 57-04 | Seal RH Side Bagger |
| 266 | 532 18 57-03 | Seal LH Side Bagger |
| 272 | 532 18 88-95 | Vent Hood LH |
| 273 | 532 18 88-96 | Vent Hood RH |
| - - | 532 00 54-79 | Plug |

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### DRIVE

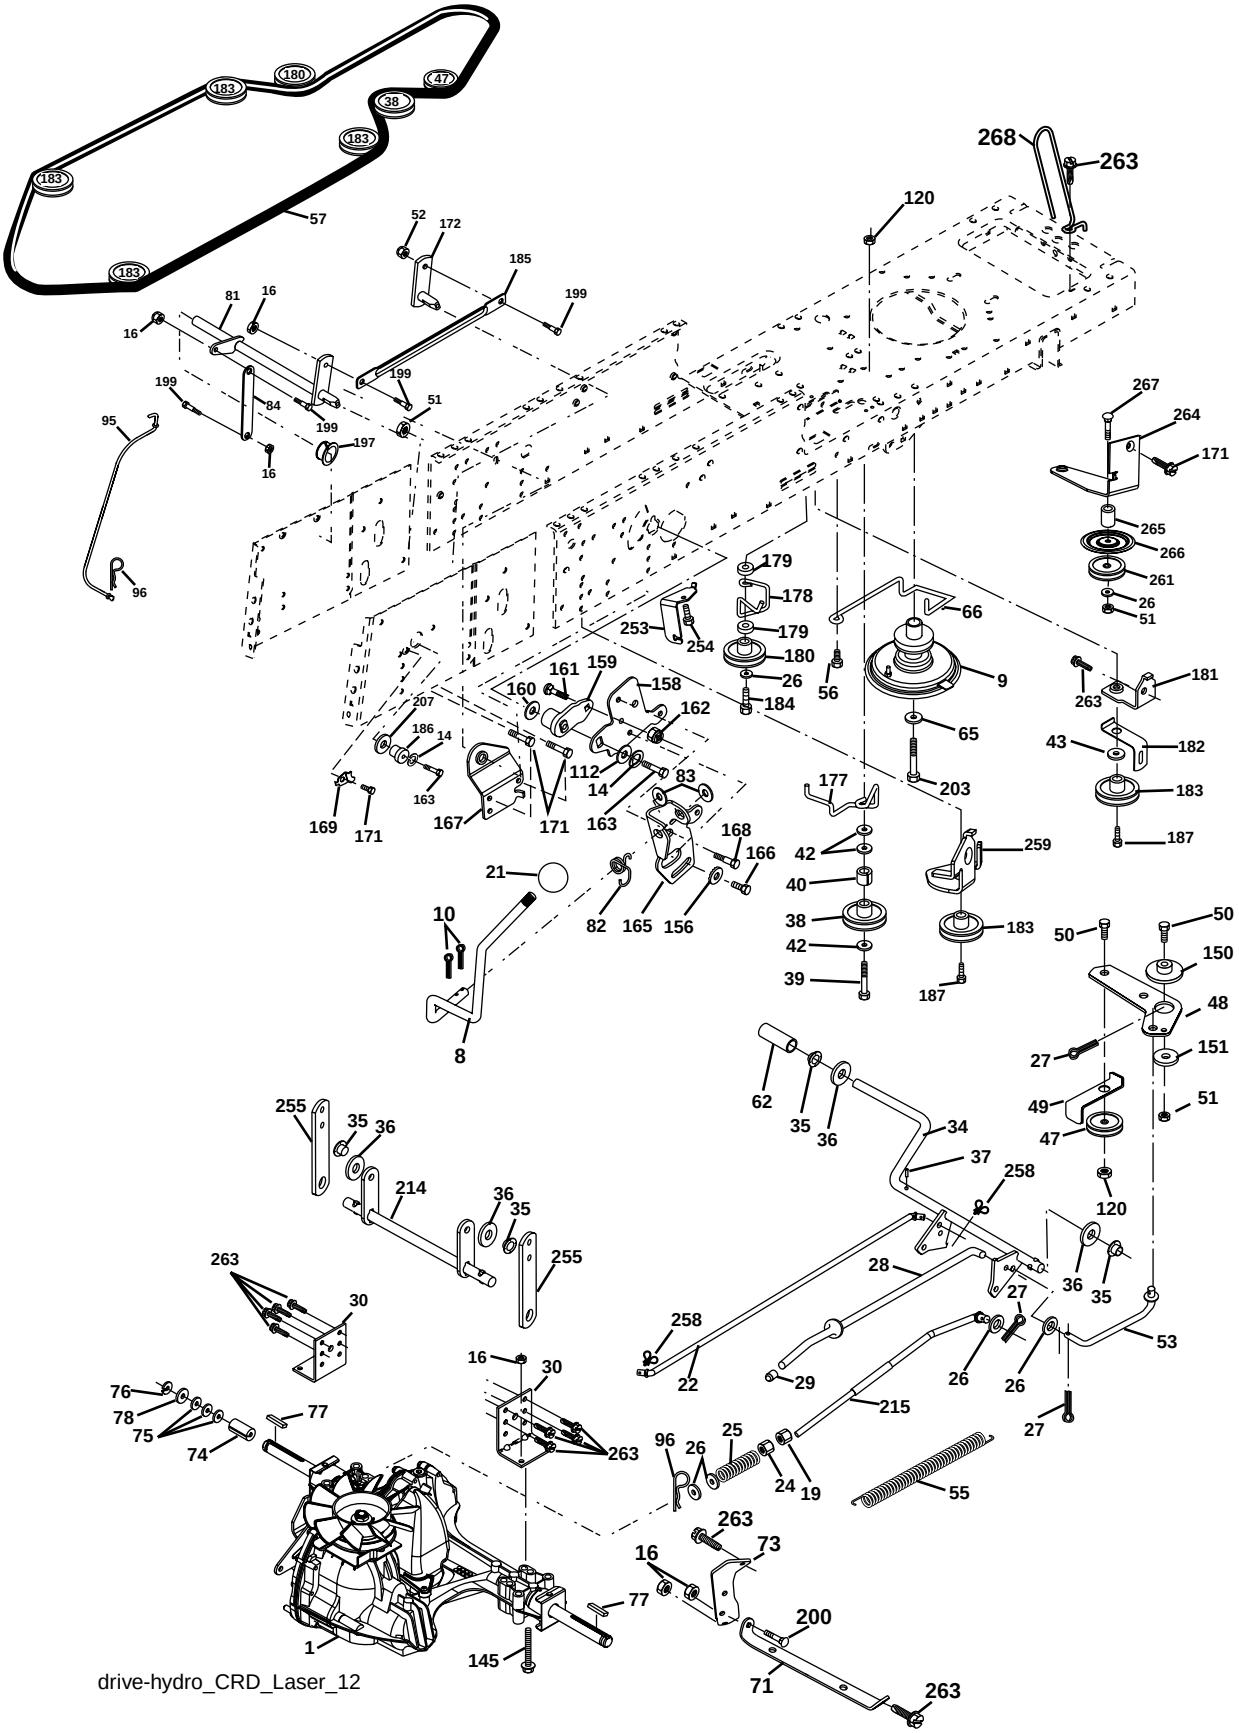

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### DRIVE


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | - - - - - - - | Transaxle Hydro Gear 321-0510 (Order parts from transaxle manufacturer) |
| 8 | 532 16 56-19 | Rod, Shift Fender Adjust Lt |
| 9 | 532 18 03-54 | Clutch Asm Noram |
| 10 | 876 02 04-16 | Pin, Cotter 1/8 x 1 |
| 14 | 810 04 04-00 | Washer, Lock Hvy Helical |
| 16 | 873 80 05-00 | Nut Lock Hex W/Ins 5/16-18 unc |
| 19 | 873 80 06-00 | Nut Lock Hex w/Ins 3/8-16 unc |
| 21 | 532 12 12-74 | Knob Duckhead 1/4-13 unc Blk |
| 22 | 532 17 56-07 | Rod, Brake |
| 24 | 873 35 06-00 | Nut |
| 25 | 532 10 68-88 | Spring, Rod, Brake |
| 26 | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga. |
| 27 | 876 02 04-12 | Pin, Cotter 1/8 x 3/4 |
| 28 | 532 17 57-65 | Rod, Parking Brake |
| 29 | 532 07 16-73 | Cap, Parking Brake |
| 30 | 532 16 95-92 | Bracket, Mfg. Transaxle |
| 34 | 532 17 55-78 | Shaft, Asm Pedal Foot CRD |
| 35 | 532 12 01-83 | Bearing, Nylon |
| 36 | 819 21 16-16 | Washer 21/32 x 1 x 16 Ga. |
| 37 | 532 12 49-63 | Pin, Roll 3/16 x 1" |
| 38 | 532 16 59-36 | Pulley Flat Composite 3.06" |
| 39 | 874 76 06-44 | Bolt Fin Hex 3/8-16 unc x 2-3/4 |
| 40 | 532 12 49-65 | Spacer, Split 395 x 59 Bzp |
| 42 | 819 13 13-12 | Washer 13/32 x 13/16 x 12 Ga. |
| 43 | 819 11 10-12 | Washer 11/32 x 5/8 x 12 Ga. |
| 47 | 532 12 77-83 | Pulley, Idler, V Groove Plasitc |
| 48 | 532 15 44-07 | Bellcrank Clutch Grnd Drv |
| 49 | 532 12 32-05 | Retainer, Belt Style Spring |
| 50 | 872 11 06-12 | Bolt Carr. Sh. 3/8-16 x 1-1/2 Gr. 5 |
| 51 | 873 68 06-00 | Nut, Crownlock 3/8-16 unc |
| 52 | 873 68 05-00 | Nut Crownlock 5/16-18 |
| 53 | 532 10 57-10 | Link, Clutch 7.66 |
| 55 | 532 10 57-09 | Spring, Return, Clutch |
| 56 | 817 06 06-20 | Screw 3/8-16 x 1-1/4 |
| 57 | 532 17 01-40 | V-Belt Kev 112" 0650 CRD |
| 62 | 532 12 35-33 | Cover, Pedal |
| 65 | 810 04 07-00 | Washer |
| 66 | 532 15 47-78 | Keeper, Belt Engine F-Proof |
| 71 | 532 16 91-82 | Strap, Torque, Rh |
| 73 | 532 16 91-83 | Strap, Torque, Lh |
| 74 | 532 13 70-57 | Spacer, Split |
| 75 | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga. |
| 76 | 812 00 00-01 | Ring, E |
| 77 | 532 12 35-83 | Key, Square |
| 78 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 81 | 532 17 00-06 | Asm, Shaft,Cross Rear |
| 82 | 532 16 57-11 | Spring, Torsion |
| 83 | 819 17 12-16 | Washer 17/32 x 3/4 x 16 Ga. |
| 84 | 532 17 00-07 | Link, Transaxle |
| 95 | 532 17 00-15 | Control Asm Bypass Hydro |
| 96 | 532 12 47-88 | Spring, Retainer 1” |
| 112 | 819 09 12-10 | Washer 9/32 x 3/4 x 10 Ga. |
| 120 | 873 90 06-00 | Nut Lock Flg. 3/8-16 unc |
| 145 | 874 49 05-44 | Bolt Hex FGHD 5/16-18 x Gr 5 |
| 150 | 532 16 58-50 | Bushing, Bellcrank Grnd Dr |
| 151 | 819 13 32-10 | Washer 13/32 x 2 x 10 Ga. |
| 156 | 532 16 60-02 | Washer Srrted 5/16 ID x 1.125 |
| 158 | 532 16 55-89 | Bracket Shift Mount |
| 159 | 532 16 54-94 | Hub Tapered Flange Shift Lt |
| 160 | 819 29 20-16 | Washer 29/32 x 1-1/4 x 16 Ga. |
| 161 | 872 14 04-06 | Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5 |
| 162 | 873 68 04-00 | Nut Crownlock 1/4-20 unc |
| 163 | 874 78 04-16 | Bolt Hex Fin 1/4-20 unc x 1 Gr 5 |
| 165 | 532 16 56-23 | Bracket Pivot Lever |
| 166 | 817 49 05-10 | Screw 5/16-18 x 5/8 |
| 167 | 532 16 55-88 | Bracket Support Shift CRD |
| 168 | 532 16 54-92 | Bolt Shoulder 5/16-18 x .561 |
| 169 | 532 16 55-80 | Plate Fastening Lt |
| 171 | 817 49 06-08 | Screw Thdrol 3/8-16 x 1/2 Ty-Tt |
| 172 | 532 17 02-71 | Shaft Asm Shifter Frt CRD |
| 177 | 532 16 59-32 | Keeper Flat Idler 3.06" CRD |
| 178 | 532 16 59-33 | Keeper Belt Idler 1.88" CRD |
| 179 | 532 12 09-58 | Washer Sintered |
| 180 | 532 16 56-30 | Pulley, Idler, Flat 1.88"CRD |
| 181 | 532 18 02-11 | Bracket Idler Ground Drive CRD |
| 182 | 532 18 26-82 | Keeper Belt 2.5" Od V-Idler CRD |
| 183 | 532 18 60-07 | Pulley V-Idler 2.50" Od CRD |
| 184 | 817 49 06-44 | Screw Hexwsh Thdrol 3/8-16 x 2-3/4 |
| 185 | 532 17 00-08 | Link Shift |
| 186 | 532 16 56-14 | Hub Tapered Round CRD |
| 187 | 817 58 05-20 | Screw Thdrol 5/16-18 x 1.25 |
| 197 | 532 16 96-13 | Nyliner Snap-In 5/8 |
| 199 | 532 16 96-12 | Bolt Shoulder 5/16-18 unc |
| 200 | 872 14 05-08 | Bolt RDHD SQNK 5/16-18 x 1 |
| 203 | 871 17 07-80 | Bolt Hex 7/16-20 x 5 |
| 207 | 532 16 98-45 | Washer Nylon Rear |
| 214 | 532 17 56-09 | Shaft Asm. Brake |
| 215 | 532 17 56-52 | Rod Brake Hydro |
| 253 | 532 17 50-28 | Bracket Cable Chassis |
| 254 | 817 00 06-16 | Screw 3/8-16 x 1 |
| 255 | 532 17 56-08 | Brace Shaft Brake Mtg. |
| 258 | 532 17 80-62 | Clip Retainer |
| 259 | 532 18 02-12 | Bracket Pulley |
| 261 | 532 13 14-94 | Pulley Idler |
| 263 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 264 | 532 18 19-95 | Bracket Clutch Mounting |
| 265 | 532 18 20-13 | Spacer Idler Chassis |
| 266 | 532 18 20-61 | Shield Idler Mower |
| 267 | 872 14 06-26 | Bolt 3/8-16 x 3-1/4 |
| 268 | 532 18 24-02 | Guard Muffler RH |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### STEERING ASSEMBLY

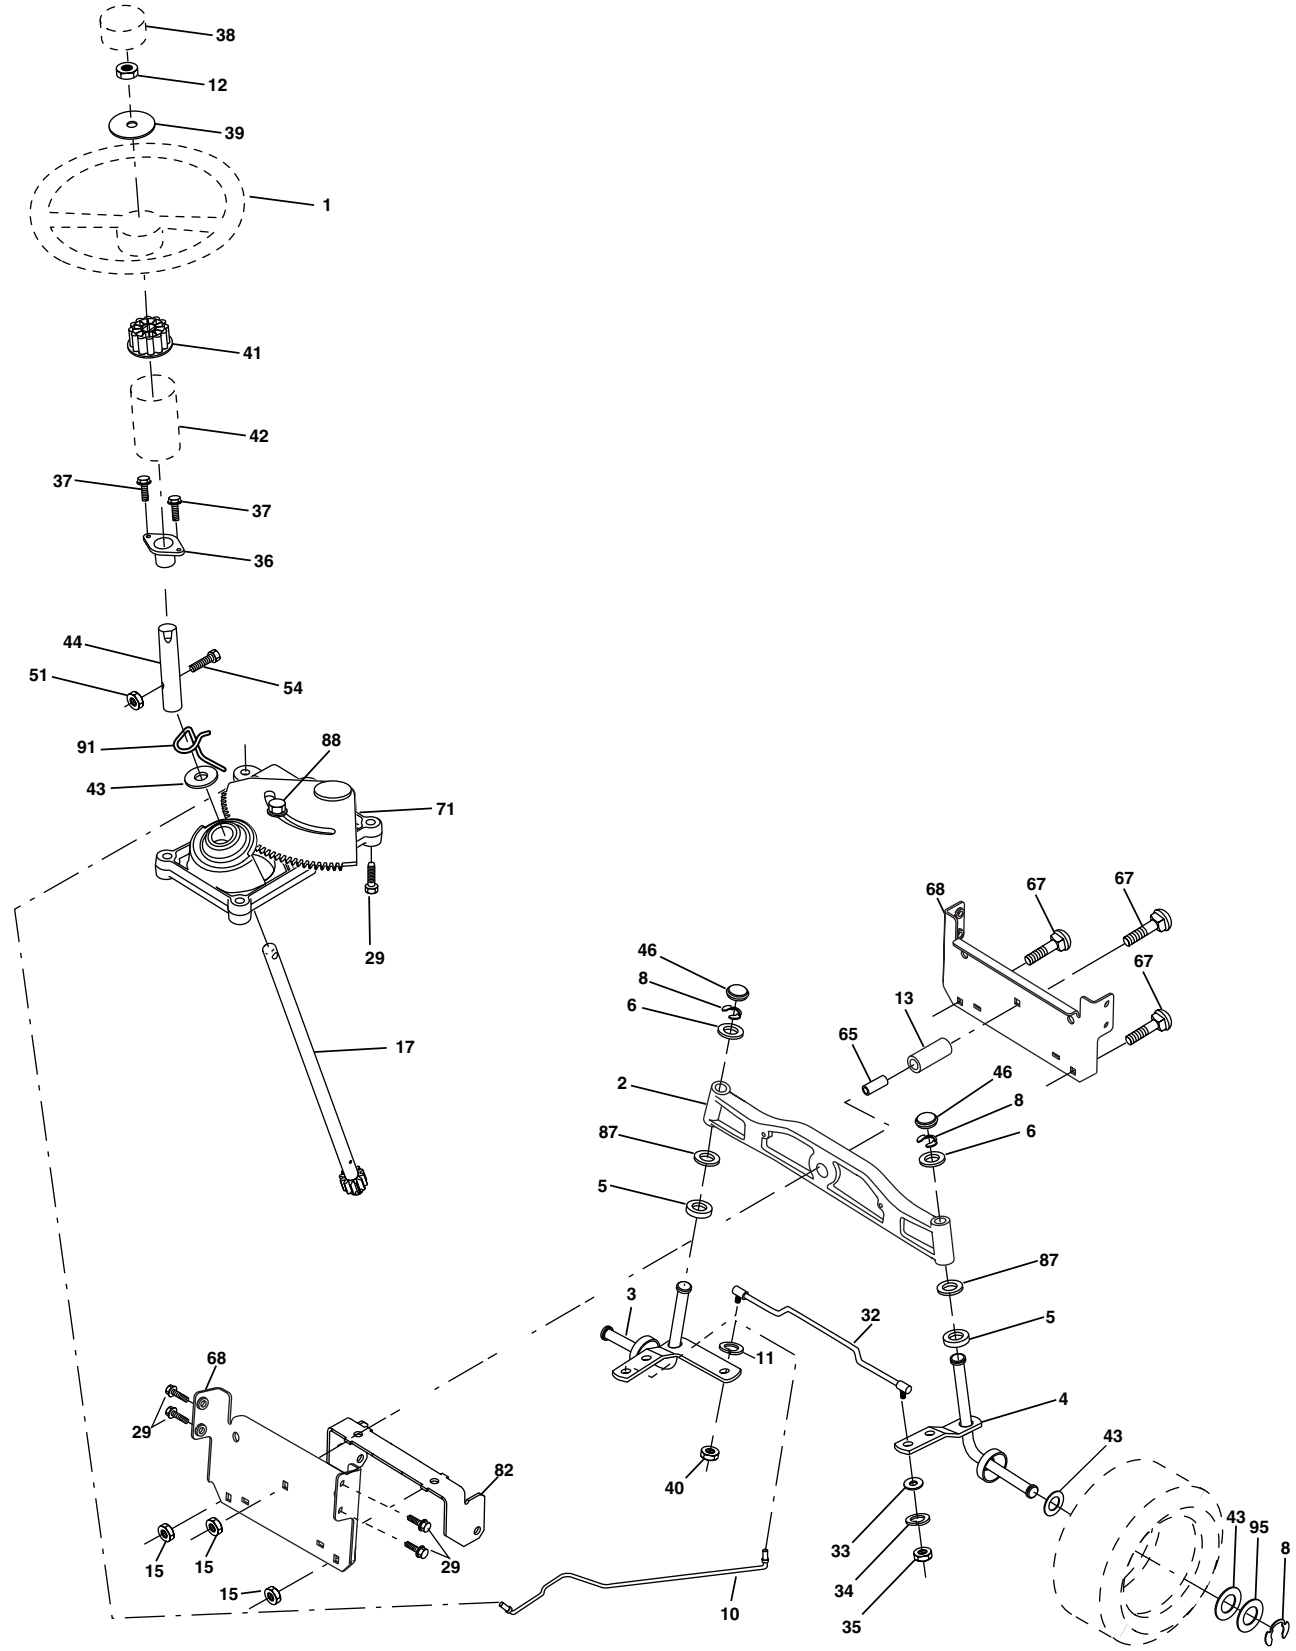


steering_pl.lt_29

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### STEERING ASSEMBLY


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 16 66-27 | Steering Wheel |
| 2 | 532 18 47-06 | Front Axle Assembly |
| 3 | 532 16 98-40 | Spindle Assembly, L.H. |
| 4 | 532 16 98-39 | Spindle Assembly, R.H. |
| 5 | 532 12 49-31 | Bearing, Race, Thrust, Hardened |
| 6 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 8 | 812 00 00-29 | Ring, Klip |
| 10 | 532 17 51-21 | Link, Drag |
| 11 | 810 04 06-00 | Washer, Lock |
| 12 | 873 94 08-00 | Nut Hex Jam Toplock 1/2-20 unf |
| 13 | 532 13 65-18 | Spacer Axle |
| 15 | 532 14 52-12 | Nut Hex Flange Lock |
| 17 | 532 18 06-41 | Shaft Assembly, Steering |
| 29 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 32 | 532 17 01-62 | Rod, Tie |
| 33 | 819 11 12-16 | Washer 11/32 x 3/4 x 16 Ga. |
| 34 | 810 04 05-00 | Washer Lock Hvy Hlcl Spr 5/16 |
| 35 | 873 54 05-00 | Crownlock Nut 5/16-24 unf |
| 36 | 532 15 50-99 | Bushing, Steering |
| 37 | 532 15 29-27 | Screw TT #I0-32 x 5 x 3/8 Flange |
| 38 | 532 16 66-26 | Cap Wheel Steering |
| 39 | 819 18 24-11 | Washer 9/16 ID x 1 1/2 OD 11 G |
| 40 | 873 54 06-00 | Nut Crownlock 3/8-24 |
| 41 | 532 15 99-45 | Adaptor, Steering Wheel |
| 42 | 532 16 96-34 | Boot, Steering Dash P/L Mtl |
| 43 | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga. |
| 44 | 532 18 06-40 | Extension Steering |
| 46 | 532 12 12-32 | Cap, Spindle |
| 51 | 873 54 04-00 | Nut Crownlck 1/4-28 |
| 54 | 871 13 04-20 | Bolt Hex 1/4-28 unf x 1-1/4 Gr. 8 |
| 65 | 532 16 03-67 | Spacer Axle |
| 67 | 872 11 06-18 | Bolt Rdhd Sq 3/8-16 x 2-1/4 |
| 68 | 532 16 98-27 | Brace Axle |
| 71 | 532 17 51-46 | Steering Asm. |
| 82 | 532 16 98-35 | Bracket Susp. Chassis Front |
| 87 | 532 17 39-66 | Washer Flat .781 x 1-1/2 x .14 |
| 88 | 532 17 51-18 | Bolt Shoulder 7/16-20 unc |
| 91 | 532 17 55-53 | Clip Steering |
| 95 | 532 18 89-67 | Washer |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### SEAT ASSEMBLY

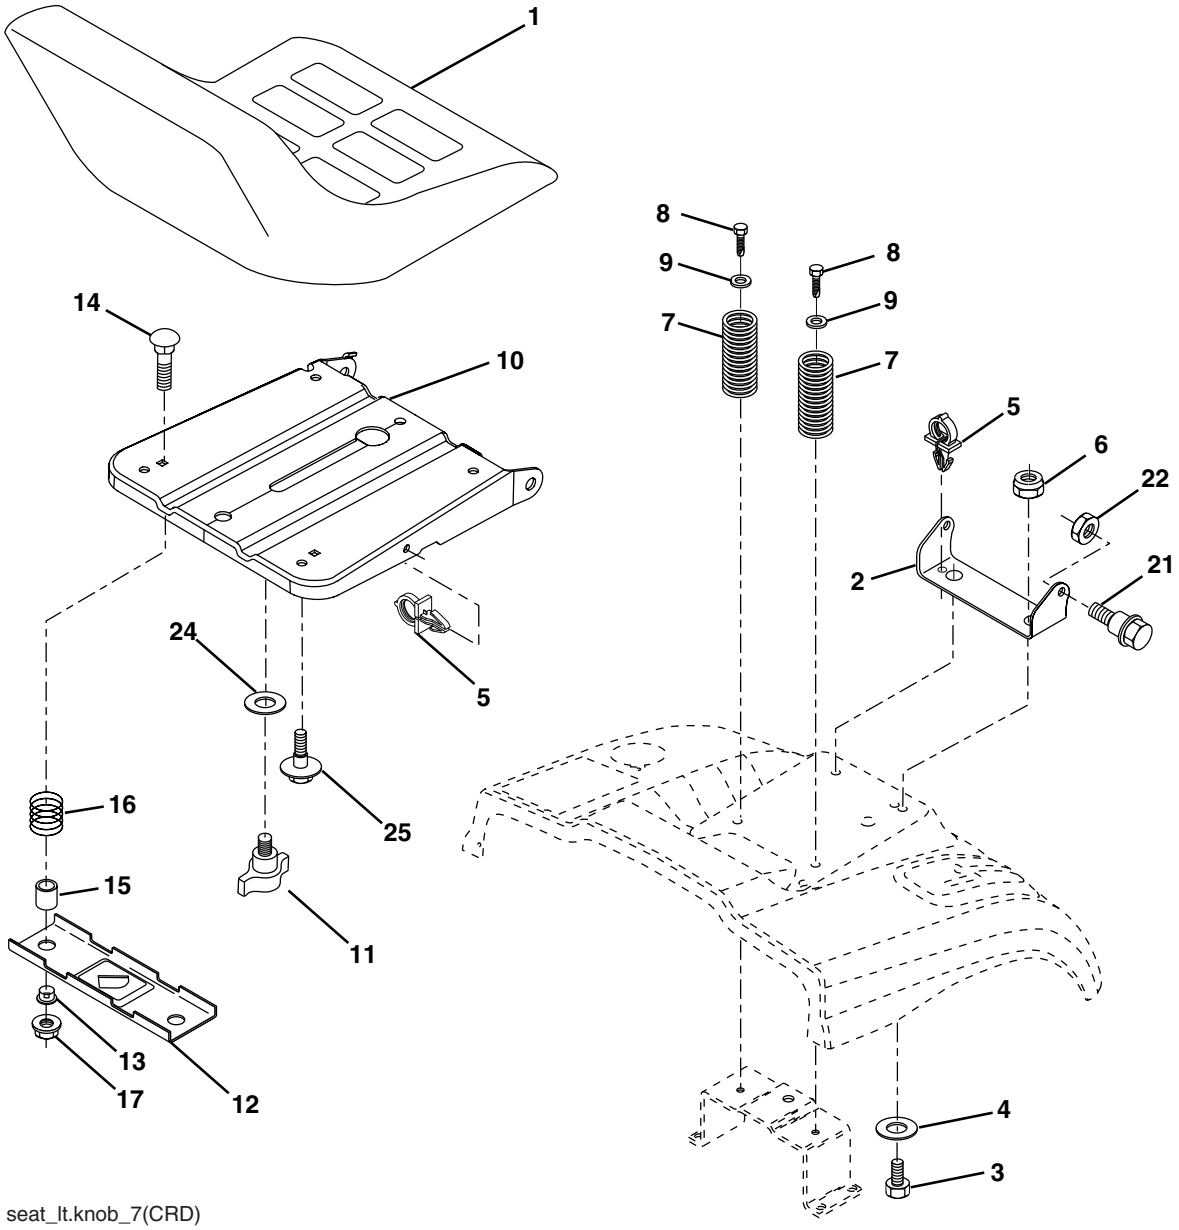


seat_lt.knob_7(CRD)

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| Correction: 1 | 532 18 49-95 | |
| 1 | **532 18 87-15** | Seat |
| 2 | 532 14 05-51 | Bracket Pnt Pivot Seat (blk ) |
| 3 | 871 11 06-16 | Bolt Fin Hex 3/8-16 x 1 |
| 4 | 819 13 16-10 | Washer Flat 13/32 x 1 x 10 Ga. |
| 5 | 532 14 50-06 | Clip Push In Hinged |
| 6 | 873 80 06-00 | Nut Lock Hex W/Ins 3/8-16 |
| 7 | 532 12 41-81 | Spring Seat Cprsn 2 250 Blk Zi |
| 8 | 817 00 06-16 | Screw 3/8-16 x 1.5 |
| 9 | 819 13 16-14 | Washer 13/32 x 1 x 14 Ga |
| 10 | 532 18 24-93 | Pan Pnt Seat |
| 11 | 532 16 63-69 | Knob Seat Adj. Wingnut |
| 12 | 532 12 12-46 | Bracket Pnt Mounting Switch |


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 13 | 532 12 12-48 | Bushing Snap Blk Nyl 50 Id |
| 14 | 872 05 04-12 | Bolt Rdhd Sht Nk 1/4-20 x 1-1/2 |
| 15 | 532 12 12-49 | Spacer Split |
| 16 | 532 12 37-40 | Spring Cprsn |
| 17 | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr. 5 Zinc |
| 21 | 532 17 18-52 | Bolt Shoulder 5/16-18 unc-2A |
| 22 | 873 80 05-00 | Nut Hex Lock w/Ins 5/16-18 |
| 24 | 819 17 19-12 | Washer 17/32 x 1-3/16 x 12 Ga. |
| 25 | 532 12 70-18 | Bolt Shoulder 5/16-18 x 62 |

**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm

# REPAIR PARTS


## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### DECALS

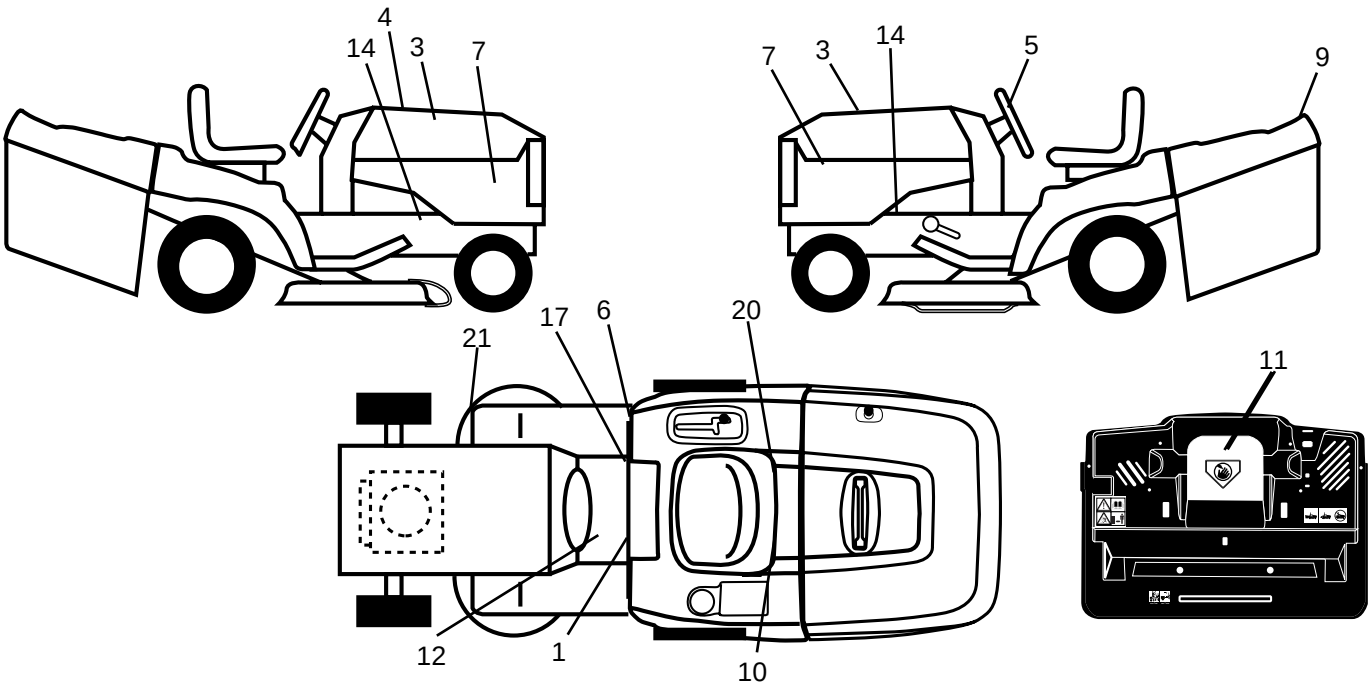


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 14 54-98 | Decal Read Owner's Manual Sym |
| 2 | 532 18 04-31 | Decal Hp Engine |
| 3 | 532 18 89-23 | Decal Hood |
| 4 | 532 18 91-49 | Decal Replacement |
| 5 | 532 18 89-25 | Decal Wheel Steering |
| 6 | 532 18 04-32 | Decal 100 DBA |
| 7 | 532 18 89-21 | Decal Hood |
| 9 | 532 18 89-24 | Decal Fender Logo |
| 10 | 532 14 50-05 | Decal Bat Dan/Poi P/L Sym Wpn |
| 11 | 532 18 21-66 | Decal Mower Cut Finger Symbol |
| 12 | 532 15 97-37 | Decal Brake/Clutch Symbol Lt |
| 14 | 532 15 97-36 | Decal Chassis Hot Muffler |
| 17 | 532 14 08-37 | Decal Saddle Brake Parking |
| 20 | 532 16 69-60 | Decal Bypass Fender CRD |
| 21 | 532 16 62-86 | Decal Hex Belt Sch 92 CRD |
| — | 532 13 83-11 | Decal Lift Handle |
| — | 532 18 10-90 | Pad Footrest RH |
| — | 532 18 10-91 | Pad Footrest LH |
| — | 532 18 26-21 | Decal Bagger Frame |
| — | 532 18 83-26 | Manual Operator's (Euro) |
| — | 532 18 83-27 | Manual Operator's (Scan) |

### WHEELS & TIRES

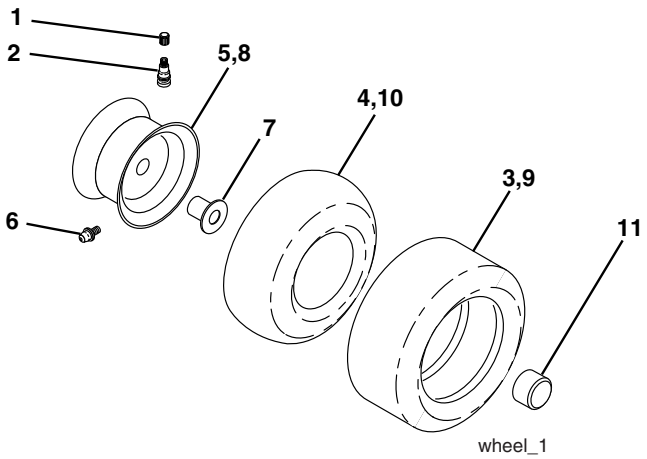



| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 05 91-92 | Cap Value Tire |
| 2 | 532 06 51-39 | Stem Value |
| 3 | 532 10 62-22 | Tire F Ts 15 x 6 0 - 6 Service |
| 4 | 532 05 99-04 | Tube Inner Front #35060 |
| 5 | 532 13 83-36 | Rim Asm 6" front Silver Service |
| 6 | 532 12 49-57 | Fitting Grease |
| 7 | 532 12 49-59 | Bearing Flange |
| 8 | 532 13 83-37 | Rim Asm 8" rear Silver Service |
| 9 | 532 12 20-82 | Tire R Ts 20 x 10-8 Service |
| 10 | 532 12 49-26 | Tube Rear 9 5 x 8 Service |
| 11 | 532 17 50-39 | Cap Axle Blk 1 50 x 1 00 |
| - - | 532 14 43-34 | Sealant, Tire (10 oz. tube) |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### ENGINE

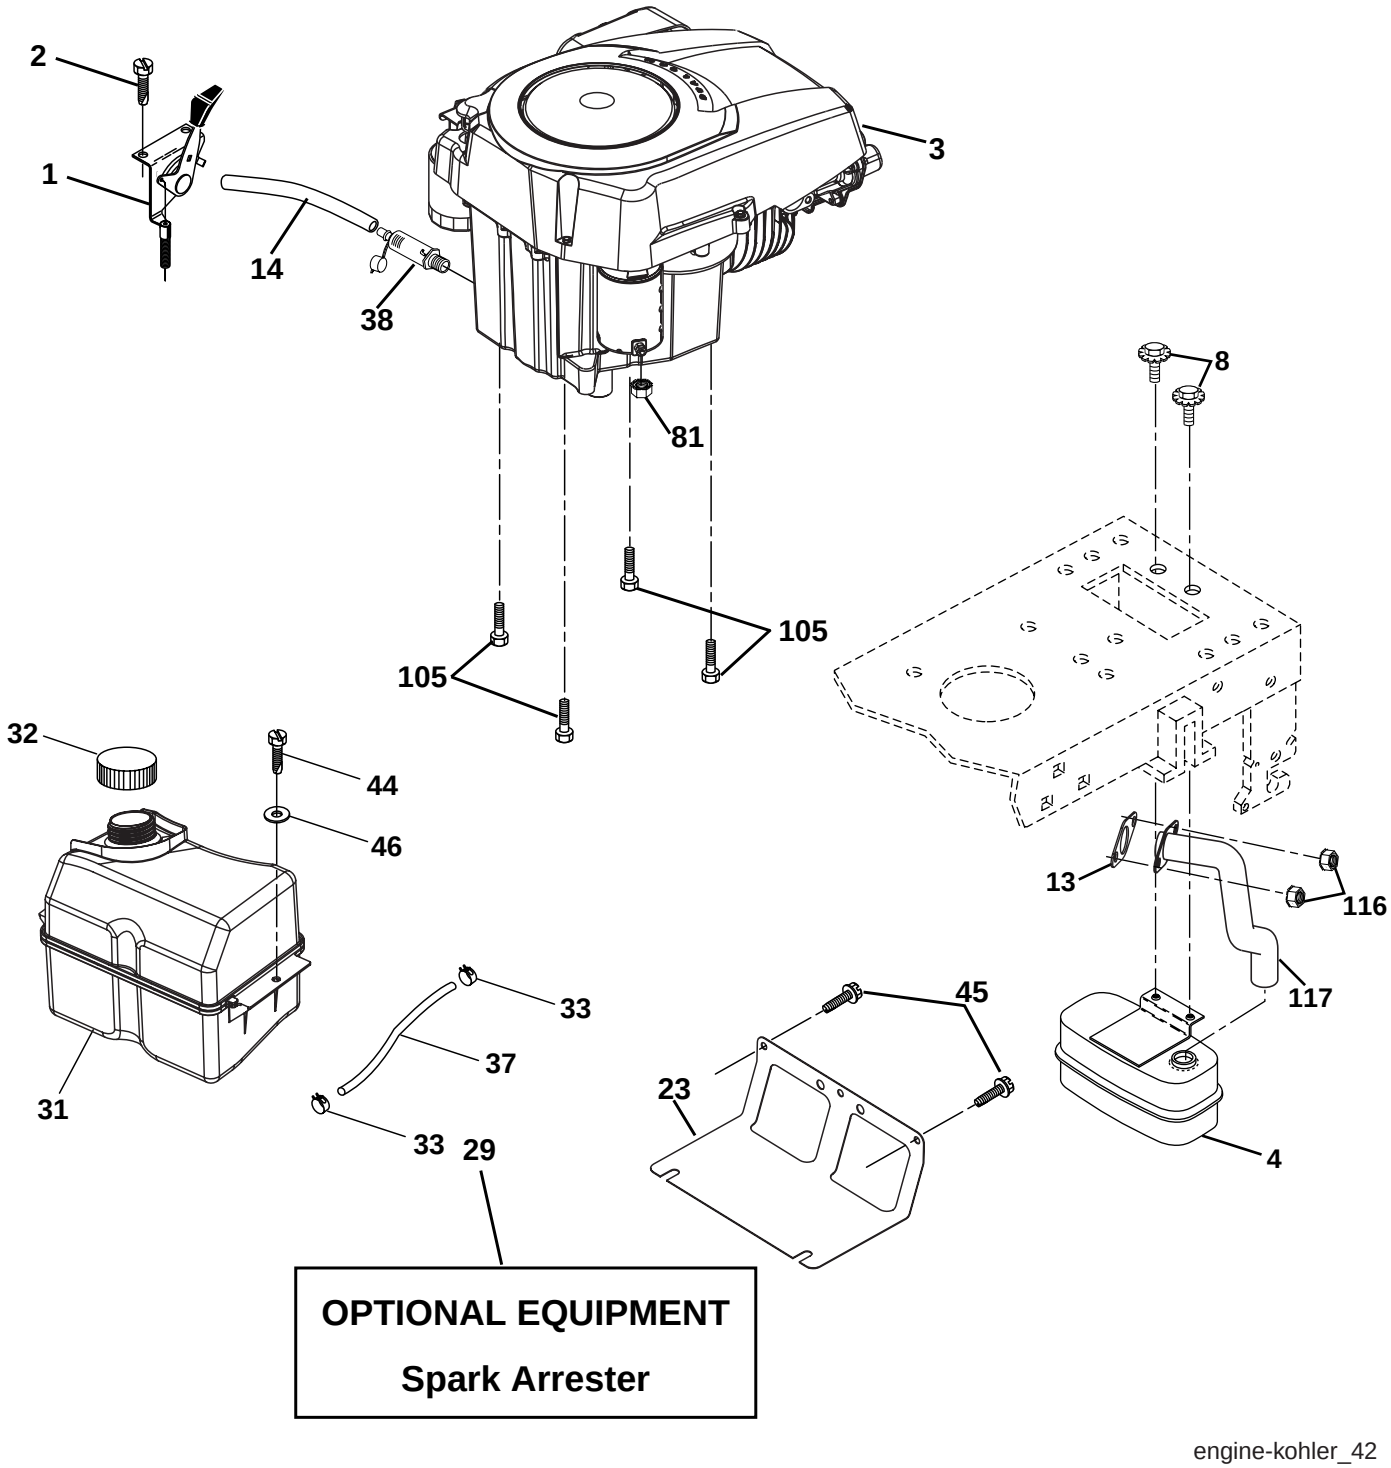


engine-kohler_42

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### ENGINE


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 17 08-05 | Control Throt/Ck |
| 2 | 817 72 04-08 | Screw Hex Thd Cut 1/4-20 x 1/2 |
| 3 | - - - - - - - - | Engine Kohler SV530 (Order parts from engine manufacturer) |
| 4 | 532 18 86-55 | Muffler |
| 8 | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 13 | 532 18 59-09 | Gasket Muffler |
| 14 | 532 14 84-56 | Tube Drain Oil Easy |
| 23 | 532 16 98-37 | Shield Brn/Dbr Guard |
| 29 | 532 13 71-80 | Kit Spark Arrestor (Flat Scrn) |
| 31 | 532 18 55-34 | Tank Fuel 2.00 |
| 32 | 532 14 05-27 | Cap Asm Fuel W/sym Vented |
| 33 | 532 12 34-87 | Clamp Hose Blk |
| 37 | 532 13 70-40 | Line Fuel |
| 38 | 532 18 16-54 | Plug Drain Oil Easy |
| 44 | 817 67 04-12 | Screw Hexwsh thdrol 1/4-20 x 3/4 |
| 45 | 817 00 06-12 | Screw Hexwsh Thdr 3/8-16 x 3/4 |
| 46 | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga. |
| 81 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 105 | 817 12 06-16 | Screw 3/8-16 x 1 |
| 116 | 532 18 43-62 | Nut Hex Flange Toplock M8-1.25 |
| 117 | 532 18 86-54 | Tube Exhaust |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### MOWER LIFT

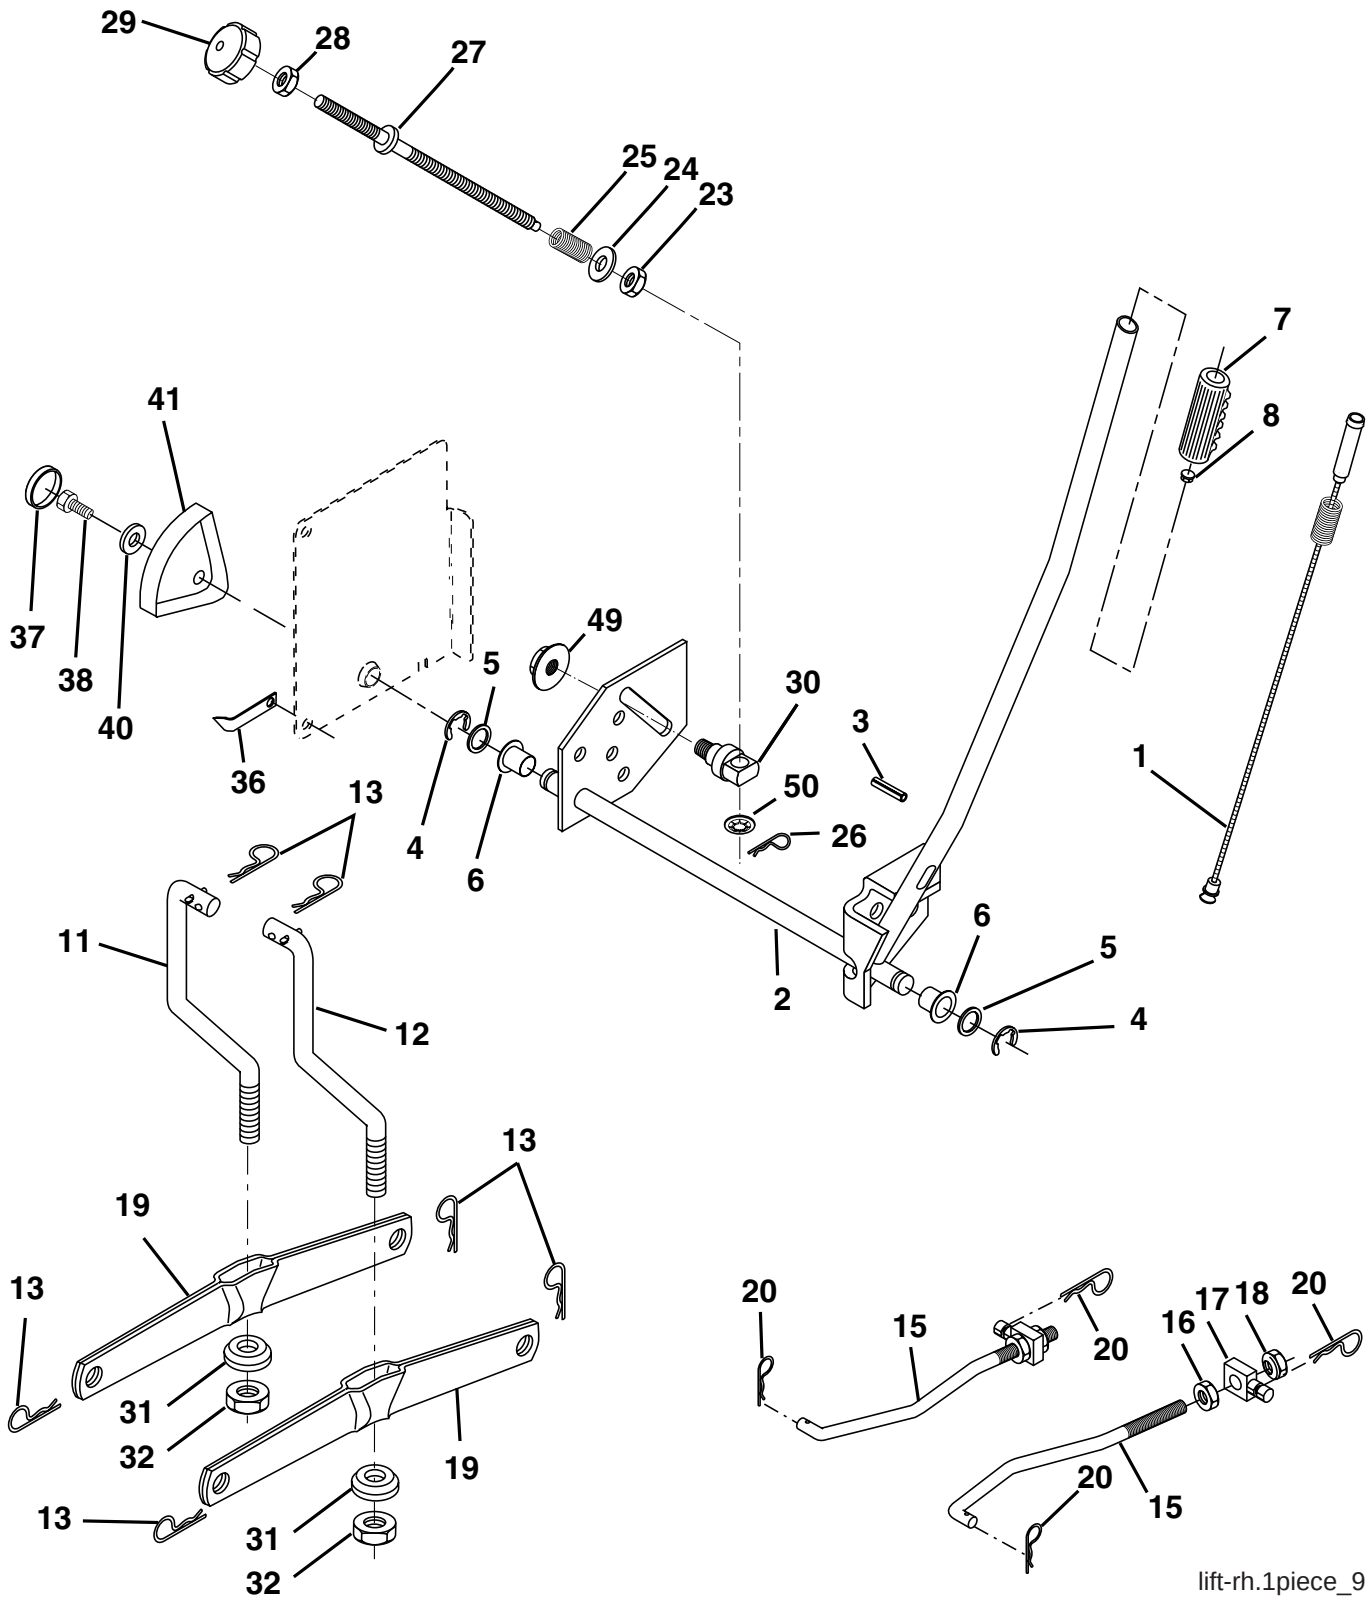

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### MOWER LIFT


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 15 94-60 | Washer Asm Inner Spring W/Plunger |
| 2 | 532 15 94-71 | Shaft Asm. Lift |
| 3 | 532 10 57-67 | Pin Groove |
| 4 | 812 00 00-02 | E Ring #5133-62 |
| 5 | 819 21 16-21 | Washer 21/32 x 1 x 21 Ga. |
| 6 | 532 12 01-83 | Bearing Nylong |
| 7 | 532 12 56-31 | Grip Handle Fluted |
| 8 | 532 12 45-26 | Button Plunger Black |
| 11 | 532 16 58-29 | Link Asm Lift L.H. |
| 12 | 532 16 58-31 | Link Asm Lift R.H. |
| 13 | 532 12 46-70 | Retainer Spring |
| 15 | 532 17 32-88 | Link Front |
| 16 | 873 35 08-00 | Nut Jam Hex 1/2-13 unc |
| 17 | 532 17 56-89 | Trunnion Blk Zinc |
| 18 | 873 80 08-00 | Nut Lock w/wsh 1/2-13 unc |
| 19 | 532 13 98-68 | Arm Suspension Mower |
| 20 | 532 16 35-52 | Retainer Spring |
| 23 | 532 11 08-07 | Nut Special |
| 24 | 819 13 10-16 | Washer 13/32 x 5/8 x 16 Ga. |
| 25 | 532 12 48-74 | Spring 2-1/8" |
| 26 | 532 16 94-84 | Retainer Clip |
| 27 | 532 12 69-71 | Rod Adj Lift Zinc 7.49 Wrk Lg |
| 28 | 873 35 06-00 | Nut Hex Jam 3/8-16 unc |
| 29 | 532 13 80-57 | Knob Inf 3/8-16 unc Blk w/sym |
| 30 | 532 15 02-33 | Trunnion Infin Height |
| 31 | 532 16 98-65 | Bearing, Pvt. Lift. |
| 32 | 873 54 06-00 | Nut Crownlock 3/8-24 |
| 36 | 532 15 50-97 | Pointer Height Indicator |
| 37 | 532 12 39-35 | Plug Hole Blk 1.485/1.515 Dia |
| 38 | 817 06 05-16 | Screw 5/16-18 x 1 |
| 40 | 819 11 24-10 | Washer 11/32 x 1-1/2 x 10 Ga. |
| 41 | 532 12 39-34 | Scale Ind Height Blk |
| 49 | 532 14 52-12 | Nut hex Flange Lock |
| 50 | 532 11 04-52 | Nut Push Phos & Oil |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### MOWER

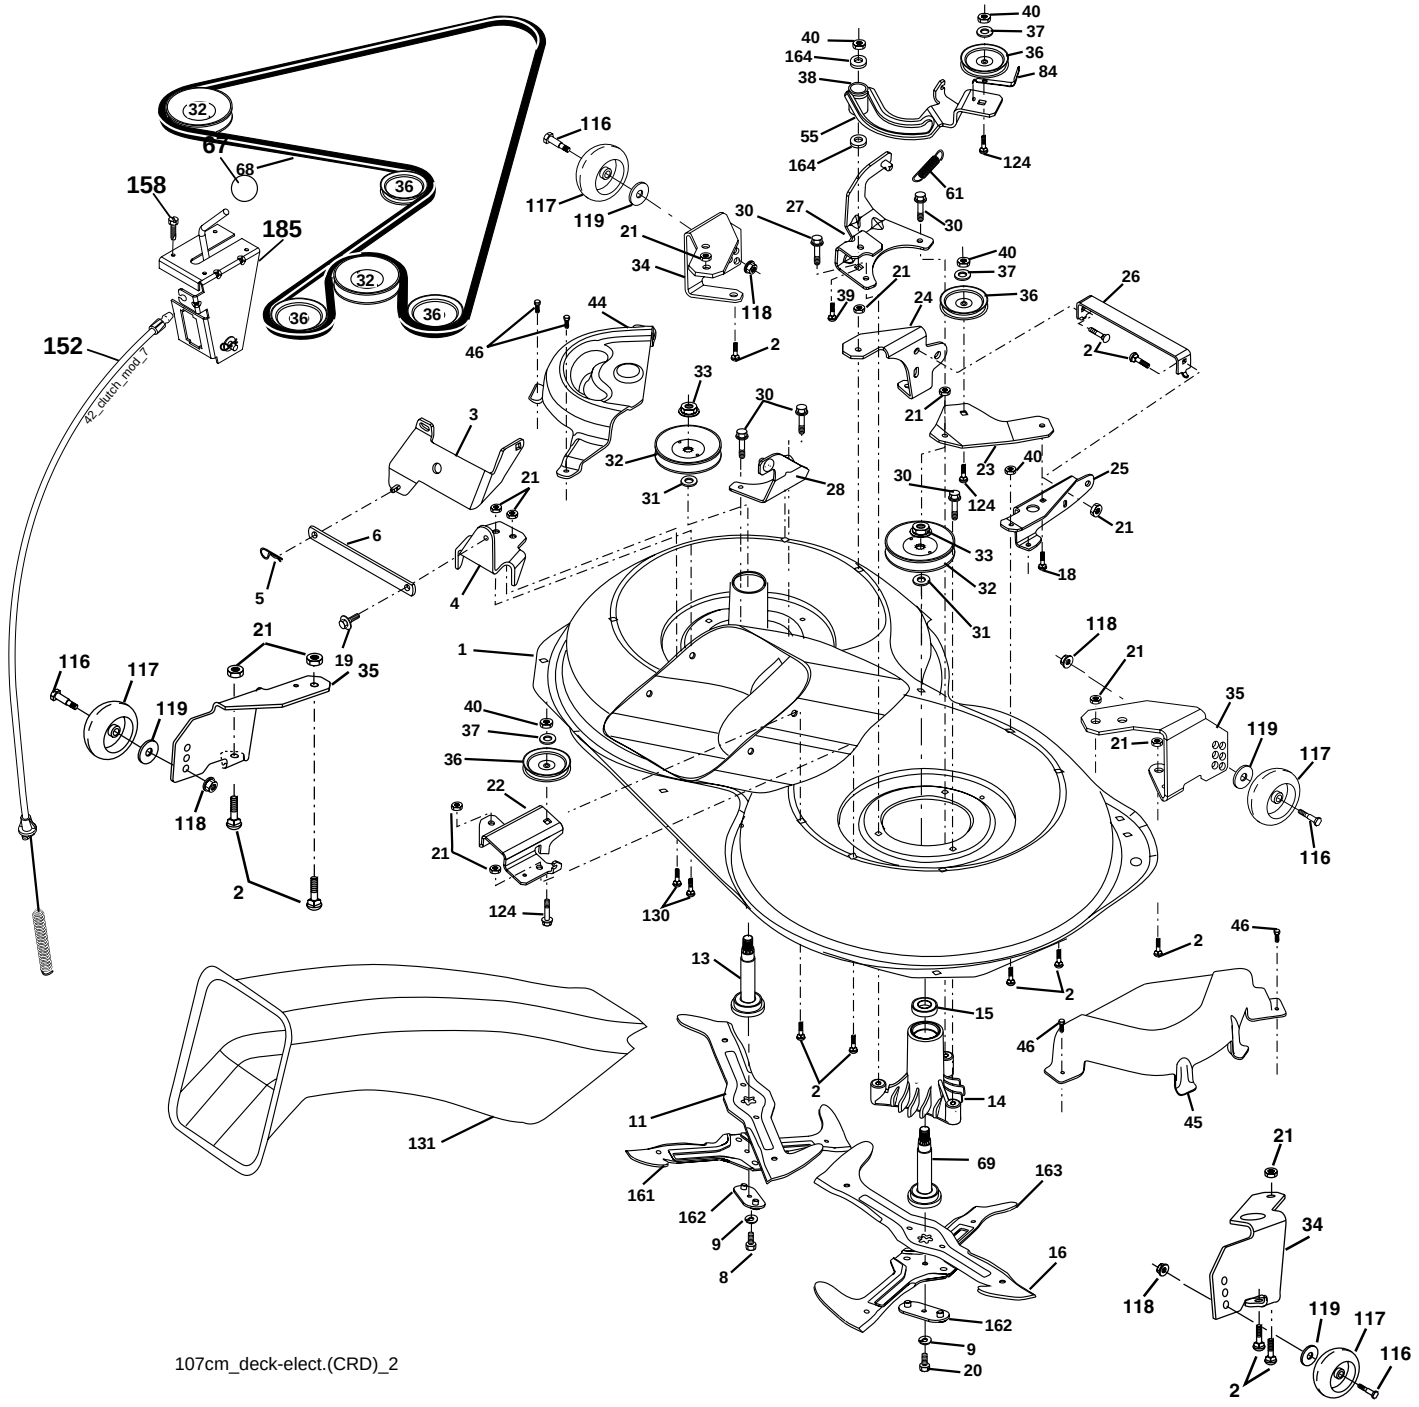

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### MOWER


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 16 91-60 | Housing Asm. Mower |
| 2 | 872 14 05-06 | Bolt Rdhd Sqnk 5/16-18 unc x 3/4 |
| 3 | 532 16 55-69 | Bracket Asm. S-Bar Chass |
| 4 | 532 16 91-67 | Bracket Bar Sway Deck |
| 5 | 532 12 46-70 | Retainer Spring |
| 6 | 532 16 55-57 | Bar Sway |
| 8 | 532 18 17-12 | Bolt 3/8-24 x 1.25 Gr. 8 Patched |
| 9 | 810 03 06-00 | Washer Lock Hvy 3/8 Unplated |
| 11 | 532 18 05-83 | Blade 3-1 Lh |
| 13 | 532 13 76-45 | Shaft Asm. W/Lower Bearing |
| 14 | 532 12 87-74 | Housing Mandrel Vented (Machd) |
| 15 | 532 11 04-85 | Bearing Ball Mandrel |
| 16 | 532 18 05-84 | Blade 3-1 Rh |
| 18 | 872 11 06-08 | Bolt RDHD SQNK 3/8-16 x 1 Gr. 5 |
| 19 | 532 13 28-27 | Bolt Shoulder 5/16-18 Thd Form |
| 20 | 532 18 17-13 | Bolt 3/8-24 x 1.25 Gr. 8 Ptch Lhthd |
| 21 | 873 68 05-00 | Nut Crown Lock 5/16-18 |
| 22 | 532 16 91-65 | Bracket Idler Sprt RR |
| 23 | 532 16 91-66 | Bracket Idler Sprt RF |
| 24 | 532 16 91-70 | Bracket Suspension LF |
| 25 | 532 16 91-71 | Bracket Suspension RF |
| 26 | 532 16 52-37 | Brace Support Susp Frt CRD |
| 27 | 532 16 91-72 | Bracket Asm. Susp RR |
| 28 | 532 16 91-68 | Bracket Asm. Susp LR |
| 30 | 532 17 39-84 | Screw Thd Rolling Dod.PT Hex |
| 31 | **532 18 76-90** | Washer Spacer Mower Vented |
| 32 | 532 17 57-07 | Mandrel Pulleys |
| 33 | 532 17 83-42 | Nut Flg Top Lock |
| 34 | 532 17 95-09 | Bracket Gauge Wheel Lf |
| 35 | 532 17 62-92 | Bracket Gauge Wheel Rf |
| 36 | 532 14 67-63 | Pulley Idler V-Groove Dim 4.25 |
| 37 | 819 13 13-16 | Washer 11/32 x 13/16 x 16 Ga. |
| 38 | 532 16 98-51 | Spacer Hub Arm Idler |
| 39 | 872 11 06-22 | Bolt RhHd 3/8-16 unc x 2-3/4 Gr.5 |
| 40 | 873 68 06-00 | Nut Crownlock 3/8-16 unc |
| 44 | 532 17 55-38 | Cover Mandrel Lh |
| 45 | 532 17 55-39 | Cover Mandrel Rh |
| 46 | 532 13 77-29 | Screw Thd Roll 1/4-20 x 5/8 |
| 55 | 532 16 98-49 | Arm Idler |
| 61 | 532 17 51-59 | Spring Tension Belt |
| 68 | 532 16 91-78 | Hex-Belt Mower |
| 69 | 532 16 54-82 | Shaft Asm W/Lwr Brg Rh Thd CRD |
| 84 | 532 15 60-85 | Keeper Belt Idler |
| 116 | 532 18 42-19 | Bolt Shoulder |
| 117 | 532 13 39-57 | Wheel Gage Donut Wide |
| 118 | 873 93 06-00 | Nut Centerlock 3/8-16 unc |
| 119 | 819 12 14-14 | Washer 3/8 x 7/8 x 14 Ga. |
| 124 | 872 11 06-12 | Bolt Carr Sh 3/8-16 x 1-1/2 Gr5 |
| 130 | 872 11 05-06 | Bolt Rdhdsqnk 5/16-18 unc x 3/4 |
| 131 | 532 16 56-61 | Chute Bagger CRD 92cm |
| 152 | 532 17 60-74 | Cable Clutch |
| 158 | 817 72 04-08 | Screw 1/4-20 x 1/2 |
| 161 | 532 18 04-24 | Blade Cross LH 107 |
| 162 | 532 18 08-78 | Adapter Weldment Blade 107 |
| 163 | 532 18 04-25 | Blade Cross RH 107 |
| 164 | 532 12 49-37 | Bearing |
| 185 | 532 18 82-34 | Head Asm Cable Clutch |
| -- | 532 18 18-57 | Mandrel Asm Service |
| -- | 532 18 18-58 | Mandrel Asm CRD Lh Threads VC |
| -- | 532 18 17-70 | Replacement Mower Complete |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# REPAIR PARTS

## TRACTOR- -MODEL NO. CTH172 (HECTH172A), PRODUCT NO. 954 17 02-10

### BAGGER

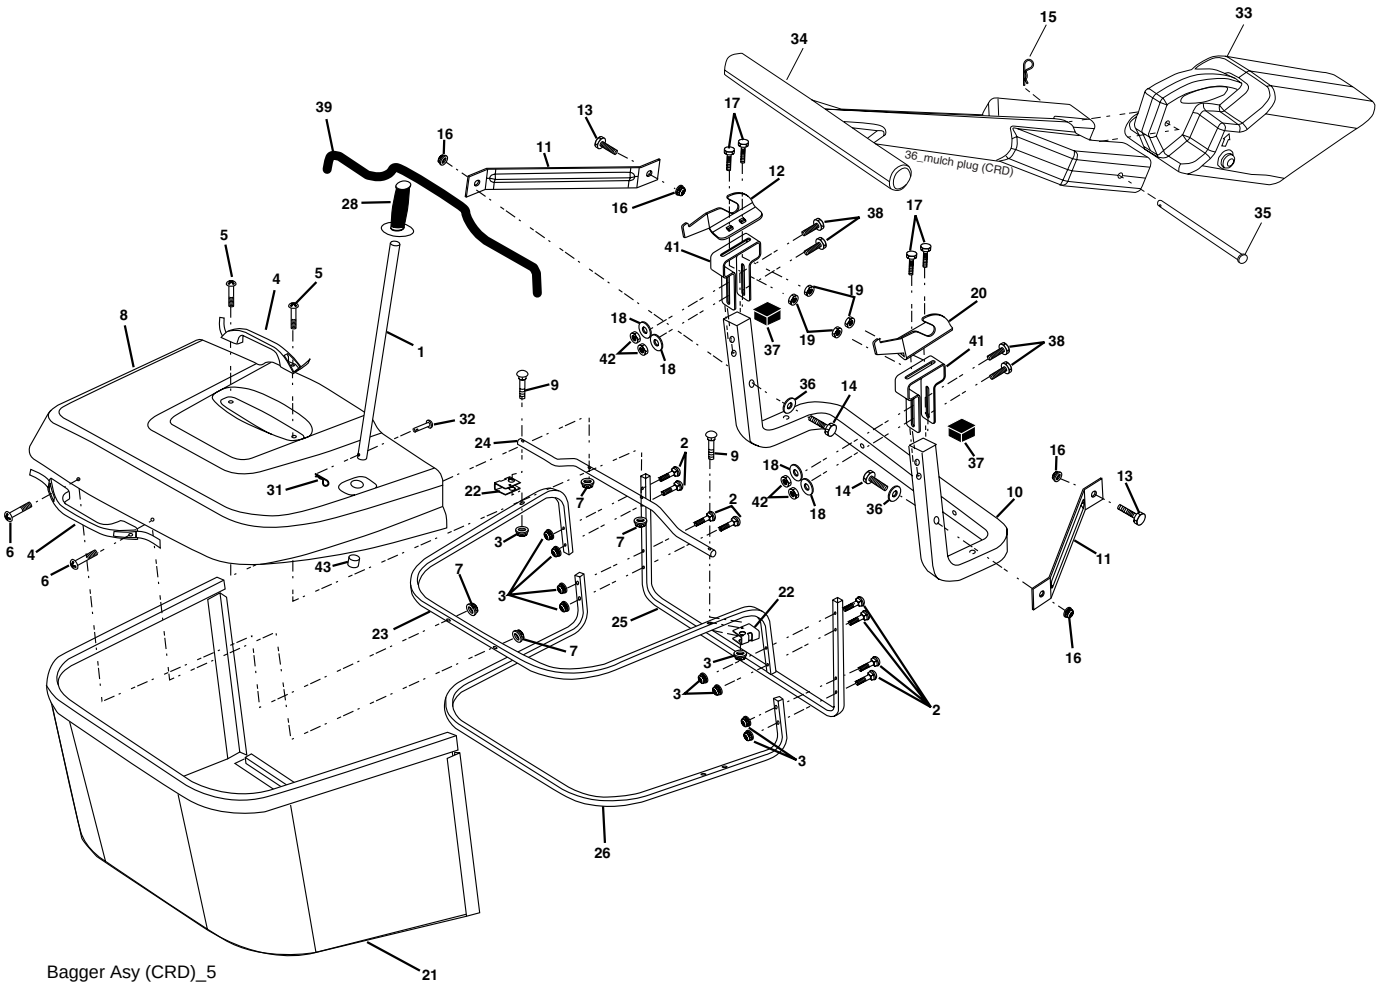


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 16 52-49 | Tube Handle Bagger CRD |
| 2 | 872 14 04-16 | Bolt Carriage 1/4-20 x 2.0 Gr. 5 |
| 3 | 532 12 39-76 | Nut Lock 1/4 Lge Flg Gr. 5 Zinc |
| 4 | 532 16 99-16 | Handle Bagger w/Lvrs Blk CRD |
| 5 | 874 98 10-24 | Screw Pan Head #10-24 x 1.50 Blk |
| 6 | 874 98 10-32 | Screw Pan Hd |
| 7 | 873 40 10-00 | Nut Wiz Lock Hex Serr/Hd 10-24 |
| 8 | 532 18 10-95 | Cover Bagger |
| 9 | 872 14 04-18 | Bolt Carriage 1/4-20 x 2.25d x Gr. 5 |
| 10 | 532 18 12-82 | Tube Support Bagger CRD |
| 11 | 532 16 57-19 | Bracket Support Upper Bag CRD |
| 12 | 532 16 96-85 | Bracket Horiz Adj Bagger Lh |
| 13 | 872 11 06-06 | Bolt Rdhd Sht Sqnk 3/8-16 x 3/4 |
| 14 | 874 52 06-36 | Bolt RDHD SQNK 3/8-16 x 2-1/4 Gr. 5 |
| 15 | 532 12 46-70 | Retainer Spring |
| 16 | 873 90 06-00 | Nut Lock Flg 3/8-16 unc |
| 17 | 872 14 05-06 | Bolt Rdhd Sht Sqnk 5/16 -18 unc x 3/4 |
| 18 | 819 11 12-16 | Washer 11/32 x 3/4 x 16 Ga. |
| 19 | 873 90 05-00 | Nut Lock Hex Flange 5/16-18 |
| 20 | 532 16 96-84 | Bracket Horiz Adj Bagger Rh |
| 21 | 532 18 08-80 | Bag Asm CRD |
| 22 | 532 16 57-81 | Bracket Side Bagger CRD |
| 23 | 532 16 57-82 | Tube Upper Bagger CRD |
| 24 | 532 16 57-83 | Tube Pivot Bagger CRD |
| 25 | 532 18 01-24 | Tube Front Bagger CRD |
| 26 | 532 16 57-85 | Tube Lower Bagger CRD |
| 28 | 532 16 57-87 | Grip Handle |
| 31 | 532 16 94-84 | Retainer Clip |
| 32 | 532 12 68-75 | Rivet Rd Hd Drilled 3/8 Dia |
| 33 | 532 16 93-80 | Plug Mulcher |
| 34 | 532 16 55-70 | Handle Mulcher |
| 35 | 532 16 55-72 | Pin Mulcher |
| 36 | 819 13 20-16 | Washer 13/32 x 1-1/4 x 16 Ga. |
| 37 | 532 17 54-01 | Plug Support Bagger CRD |
| 38 | 872 01 05-20 | Bolt 5/16-18 x 2-1/2 |
| 39 | 532 18 09-85 | Seal |
| 41 | 532 16 96-83 | Bracket Pnt Adj Pvt Bagger CRD |
| 42 | 873 80 05-00 | Nut Crownlock 5/16-18 Blk D |
| 43 | 532 17 40-83 | Plug Tubing End |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm