**ILLUSTRATED PARTS BREAKDOWN**


# HUSQVARNA
# 12.5 HP LAWN RIDER
# MODEL NO. LT125 (HE12536B)
# 954 17 00-01

154222 10.04.96 JH
Printed in the U.S.A.

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### HOOD

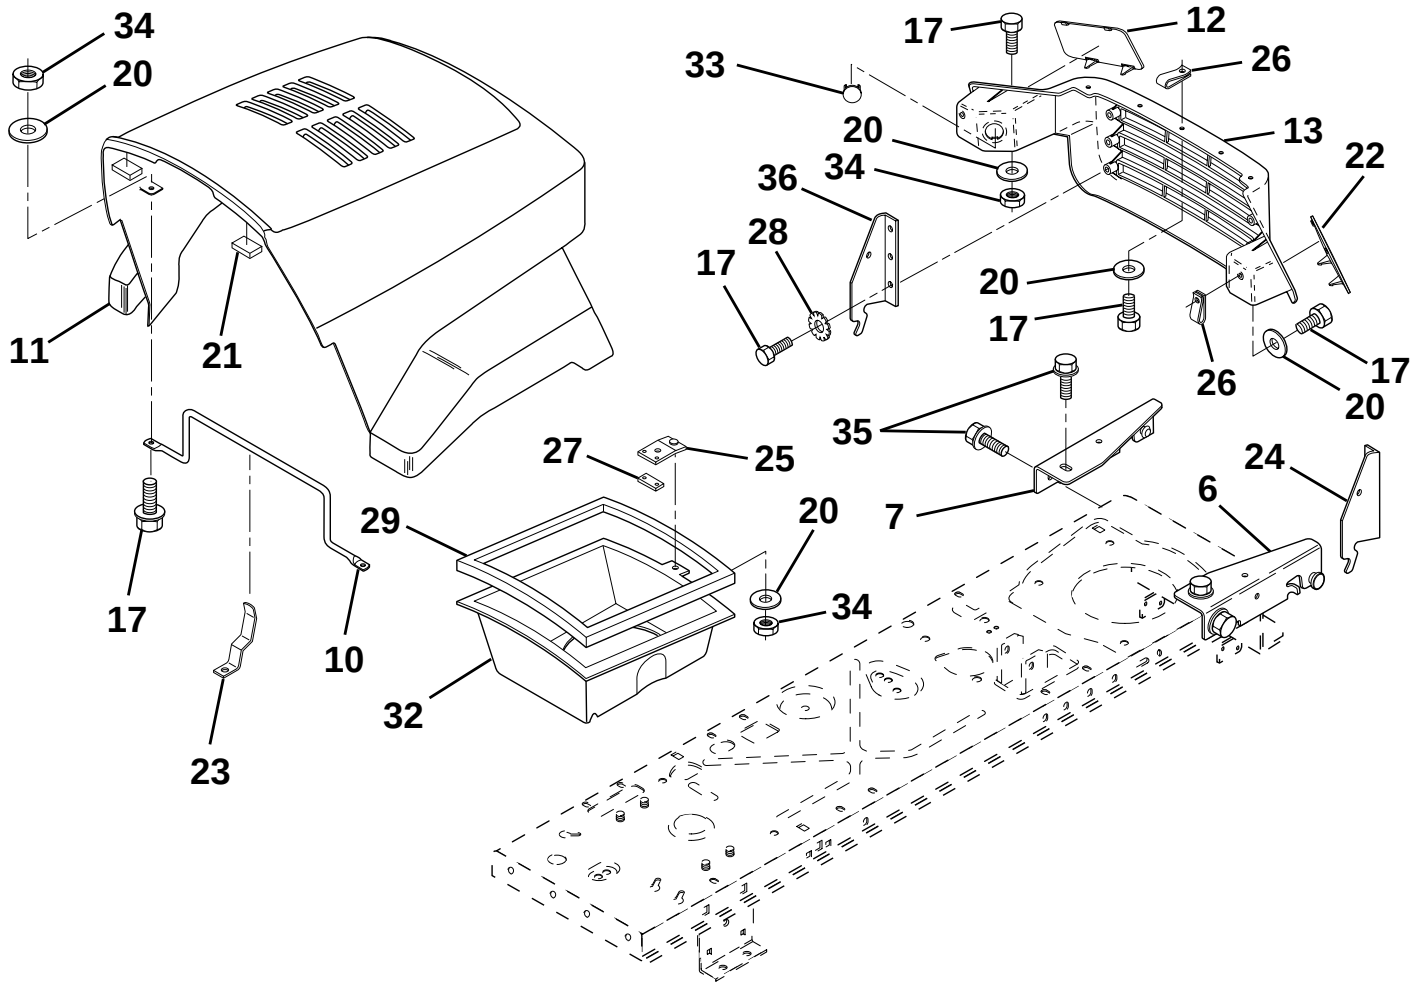


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 6 | 532140051 | Bracket Asm., Pivot Hood RH |
| 7 | 532140050 | Bracket Asm., Pivot Hood LH |
| 10 | 532130850 | Brace, Hood |
| 11 | 532140142 | Hood |
| 12 | 532130986 | Lens, LH |
| 13 | 532130984 | Grille |
| 17 | 874780410 | Bolt, Fin Hex 1/4-20 x 5/8 |
| 20 | 819091016 | Washer, Flat 1/4 |
| 21 | 532126938 | Bumper, Hood |
| 22 | 532130985 | Lens, RH |
| 23 | 532139969 | Latch, Hood |
| 24 | 532142873 | Bracket, Pivot Hood RH |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 25 | 532131037 | Clip, Asm. Duct Air |
| 26 | 532052921 | Clip, Tinnerman |
| 27 | 532131028 | Clip, Tinnerman |
| 28 | 811050400 | Washer, Lock Ext. Tooth |
| 29 | 532120537 | Strip, Foam |
| 32 | 532123840 | Duct, Air Hood |
| 33 | 532131319 | Plug, Socket Light |
| 34 | 873680400 | Nut, Fin Hex 1/4-20 |
| 35 | 817490512 | Screw, Thdrol 5/16-28 x 3/4 |
| 36 | 532128445 | Bracket, Pivot Hood LH |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### FENDER/CHASSIS

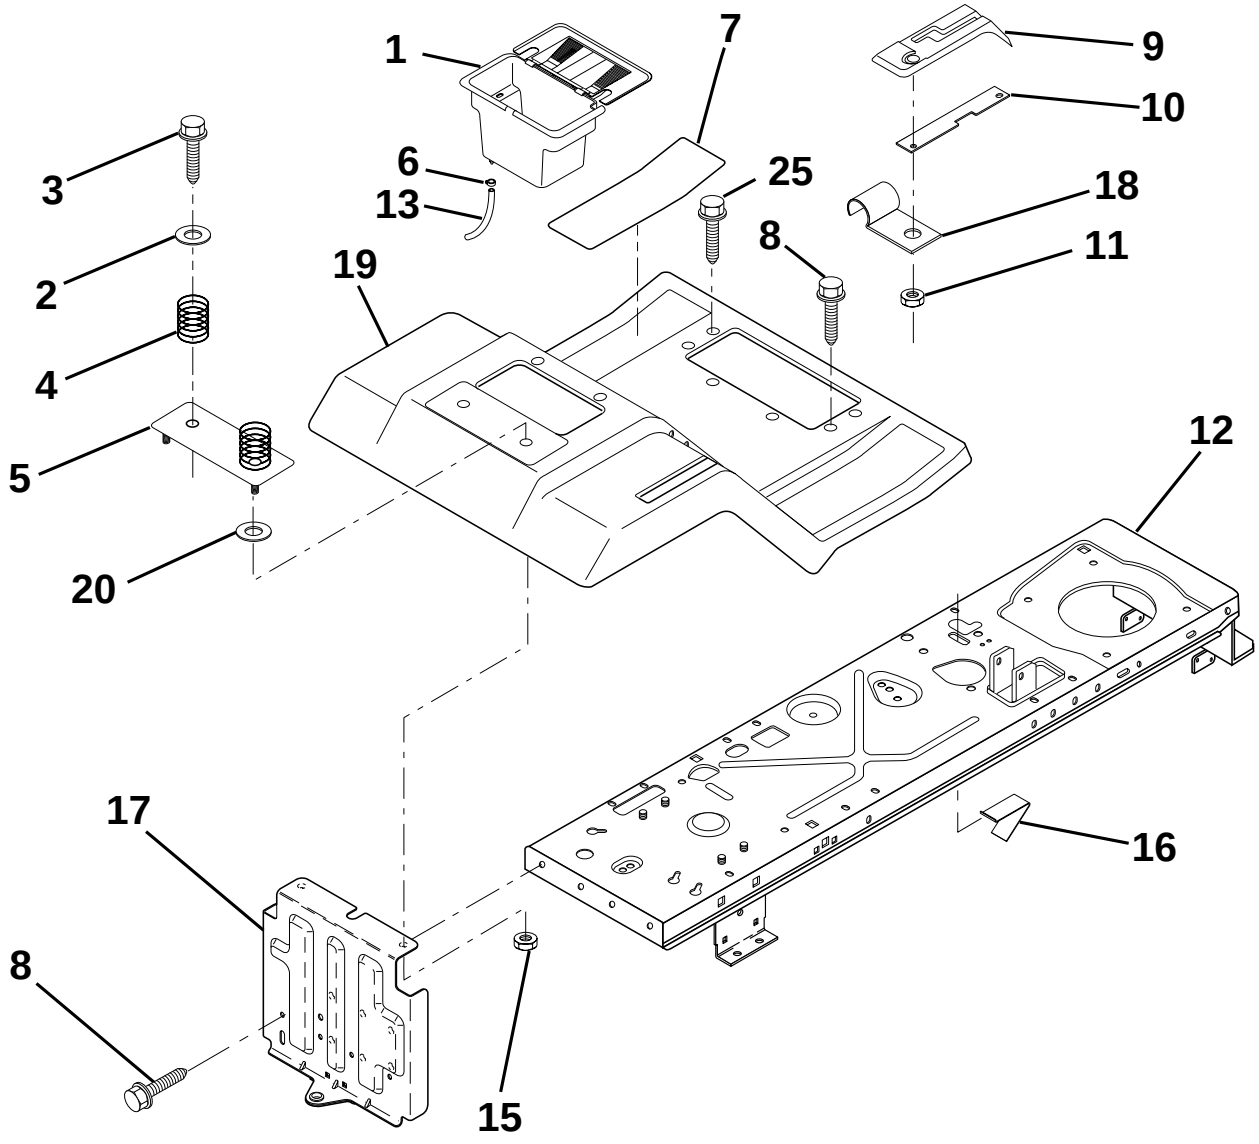


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532156417 | Case, Battery |
| 2 | 819132012 | Washer 13/32 x 1-1/4 x 12 Ga. |
| 3 | 817490612 | Screw, Hex Wsh. Thrdrol 3/8-16 x 3/4 |
| 4 | 532124181 | Spring, Compression, Seat |
| 5 | 532125142 | Plate, Asm. Battery |
| 6 | 532109596 | Clamp, Hose |
| 7 | 532124144 | Pad, Footrest |
| 8 | 817490512 | Screw, Thdrol 5/16-18 x 3/4 |
| 9 | 532126997 | Console, Shift Control |
| 10 | 532139783 | Bar, Shift Lock |
| 11 | 532124346 | Nut, Self-Threading, Wsher Hd 3/16 |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 12 | 532145190 | Assembly, Frame |
| 13 | 532109238 | Tube, Battery Drain |
| 15 | 873640400 | Nut, Keps 1/4-20 UNC |
| 16 | 532141736 | Switch Actuator |
| 17 | 532140782 | Drawbar |
| 18 | 532126470 | Clip, Insulated |
| 19 | 532141393 | Fender/Footrest |
| 20 | 819091413 | Washer 9/32 x 7/8 x 13 Ga. |
| 25 | 817190516 | Screw Hex 5/16-18 Unc x1 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### SEAT

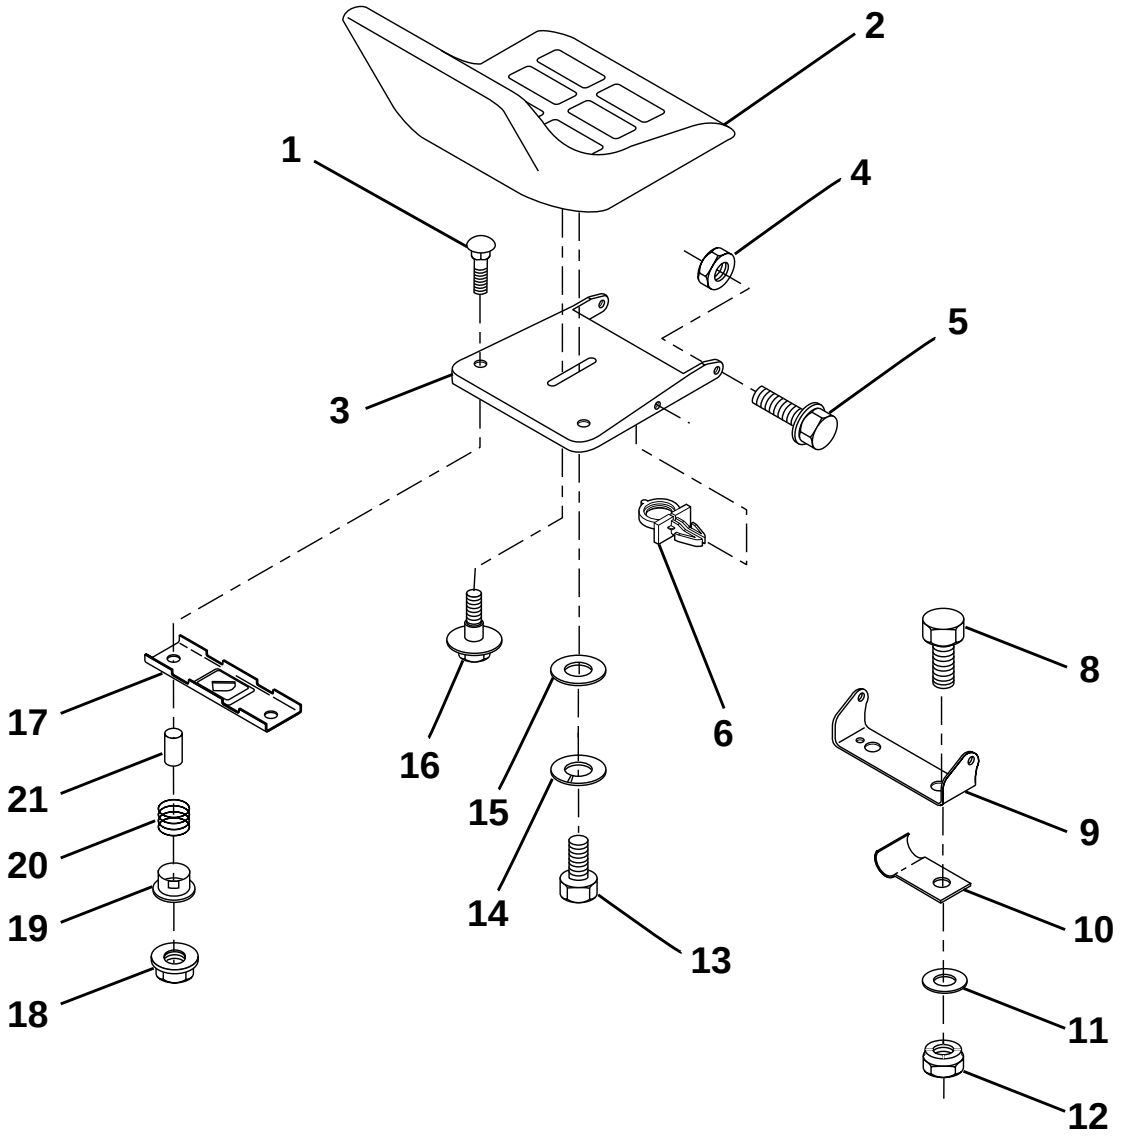


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 872050411 | Bolt, Carriage 1/4-20 x 1-3/8 |
| 2 | 532140838 | Seat |
| 3 | 532155925 | Pan, Seat |
| 4 | 873800500 | Nut, Lock Hex w/Ins. 5/16-18 |
| 5 | 532153236 | Bolt, Shoulder 5/16-18 UNC |
| 6 | 532145006 | Clip, Insulated |
| 8 | 874760616 | Bolt, Fin Hex 3/8-16 UNC x 1 |
| 9 | 532140551 | Bracket, Pivot Seat |
| 10 | 532126471 | Clip, Insulated |
| 11 | 819133210 | Washer 12/32 x 2 x 10 Ga. |
| 12 | 873800600 | Nut, Lock Hex w/Wsh 3/8-16 |
| 13 | 874780814 | Bolt, Hex 1/2-13 x 7/8 |
| 14 | 810040800 | Washer, Lock Hvy. Hlicl Spring 1/2 |
| 15 | 819171912 | Washer, 17/32 x 1-3/16 x 12 Ga. |
| 16 | 532127018 | Bolt, Shoulder |
| 17 | 532121246 | Bracket, Switch, Mounting |
| 18 | 532123976 | Nut, Hex Large Flange Lock |
| 19 | 532121248 | Bushing, Snap |
| 20 | 532121250 | Spring, Compression |
| 21 | 532134300 | Spacer, Split 28 Id. x .88 Lg. |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### DASH

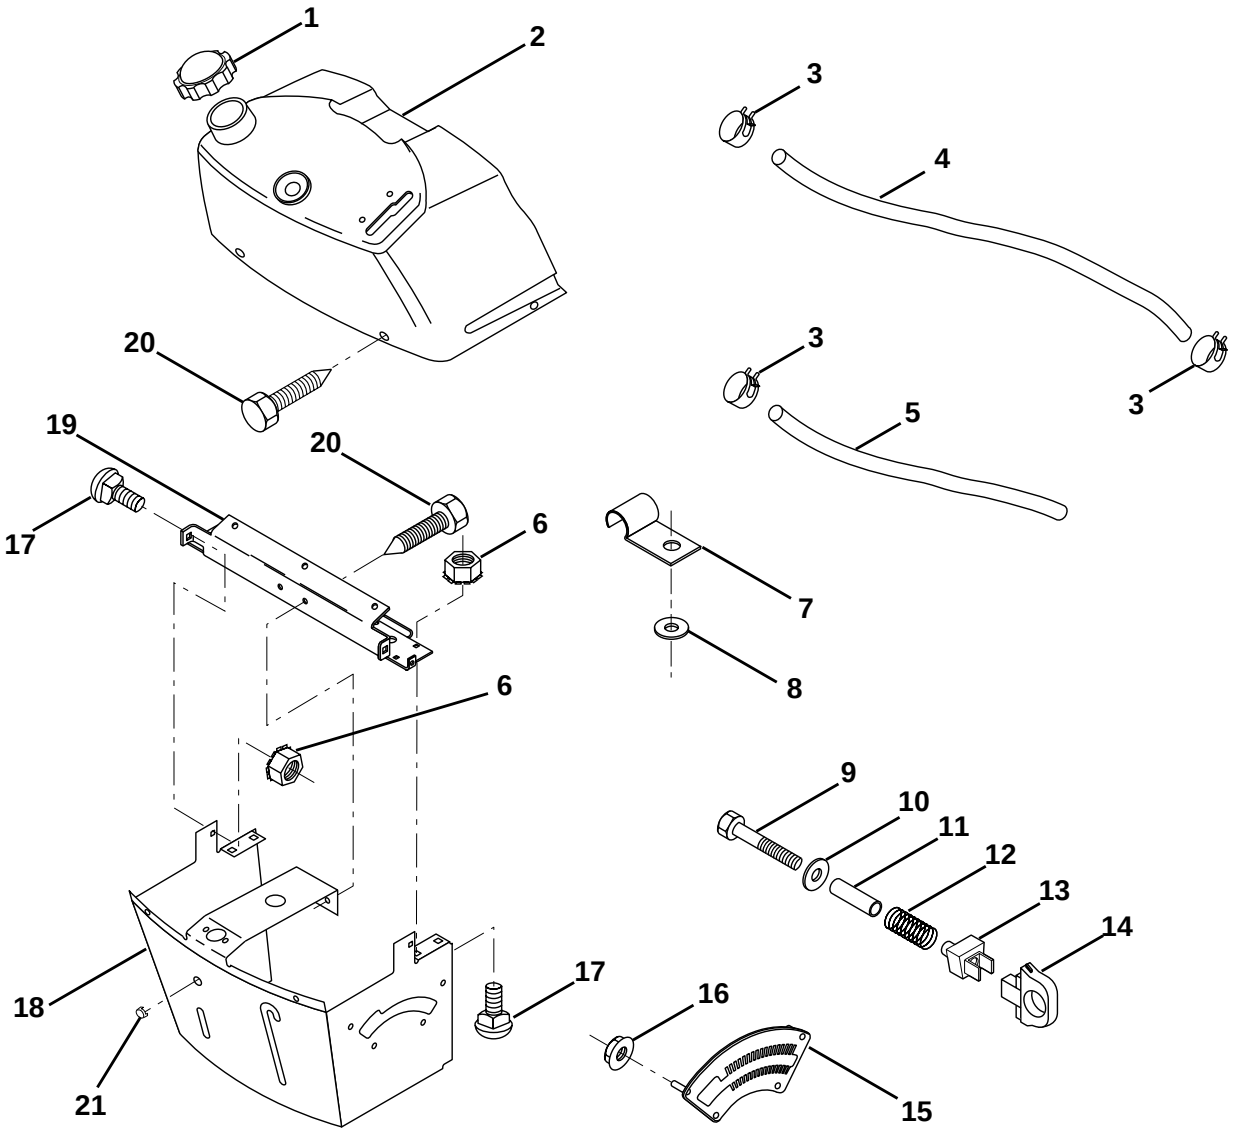


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532142187 | Cap, Fuel |
| 2 | 532138394 | Assembly, Dash & Fuel Tank |
| 3 | 532123487 | Clamp, Hose |
| 4 | 532008544 | Line, Fuel |
| 5 | 532008548 | Line, Fuel |
| 6 | 873640400 | Nut, Hex, Keps 1/4-20 |
| 7 | 532124996 | Clip, Fuel Line |
| 8 | 819091216 | Washer 9/32 x 3/4 x 16 Ga. |
| 9 | 874760428 | Bolt, Hex, Fin 1/4-20 x 1-3/4 |
| 10 | 819091413 | Washer 11/32 x 11/16 x 16 Ga. |
| 11 | 532121249 | Spacer, Split |
| 12 | 532003720 | Spring |
| 13 | 532126450 | Clip, Height Adjustment |
| 14 | 532126115 | Knob, Height Stop |
| 15 | 532122023 | Adjustment, Quadrant Height |
| 16 | 532124346 | Nut, Self-Threading 3/16-18 |
| 17 | 872110404 | Bolt, Carriage 1/4-20 x 1/2 Gr. 5 |
| 18 | 532130745 | Support, Assembly Dash |
| 19 | 532134744 | Brace, Cross |
| 20 | 817060408 | Screw, Self-Tapping 1/4-20 x 1/2 |
| 21 | 532134014 | Plug, Dome Black |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### FRONT AXLE

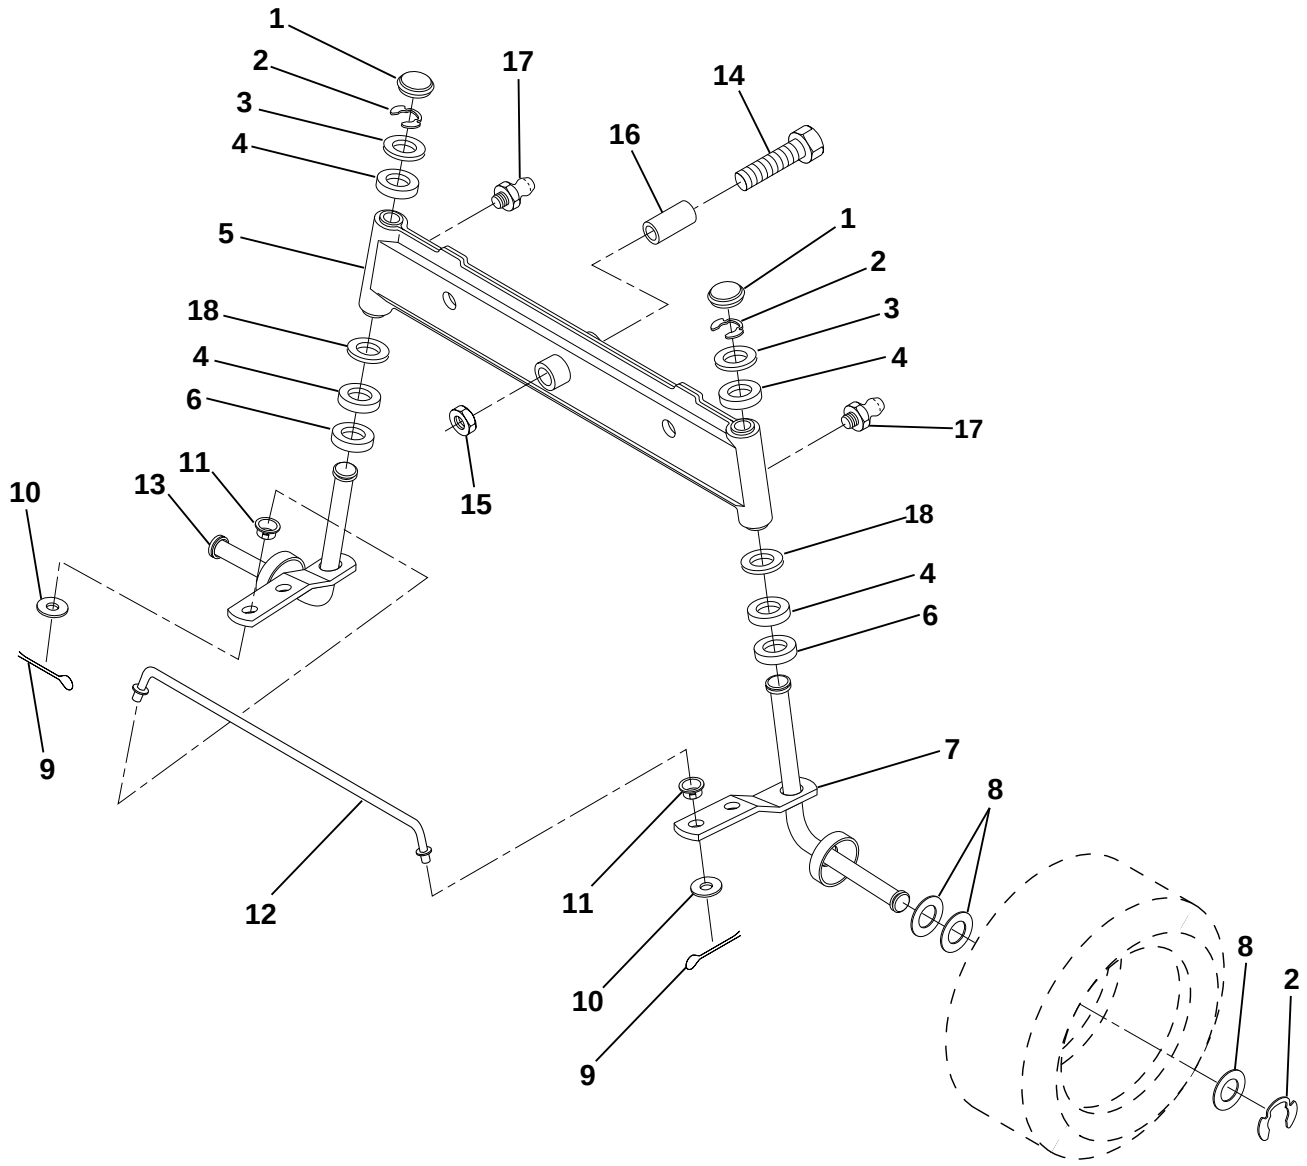


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532121232 | Cap, Spindle |
| 2 | 812000029 | Ring, Clip |
| 3 | 532121748 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 4 | 532124937 | Nyliner |
| 5 | 532142033 | Axle, Front |
| 6 | 532124931 | Bearing, Thrust |
| 7 | 532137062 | Spindle, R.H. Asm. |
| 8 | 532121749 | Washer 25/32 x 1-1/4 x 16 Ga. |
| 9 | 876020412 | Pin, Cotter 1/8 x 3/4 |
| 10 | 819131316 | Washer 13/32 x 13/16 x 16 Ga. |
| 11 | 532126847 | Bushing |
| 12 | 532130465 | Rod, Tie |
| 13 | 532137061 | Spindle, L.H. Asm. |
| 14 | 874011056 | Bolt Hex 5/1-11 x 3-1/2 |
| 15 | 873901000 | Nut, Lock Flange 5/8-11 |
| 16 | 532110438 | Spacer Bearing Axle |
| 17 | 532124836 | Fitting Grease |
| 18 | 819272016 | Washer 27/32 x 1-1/4 x 16 Ga. |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### BRAKE / REAR MOWER LIFT ASSEMBLY

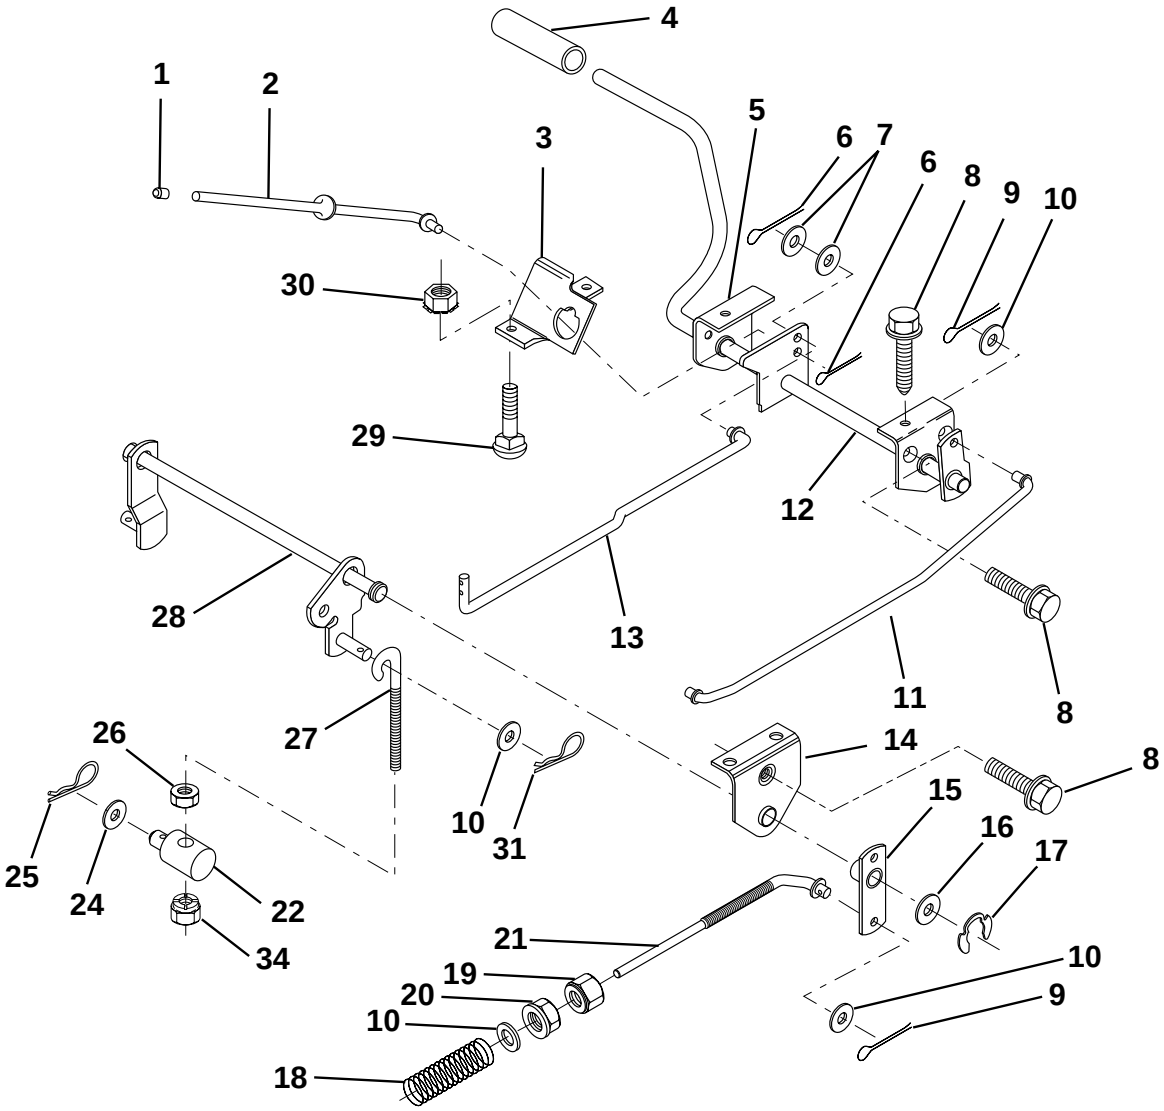


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532071673 | Cap, Plunger |
| 2 | 532123436 | Rod, Parking Brake |
| 3 | 532123437 | Bracket, Parking Brake |
| 4 | 532008156 | Cover, Pedal |
| 5 | 532122504 | Bracket, Clutch/Brake Pedal, L.H. |
| 6 | 876020312 | Pin, Cotter 3/32 x 3/4 |
| 7 | 819131016 | Washer 13/32 x 5/8 x 16 Ga. |
| 8 | 817490508 | Screw, Hex, Thd. Roll. 5/16-18 x 1/2 |
| 9 | 876020412 | Pin, Cotter 1/8 x 3/4 |
| 10 | 819131316 | Washer 13/32 x 13/16 x 16 Ga. |
| 11 | 532123543 | Rod, Brake Front |
| 12 | 532139933 | Assembly, Clutch/Brake Pedal |
| 13 | 532123394 | Rod, Clutch |
| 14 | 532121978 | Bracket, Lift, Shaft |
| 15 | 532133332 | Assembly, Brake, Pivot, Arm |
| 16 | 819251816 | Washer 25/32 x 1-1/8 x 16 Ga. |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 17 | 812000034 | Ring, Klip |
| 18 | 532151332 | Spring, Brake Rod |
| 19 | 873350600 | Nut, Hex, Jam 3/8-16 UNC |
| 20 | 873800600 | Nut, Lock, Hex w/Ins 3/8-16 Unc |
| 21 | 532131460 | Rod, Rear Brake |
| 22 | 532144585 | Trunnion, Lift |
| 24 | 819132012 | Washer 13/32 x 1-1/4 x 12 Ga. |
| 25 | 532124961 | Spring, Retainer |
| 26 | 873930600 | Nut, Centerlock 3/8-16 UNC |
| 27 | 532127369 | Link, Threaded |
| 28 | 532140776 | Assembly, Rear Mower Lift |
| 29 | 872110506 | Bolt, Carriage 5/16-18 UNC x 3/4 |
| 30 | 873510500 | Nut, Keps 5/16-16 UNC |
| 31 | 532124660 | Retainer Spring |
| 34 | 873680600 | Locknut, Crownlock 3/8-16 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

**ENGINE**

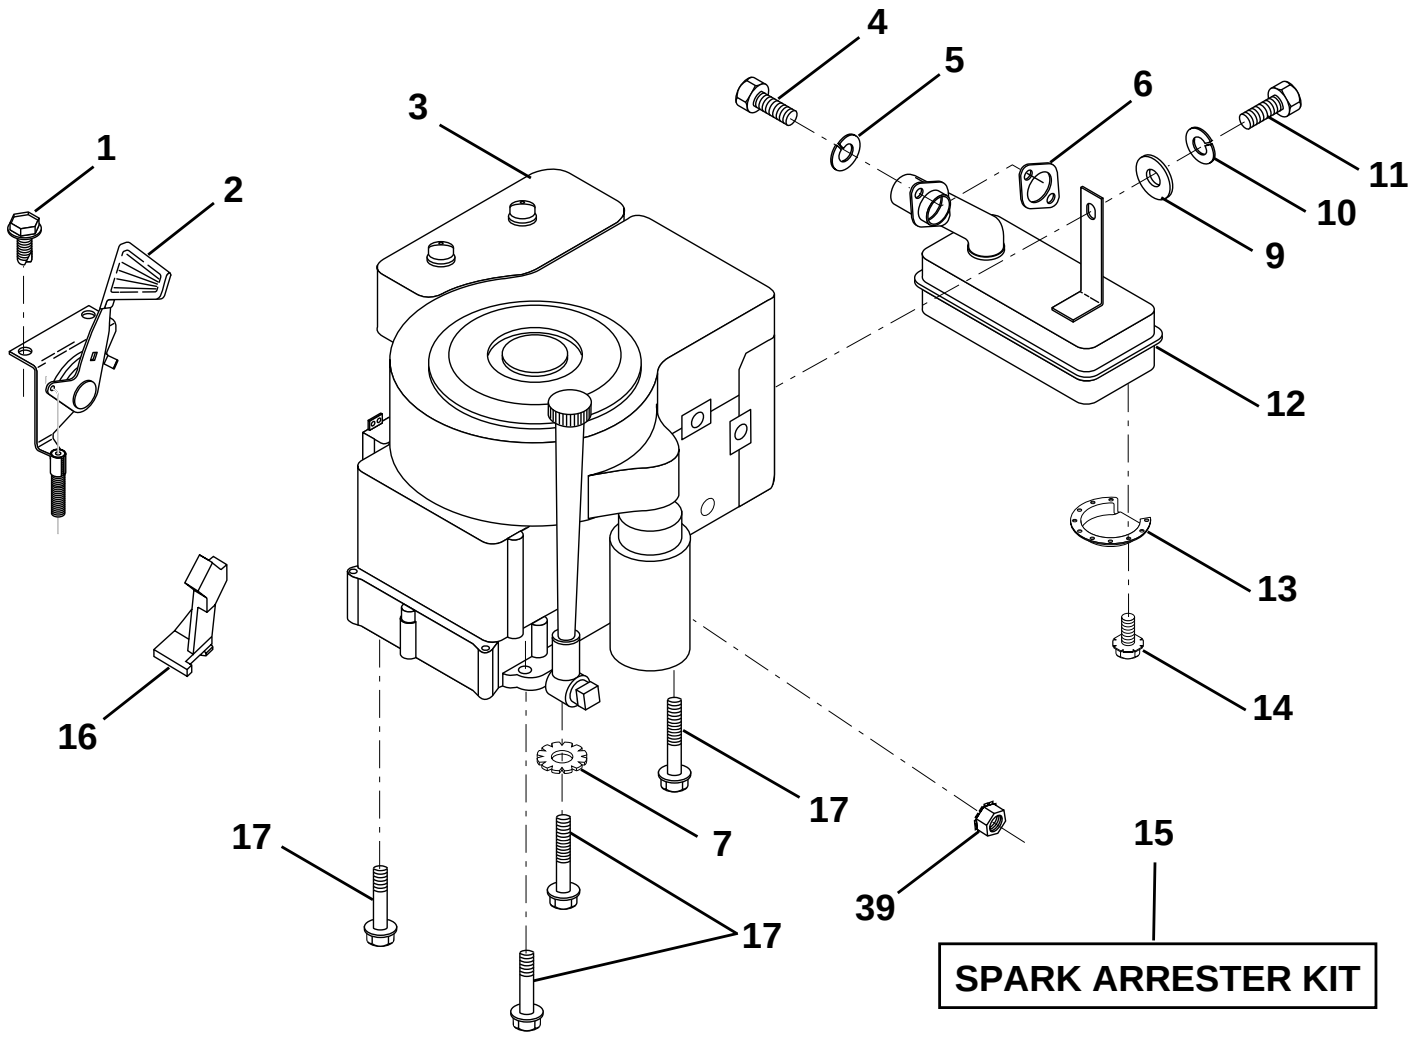


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 817060408 | Screw, Hex Thd. Cut 1/4-20 x 1/2 |
| 2 | 532133025 | Control, Throttle |
| 3 | - - - - - - - - | Engine, Briggs and Stratton Model No. 289707 |
| 4 | 871070512 | Screw, Hex, Cap 5/16-18 x 3/4 |
| 5 | 810040500 | Washer, Lock Heavy Helical Spring 5/16 |
| 6 | 532272293 | Gasket, Exhaust |
| 7 | 811050600 | Washer Ext. Tooth 3/8 |
| 9 | 819101216 | Washer 5/16 x 3/4 x 16 |
| 10 | 810040400 | Washer, Lock Hvy Hlcl Spring 1/4 |
| 11 | - - - - - - - - - | Bolt, Hex Fin. (Order From Eng. Mfg.) |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 12 | 532137437 | Muffler |
| 13 | 532101326 | Deflector, Muffler |
| 14 | 817030808 | Screw, Spiderloc |
| 15 | 532137180 | Arrester, Spark (Optional equipment) |
| 16 | 532127951 | Stop, Throttle |
| 17 | 817490624 | Screw, Hex Washer Head, Thdrol. 3/8-16 x 1-1/2 |
| 39 | 532128861 | Nut, Flange 1/4-20 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### GROUND DRIVE

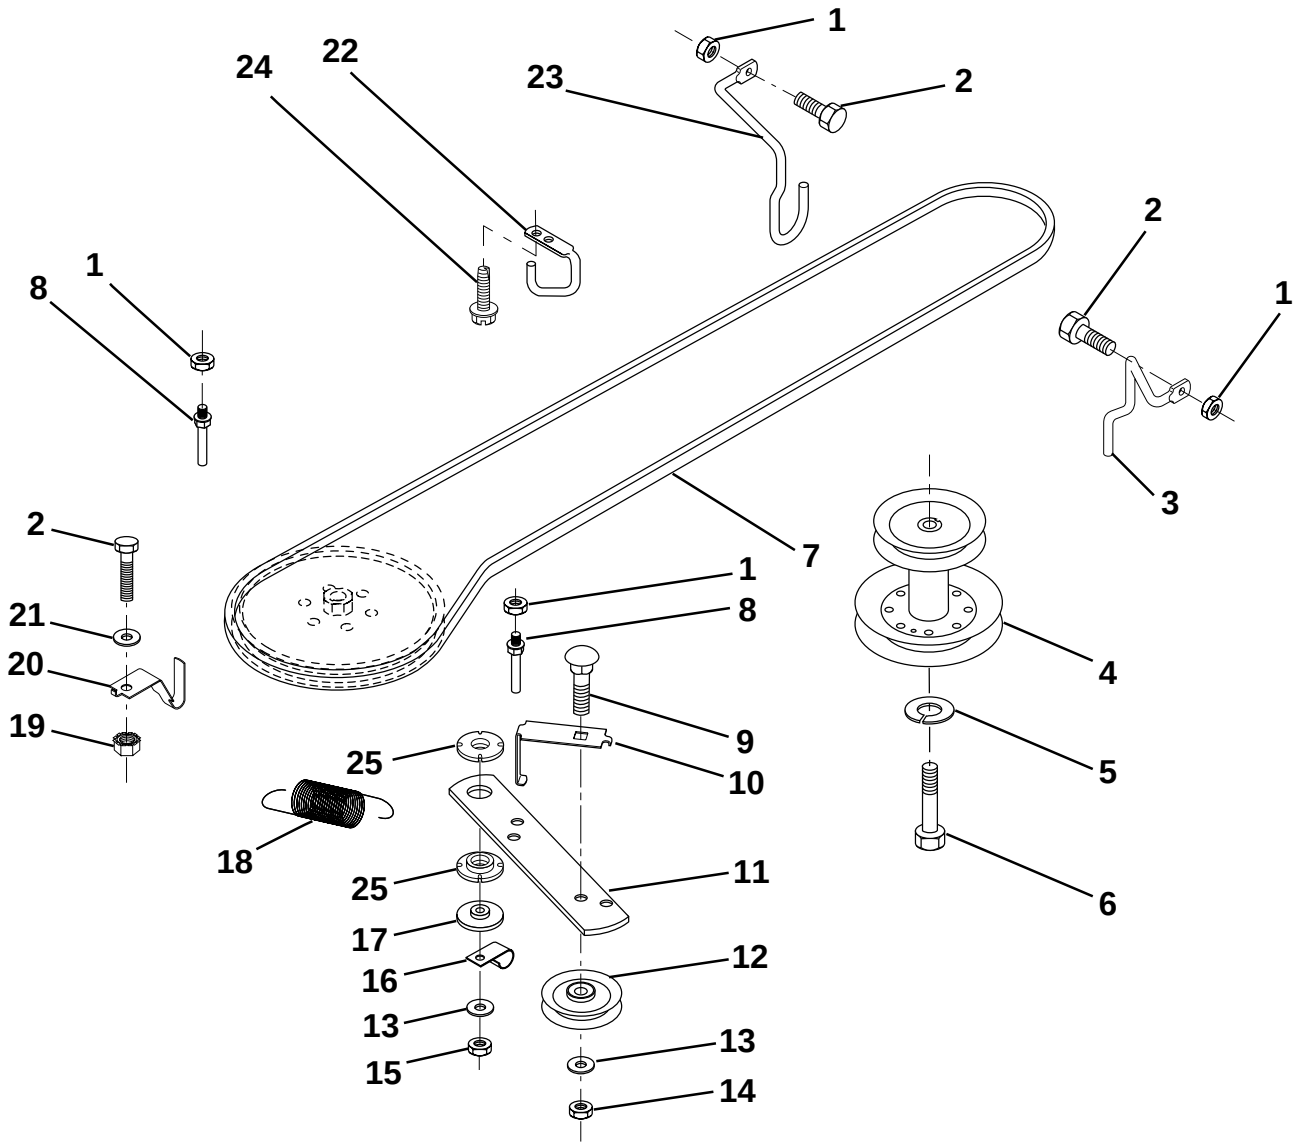


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 873680500 | Nut, Crownlock 5/16-18 |
| 2 | 874760512 | Bolt, Hex Hd 5/16-18 UNC x 3/4 |
| 3 | 532141342 | Keeper,Mower Drive, R. H. |
| 4 | 532138029 | Pulley, Engine |
| 5 | 810040700 | Washer, Lock 7/16 |
| 6 | 871170744 | Bolt Hex 7/16-20 Gr. 5 |
| 7 | 532126520 | Traction, V-Belt Drive |
| 8 | 532123405 | Keeper, T/A Ground Drive Belt |
| 9 | 872140612 | Bolt, Carr. 3/8-16 UNC x 1-1/2 |
| 10 | 532123396 | Keeper, Belt Ground Drive Idler |
| 11 | 532150926 | Arm, Ground Drive Clutch |
| 12 | 532123674 | Idler, Flat |
| 13 | 819131316 | Washer 13/32 x 13/16 x 16 Ga. |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 14 | 873930600 | Nut, Centerlock 3/8-16 UNC |
| 15 | 873680600 | Nut, Crownlock 3/8-16 |
| 16 | 532126471 | Clip, Insulated |
| 17 | 532150932 | Spacer, Retainer |
| 18 | 532131459 | Spring Extension |
| 19 | 873510500 | Nut, Keps 5/16-18 UNC |
| 20 | 532139919 | Keeper, T/A Ground Drive Belt |
| 21 | 819111016 | Washer 11/32 x 5/8 x 16 Ga. |
| 22 | 532123404 | Keeper, Frame Ground Drive Belt |
| 23 | 532140916 | Keeper, Mower Drive, L. H. |
| 24 | 817720408 | Screw, Thd Cut 1/4-20 x 1/2 |
| 25 | 532150935 | Bushing, Nylon |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### TRANSAXLE

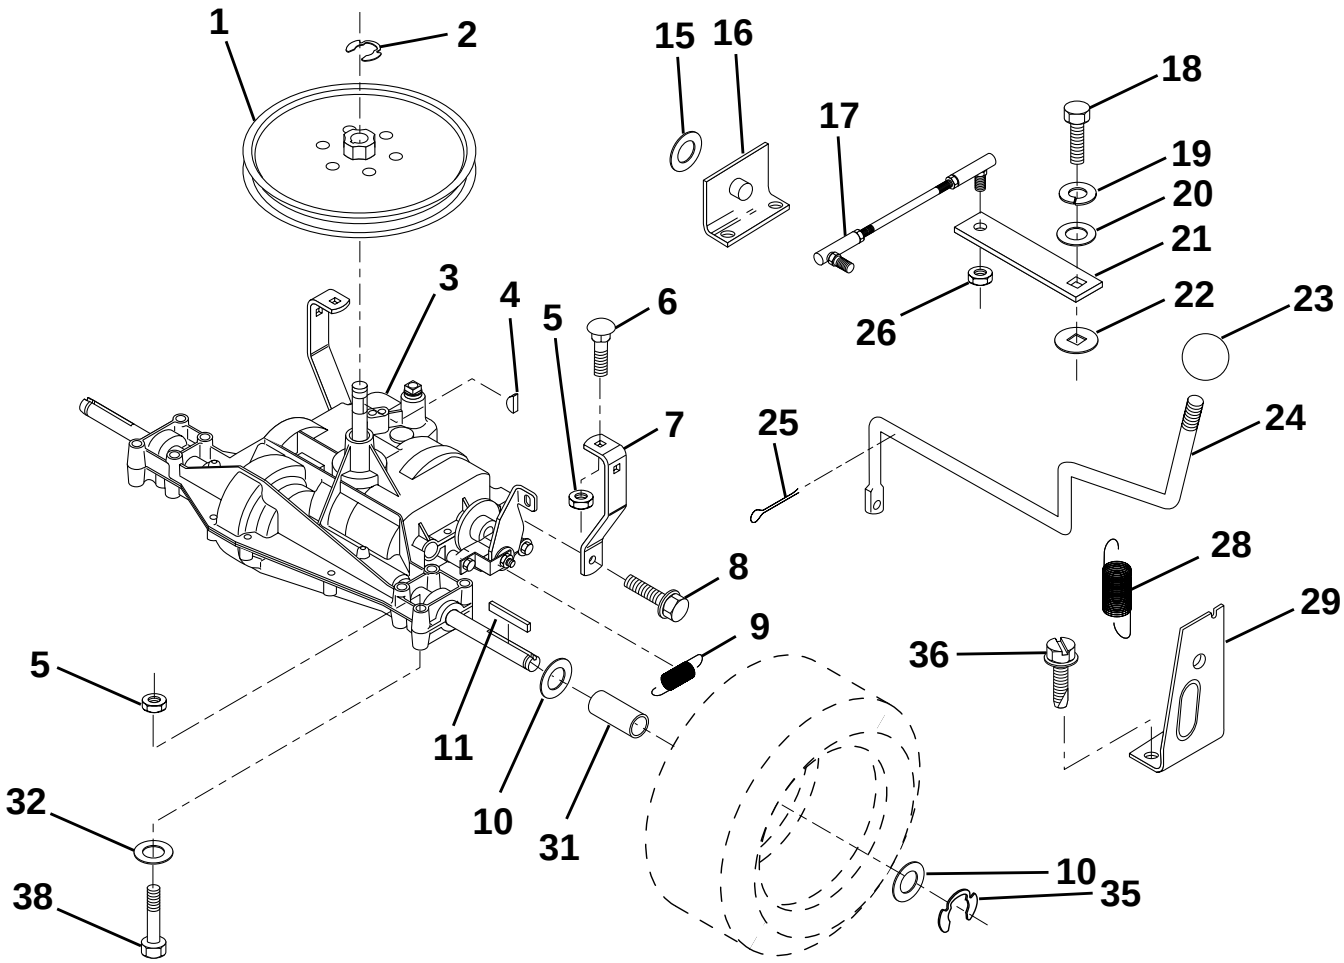


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532123385 | Pulley |
| 2 | 812000028 | Ring, Retainer |
| 3 | 532127050 | Transaxle, (See Breakdown) Peerless Model No. 930-009A |
| 4 | 532125096 | Key, Woodruff #9 |
| 5 | 873680500 | Nut, Crownlock 5/16-18 |
| 6 | 872140506 | Bolt, Carriage 5/16-18 UNC x 3/4 |
| 7 | 532123378 | Strap, Torque |
| 8 | 817490512 | Screw 5/16-18 x 3/4 |
| 9 | 532146682 | Spring, Brake |
| 10 | 532121749 | Washer 25/32 x 1-1/4 x 16 Ga. |
| 11 | 532123583 | Key, Square |
| 15 | 819171616 | Washer 17/32 x 1 x 16 Ga. |
| 16 | 532124600 | Support Handle Shift LH |
| 17 | 532126293 | Link, Shift |
| 18 | 874550412 | Bolt, Fin Hex 1/4-28 UNF x 3/4 Gr. 8 |
| 19 | 810040400 | Washer, Lock 1/4 |
| 20 | 819091210 | Washer 9/32 x 3/4 x 10 Ga. |
| 21 | 532126292 | Arm, Shift |
| 22 | 532105701 | Washer, Shift Plate |
| 23 | 532106933 | Knob, Rd 1/2-13 |
| 24 | 532128215 | Rod Shift |
| 25 | 876020416 | Pin, Cotter 1/8 x 1 |
| 26 | 873810500 | Locknut 5/16-24 UNF |
| 28 | 532128085 | Extension, Spring |
| 29 | 532128084 | Support Handle Shift RH |
| 31 | 532137057 | Spacer Axle |
| 32 | 819111116 | Washer 11/32 x 11/16 x 16 |
| 35 | 812000001 | E-Ring |
| 36 | 817720408 | Screw, Thd. Cut 1/4-20 x 1/2 |
| 38 | 874490544 | Bolt, Hex Hd 5/16-18 x 2-3/4 |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### MOWER LIFT LEVER

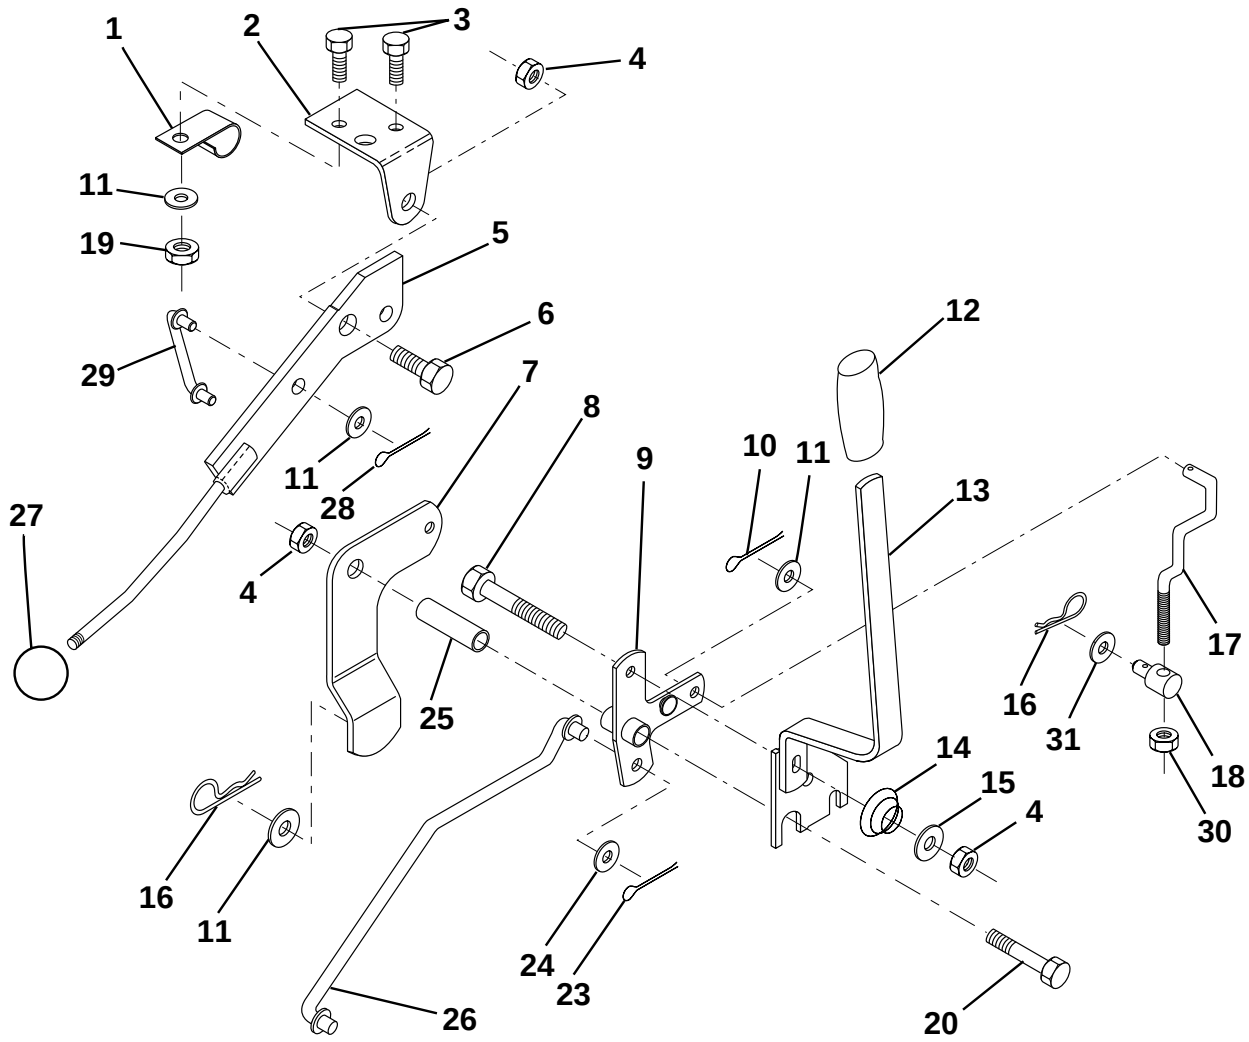


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532126470 | Clip, Insulated |
| 2 | 532122018 | Bracket, Mower Clutch |
| 3 | 871110408 | Bolt, Fin. Hex 1/4-20 UNC x 1/2 |
| 4 | 873680600 | Nut, Crownlock 3/8-16 |
| 5 | 532145187 | Assembly, Clutch Lever |
| 6 | 532106451 | Bolt, Shoulder |
| 7 | 532135371 | Assembly, Mower Clutch Arm |
| 8 | 874760636 | Bolt, Hex 3/8-16 UNC x 2-1/4 |
| 9 | 532121930 | Assembly, Bellcrank Lift |
| 10 | 876020412 | Pin, Cotter 1/8 x 3/4 |
| 11 | 819131316 | Washer 13/32 x 13/16 x 16 Ga. |
| 12 | 532131861 | Grip, Handle |
| 13 | 532139352 | Assembly, Lift Handle |
| 14 | 532123496 | Spring, Compression |
| 15 | 819131212 | Washer 13/32 x 3/4 x 12 Ga. |
| 16 | 532124961 | Retainer, Spring |
| 17 | 532127359 | Link, Front Lift |
| 18 | 532142028 | Trunnion, Threaded 3/8-16 |
| 19 | 873680400 | Nut, Crownlock 1/4-20 |
| 20 | 874760644 | Bolt, Fin. Hex 3/8-16 UNC x 2-3/4 |
| 23 | 876020416 | Pin, Cotter 1/8 x 1 |
| 24 | 819171612 | Washer 17/32 x 1-1/4 x 12 Ga. |
| 25 | 532121933 | Tube, Spacer |
| 26 | 532141470 | Rod, Mower Lift |
| 27 | 532106932 | Knob |
| 28 | 876020312 | Pin, Cotter 3/32 x 3/4 |
| 29 | 532131655 | Link, Mower Clutch |
| 30 | 873350600 | Nut Hex Jam 3/8-16 x 1.30 |
| 31 | 819132012 | Washer 13/32 x 1 - 1/4 x 12 Ga. |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### MOWER DECK

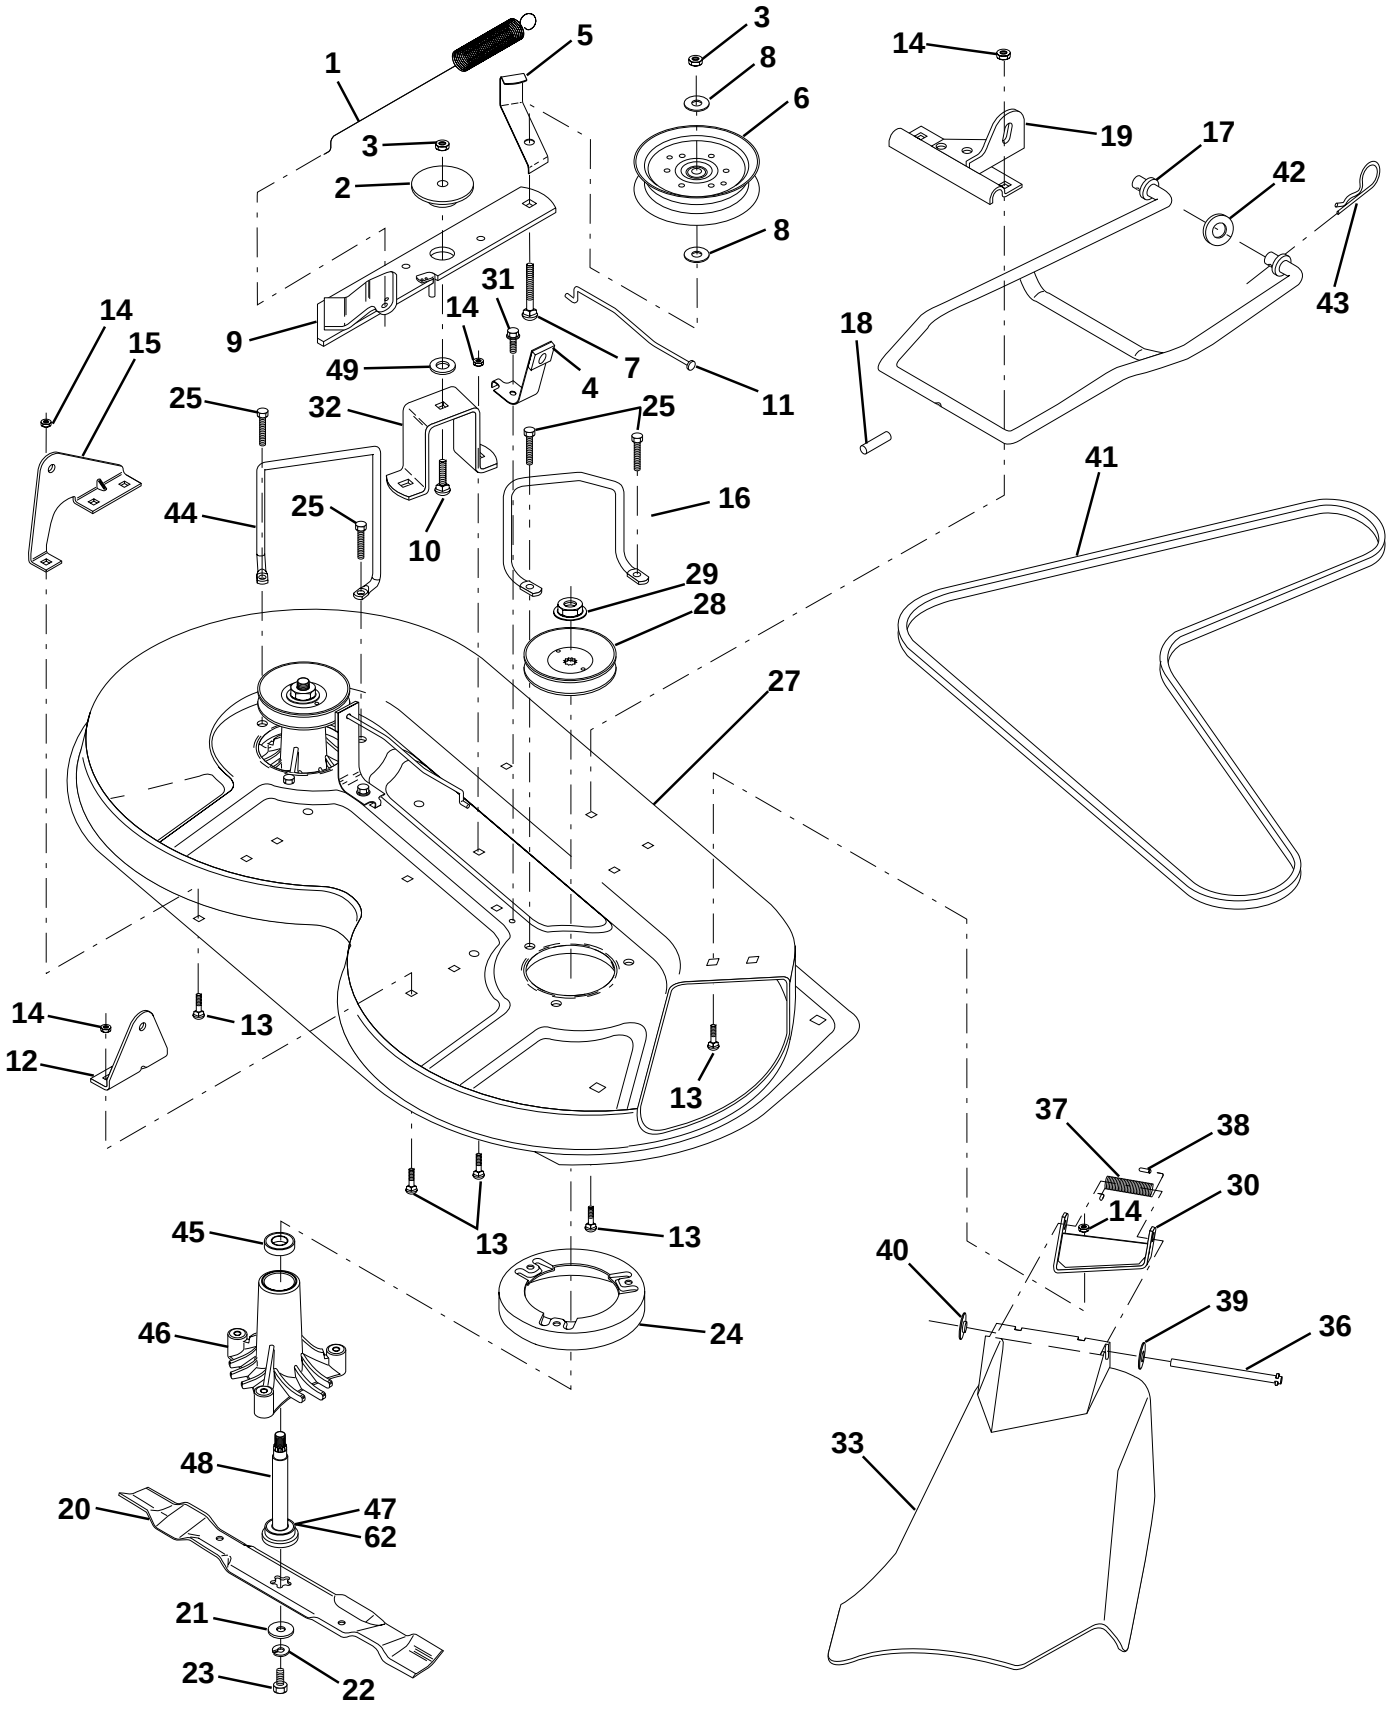

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### MOWER DECK

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532140064 | Spring, Mower Clutch |
| 2 | 532122052 | Spacer, Retainer |
| 3 | 873680600 | Nut, Crownlock 3/8-16 |
| 4 | 532130840 | Brake Asm. |
| 5 | 532131251 | Guide, Belt Idler |
| 6 | 532121316 | Pulley, Flat Idler |
| 7 | 872110616 | Bolt, Carr. 3/8-16 x 1-3/4 Gr. 5 |
| 8 | 819131410 | Washer 13/21 x 7/8 x 10 Ga. |
| 9 | 532127744 | Arm Asm., Idler Mower |
| 10 | 872140610 | Bolt, Carriage 3/8-16 x 1-1/4 |
| 11 | 532130841 | Rod, Brake |
| 12 | 532127356 | Bracket, Lift R. H. Rear |
| 13 | 872140506 | Bolt, Carriage 5/16-18 x 3/4 |
| 14 | 873680500 | Nut, Crownlock 5/16-18 |
| 15 | 532127357 | Bracket, Lift L. H. Rear |
| 16 | 532153298 | Keeper, R. H. |
| 17 | 532128508 | Link, Asm. Mower Stabilizer |
| 18 | 532128511 | Pin, Drive |
| 19 | 532127380 | Bracket, Asm. Front |
| 20 | 532138496 | Blade High Lift |
| 21 | 532140296 | Washer, Hardened |
| 22 | 810030600 | Washer, Lock 3/8 |
| 23 | 532850857 | Bolt 3/8-24 x 1-1/4 Gr. 8 |
| 24 | 532140329 | Stripper |
| 25 | 532138776 | Screw Thdrol Hex Hd |
| 27 | 532156600 | Deck Assembly |
| 28 | 532153531 | Pulley, Mandrel |
| 29 | 532137266 | Nut, Flange Lock 9/16 |
| 30 | 532136631 | Bracket, Asm. Deflector |
| 31 | 817490508 | Screw, Hex Wsh. Thdrol. 5/16-18 x 1/2 |
| 32 | 532122051 | Arm, Support Idler Mower |
| 33 | 532131560 | Deflector |
| 36 | 532121980 | Rod, Hinge |
| 37 | 532123713 | Spring, Torsion Deflector |
| 38 | 532105304 | Cap, Sleeve |
| 39 | 819111016 | Washer 11/32 x 5/8 x 16 Ga. |
| 40 | 532110452 | Pushnut |
| 41 | 532131264 | V-Belt |
| 42 | 819171616 | Washer 11/32 x 5/8 x 16 Ga. |
| 43 | 532124660 | Retainer, Spring |
| 44 | 532140608 | Keeper, L. H. |
| 45 | 532110485 | Bearing |
| 46 | 532128774 | Housing Mandrel Vented |
| 47 | 532129895 | Bearing |
| 48 | 532137645 | Shaft, Mandrel (Includes Key # 47) |
| 49 | 532133943 | Washer Hardened |
| 62 | 532153390 | Washer, Felt |
| - - | 532130794 | Mandrel Asm. (Includes Key No.'s 22-23, 26, 29 and 45-48) |
| - - | 532156866 | Deck, Mower Complete |


**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### ELECTRICAL

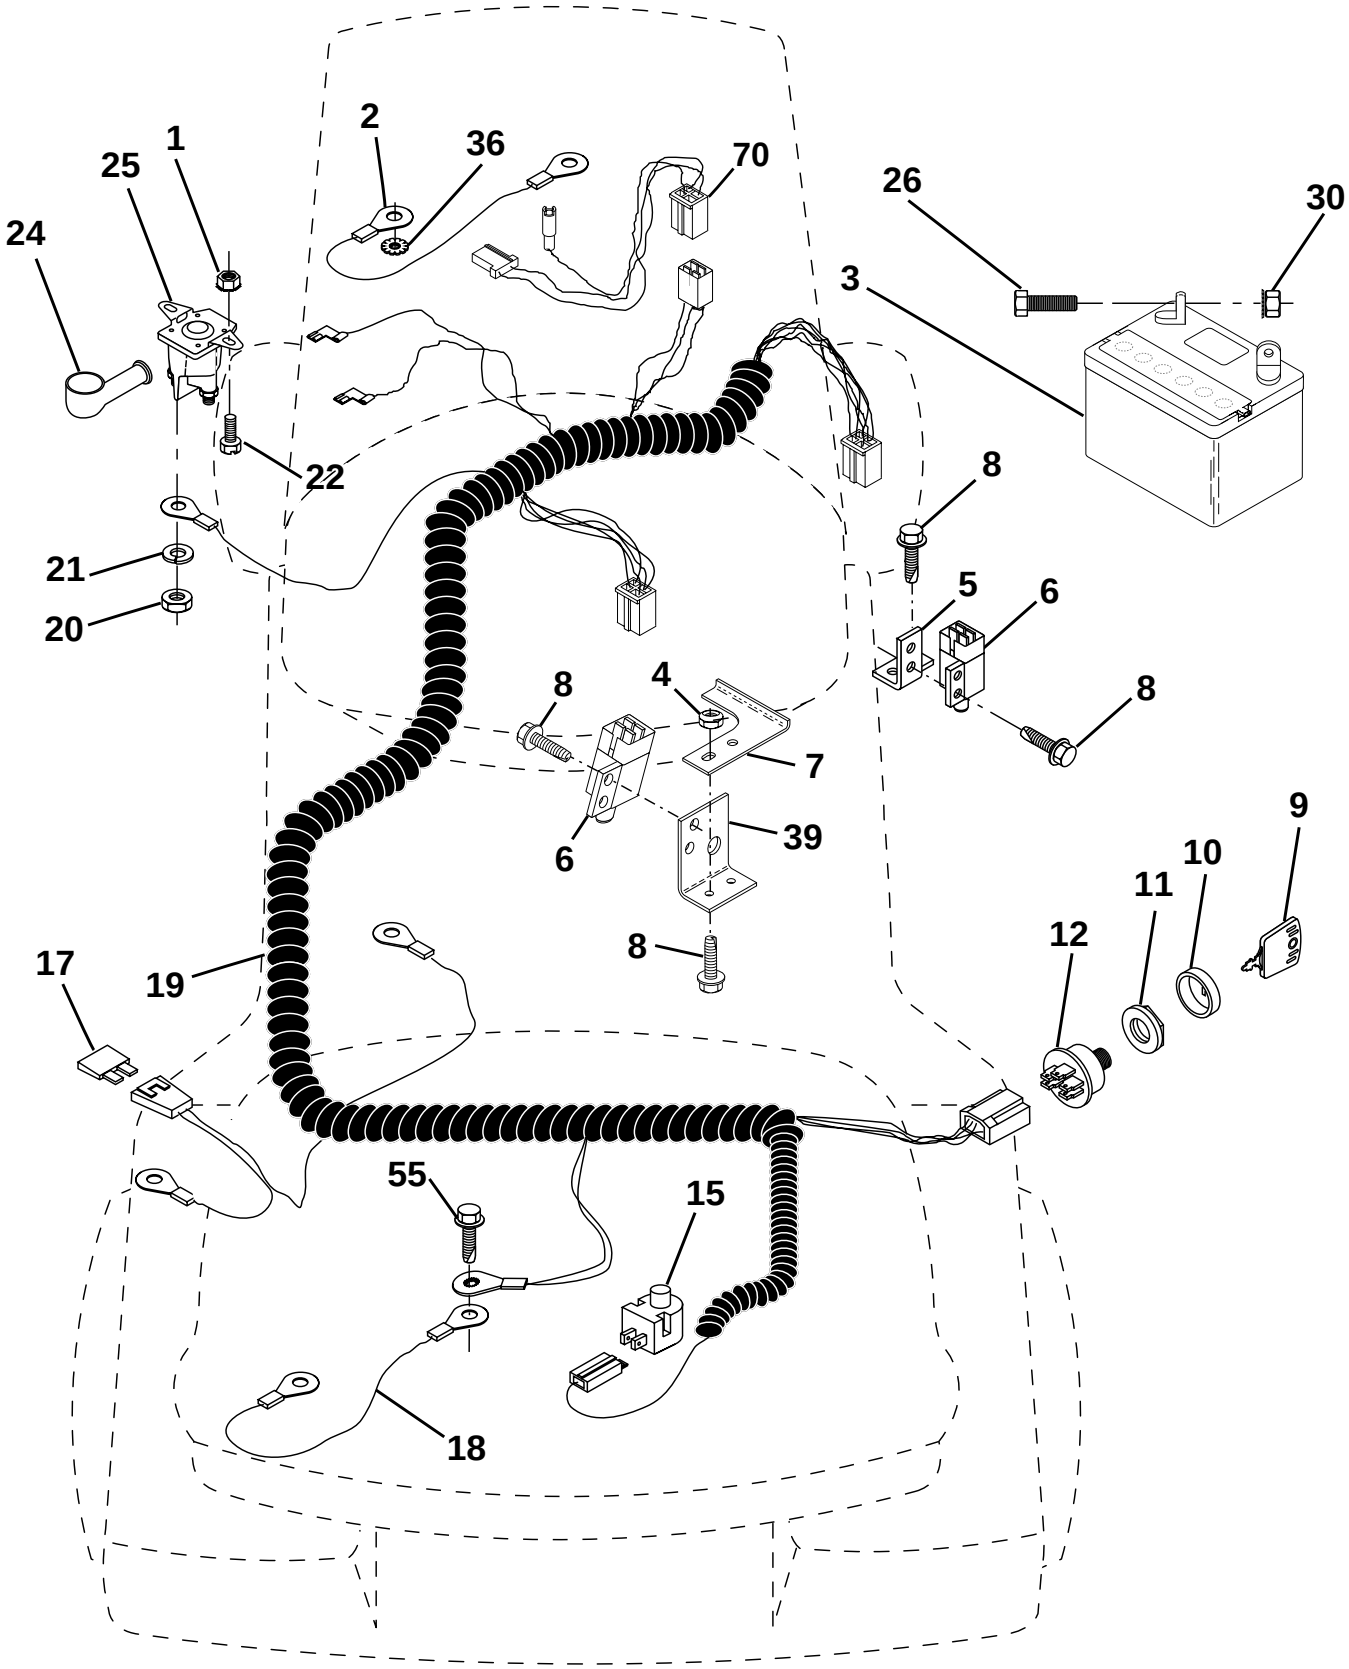

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### ELECTRICAL

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 873640400 | Nut, Hex Keps 1/4-20 |
| 2 | 532108423 | Assembly, Cable |
| 3 | 532146138 | Battery |
| 4 | 532069180 | Nut, Lock #10-24 Unc |
| 5 | 532108236 | Bracket, Switch |
| 6 | 532109553 | Switch, Interlock (4-terminal) |
| 7 | 532146374 | Keeper, Actuator |
| 8 | 817021008 | Screw, Hex Hd. Tap #10-24 x 1/2 |
| 9 | 532140401 | Key, Mplded |
| 10 | 532141226 | Cover, Key Ignition |
| 11 | 532140400 | Nut, Ignition |
| 12 | 532144921 | Switch, Ignition |
| 15 | 532121305 | Switch, Plunger |
| 17 | 532108824 | Fuse |
| 18 | 532128353 | Assembly, Cable |
| 19 | 532146063 | Harness, Ignition |
| 20 | 873350400 | Nut, Hex Jam 1/4-20 |
| 21 | 810090400 | Washer, Lock 1/4 |
| 22 | 871110408 | Bolt, Fin. Hex 1/4-20 UNC x 1/2 |
| 24 | 532131563 | Cover, Terminal |
| 25 | 532145673 | Solenoid |
| 26 | 874760412 | Bolt, Hex Hd. 1/4-20 UNC x 3/4 |
| 27 | 819091016 | Washer 9/32 x 5/8 x 16 |
| 28 | 810040400 | Washer, Lock 1/4 |
| 30 | 873220400 | Nut, Fin. Hex 1/4-20 UNC |
| 36 | 811150400 | Washer Lock Inter. Tooth 1/4 |
| 39 | 532141735 | Bracket Switch Clutch |
| 55 | 817490508 | Screw Thdrol 5/16 - 18 x 1/2 |
| 70 | 532140413 | Harness Engine |


**NOTE:** All component dimensions given in U.S. inches.
1 inch = 25.4 mm

**HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION**

# REPAIR PARTS


## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### DECALS

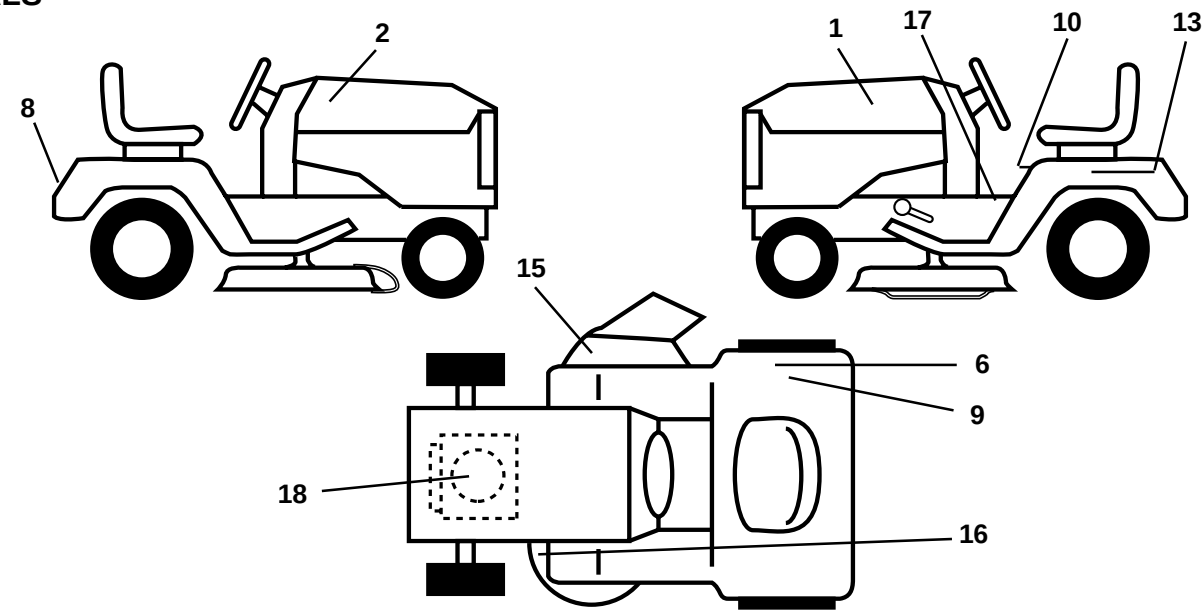


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532156999 | Decal, Hood, L. H., Husqv. |
| 2 | 532156998 | Decal, Hood, R. H., Husqv. |
| 6 | 532145437 | Decal Europe Stand. CE Tractors |
| 8 | 532131582 | Decal, Logo, Fender |
| 9 | 532126187 | Decal, Certification, (French/Dutch) |
| 10 | 532145498 | Decal, Read Owner's Manual Symbols |
| 13 | 532146451 | Decal, Battery |
| 15 | 532145494 | Decal, Cutfinger |
| 16 | 532136830 | Decal, V-Belt Sch. |
| 17 | 532145545 | Decal, Operating Instructions Symbols |
| 18 | 532272632 | Decal, Engine |
| - - | 532138311 | Decal, Height Adjust |
| - - | 532157036 | Manual, Operator's (Scan.) |
| - - | 532157035 | Manual, Operator's (Euro.) |
| Accessories not included with tractor | | |
| - - | C36 | Rear Bagger |
| - - | CESS36 | Bagger |
| - - | MK360 | Mulch Kit |

### WHEELS & TIRES

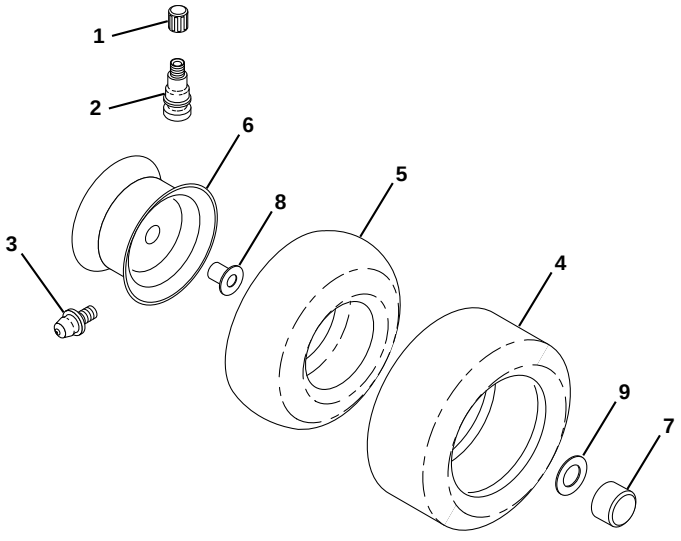



| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532059192 | Cap, Valve |
| 2 | 532065139 | Stem, Valve |
| 3 | 532124957 | Fitting, Grease\ (Front Wheels Only) |
| 4 | 532137422 | Tire, Front |
| 4 | 532132703 | Tire, Rear |
| 5 | 532059904 | Tube, Front (Optional Service Items Only) |
| 5 | 532008134 | Tube, Rear (Optional Service Items Only) |
| 6 | 532142039 | Rim, Front |
| 6 | 532141652 | Rim, Rear |
| 7 | 532104757 | Cap Axle |
| 8 | 532124959 | Bearing Flange |
| 9 | 532121748 | Washer 25/32 x 1-5/8 x 16 Ga. |
| - - | 532144334 | Sealant, Tire (10 oz. Tube) |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### TRANSAXLE - PEERLESS - MODEL NO. 930-009A

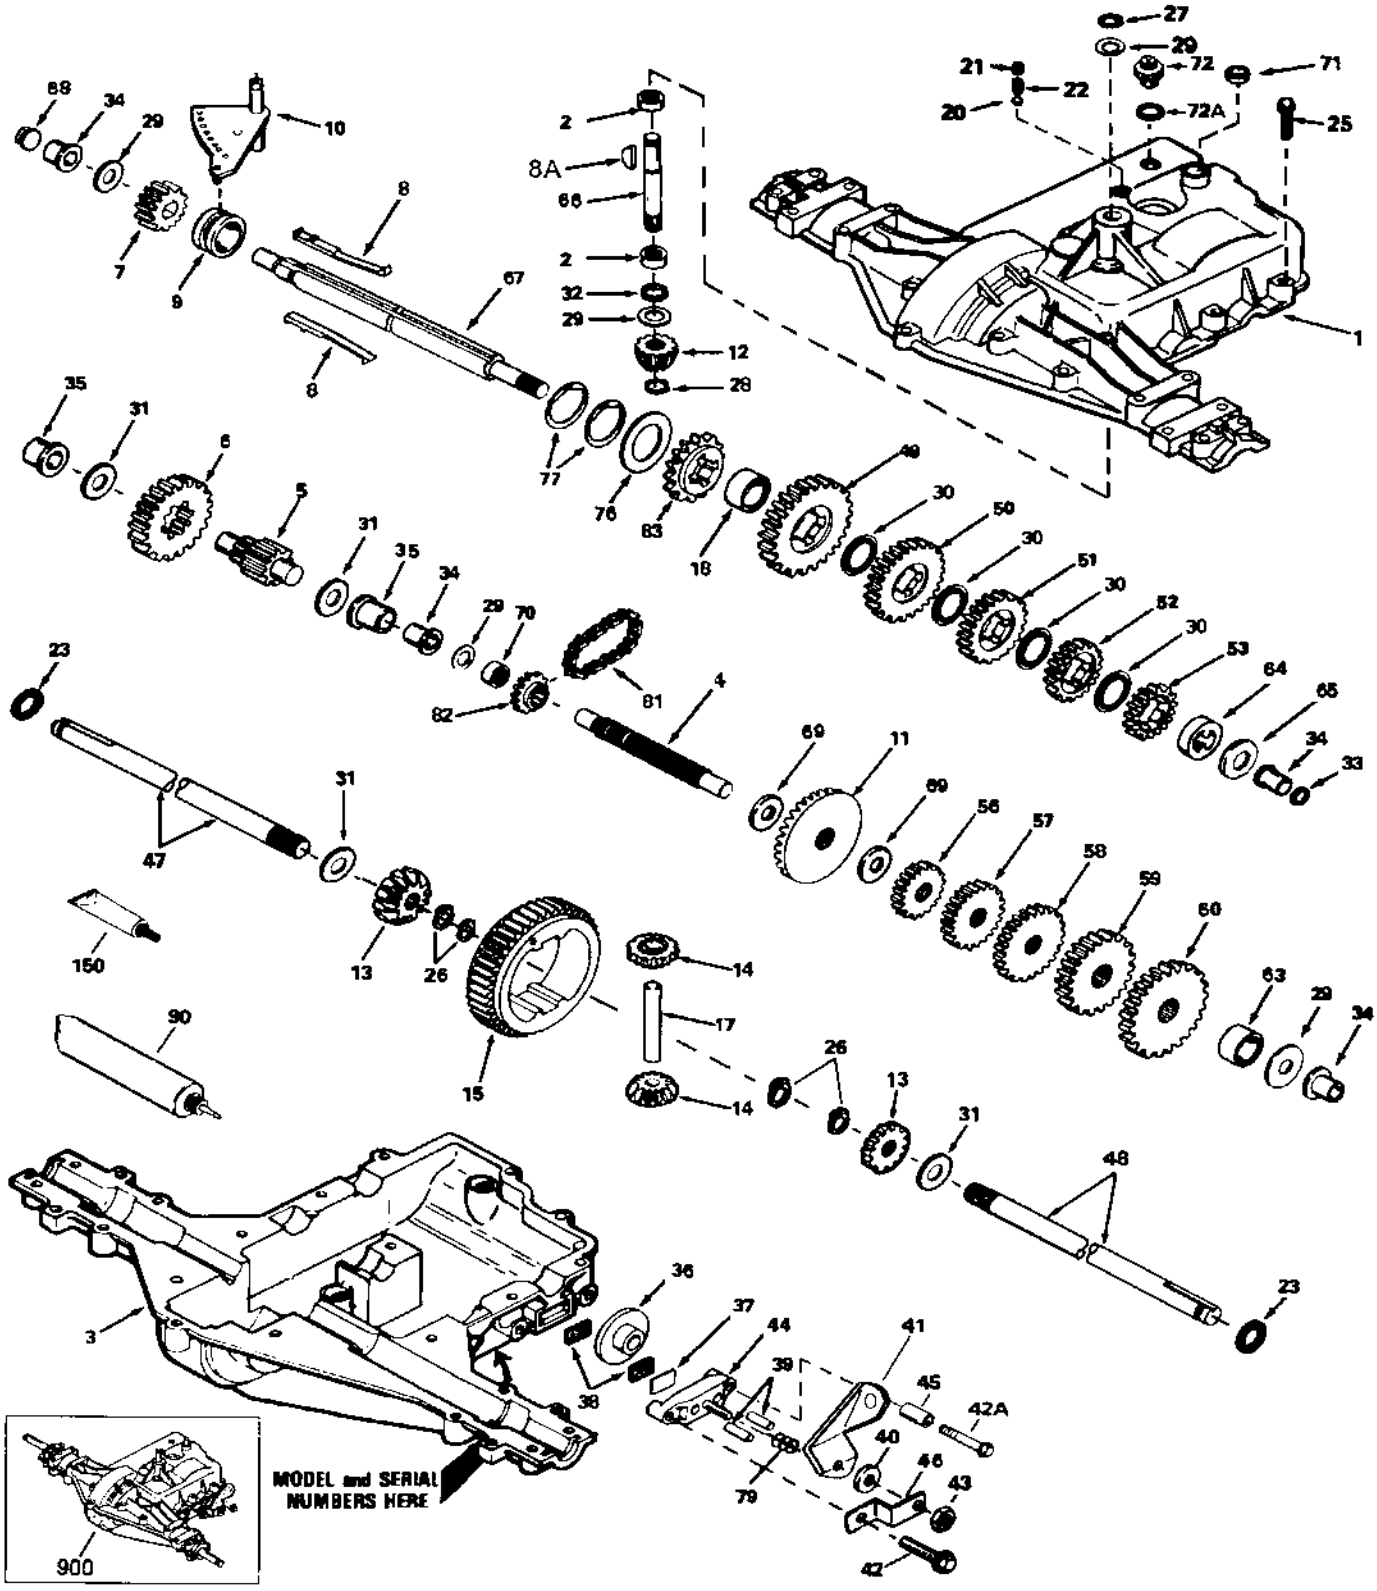

# REPAIR PARTS

## TRACTOR - - MODEL NO. LT125 (HE12536B), PRODUCT NO. 954 17 00-01

### TRANSAXLE - PEERLESS - MODEL NO. 930-009A

| REF NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 772108A | Cover, Transaxle |
| 2 | 780086 | Bearing, Needle |
| 3 | 770102A | Case, Transaxle |
| 4 | 776260 | Shaft, Counter |
| 5 | 776219B | Shaft and Pinion Assembly, Output |
| 6 | 778139 | Gear, Output |
| 7 | 778136 | Gear, Spur, 15 Teeth |
| 8 | 792136A | Key, Shift |
| 8A | 792047 | Key, Woodruff |
| 9 | 784352 | Collar, Shifter |
| 10 | 784355 | Rod and Fork Assembly, Shift |
| 11 | 778229 | Gear, Bevel, 42 Teeth |
| 12 | 778113A | Bevel Pinion, Input |
| 13 | 778221 | Gear, Bevel |
| 14 | 778068 | Gear, Bevel Pinion |
| 15 | 778260 | Gear, Ring |
| 17 | 786139 | Pin, Drive |
| 18 | 786102 | Spacer, Neutral |
| 20 | 792077 | Ball, Steel 5/16" diameter |
| 21 | 792078 | Set Screw 3/8-16 x 3/8 |
| 22 | 792079 | Spring |
| 23 | 788061 | Ring, Seal |
| 25 | 792073 | Screw, Flanged Hex Head, Thread Forming 1/4-20 x 1-1/4 |
| 26 | 792125 | Ring, Retainer (4 Required, Package of 2) |
| 27 | 792035 | Ring, Retainer |
| 28 | 788040 | Ring, Retainer |
| 29 | 780072 | Washer, Thrust |
| 30 | 780108 | Washer, Thrust |
| 31 | 780001 | Washer |
| 32 | 792001 | “O” Ring |
| 33 | 788095 | Seal, Square Cut |
| 34 | 780105A | Bushing, Flanged |
| 35 | 780118A | Bushing, Flanged |
| 36 | 790003 | Disk, Brake |
| 37 | 790007 | Plate, Brake Pad |
| 38 | 799021 | Pad, Brake |
| 39 | 786026 | Pin, Dowel |
| 40 | 792076A | Washer, Flat |
| 41 | 790079 | Lever, Brake |
| 42 | 792073 | Screw, Flanged Hex Head, Thread Forming 1/4-20 x 1-1/4 |
| 42A | 792085A | Screw 1/4-20 x 2-1/4 |
| 43 | 792075 | Locknut 5/16-24 |
| 44 | 790025 | Holder, Brake Pad |
| 45 | 786066 | Spacer |
| 46 | 786086 | Bracket, Brake Lever |
| 47 | 774690 | Axle 11-5/16" long |
| 48 | 774691 | Axle 16-1/2" long |
| 49 | 778191 | Gear, Spur, 37 Teeth (1st) |
| 50 | 778124A | Gear, Spur, 30 Teeth (2nd) |
| 51 | 778123A | Gear, Spur, 25 Teeth (3rd) |
| 52 | 778122A | Gear, Spur, 22 Teeth (4th) |
| 53 | 778273 | Gear, Spur, 19 Teeth, Steel (5th) |
| 56 | 778230 | Gear, Spur, 12 Teeth (1st) |
| 57 | 778126A | Gear, Spur, 20 Teeth (2nd) |
| 58 | 778127A | Gear, Spur, 25 Teeth (3rd) |
| 59 | 778128A | Gear, Spur, 28 Teeth (4th) |
| 60 | 778163 | Gear, Spur, 31 Teeth (5th) |
| 63 | 786071 | Spacer |
| 64 | 786072 | Spacer |
| 65 | 780109 | Washer, Thrust |
| 66 | 776135 | Shaft, Input |
| 67 | 776315A | Shaft, Brake, 4 Keyed |
| 68 | 786116A | Plug |
| 69 | 780051 | Washer, Thrust |
| 70 | 786118 | Spacer |
| 71 | 788069 | Seal, Square Cut |
| 72 | 792165 | Plug, Threaded 9/16-18 |
| 72A | 788091 | “O” Ring |
| 76 | 780090 | Washer, Thrust |
| 77 | 788078A | Ring, Retaining, Inverted (Package of 2) |
| 79 | 792144 | Spring, Brake |
| 81 | 786081 | Chain, Roller (Number 41 Chain, 24 Links) |
| 82 | 786082 | Sprocket, 9 Teeth (Reverse) |
| 83 | 786123 | Sprocket, 18 Teeth (Reverse) |
| 90 | 788067B | Grease, Bentonite, 32 Ounce Bottle |
| 150 | 510334 | Gasket Eliminator (Loctite #515) |
| 900 | 794528A | Replacement Transaxle |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

Parts must be ordered from Tecumseh Products Co.