
Husqvarna

7

LTH 120

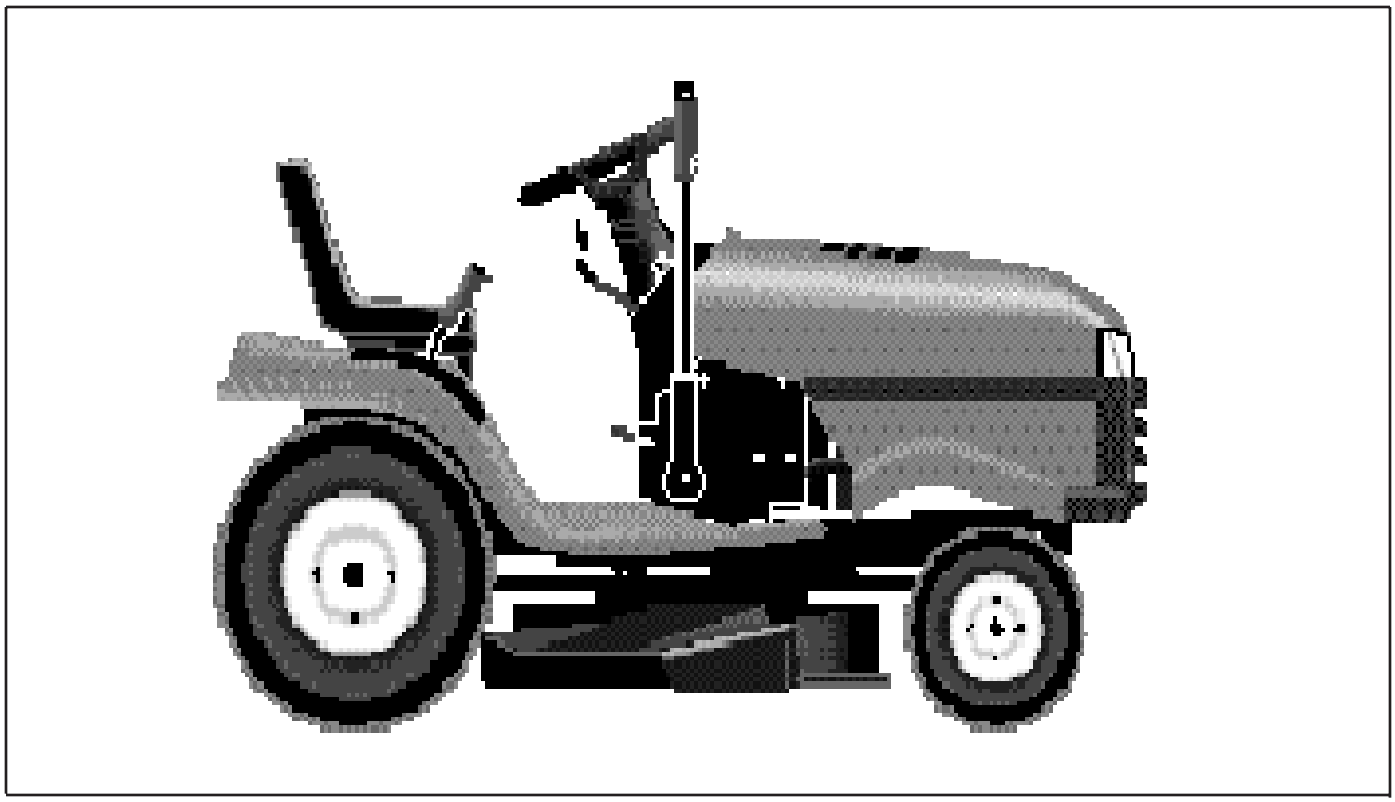

2.1998


954140003C

PARTS LISTING

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

ELECTRICAL

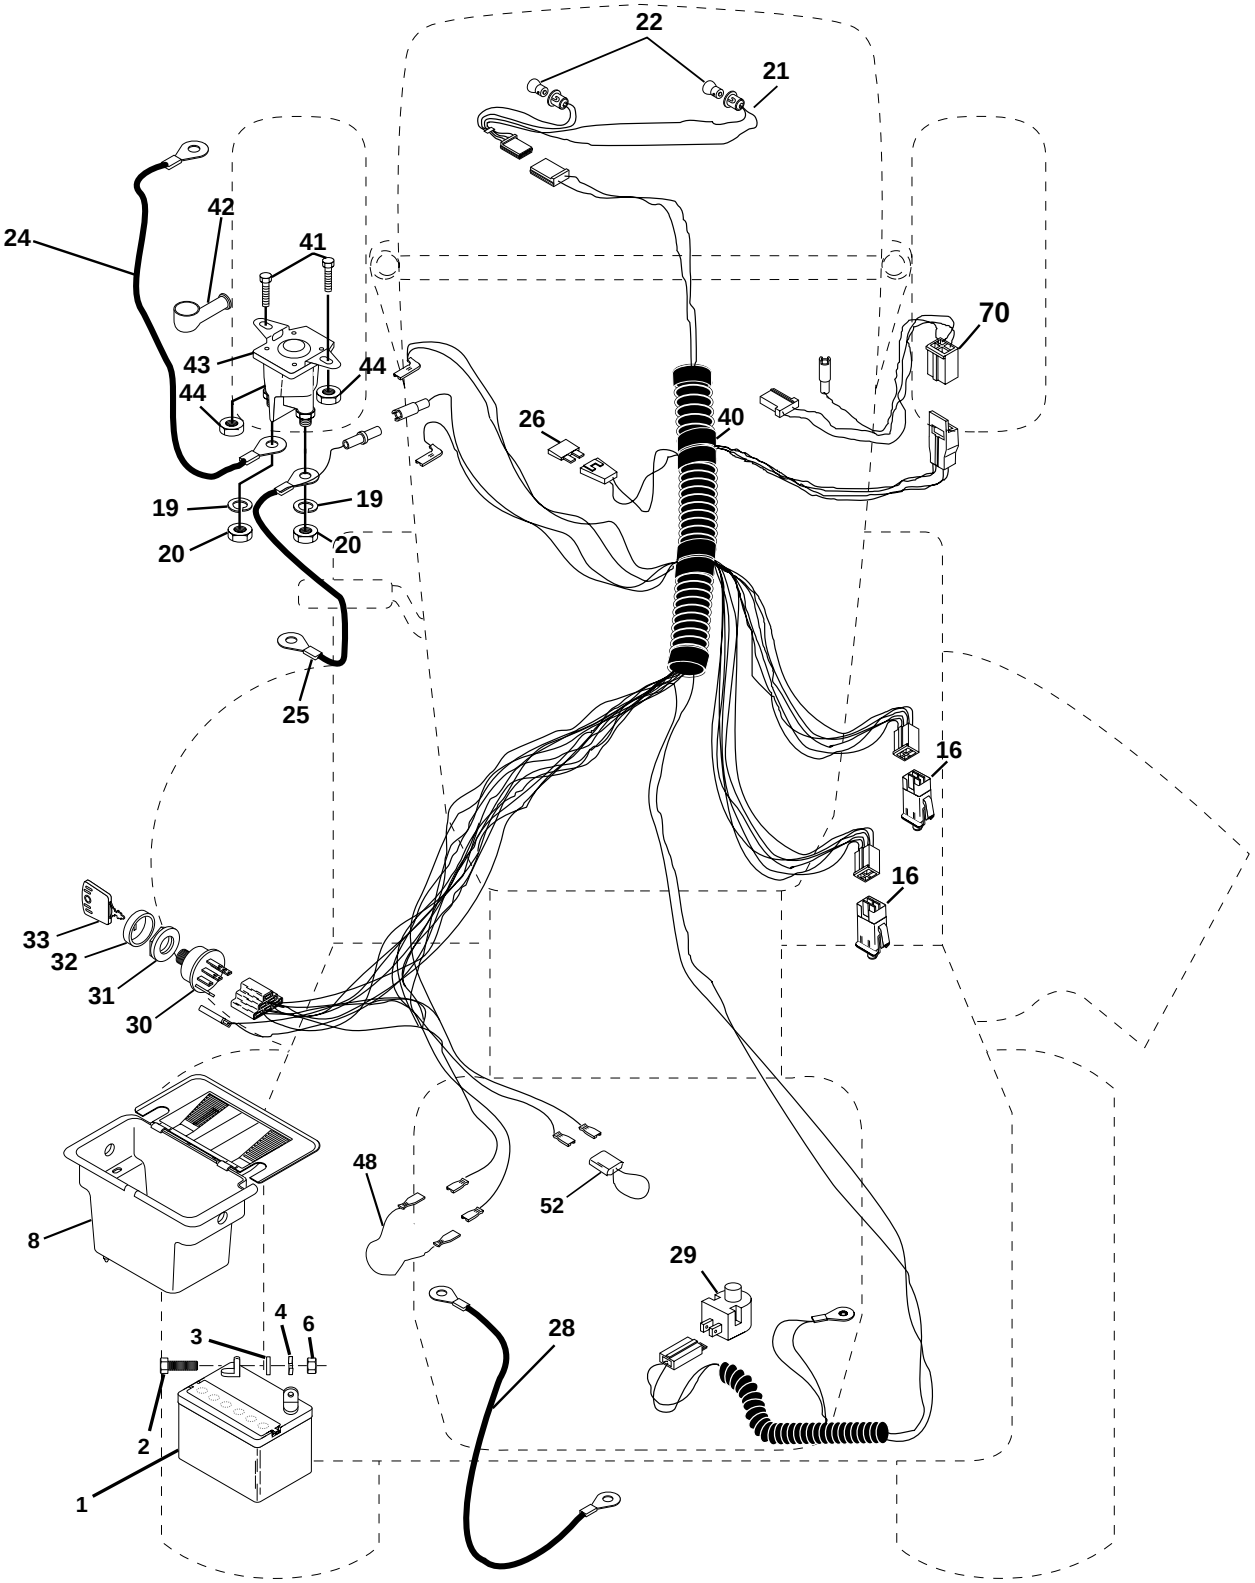

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

ELECTRICAL


KEY NO.	PART NO.	DESCRIPTION
1	532144925	Battery 12 Volt 25 AMP
2	874760412	Bolt Hex Hd 1/4-20unc X 3/4
3	819091016	Washer 9/32 X 5/8 X 16 Ga.
4	810040400	Washer Lock Hvy Helical 1/4
6	873220400	Nut Fin Hex 1/4-20 Unc
8	532156417	Case Battery Mech Hinge
16	532153664	Switch Interlock Push-In
19	810090400	Washer Lock 1/4
20	873350400	Nut Jam Hex 1/4-20 Unc
21	532136850	Harness Asm Light W/4152j
22	532004152	Bulb Light #1156
24	532124780	Cable Battery 6 Ga 11" red
25	532146147	Cable Battery 6 Ga 44" red w/16 wire
26	532108824	Fuse 30 AMP Auto Green
28	532124773	Cable Ground 6 Ga 12" black
29	532121305	Switch Plunger Nc Gray
30	532140301	Switch Ign 4 pos w/lights
31	532124211	Nut Ignition
32	532141226	Cover Sw Ignition
33	532122147	Key Ign Modelled Generic
40	532156442	Harness Ign.
41	871110408	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	532131563	Cover Terminal Red
43	532145673	Solenoid
44	873640400	Nut Keps Hex 1/4-20 Unc
48	532140844	Adapter Ammeter Rectangular
52	532141940	Protection Wire Loop
70	532140413	Harness, Eng. B&S/Tec Dual

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

CHASSIS AND ENCLOSURES

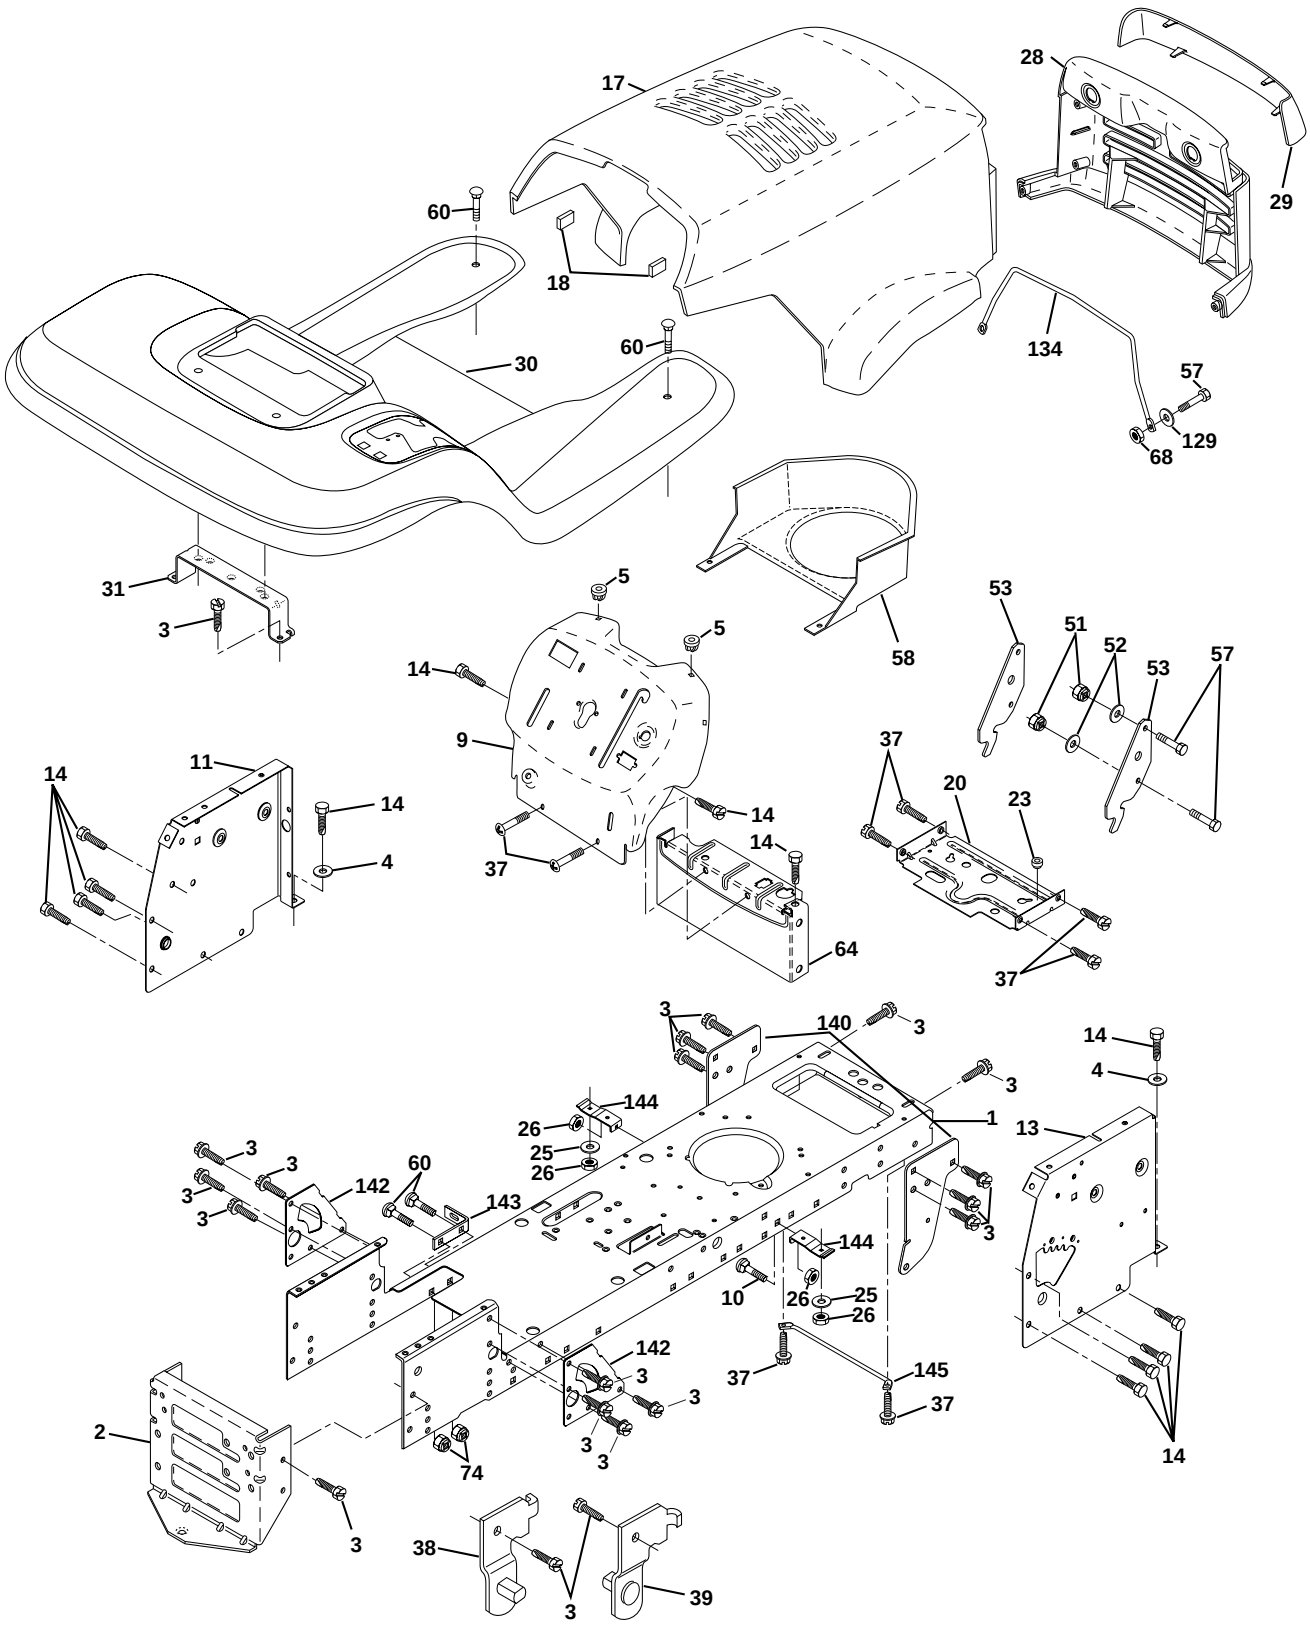

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

CHASSIS AND ENCLOSURES


KEY NO.	PART NO.	DESCRIPTION
1	532160392	Chassis Weldment
2	532140356	Drawbar, Stretch
3	817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
4	819131216	Washer 13/32 x 3/4 x 16 Ga.
5	532155272	Bumper Hood/Dash
9	532162742	Dash P/L M, N/AMM N/HM
10	872140608	Bolt Carriage 3/8-16 x 1
11	532155927	Panel Dash Lh
13	532157262	Panel Dash Rh
14	817490608	Screw Thdrol 3/8-16x1/2 Ty-tt
17	532156051	Hood LT/PL Husqvarna
18	532126938	Bumper Hood
20	532156437	Plate Mtg Battery Fuel Tank Fr
23	532124028	Bushing
25	819131312	Washer 13/32 X 13/16 X 12 Ga
26	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
28	532149776	Grille LT/PL Husqvarna
29	532149777	Lens LT/PL Husqvarna
30	532156489	Fender Footrest STLT Pnt
31	532139976	Bracket Support Fender
37	817490508	Screw Thdrol 6/16-18 x 1/2 TYT
38	532139886	Bracket, Asm. Pivot, L.H., Mower Rear
39	532139887	Bracket, Asm. Pivot, R.H., Mower Rear
51	873800400	Nut Lock Hex W/Ins 1/4-20
52	819091416	Washer 9/32 x 7/8 x 16 Ga.
53	532150067	Bracket Pnt. Pick off LT/PL Husqvarna
57	874780412	Bolt Hex 1/4-20 x 3/4
58	532150127	Air Duct Engine P/L
60	872140606	Bolt Rdhd Sqnk 3/8-16unc x 3/4
64	532154798	Dash Lower STLT
68	873510400	Nut Keps Hex 1/4-20unc
74	873680600	Nut Crownlock 3/8-16 UNC
129	819091016	Washer 9/32 x 5/8 x 16 Ga.
134	532160219	Rod Support Hood LT/PL Husq.
140	532158418	Bracket Suspension Front
142	532156095	Plate Reinforcement STLT
143	532154966	Bracket Swaybar Chassis
144	532154207	Bracket Pnt Footrest STLT
145	532156524	Rod Pivot Chassis/Hood
- -	532005479	Plug Button

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

DRIVE

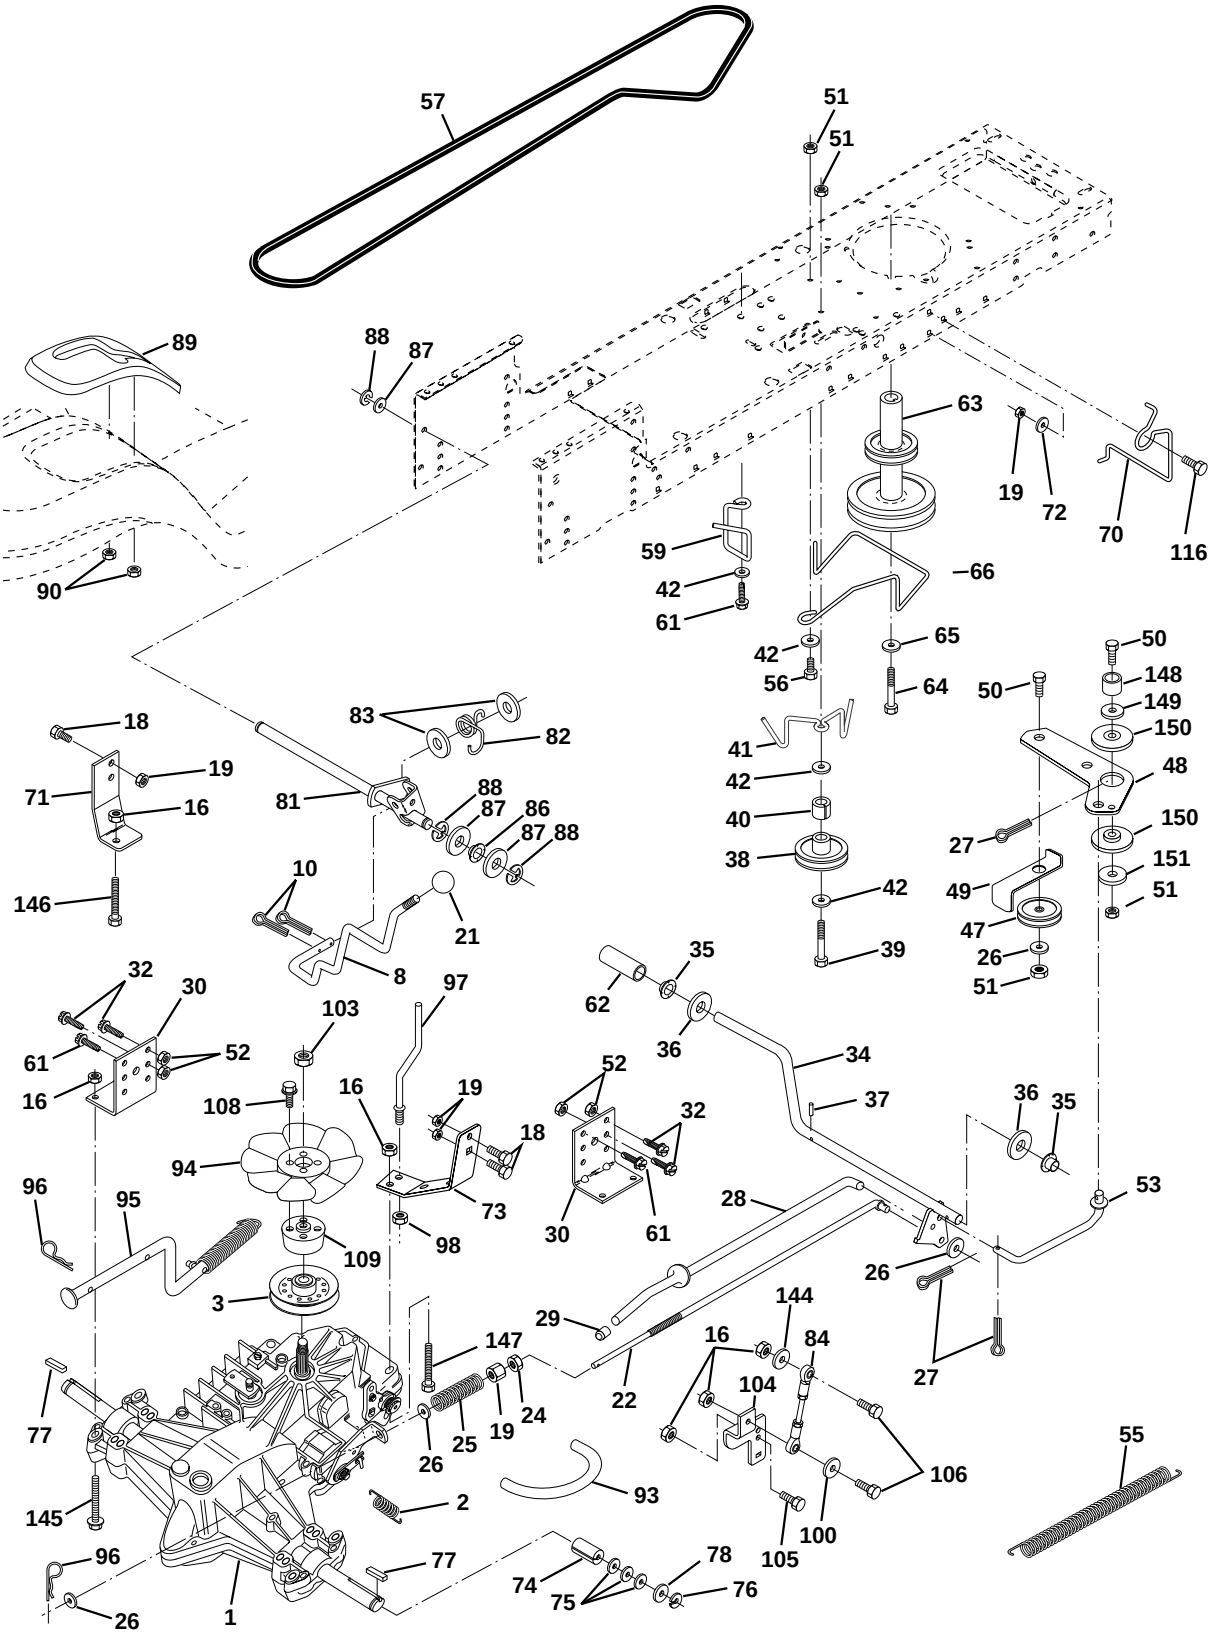

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

DRIVE


KEY NO.	PART NO.	DESCRIPTION
1	532140607	Transaxle (See Breakdown) Hydro Gear, Model No. 310-0500
2	532142431	Spring, Return, Brake
3	532144698	Pulley, Transaxle
8	532154792	Rod Shift Fender STLT
10	876020416	Pin Cotter 1/8 x 1 CAD
16	873800500	Nut Lock Hex W/Ins. 5/16-18 Unc P
18	874780616	Bolt Fin Hex 3/8-16 Unc x 1 Gr. 5
19	873800600	Nut Lock Hex W/Wsh 3/8-16 Unc
20	871170764	Bolt Hex 7/16-20 x 4 Gr 5
21	532121274	Knob, Duckhead 1/2-13
22	532145627	Rod, Brake Hydro
24	873350600	Nut
25	532106888	Spring, Brake Rod
26	819131316	Washer
27	876020412	Pin Cotter 1/8 x 3/4 CAD.
28	532145204	Rod, Parking Brake
29	532071673	Cap, Parking Brake
30	532130807	Bracket, Transaxle
32	874760512	Bolt Hex Hd 5/16-18 Unc x 3/4
34	532155071	Shaft, Foot Pedal
35	532120183	Bearing, Nylon
36	819211616	Washer
37	532124963	Pin, Roll
38	532123674	Pulley, Idler, Flat
39	874760644	Bolt
40	532124965	Spacer, Split
41	532154777	Keeper, Belt Idler
42	819131312	Washer 13/32 x 13/16 x 12 Gauge
47	532127783	Pulley, Idler, V-Groove
48	532154407	Bellcrank Clutch Grnd Prv STL
49	532123205	Retainer, Belt
50	874760624	Bolt
51	873680600	Nut
52	873680500	Nut Crownlock 5/16-18
53	532105710	Link, Clutch
55	532105709	Spring, Return, Clutch
56	874760620	Bolt Fin Hex 3/8-16 UNC x 1-1/4
57	532161850	V-Belt, Ground Drive
59	532140312	Keeper, Center Span
61	817490612	Screw Thdrol. 3/8-16 x 3/4 Ty. TT
62	532124872	Cover, Pedal
63	532161399	Pulley, Engine
65	810040700	Washer
66	532161488	Keeper Belt Engine Hydro
70	532134683	Guide Belt Mower Drive RH
71	532141417	Strap Torque Lh Hydro
72	819132012	Washer 13/32 x 1-1/4 x 12 Ga.
73	532141418	Strap Torque Rh Hydro
74	532121199	Spacer, Split
75	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
76	812000001	E-Ring
77	532123583	Key, Square
78	532121748	Washer 25/32 x 1-5/8 x 16 Gauge
81	532161081	Shaft Asm. Cross Hydro
82	532123782	Spring Torsion T/A
83	819171216	Washer 17/32 x 3/4 x 16 Ga.
84	532141423	Rod, Tie Hydro
86	532157480	Bushing
87	819212016	Washer 21/32 x 1-1/4 x 16 Ga.
88	812000008	Ring Klip #5304-62
89	532158388	Console, Shift
90	532124346	Nut, Self-Thd Wsh-hd 1/4 Zinc
93	532142564	Line Fuel Hydro 4"
94	532140462	Fan, Hydro 7"
95	532144643	Control Asm Bypass Hydro
96	532124788	Retainer Spring 1" Zinc/Cad
97	532144201	Keeper Belt Rh Hydro
98	873510600	Nut Keps Hex 3/8-16 Unc
100	819111216	Washer 11/32 x 3/4 x 16 Ga.
103	873940800	Nut Nylon Insert 1/2-20 Unf.
104	532141421	Arm, Control Hydro
105	871070516	Screw Cap Hex 5/16 x 18 x 1
106	874780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
108	817541026	Screw Hex Wh Hd #10-24 x
109	532145098	Adaptor Fan Hydro LT Hyd Alum
116	872110610	Bolt Rdhd Sq. Neck 3/8-16 x 1.25
145	874490540	Bolt Hex Flghd 5/16-18 x Gr. 5
146	874490536	Bolt Hex Flghd 5/16-18 x 2-1/4
147	874490524	Bolt hex Flghd 5/16-18 x 1-1/2
148	532159103	Spacer
149	532122052	Spacer Retainer PM Mower
150	532150935	Bushing Nylon Collered
151	819133210	Washer 13/32 x 2 x 10 Ga.

NOTE: All component dimensions give in U.S. inches. 1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

STEERING ASSEMBLY

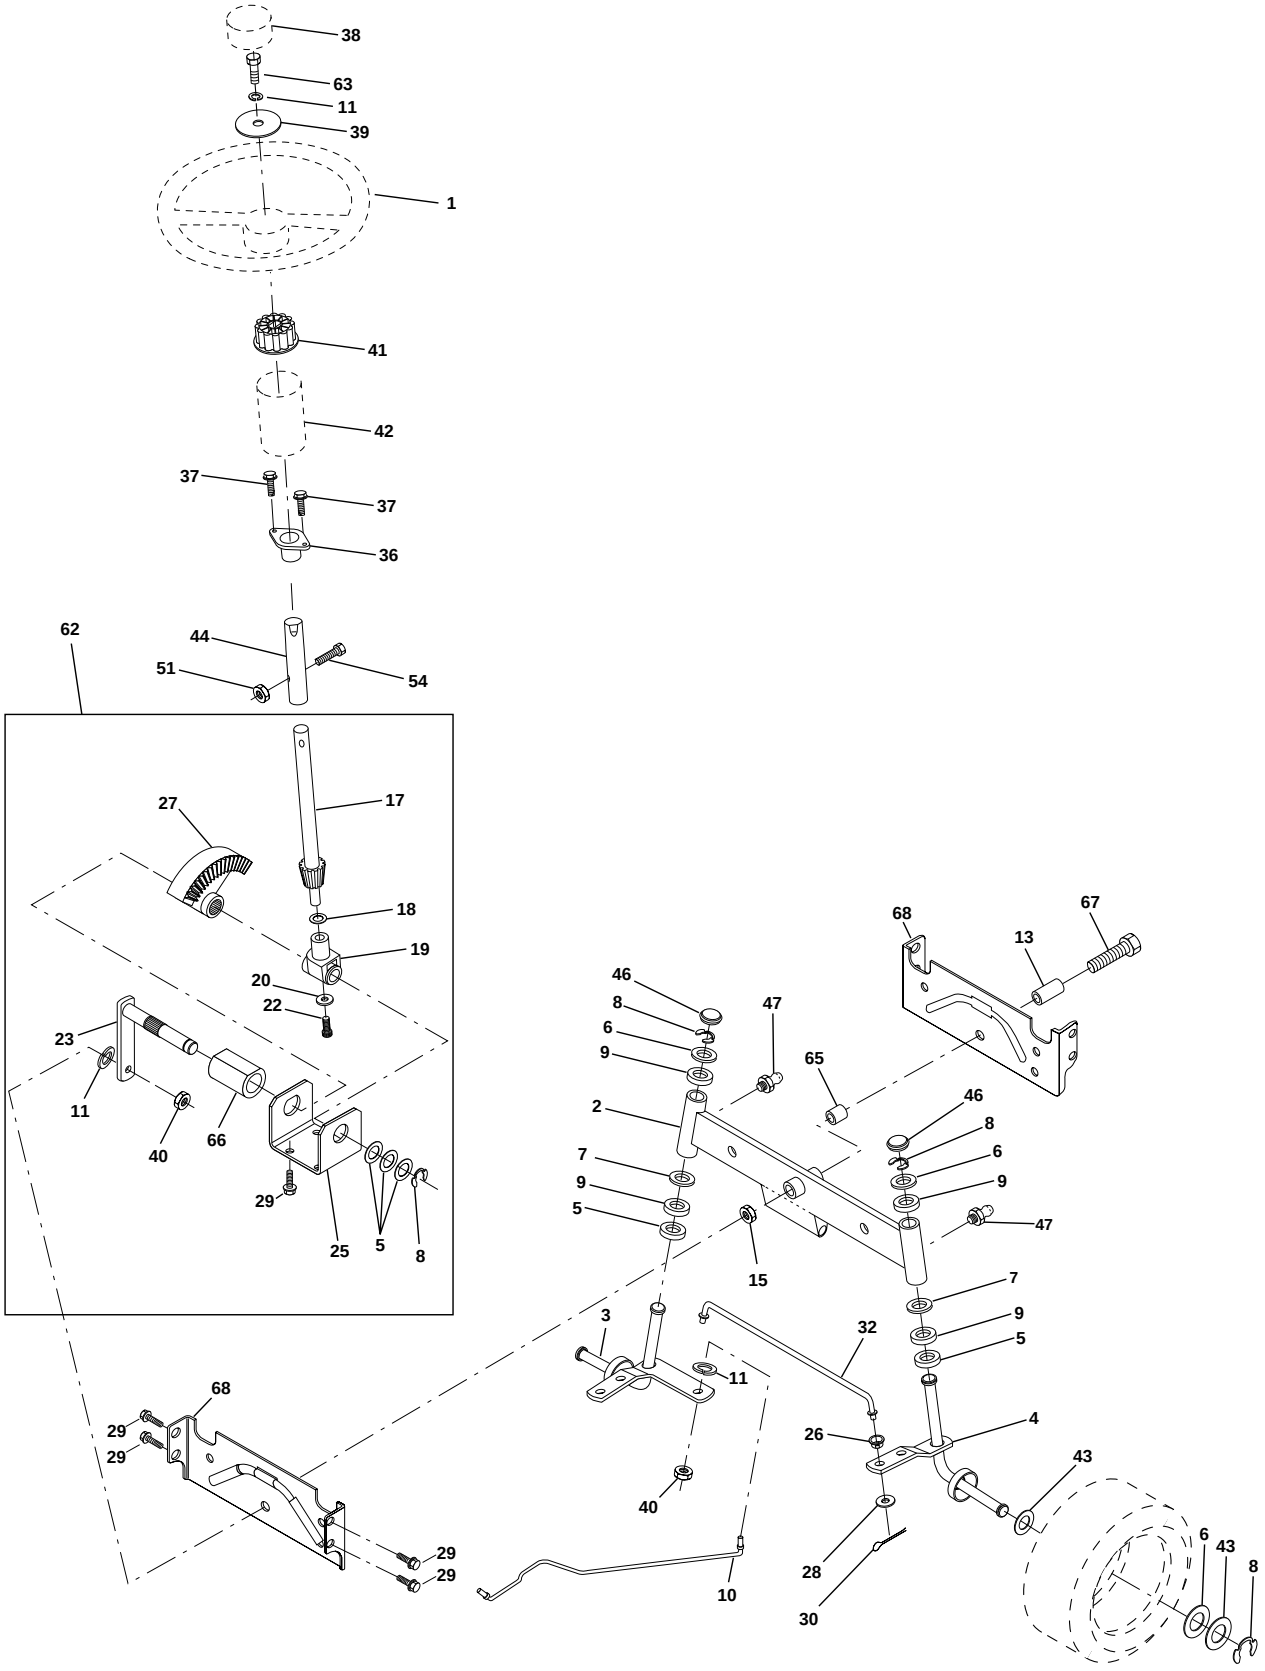

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

STEERING ASSEMBLY


KEY NO.	PART NO.	DESCRIPTION
1	532124415	Wheel Steering
2	532154427	Axle Asm STMP Dropped STL
3	532156483	Spindle Asm LH
4	532157473	Spindle Asm RH
5	532124931	Bearing Race Thrust Harden
6	532121748	Washer 25/32 X 1-5/8 X 16 Ga
7	819272016	Washer 27/32 X 1-1/4 X 16 Ga
8	812000029	Ring Klip #t5304-75
9	532124937	Bearing Col Strg Blk
10	532156438	Link Drag Extended Stamp
11	810040600	Washer Lock Hvy Hlcl Spr 3/8
13	532154779	Bearing Axle STLT/GT
15	873901000	Nut Lock Flange 5/8-11 Unc
17	532156546	Shaft Asm Strg
18	532057079	Washer Thrust 515x 750x 033
19	532124035	Support Shaft
20	532126684	Washer Shim 1/4 X 5/8 X 062
22	871200410	Screw Hex Socket 1/4-20 x 5/8
23	532127501	Shaft Asm Pittman
25	532154406	Bracket Steering
26	532126847	Bushing Link Drag Blk LR
27	532136874	Gear Sector
28	819131416	Washer 13/32 X 7/8 X 16 Ga
29	817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
30	876020412	Pin Cotter 1/8 X 3/4 Cad
32	532130465	Rod Tie Wire Form 19 75 Mech
36	532155099	Bushing Strg
37	532152927	Screw
38	532124416	Insert Cap Strg Wh Au
39	819133808	Washer 13/32 X 2-3/8 X 8 Ga
40	532124701	Lock nut
41	532100711	Adaptor Wheel Strg
42	532155092	Boot Steering Shaft
43	532121749	Washer 25/32 X 1 1/4 X 16 Ga
44	532153720	Extension Steering Shaft LR/LT
46	532121232	Cap Spindle Fr Top Blk
47	532124836	Fitting Grease
51	873800500	Nut Lock Hex w/Ins 5/16-18
54	874780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
62	532156594	Kit, Steering Assembly Svc
63	874780616	Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65	532154780	Spacer Axle
66	532154404	Bearing Arm Pittman
67	874781044	Bolt, Fin Hex 5/8-11 UNC x 2-3/4
68	532154429	Axle, Brace

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

SEAT ASSEMBLY

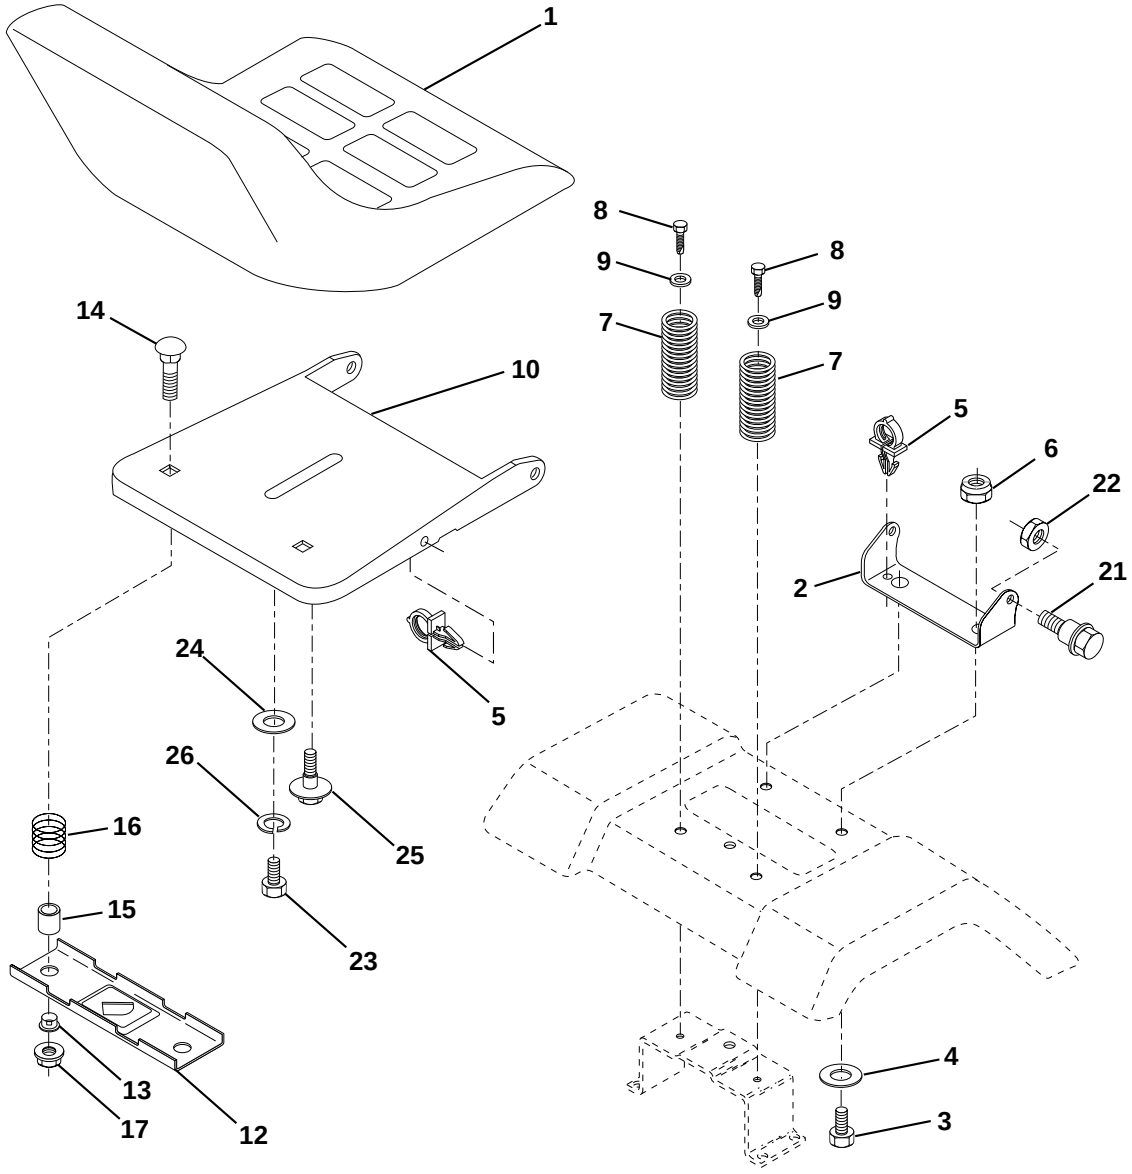

KEY NO.	PART NO.	DESCRIPTION
1	532140838	Seat
2	532140551	Bracket Pivot Seat 8 720
3	874760616	Bolt Fin Hex 3/8-16unc X 1
4	819131610	Washer 13/32 X 1 X 10 Ga
5	532145006	Clip Push-In
6	873800600	Nut Hex w/Ins. 3/8-16 Unc
7	532124181	Spring Seat Cprsn 2 250 Blk Zi
8	817490616	Screw Thdrol 3/8-16 X 1 Ty-tt
9	819131614	Washer 13/32 X 1 X 14 Ga.
10	532155925	Pan Seat
12	532121246	Bracket Mounting Switch
13	532121248	Bushing Snap Blk Nyl 50 Id


KEY NO.	PART NO.	DESCRIPTION
14	872050412	Bolt Rdhd Sqnk 1/4-20x1-1/2
15	532134300	Spacer Split 28x 96 Yel Zinc
16	532121250	Spring Cprsn 1 27 Blk Pnt
17	532123976	Nut Lock 1/4 Lge Flg Gr 5 Zinc
21	532153236	Bolt Shoulder 5/16-18 Unc
22	873800500	Nut Hex Lock W/Ins 5/16-18
23	874780814	Bolt, Hex Head, Fin 1/2-13 x 7/8 Grade 5
24	819171912	Washer 17/32 X 1-3/16 X 12 Ga.
25	532127018	Bolt Shoulder 5/16-18 X 62
26	810040800	Washer Lock

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

DECALS

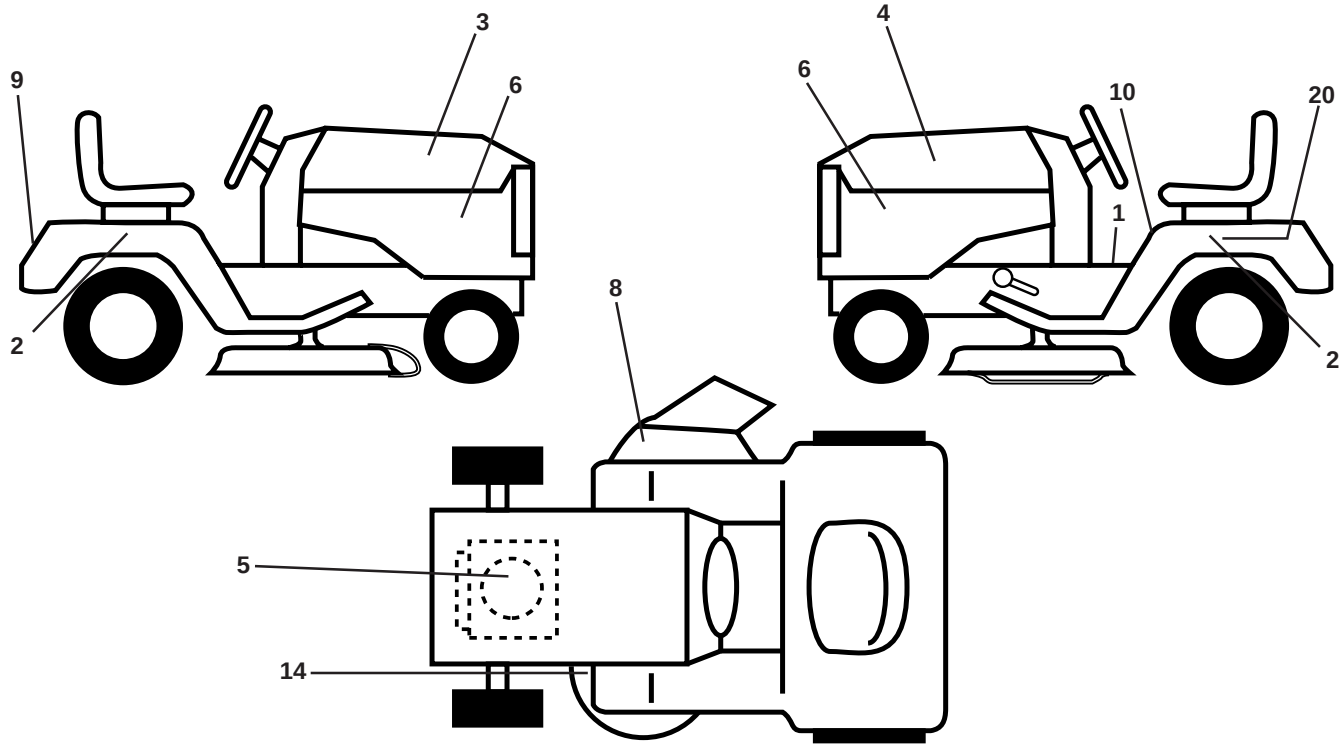


KEY NO.	PART NO.	DESCRIPTION
1	532157032	Decal Oper. Step Thru Eng/Fr
2	532157007	Decal Fender Auto Husq Radius
3	532157193	Decal Hood RH
4	532157195	Decal Hood LH
5	532271967	Decal HP Engine
6	532159713	Decal Pnl Side
8	532137259	Decal Warning
9	532150617	Decal Fender Husq
10	532157140	Decal Fender Danger Eng/Fr
14	532136832	Decal V-Belt Schematic
20	532145005	Decal Bat Dan/Psn

KEY NO.	PART NO.	DESCRIPTION
- -	532154515	Pad Footrest LH STLT
- -	532154516	Pad Footrest RH STLT
- -	532138311	Decal Handle Lft Height Adjust
- -	532142341	Decal Drawbar Cntrl Mvt Hyd
- -	532162059	Manual Owner's (English)
- -	532162060	Manual Owner's (French)

Available accessories not included with tractor:

- -	MK380	Mulcher Kit with Blades
- -	C38	Grass Catcher

WHEELS & TIRES

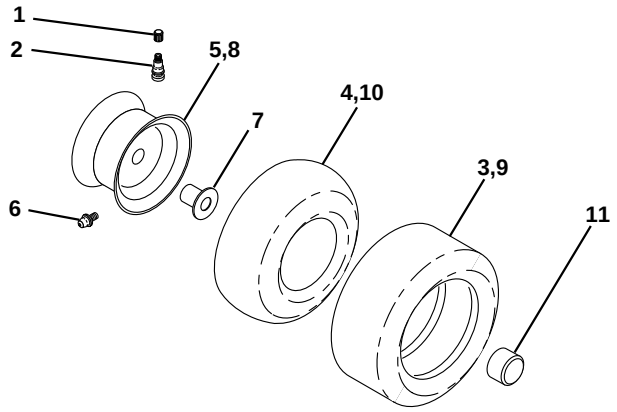


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap Valve Tire
2	532065139	Stem Valve
3	532106222	Tire F Ts 15 X 6 0 - 6 Service
4	532059904	Tube Front (Service Item Only)
5	532138336	Rim Asm 6"front Silver Service
6	532124957	Fitting Grease (Front Wheel Only)
7	532124959	Bearing Flange (Front Wheel Only)
8	532138337	Rim Asm 8"rear Silver Service
9	532124635	Tire R Ts 18x8 5-8 C Service
10	532124926	Tube Rear (Service Item Only)
11	532104757	Cap Axle Blk 1 50 X 1 00
- -	532144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

ENGINE

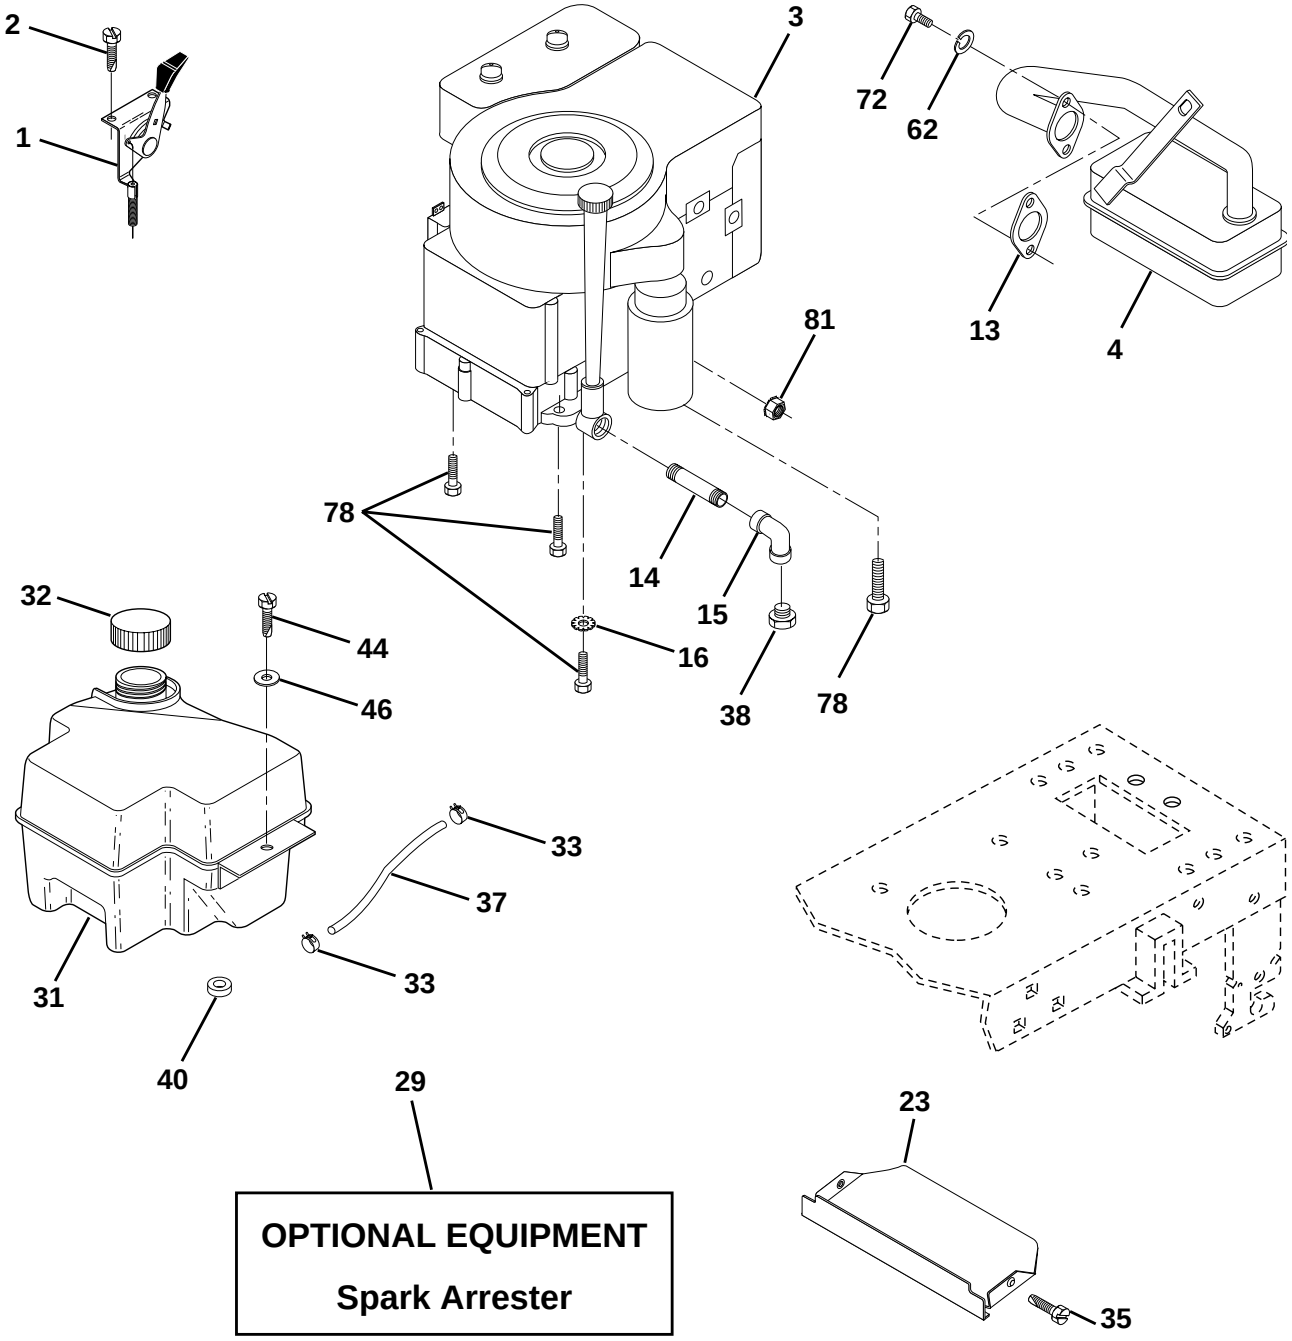

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

ENGINE


KEY NO.	PART NO.	DESCRIPTION
1	532140310	Control Th/ch 23 5 LH Flag
2	817720410	Screw Hex Thd Cut 1/4-20x5/8 T
3	- - - - - - - -	Engine, Briggs 289707
4	532137348	Muffler LT B&S 12/12.5/13HP
13	532272293	Gasket Eng 1 313 Id Tin Plated
14	813280324	Nipple Pipe 3/8 Npt X 3"
15	813200300	Elbow Std 90 Degree 3/8-18 Npt
16	811050600	Washer Lock Ext Tooth 3/8
23	532159880	shield Brn/Dbr Guard
29	532137180	Kit Spark Arrestor (Flat Scrn)
31	532161911	Tank Fuel Front 2 00
32	532140527	Cap Asm Fuel W/sym Vented
33	532123487	Clamp Hose Black
35	817490512	Screw
37	532137040	Line Fuel 20"
38	- - - - - - - --	Plug Oil Drain (Order From Engine Manufacturer)
40	532124028	Bushing Snap Nyl Blk Fuel Line
44	817490412	Screw Hexwsh Thdrol 1/4-20x3/4
46	819091416	Washer 9/32 X 7/8 X 16 Ga
62	810040500	Washer Lock Hvy Hlcl Spr 5/16
72	871070512	Screw Hexhd Cap 5/16-18x 3/4
78	817490620	Screw Thdrol 3/8-16x1-1/4 TYTT
81	532128861	Nut Flange 1/4-20 Starter Nut

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

MOWER DECK

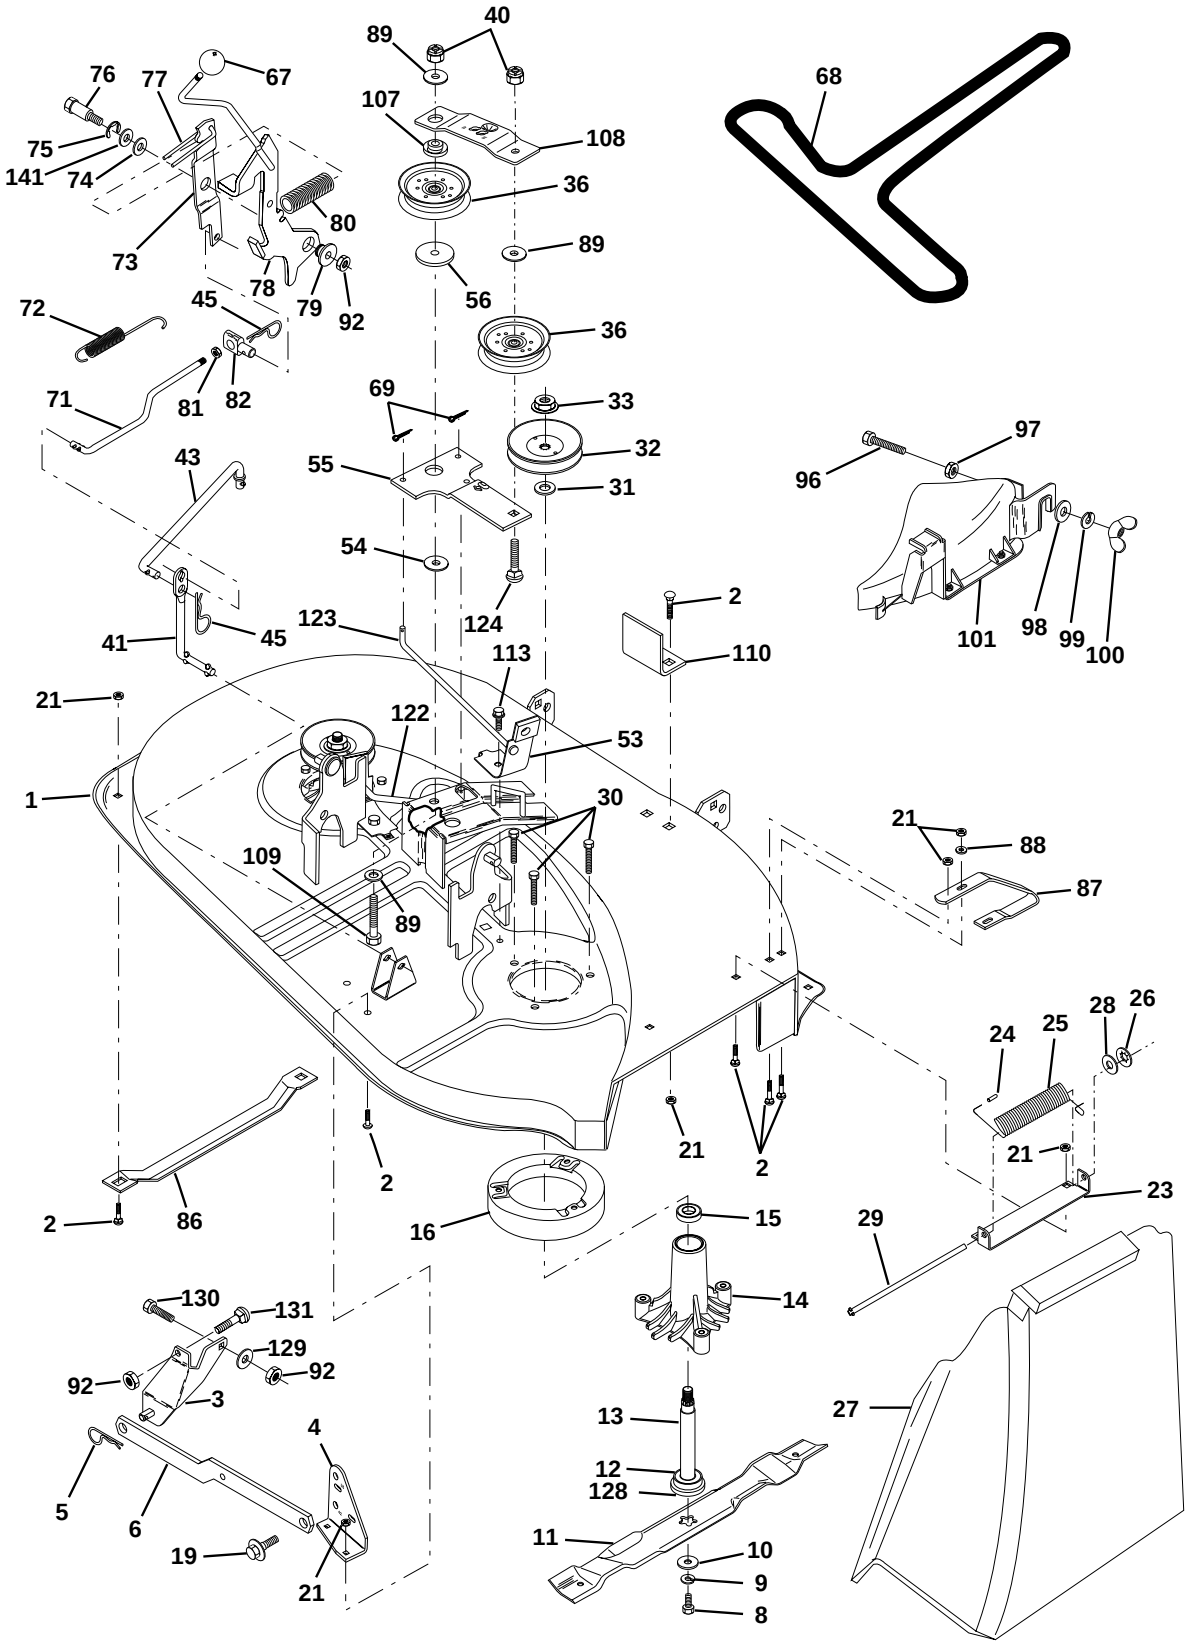

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

MOWER DECK


KEY NO.	PART NO.	DESCRIPTION
1	532142829	Deck Asm Weldment
2	872140506	Bolt Rdhd Sqnk 5/16-18unc X3/4
3	532138017	Bracket Asm Fr Sway Bar 38/42
4	532138440	Bracket Asm Deck Sway Bar
5	532124670	Retainer Spring
6	532130832	Arm Suspension Rear
8	532850857	Bolt 3/8 - 24 X 1.25 Gr 8
9	810030600	Washer Lock Hvy 3/8
10	532140296	Washer Hard Blade Mower Vented
11	532134148	Blade Mower Mulching 38"
12	532129895	Bearing Ball #6024 (Mandrel)
13	532137645	Shaft Asm W/lower Bearing
14	532128774	Housing Mandrel Vented
15	532110485	Bearing Ball Mandrel
16	532140329	Stripper Mower Vented
19	532132827	Bolt Shoulder
21	873680500	Nut Crownlock 5/16-18 UNC
23	532137607	Bracket Deflector Mower
24	532105304	Cap Sleeve 80x 112 Blk Mower
25	532123713	Spring Torsion Deflector 2 52
26	532110452	Nut Push Phos & Oil
27	532106736	Shield Deflector
28	819111016	Washer 11/32 X 5/8 X 16 Ga
29	532106735	Rod Hinge
30	532157722	Screw Thdrol Rolling Washer Head
31	532129963	Washer Spacer Mower Vented
32	532153532	Pulley Mandrel
33	532137266	Nut 9/16 Toplock Flng Oil Dip
36	532131494	Pulley Idler Flat 3 060
40	873680600	Nut Crownlock 3/8-16 UNC
41	532133551	Rod Pivot W/nibs
43	532133504	Rod Clutch Secondary
45	532124788	Spring Retainer 1" Zinc/cad
53	532130840	Asm Brake
54	532133943	Washer Hardened
55	532133840	Arm Idler
56	532122052	Spacer Retainer Pm Mower
67	532162132	Knob Rd 7/16-14 Plstc Thds Blk
68	532144200	V-Belt Mower
69	876020312	Pin, Cotter 3/32 x 3/4
71	532142427	Rod Clutch Primary 38/42
72	532131870	Spring Return
73	532127847	Arm Clutch Secondary
74	532121748	Washer 25/32 X 1-5/8 X 16 Ga
75	812000029	Ring Klip #t5304-75
76	532128903	Bolt Shoulder 3/8-16 Unc 1 44
77	532127845	Keeper Spring 4 000
78	532160570	Arm Asm Clutch Primary
79	532127498	Bushing 747 Od X 794 Lg Brass
80	532153701	Spring Clutch Mower
81	873350600	Nut Hex Jam 3/8-16
82	532142028	Trunnion Adj 94
86	532125074	Runner, LH
87	532128772	Runner, RH
88	819111216	Washer 11/32 x 3/4 x 16 Ga.
89	819131612	Washer 13/32 x 1 x 12 Ga.
92	873800600	Nut Lock Hex W/Ins 3/8-16 Unc
96	874930620	Bolt 3/8-16 x 1-1/4 Mulcher
97	873930600	Nut Crownlock 3/8-16 UNC
98	819132016	Washer 13/32 x 1-1/4 x 16 Ga.
99	810040600	Washer Lock Hvy Hlcl Spr 3/8
100	532135651	Nut Wing
101	532132803	Cover Asm Mulching 38"
107	532133502	Spacer, Retainer
108	532133503	Stiffener, Idler Arm
109	874760640	Bolt, Hex Head 3/8-16 x 2-1/2
110	532142587	Upstop Deck Front 38"
113	817490512	Screw Thdrol 5/16-18 X 3/4
122	532131289	Rod, Brake, LH
123	532131288	Rod, Brake, RH
124	872110614	Bolt, Carriage 3/8-16 x 1-3/4
128	532153390	Washer Felt
129	819131312	Washer 13/32 x 13/16 x 12 Ga.
130	874780616	Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5
131	872140608	Bolt, Rdhd Sqnk 3/8-16 x 1
141	532124931	Washer Thrust .75 x 1.230
- -	532130794	Mandrel Asm Service (Includes Key Nos. 8-10, 12-15, 31 and 33)
- -	532142820	Mower Deck Complete (Std. Deck - order separately mulcher plate components key nos. 96-101)

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

MOWER LIFT

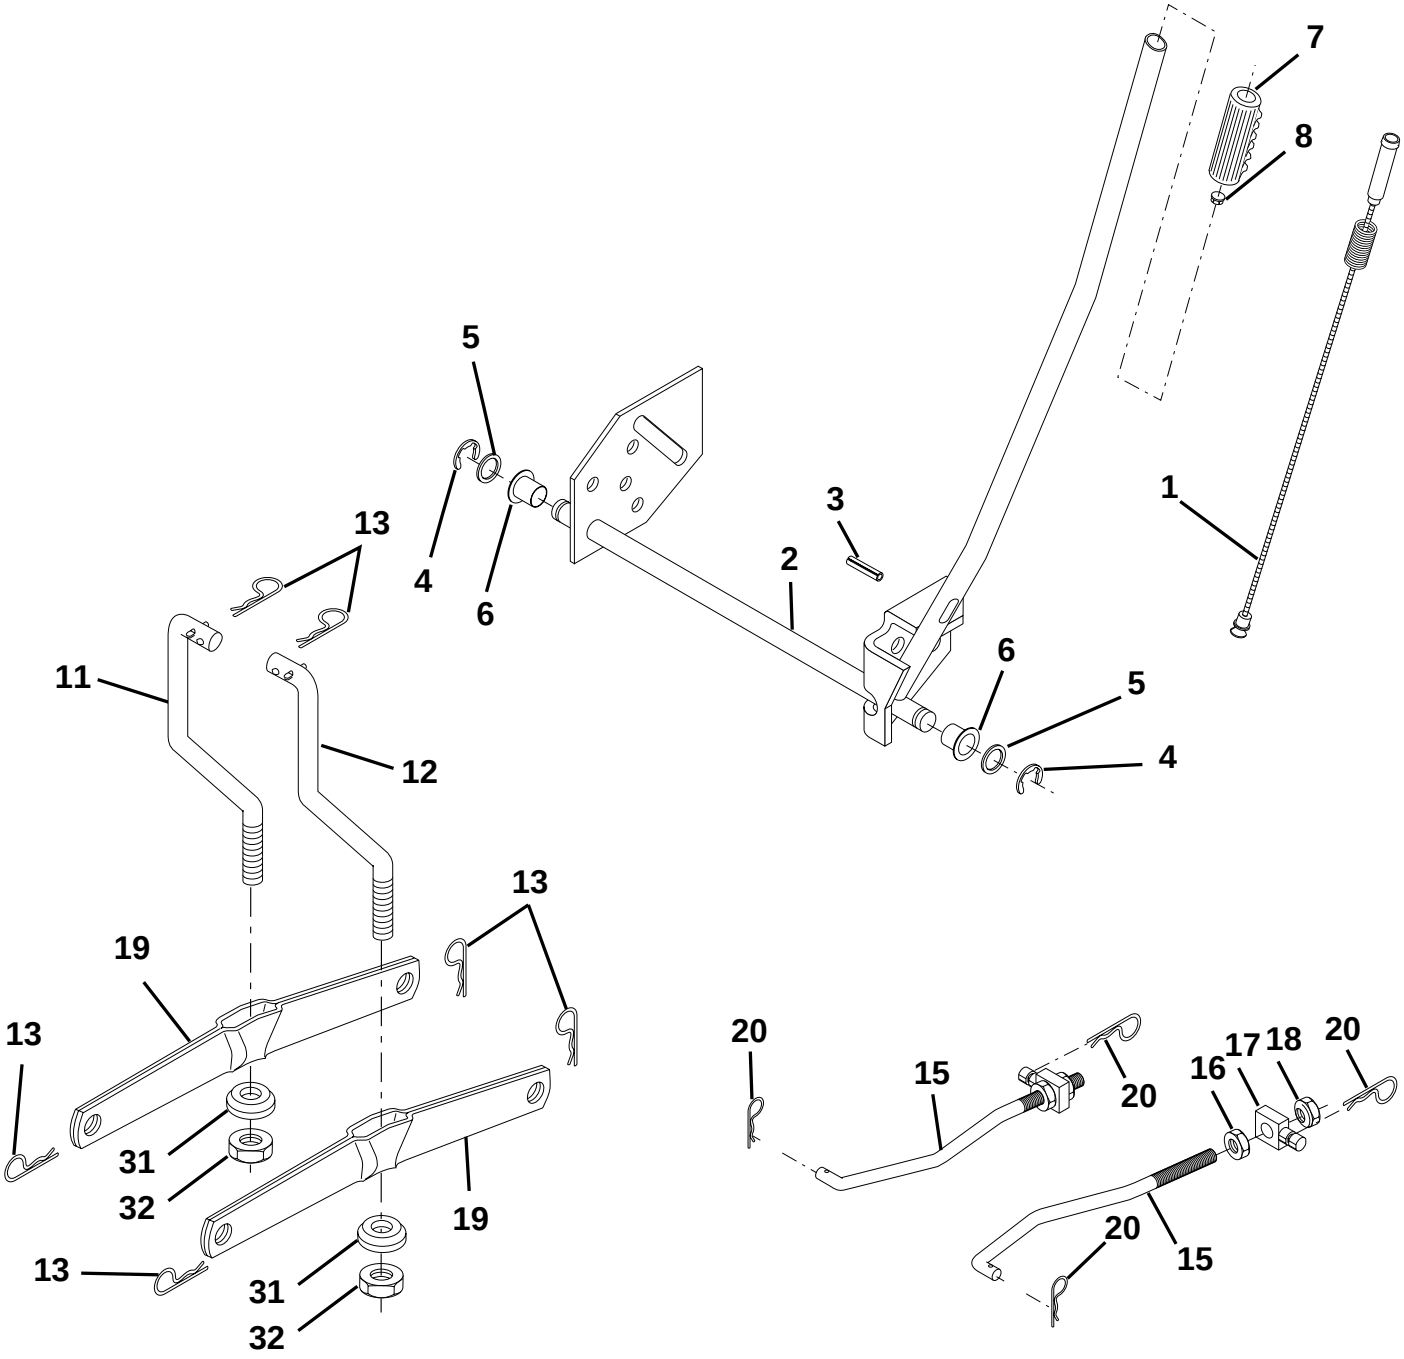

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

MOWER LIFT


KEY NO.	PART NO.	DESCRIPTION
1	532159460	Wire Asm Inner W/plunger LT
2	532159471	Shaft Asm Lift
3	532105767	Pin Groove
4	812000002	E Ring #5133-62
5	819211621	Washer PLTD 21/32 X 1 X 21ga
6	532120183	Bearing Nylon Blk 629 Id
7	532109413	Grip Handle Bicycle
8	532124526	Button Plunger Black
11	532139865	Link Lift LH
12	532139866	Link Lift RH
13	532124670	Retainer Spring
15	532127218	Link Front
16	873350800	Nut Jam Hex 1/2-13 Unc
17	532130171	Trunnion Blk Zinc
18	873800800	Nut Lock W/wsh 1/2-13unc
19	532139868	Arm Suspension Rear
20	532124660	Spring, Retainer
31	532140302	Bearing Pvt. Lift Spherical
32	873540600	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

HYDRO GEAR TRANSAXLE - MODEL NUMBER 0310-0500

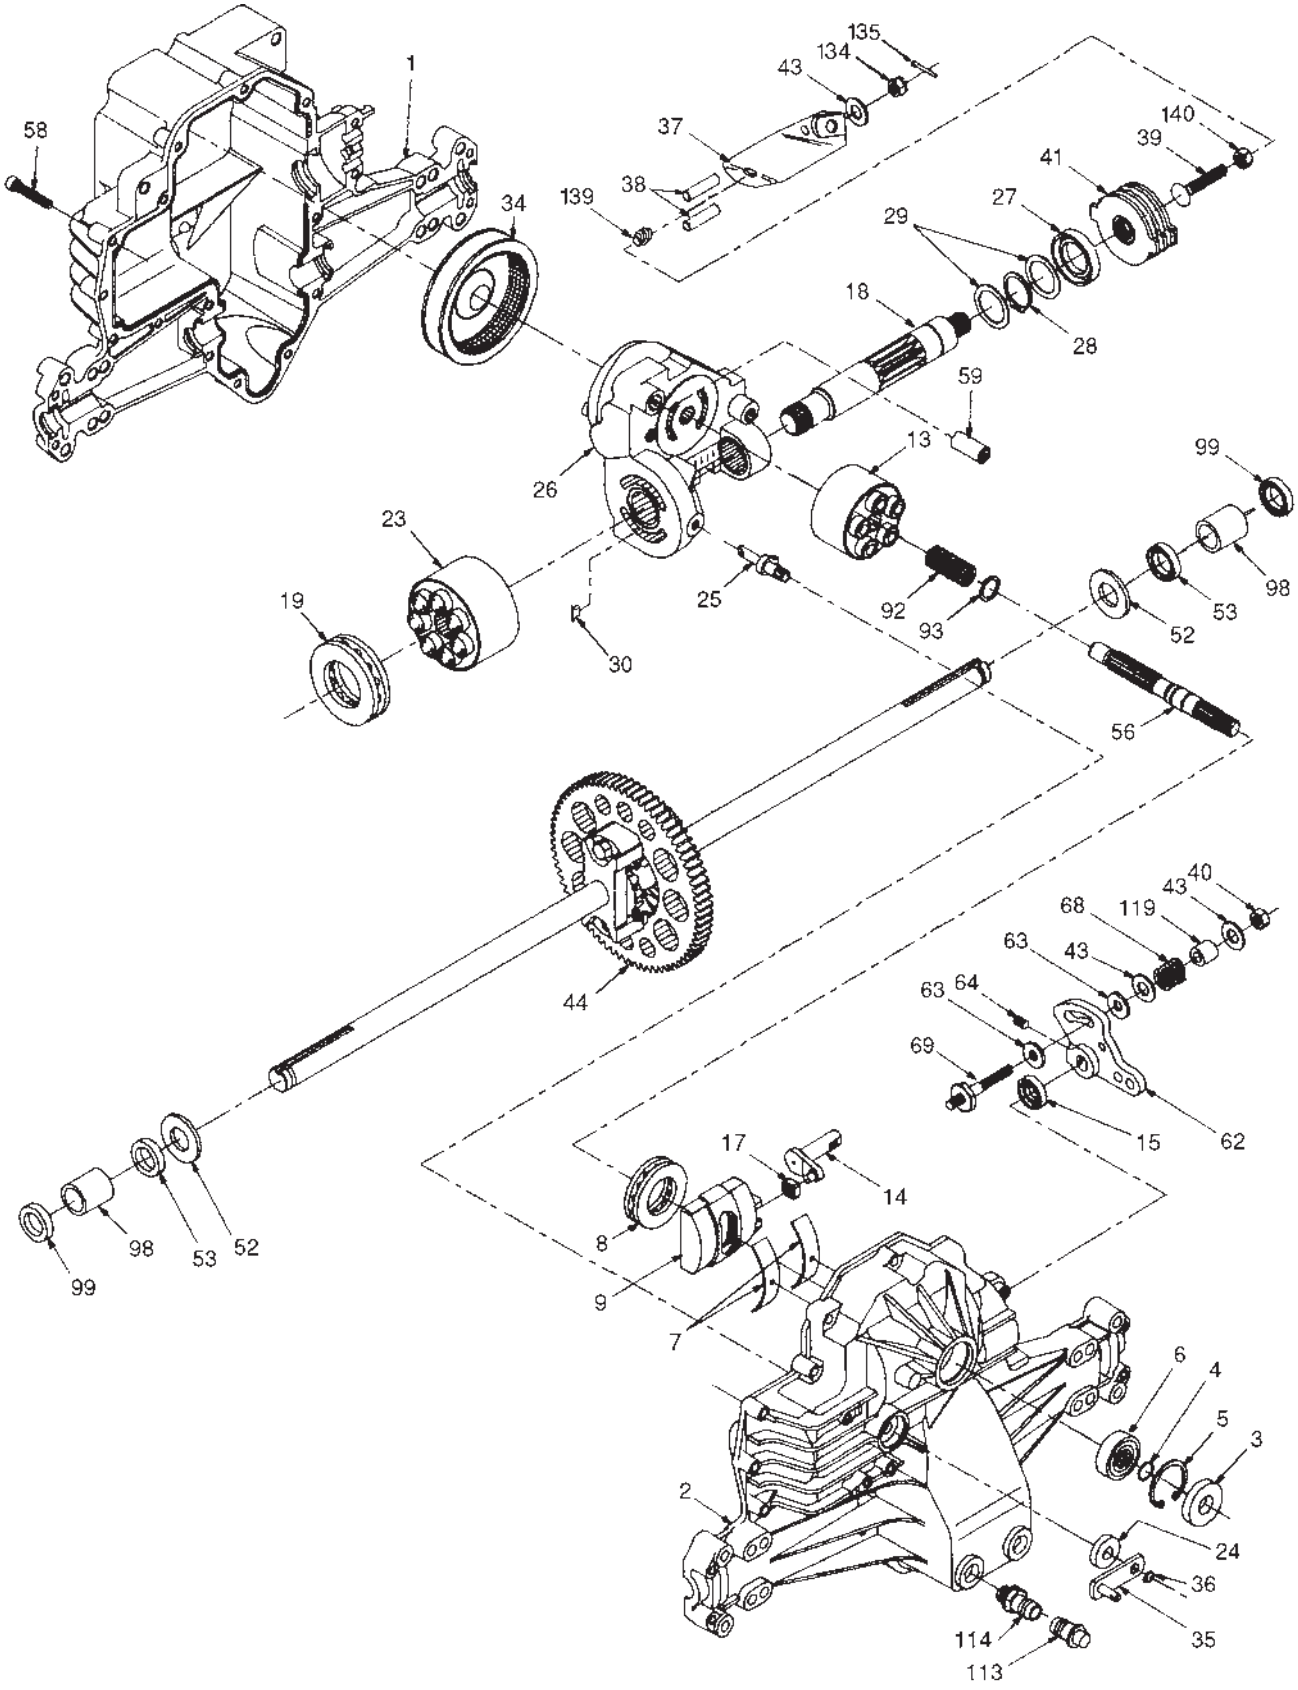

REPAIR PARTS

TRACTOR - MODEL NO. LTH120 (954140003C), PRODUCT NO. 954 14 00-03

HYDRO GEAR TRANSAXLE - MODEL NUMBER 0310-0500

KEY NO.	PART NO.	DESCRIPTION
1	142986	Housing, Lower
2	142987	Assembly, Upper Housing
3	142932	Seal, Lip
4	142928	Ring, Wire Retaining
5	142933	Ring, Retaining
6	142934	Bearing, Shaft Ball
7	142935	Bearing, Cradle
8	150771	Bearing, Thrust 30 x 52 x 13
9	142937	Swashplate, Variable
13	142938	Block, Cylinder Assembly
14	142939	Arm, Trunnion
15	142940	Seal, Lip
17	142941	Guide, Slot
18	150772	Shaft, Motor
19	150773	Bearing, Thrust 42 x 68 x 16
23	142944	Block, Cylinder Assembly
24	142945	Seal, Lip 10 x 25 x 7
25	142946	Actuator, Bypass
26	150774	Center Section Assembly Kit
27	142948	Seal, Lip 26 x 42 x 8
28	142949	Ring, Retaining
29	142950	Washer 26 x 35 x 1
30	150787	Nut, Jam
34	142951	Oil Filter Element
35	142952	Arm, Bypass
36	142953	Ring, Retaining
37	142954	Arm, Actuating
38	142955	Pin, Actuating
39	150777	Bolt 5/16-24 x 1-3/4
40	150778	Locknut, Hex 5/16-24 UNJC
41	142958	Brake Rotor/Stator Kit
43	142884	Washer 7/16 x 7/8 x .060
44	142990	Differential Assembly
52	142991	Washer 3/4 x 1.5 x .13
53	142961	Seal .75 x 1.25 x .250
56	142963	Shaft, Input
58	142964	Bolt 1/4-20 x 1.38
59	142965	Pin .5 OD x .43 ID x .750
62	142966	Arm, Control
63	142967	Puck, Dampener
64	142920	Set Screw
68	142969	Spring
69	144610	Stud 5/16-24
92	142977	Spring, Block
93	142978	Washer, Block Thrust
98	142993	Sleeve Bearing
99	142976	Seal, Wiper
113	142917	Cap, Vent Assembly
114	142918	Fitting, O-Ring Assembly
119	142980	Spacer
134	144607	Nut, Castle 5/16-24
135	144608	Pin, Cotter
139	150775	Spring, Compression
140	150776	Nut, Hex 5/16-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm